 
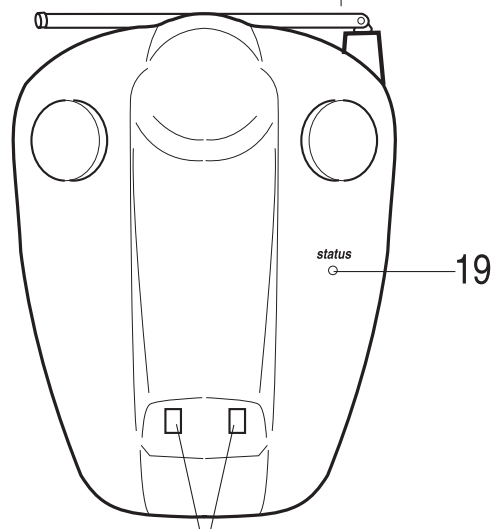 
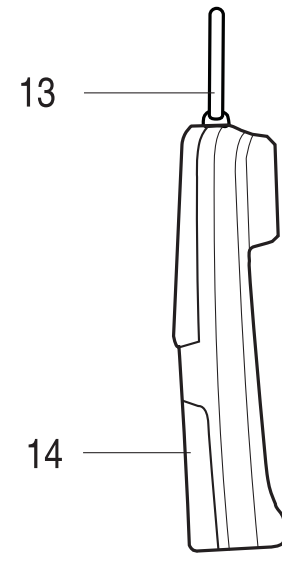 
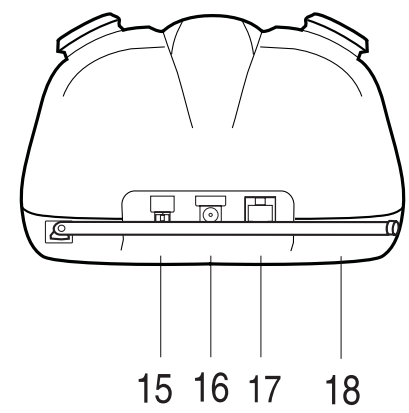 


- 4. Pause Key
- 5. Redial Key
- 6. Handset Speaker
- 7. Flash Key
- 8. Channel Key
- 9. Volume Key
- 10. One Touch Speed Dial Keys
- 11. Handset Microphone
- 12. Handset Contacts
- 13. Handset Antenna
- 14. Handset Battery Compartment
- 15. Pulse-Tone Switch
- 16. DC Power Input
- 17. Phone Jack
- 18. Base Antenna
- 19. Status Indicator
- 20. Base Contacts

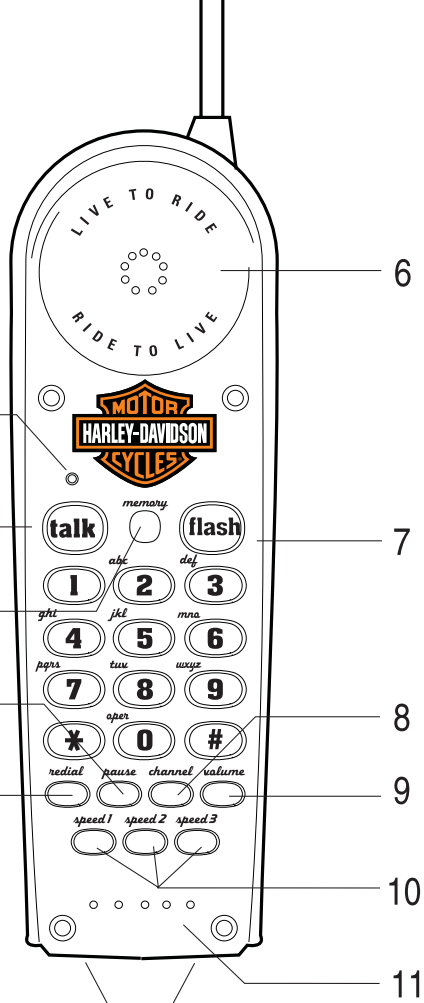

CONTENTS

OF YOUR REFERENCE GUIDE

CONTENTS

Controls	Inside Front Cover
Introduction to your New Phone	2
Welcome	2
Features	2
Included in your Package	3
Installing and Adjusting your Phone	4
Selecting a Location	4
Installation	5
Setting the Dial Mode Switch	6
Charging the Battery Pack	6
Adjusting the Volume Controls	7
Using your New Phone	9
Making and Receiving Calls	9
Storing a Number in Memory	10
Entering a Pause in Memory Dialing	10
Storing Mixed Tone/Pulse Numbers	11
Dialing a Stored Number	11
Speed Dialing	12
Chain Dialing	12
Erasing a Stored Number	13
Replacing a Stored Number	13
Selecting a Different Channel	13
Using the Flash Button	14
Traveling Out-Of-Range	14
Troubleshooting your New Phone	15
Quick Reference Chart	15
Specifications of your New Phone	16
General	16
Base Unit	16
Handset	16



Uniden® is a registered trademark of Uniden America Corporation.
©Harley-Davidson. All rights reserved.

Introduction

Installing and Adjusting

Using Your New Phone

Troubleshooting

Specifications

WELCOME

The Uniden® EHD 1200 Series 900 MHz cordless phones are designed and engineered to exacting standards for reliability, long life, and outstanding performance just like the Harley Davidson Motorcycle.

FEATURES

- 900 MHz Extended Range Technology
- 40 Channel Autoscan
- 10-Number Memory Dialing
- 3 “One-Touch Speed Dial” Keys
- Tone/Pulse Dialing
- Handset Volume Control
- 32 Digit Redial
- AutoTalk™
- AutoStandby™
- 7 Hours Talk Time
- Hearing Aid Compatible

The EHD 1200 Series features include *AutoTalk* and *AutoStandby*. *AutoTalk* allows you to answer a call by just removing the handset from the base so you don't have to waste time pushing buttons or flipping switches. *AutoStandby* allows you to hang up by simply returning the handset to the base.

The *UltraClear Plus* true compander circuitry virtually eliminates background noise. This innovative technology, together with 40 different channels, provides you with the best possible reception during all your conversations.

To protect you against misbilled calls which might result from your phone being activated by other equipment, the EHD 1200 Series has *Random Code*™ digital security which automatically selects one of over 65,000 digital security codes for the handset and base. Also, the *AutoSecure*™ feature electronically locks your phone when the handset is in the base.

 
INCLUDED IN YOUR PACKAGE

TIP


To get the most from your phone, please read this reference guide thoroughly. Be sure to complete and mail the product registration form.



Handset

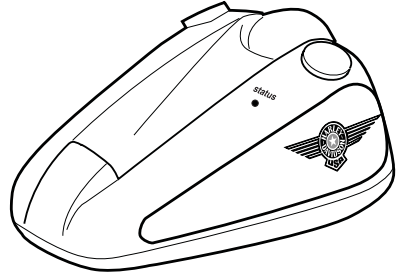


Teardrop Shaped Gas Tank (Base)

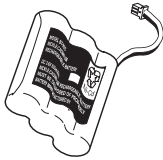 

Rechargeable
Battery



 Telephone Cord

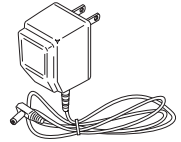

AC Adapter

- This Reference Guide
- Precautions and Important Safety Instructions
- Registration Card

NOTE

If any of these items are missing or damaged, contact the Uniden Parts Department at (800) 554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday. We can also be reached on the web at www.uniden.com.

SELECTING A LOCATION

Before choosing a location for your new phone, read the INSTALLATION CONSIDERATIONS included in the PRECAUTIONS AND IMPORTANT SAFETY INSTRUCTIONS brochure. Here are some important guidelines you should consider:

- The location should be close to both a phone jack and a continuous power outlet. (A continuous power outlet is an AC outlet which does not have a switch to interrupt its power.)
- Keep the base and handset away from sources of electrical noise such as motors and fluorescent lighting.
- Be sure there is sufficient space to rotate the base antenna fully vertical.
- The base can be placed on a desk or tabletop.
- **You should charge your handset for 15-20 hours before connecting the phone line.**



NOTE

Before you plug the other end of the telephone cord into the modular jack on the wall, charge the battery (See CHARGING THE BATTERY PACK, page 7).

 


Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.




Use only the Uniden AC adapter supplied with this phone. DO NOT use an outlet controlled by a wall switch.

INSTALLATION

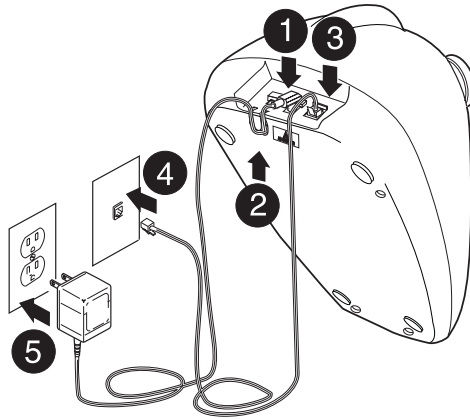


 1. Plug the AC adapter cord into the **DC IN 9V** jack on the base.
2. Wrap the AC adapter cord inside the molded strain-relief.
3. Plug one end of the long telephone cord into the **TEL LINE** jack on the base.
4. Plug the other end of the telephone cord into the telephone wall jack. *(Remember, the phone must be fully charged before you can use it.)*
5. Plug the AC adapter into a standard 120V AC wall outlet that is not controlled by a wall switch.
6. Raise the antenna on the base.

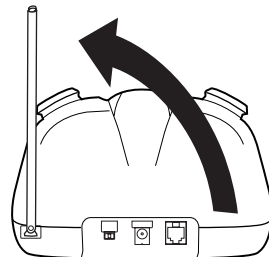

SETTING THE DIAL MODE SWITCH

 
Place the switch in the **TONE** position for tone dialing, or the **PULSE** position for pulse dialing.

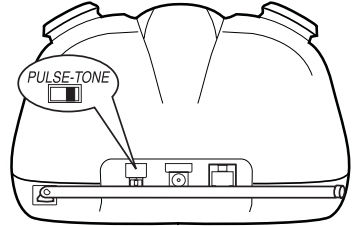


CHARGING THE BATTERY PACK

The rechargeable Nickel-Cadmium battery pack must be fully charged before using your phone for the first time. **Before plugging the phone line into your new phone, you must charge the battery for approximately 15-20 hours without interruption.**

 1. Remove the handset battery cover.

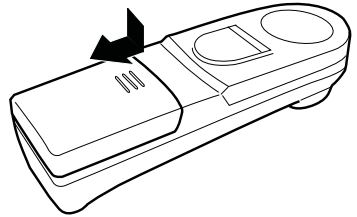

 
2. Plug the battery's cable into the handset. Place the battery pack inside the battery compartment.

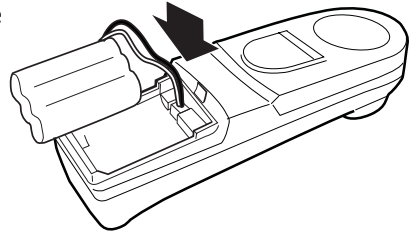

NOTE

The plastic connectors will fit together only one way. Make sure the battery's connector is properly aligned. Use only the Uniden battery pack (model BT-905) supplied with your phone.

 
3. Replace the battery cover.

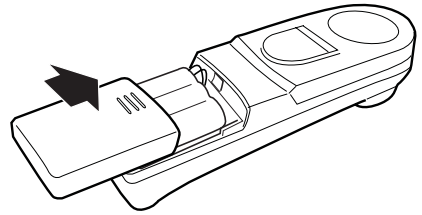

ADJUSTING THE VOLUME CONTROLS

▼ Ringer Tone and Volume

 1. While the phone is not in use, press **volume**.
2. The phone has two ringer tones, each with two volume levels. Press **volume** again until you hear the ringer tone and volume level you want.

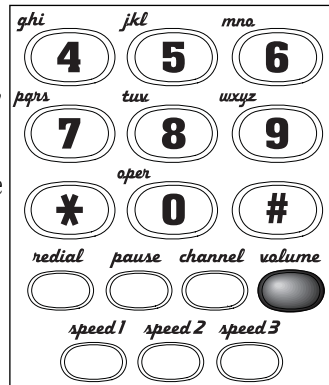


▼ Setting the Handset Earpiece Volume

1. While you are on a call, press **volume**.
2. The phone has two receiver volume levels, one soft and one loud. Press **volume** again until you hear the volume level you want.


▼ *Charging the Handset*

 Place the handset on the base to charge.

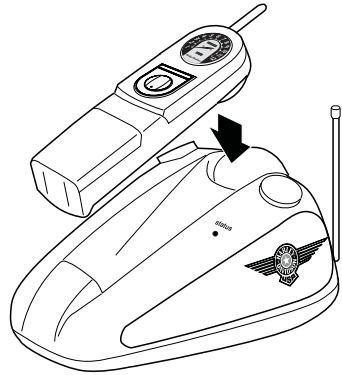

▼ *Low battery indicator*

 
When the battery pack in the handset is low and needs to be charged, the LED above the **talk** button flashes every 3 seconds.

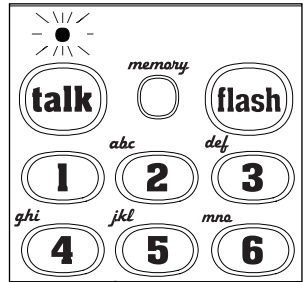

If this occurs while you are on the phone, you will hear an alert tone. Complete your call as quickly as possible, and return the handset to the base for charging.


▼ *Cleaning the Battery Contacts*

 To maintain a good charge, it is important to clean all battery contacts on the handset and base about once a month. Use a pencil eraser or other contact cleaner. **Do not use any liquids or solvents.**

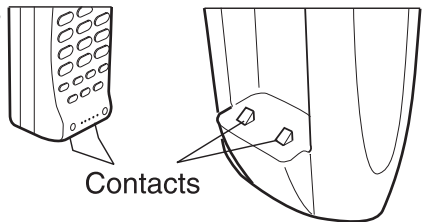



NOTE

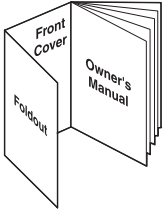 Rechargeable batteries have a memory effect that reduces standby and talk time. To avoid this memory effect, on a monthly basis use the phone until the low battery indicator appears. **Then charge the battery for 15-20 hours.**



Fold out the front cover of this reference guide to use the CONTROLS diagram for reference.

MAKING AND RECEIVING CALLS

	Handset On Base	Handset Off Base
		
To answer a call	Pick up handset.	Press talk .
To make a call	<ol style="list-style-type: none"> 1. Pickup handset. 2. Press talk. 3. Listen for dial tone 4. Dial number. 	<ol style="list-style-type: none"> 1. Press talk. 2. Listen for dial tone 3. Dial number.
To hang up	Press talk , or return the handset to the base (AutoStandby).	
To redial	<ol style="list-style-type: none"> 1. Pickup handset. 2. Press talk. 3. Listen for dial tone 4. Press <i>redial</i>. 	<ol style="list-style-type: none"> 1. Press talk. 2. Listen for dial tone 3. Press <i>redial</i>.

USING

YOUR NEW PHONE

NOTE

You have 20 seconds after pressing *memory* to enter the number you wish to store. Otherwise, an error tone will sound and the handset returns to standby.

NOTE

You cannot store numbers in *speed 1*, *speed 2*, or *speed 3*. Refer to "Speed Dialing."

 
NOTE

Remember, the phone number you wish to store cannot have more than 16 digits, including the pause. (The *pause* button counts as one digit.)

STORING A NUMBER IN MEMORY

Your EHD 1200 Series phone has 10 memory locations for storing important telephone numbers.

1. Remove the handset from the base and press *memory*. The LED above the **talk** button flashes and you hear a beep.
2. Enter the phone number you want to store (up to 16 digits).
3. Press *memory* and enter a number (0-9) on the keypad for the memory location you want to use.

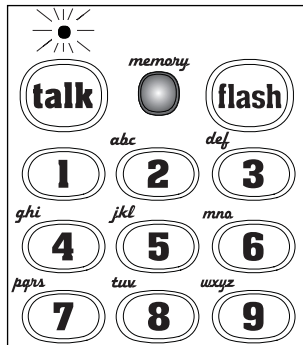

A long beep sounds and the LED above the **talk** button goes out indicating the number has been stored successfully.

 
If you select any keys other than 0-9, the handset will beep rapidly and no number will be stored.

ENTERING A PAUSE IN MEMORY DIALING

If you would like to use a phone number stored in memory to access voice mail, for example, you can store a pause in the phone number sequence.

To use this function, follow steps 1 and 2 in "Storing a Number in Memory," then press the *pause* button on the handset to place a pause in the phone number sequence.


Follow the remaining steps in the "Storing a Number in Memory" section to complete the operation.

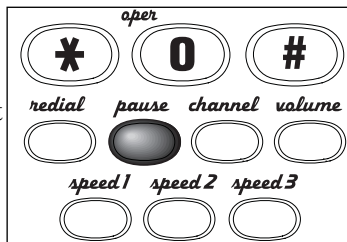

STORING MIXED TONE/PULSE NUMBERS

If your phone is set up for pulse dialing, you can store a mixed mode number (up to 16 digits) to easily access long distance services.

 1. Remove the handset from the base and press *memory*. The LED above the **talk** button flashes and you hear a beep.
2. Enter the number to be dialed in pulse mode.
3. Press the * button on the handset to select tone mode. The * button counts as one digit and enters a pause.
4. Enter the number(s) to be dialed in tone mode.
5. Press *memory* and a number (0-9) on the keypad for the memory location you wish to use. You hear a long beep and the LED above the **talk** button goes out.

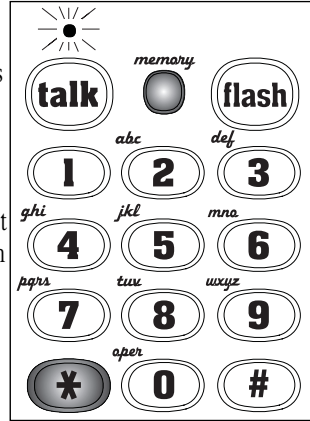


NOTE

If you select a memory location that does not have a stored number, the handset will beep rapidly and the phone will not dial.

DIALING A STORED NUMBER

 To dial a phone number stored in memory, press **talk**, then press *memory* and the memory location (0-9). Your phone will dial the stored number.

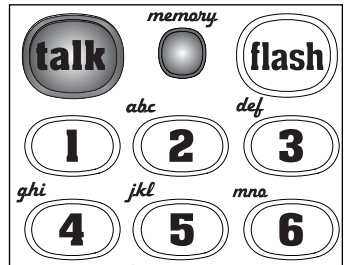


SPEED DIALING

Your phone is equipped with three “One-Touch Speed Dial” keys for instant dialing (*speed 1*, *speed 2*, and *speed 3*). **You cannot store phone numbers directly into speed 1, speed 2, and speed 3.** They are only used to dial phone numbers stored into memory locations 1, 2, and 3 on the keypad.

1. To instantly dial phone numbers stored in memory locations 1, 2, or 3, simply press *speed 1*, *speed 2*, or *speed 3*.

 (There is no need to press **talk**, the phone will automatically dial.)

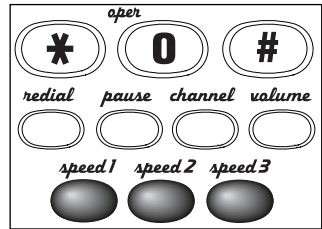

2. If no phone number was stored in memory locations 1, 2, or 3, the handset will beep rapidly when you press *speed 1*, *speed 2*, or *speed 3* and no number will be dialed.

 
CHAIN DIALING

After dialing a number you may be requested to enter a special access code, for example, when performing a banking transaction.

1. Store the access code into one of the memory locations (0-9).
2. Dial the main number.
3. Press *memory* and the memory location of the access code at the appropriate time.

ERASING A STORED NUMBER

1. Remove the handset from the base.
2. Press *memory* twice.
3. Press the memory location number (0-9) you want to clear. You'll hear a long beep confirming that the number is erased.

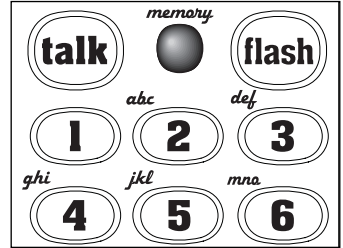


REPLACING A STORED NUMBER

Remember, your EHD 1200 Series phone has 10 memory locations, represented by the numbers (0-9) on the keypad. If you store a phone number in one of these locations, then attempt to store a different number in the same location later, the new number *will replace* the previous one.

SELECTING A DIFFERENT CHANNEL

If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. Interference can come from appliances or other phones in your home. This function works only when the phone is in use.

 The *channel* button on the handset allows you to choose between 40 factory set channels. During the course of a conversation, if you hear static or noise which makes it difficult to hear, press *channel*. The LED above the **talk** button flashes, indicating the phone is changing to another channel.

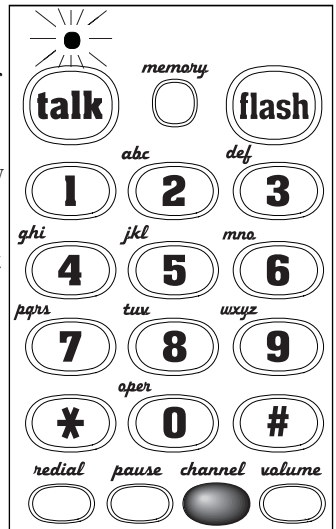


NOTE

You must subscribe to Call Waiting service from your phone company to use this feature.

USING THE FLASH BUTTON

 Use **flash** for accessing services such as call waiting. If you receive a call during your conversation, press the **flash** button on the handset to accept the waiting call. Press **flash** again to return to the previous call.

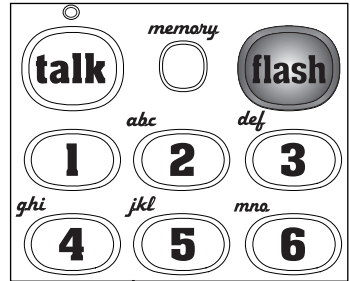

TRAVELING OUT-OF-RANGE

As you begin to move too far from the base, you first hear a clicking sound. As you travel further, the noise increases. If you travel out-of-range, your call terminates.

QUICK REFERENCE CHART

If your phone is not performing to your expectations, please try these simple steps before calling Uniden customer service at **(800) 297-1023**.

PROBLEM	SUGGESTION
The charge light won't come on when the handset is placed in the base.	<ul style="list-style-type: none"> • Make sure the AC adapter is plugged into the base and wall outlet. • Make sure the handset is properly seated in the base. • Make sure the charging contacts on the handset and base are clean.
The audio sounds weak and/or scratchy.	<ul style="list-style-type: none"> • Make sure that the base antenna is in a vertical position. • Press channel to help eliminate noise. • Move the handset and/or base to a different location away from metal objects or appliances and try again.
Can't make or receive calls.	<ul style="list-style-type: none"> • Check both ends of the telephone line cord. • Make sure the AC adapter is plugged into the base and wall outlet. • Disconnect the AC adapter for a few minutes, then reconnect it. • Place the handset back on the charging cradle for a few seconds. The status LED blinks indicating that the phone has been reset.
The handset doesn't ring.	<ul style="list-style-type: none"> • The Nickel-Cadmium battery pack may be weak. Charge the battery on the base for 24 hours. • The handset may be too far away from the base. • Place the base away from appliances or metal objects. • Place the handset back on the charging cradle for a few seconds. The status LED blinks indicating that the phone has been reset.

SPECIFICATIONS

OF YOUR NEW PHONE

GENERAL

The EHD 1200 complies with FCC Parts 15 and 68.

Frequency Control	Phase Locked Loop
Modulation	FM
Operating Temperature	-10° to 50° C, 14° to 122° F

BASE UNIT

Transmit Frequency	925.997 ~ 927.947 MHz (40 Channels)
Power Requirements	9V 210mA (from AC adapter)
Size	6.69 in. W X 4.53 in. D X 9.23 in. H
Weight	Approximately 16 oz.

HANDSET

Transmit Frequency	902.052 ~ 904.002 MHz (40 Channels)
Size	2.31 in. W X 2.14 in. D X 9.41 in. H
Weight	Approximately 8.9 oz.
Battery:	BT-905
Capacity	600 mA _H , 3.6V
Talk mode	7 hours
Standby mode	14 days

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

At Uniden, we'll take care of you!

If you need any assistance with this product, please call our Customer Hotline at

1-800-297-1023

**PLEASE DO NOT RETURN THIS
PRODUCT TO THE PLACE OF PURCHASE.**

Our Uniden representatives will be happy to help you with any matters regarding the operation of this unit, available accessories, or any other related matters.

*Hours: M-F 7:00 a.m. to 7:00 p.m., Central Time.
Thank you for purchasing a Uniden product.*

Back Cover