

Uniden®

evolo™ SERIES

ENR1504

PACKAGE CONTENTS INCLUDE

- ENR 1504, 4 Port Router with Stand
- 6' CAT 5 Wiring Cable
- AC Adapter
- Easy Start Guide
- Owner's Manual on CD-ROM

QUICK AND EASY INSTALL

EASY START GUIDE

HARDWARE INSTALLATION


- 1 Plug in the AC power adapter into the ENR 1504, 4 Port Router.

CONNECT THE ROUTER

- 2 Connect your cable/DSL modem to the WAN jack on the back of the ENR 1504, 4 Port Router.

CONNECT COMPUTERS AND/OR SWITCHES

- 3 Connect your computers and/or switches to the LAN jacks labeled 1-4 on the back of the unit.

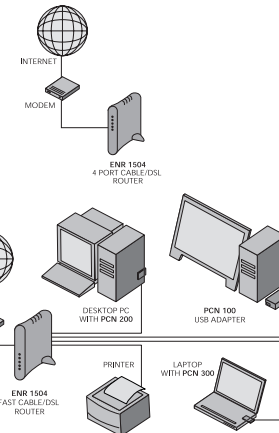

NOTE: For cable/DSL users with Dynamic IP, basic firewall protection is active and complete when plugged in. No additional configuration is required unless you want advanced firewall protection. For cable/DSL users with Static IP addresses, PPPoE accounts and/or Advanced Router Configuration you can log into the browser based Configuration Utility at <http://192.168.1.1>, User Name: UNIDEN, Password: leave blank for configuration. See the Owner's Manual for more information.

Uniden[®]**evōLO**[™] SERIES**LED Indicators**

Label/LED Indications	Activity	Description
Wired LAN Link/Activity Ports 1- 4	Green Amber Blinking	The port is connected at 100 Mb/s. The port is connected at 10 Mb/s. Data is being transmitted/received.
WAN Link/Activity	Green Amber Blinking	The port is connected at 100 Mb/s. The port is connected at 10 Mb/s. Data is being transmitted/received.
Test	Amber OFF	The router is undergoing a power-on self-test (POST). If the light remains on, the router failed the POST. The router passed the POST.
Power	ON OFF	Power is on. Power is off.