

**Uniden®**

**evōLO™** SERIES

**PACKAGE CONTENTS INCLUDE**

- **evōLO** PCW 100 USB Adapter
- USB Cable
- Easy Start Guide
- CD-ROM with Owner's Manual, Device Drivers and Wireless Utilities

**2 QUICK STEPS TO GET STARTED**

**1 INSTALL USB ADAPTER**

- With your computer turned On, insert the **evōLO** 802.11b Wireless USB Adapter into an available USB Adapter slot on your computer.

**NOTE:** Make sure you firmly connect the USB Adapter on the PC with USB cable.

**2 INSTALL DRIVERS**

- Insert the **evōLO** CD-ROM into your CD-ROM drive.
- Follow the instructions displayed on your computer screen to install the drivers from the CD-ROM.

**NOTE:** Please see the reverse side for quick steps to setup the Wireless Configuration tool.

EASY START GUIDE

PCW 100

**Uniden®**

**evōlo™** SERIES

## **INSTALL UNIDEN'S WIRELESS CONFIGURATION TOOL FOR WINDOWS 98, 2000, AND ME**

- 1** • With the CD inserted in the CD-ROM drive, click on the "setup.exe" file in the Utility folder.
- 2** • Follow the instructions displayed on your computer screen to install Uniden's Wireless Configuration tool.

## **XP USERS WIRELESS CONFIGURATION TOOL**

- 1** • Right click the Wireless Network Connection icon on the system tray after installing the driver.
- 2** • Select a network from the list and click "Connect" to continue.
  - If the chosen network requires WEP encryption, you will have to enter the WEP key for your network in the "Network key" field.

**NOTE:** For more details please see the Owner's Manual.

Microsoft XP is a registered trademark of Microsoft Corporation  
©2002 Uniden America Corporation, Fort Worth TX All rights reserved. Printed in China

PCW100ESG