## **Uniden**<sup>®</sup>

## **EVŌLO**<sup>™</sup>SERIES I

#### **PACKAGE CONTENTS INCLUDE**

- evōLo PCW 300 PCMCIA Card
- Easy Start Guide
- CD-ROM with Owner's Manual, Device Drivers, and Wireless Utilities

#### **2 QUICK STEPS TO GET STARTED**

#### INSTALL PCMCIA CARD

• With your laptop computer turned Off, insert the **evōLo** 802.11b Wireless PCMCIA card into an available PCMCIA slot on your laptop computer.

NOTE: Make sure you firmly place the PCMCIA card into the PCMCIA slot with the Uniden logo facing up.

### INSTALL DRIVERS

O

START

- Turn On your laptop computer.
  - Insert the evolo CD-ROM into your CD-ROM drive.
  - Follow the instructions displayed on your laptop computer screen to install the drivers from the CD-ROM.

**NOTE:** Please see the reverse side to setup Microsoft XP's Wireless Configuration tool.

# **Uniden**®

## **EVŌLO**<sup>™</sup>SERIES

#### XP USERS WIRELESS CONFIGURATION TOOL

- Right click the Wireless Network Connection icon on the system tray after installing the driver.
- 2. Select a network from the list and click "Connect" to continue.
  - If the chosen network requires WEP encryption, you will have to enter the WEP key for your network in the "Network key" field.

NOTE: For more details please see the Owner's Manual.

Microsoft XP is a registered trandemark of Microsoft Corporation

©2002 Uniden America Corporation, Fort Worth TX All rights reserved. Printed in China

PCW300ESG