

Uniden®



For use only with models: TRU 5865 and TRU 5885.

THE FCC WANTS YOU TO KNOW

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

Rechargeable Nickel-Metal-Hydride Batteries Must Be Recycled or Disposed of Properly



Uniden®

May be covered under one or more of the following U.S. patents:

4,511,761	4,523,058	4,595,795	4,797,916	5,381,460	5,426,690
5,434,905	5,491,745	5,533,010	5,543,605	5,574,727	5,581,598
5,650,790	5,660,269	5,661,780	5,663,981	5,671,248	5,696,471
5,717,312	5,732,355	5,754,407	5,758,289	5,768,345	5,787,356
5,794,152	5,801,466	5,825,161	5,838,721	5,864,619	5,893,034
5,912,968	5,915,227	5,929,598	5,930,720	5,960,358	5,987,330
6,044,281	6,070,082	6,125,277	6,253,088		

©2002 Uniden America Corporation, Fort Worth, Texas
Contains additional foreign articles.

Custom manufactured in China.

UUZ201812BZ

www.uniden.com

TXC 580



ADDITIONAL HANDSET & CHARGER
OWNER'S MANUAL

Welcome

Congratulations on your purchase of the Uniden TXC580 optional handset and charger. This additional handset is for use with the Uniden TRU5865 or TRU5885 base. You can place a fully featured cordless handset anywhere in your home where AC power is available to connect the handset charging cradle. The original base will support up to 2 handsets (the original handset and one TXC580 handset).



The TXC580 will not be an alternative of the original handset, if the original handset is damaged.

Important

The TXC580 will not operate unless it has been registered to a Uniden TRU5865 or TRU5885. Before the additional handset can be used, the battery must be charged and it must be registered with the base.

This manual describes only the instructions specific to the additional handset. For detailed operation, refer to the owner's manual supplied with the original unit (read "Expanding Your Phone" chapter first).

Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Cordless Handset
- Charger
- Battery Pack (BT-446)
(Capacity: 800 mAH, 3.6V)
- AC Adapter (AD-446)
(INPUT: 120V AC 60Hz) (OUTPUT: 9V DC 210 mA)
- Beltclip
- This Owner's Manual
- Other Printed Material

Uniden Parts Department at (800) 554-3988
Hours: M-F 7:00 a.m. to 5:00 p.m. CST.
We can also be reached on the web at
www.uniden.com.

Install the Battery Pack

 
 
 
Charge the battery pack for at least 15-20 hours before completing the installation or using the handset.

- 1** Press down on the battery cover release and slide the cover down until it comes off.
- 2** Connect the battery pack connector observing the correct polarity (black and red wires) to the jack inside the battery compartment.

Do not exert any force on this connection. It could cause damage to the battery or to the handset. The plastic connectors will fit in only one way.

Once you are certain that you have made a good connection, then insert the battery pack into the battery compartment. Do not pinch the wires.

- 3** Securely close the battery compartment cover by sliding it until it snaps into place.
- 4** Place the handset in the charging cradle with the keypad facing forward.

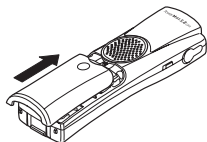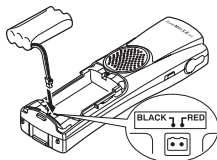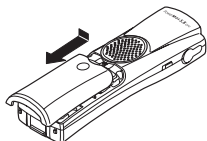

- **Use only the Uniden battery (BT-446) supplied with your phone.** Replacement batteries are also available through the Uniden Parts Department (See page 2).
- Recharge your handset on a regular basis by returning the handset to the charger after each phone call.



Battery Information

Battery use time (per charge)

From fully charged (15-20 hours charge time)

- 4 hours continuous use
- 8 days when the handset is in the standby mode

 
Low battery alert

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is in the standby mode, "Low Battery" appears on the LCD and none of the keys will operate. If the phone is in use, "Low Battery" appears and the handset beeps. Complete your conversation as quickly as possible and return the handset to the base unit for charging.

Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the battery contacts on the handset and base unit with a dry cloth or a pencil eraser about once a month.

Do not use any liquids or solvents.

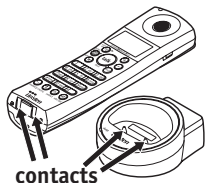


Connect the Charger

1 Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.

2 Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.

 3 Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the base charging contacts.

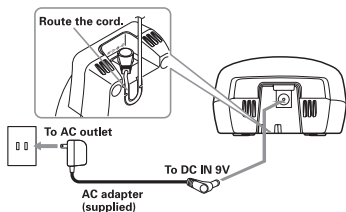

- note**
- Use only the supplied **AD-446 AC adapter**. Do not use any other AC adapter.
 - Place the charger close to the AC outlet so that you can unplug the AC adapter easily.
 - "H52" appears on the display while the handset is charging.

Polarity of the plug



Register the Handset

You need to register the TXC580 before use.

To register the additional handset, place the TXC580 handset on the original unit's base for at least 5 seconds. The **status** LED on the original base will flash indicating that registration is occurring. After 5 seconds, the TXC580 handset will be registered.



- In some cases you may need to attempt registration a few times.
- You cannot register the handset when the original phone is in use.

Using the TXC580 with the Integrated Answering Device

If the original unit has a built-in answering system, you can check your new messages, skip, repeat, or delete your messages with the TXC580 handset. For more instructions, see the owner's manual supplied with the original unit.

To playback a message	Press - .
To skip a message	Press 3 .
To repeat the current message	Press 1 after four seconds.
To repeat the previous message	Press 1 within four seconds.
To delete a message	Press 4 .
To stop operation	Press end .



- If you press **end** before the answering system answers, the phone will return to the standby mode.
- When the answering system does not answer within 7 seconds, you will hear a beep and the phone will return to the standby mode.
- When you receive a call, the remote operation is canceled.

Call Transfer Feature

You can transfer an outside call to the original unit. For more instructions, see the owner's manual supplied with the original unit.

To transfer a call to the original unit	Press <i>xfer/del</i> during a call. When the original unit receives the transferred call, the TXC580 handset returns to the standby mode.
To receive a transferred call from the original unit	Press <i>talk/flash</i> or <i>spkr</i> to answer the transferred call.
To cancel the transfer	Press <i>talk/flash</i> or <i>spkr</i> .



- If you transfer a call and it is not picked up after 5 minutes, you hear a beep, and the call will be disconnected.
- Only one handset at a time can talk with an outside caller.

I.C. Notice

TERMINAL EQUIPMENT

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESSED, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation
Parts and Service Division
4700 Amon Carter Blvd.
Fort Worth, TX 76155

(800) 297-1023, 8 a.m. to 5 p.m. Central, Monday through Friday