

One Year Limited Warranty:

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN BUSINESS NETWORK SYSTEMS, INC. ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit without charge for parts, service or any other costs (except shipping and handling) incurred by the warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

UNIDEN BUSINESS NETWORK SYSTEMS, INC.
Parts and Service Division
4700 Amon Carter Blvd.
Fort Worth, TX 76155

Customer Service: (800) 648-4921, 8 a.m. to 5 p.m. Central, Monday through Friday
Visit our website: <http://www.uniden.com> For additional information visit: www.artisoft.com

Contains additional foreign articles.
Made in China
UNZZ69002BZ

 
Uniden® UIP300 H.323 VoIP Phone

Quick Reference Guide For Artisoft® TeleVantage®


Unpacking the UIP300:




UIP300 IP Phone



 
Handset & Handset Cord
(UIPA3030) (UIPA3035)

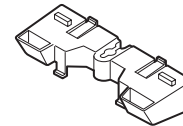


Wall Mount
(UIPA3060)

 

Quick Reference Guide

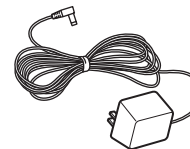 

AC Adapter is optional (AD300)

 


Index Paper (2)


If any of these items are missing or damaged, please contact the company where you purchased this product.

Owner's Manual can be downloaded from www.uniden.com/ubs

 
Mounting:

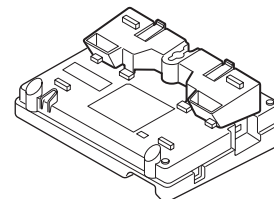

• Low DeskTop

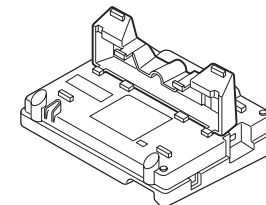 

• High DeskTop

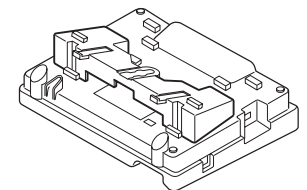 

• Wall Mount

*Artisoft and TeleVantage are registered trademarks of Artisoft, Inc.

How the keys work:

Function Keys:

There are five programmable function keys available that can individually perform one of three functions:

1. Speed Dial
2. Dial Voicemail
3. Do Not Disturb

Note: "Voicemail" and "Do Not Disturb" function can only be assigned to one function key.

Menu Button:

Used to view/change configuration settings on the phone.

DC Power Input

(AC Adapter is optional)

Headset Jack

 
(Headset is optional)

Speaker

↑ and ↓ Buttons:

- Used for scrolling through menu options and editing entries.
- The ↓ key is also used as a shortcut key for accessing the phone book.

Message Waiting Indication

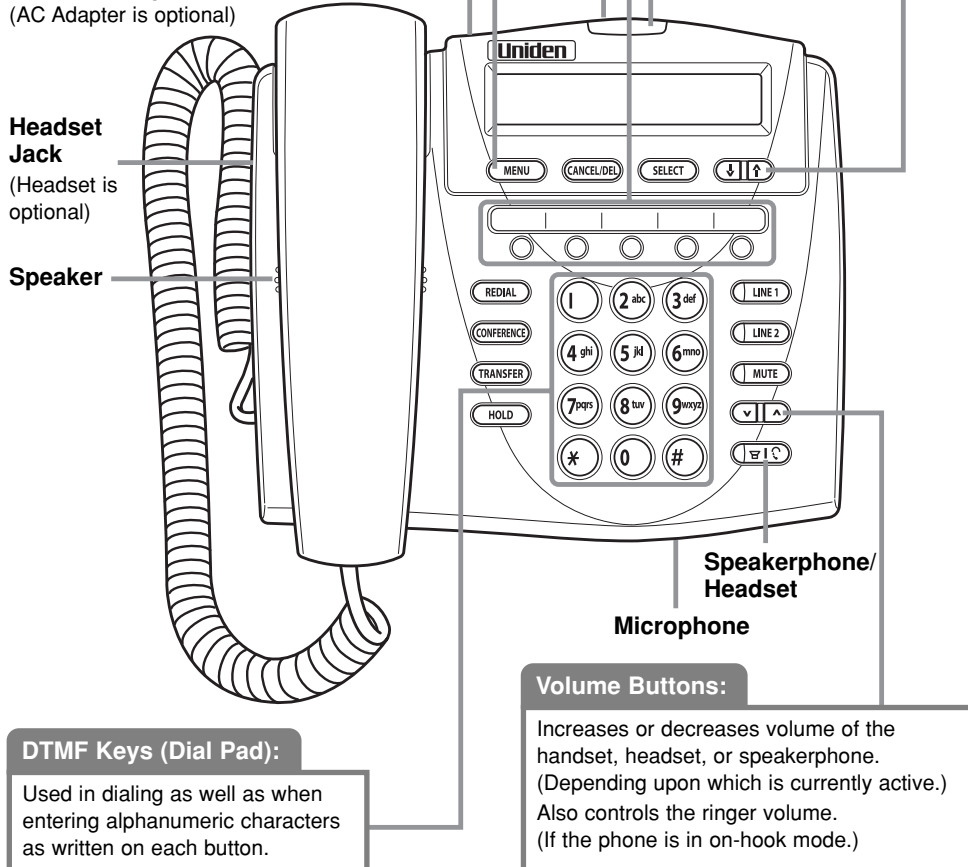

DTMF Keys (Dial Pad):

Used in dialing as well as when entering alphanumeric characters as written on each button.

Volume Buttons:

Increases or decreases volume of the handset, headset, or speakerphone. (Depending upon which is currently active.) Also controls the ringer volume. (If the phone is in on-hook mode.)

Operation:

1. How to use the handset and speakerphone:

- To place and answer calls on the phone, simply lift the handset.
- To place and answer calls using the speakerphone, simply press the button.
- To change from handset to speakerphone, press the button and hang up the handset.
- To change from speakerphone to handset, simply lift the handset.

2. Adjusting the handset and speakerphone volume:

- To increase or decrease the volume of your handset and speakerphone, lift the handset or press the speakerphone button first and press the up () / down () volume control button.

3. Adjusting the ringing volume:

- To increase or decrease the volume of your ringer, just press the up () / down () volume control button while the phone is on hook.

4. Muting a call:

- While in a call, you can press the **MUTE** button to mute the handset or speakerphone, preventing the party you are speaking to from hearing what you or someone else in the room is saying.
- To return normal, press the **MUTE** button again.

5. Redialing the last number dialed:

- To redial the most recently dialed number, simply press the **REDIAL** button while the phone is off hook.

6. Set Time/Date:

- Press the **MENU** button.
- Go to **Configuration** → **Phone Configuration** → **Local Date/Time** and then follow the LCD prompts for setting the time.

7. How to use multi line:

- Before picking up the handset, you can select either **LINE 1** or **LINE 2** by pressing the corresponding line button.
- To make a second call, you must first put the active call on hold by pressing the **HOLD** button. Then, select the idle line by pressing the line selection button.

8. Setting up the voice mail function key:

- Press the **MENU** button.
- Go to **Configuration** → **Phone Configuration** → **Function Key**.

- You will be prompted to "Press Function Key". Press a function key.
- Select **Voice Mail** in the proceeding menu and enter the voice mail number when prompted.

Note: The voice mail calling function may only be assigned to one function button.

9. Setting up Speed dial:

- Press the **MENU** button.
- Go to **Configuration** → **Phone Configuration** → **Function Key**.
- You will be prompted to "Press Function Key". Press a function key.
- Select **Speed Dial** in the proceeding menu and enter the speed dial number when prompted.

10. Setting up Do Not Disturb:

- Press the **MENU** button.
- Go to **Configuration** → **Phone Configuration** → **Function Key**.
- You will be prompted to "Press Function Key". Press a function key.
- Select **Do Not Disturb (DND)** in the proceeding menu.

Note: The Do Not Disturb function may only be assigned to one function button.

11. Transferring a Call:

Blind Transfer

- After receiving a call, press the **TRANSFER** button.
- Dial the extension you wish to transfer the call to.
- Upon hearing the line ringing, hang up to complete the transfer.

Supervised Transfer

- After receiving a call, press the **TRANSFER** button.
- Dial the extension you wish to transfer the call to.
- If the called party accepts the transfer, simply hang up.
- If the called party rejects the transfer and hangs up, follow the voice guided menu and press **4** to return to the initial caller.

12. 3 Way Conference Call:

- After connecting with the first calling party, press the **CONFERENCE** button.
- Press the **#** button, and dial the extension of the second calling party.
- After connecting to the second calling party press the **CONFERENCE** button and then **5** to start the conference call.

Note: In order to select the desired function, please scroll using ↑ and ↓ button then press SELECT key.