

Uniden®

evolo™ SERIES

WNR2004


PACKAGE CONTENTS INCLUDE

- WNR 2004 with Stand
- 6' CAT 5 Wiring Cable
- AC Adapter
- Easy Start Guide
- Owner's Manual on CD-ROM

QUICK AND EASY INSTALL

EASY START GUIDE


- 1** Plug in the AC power adapter into the WNR 2004 AP/Router.

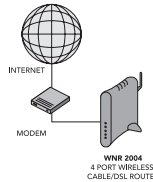

- 2** Connect your cable/DSL modem to the WAN jack on the back of the WNR 2004 AP/Router.

CONNECT COMPUTERS AND/OR SWITCHES

- 3** Connect your computers and/or switches to the LAN jacks labeled 1-4 on the back of the AP/Router.

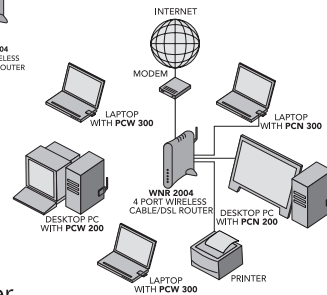

NOTE: For connecting wirelessly, the WNR2004 has default settings that allow you to connect wirelessly to the AP/Router, just out of the box. For cable/DSL users with Dynamic IP, basic firewall protection is active and complete when plugged in. No additional configuration is required unless you want advanced firewall protection. For cable/DSL users with Static IP addresses, PPPoE accounts and/or Advanced Router Configuration you can log into the browser based Configuration Utility at <http://192.168.1.1>, User Name: UNIDEN, Password: leave blank for configuration. See the Owner's Manual for more information.

Uniden[®]**evolo**[™] SERIES**LED Indicators**

Label/LED Indications	Activity	Description
Wireless LAN Link/Activity	ON	Wireless client connected
	OFF	No wireless clients are connected
Wired LAN Link/Activity Ports 1-4	Green	The port is connected at 100 Mb/s.
	Amber	The port is connected at 10 Mb/s.
	Blinking	Data is being transmitted/received.
WAN Link/Activity	Green	The port is connected at 100 Mb/s.
	Amber	The port is connected at 10 Mb/s.
	Blinking	Data is being transmitted/received.
Test	Amber	The router is undergoing a power-on self-test (POST). If the light remains on, the router failed the POST.
	OFF	The router passed the POST.
Power	ON	Power is on.
	OFF	Power is off.