



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.


It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PayPal Name Lynn@butkus.org

Voigtländer - Brilliant V6

Instructions for use

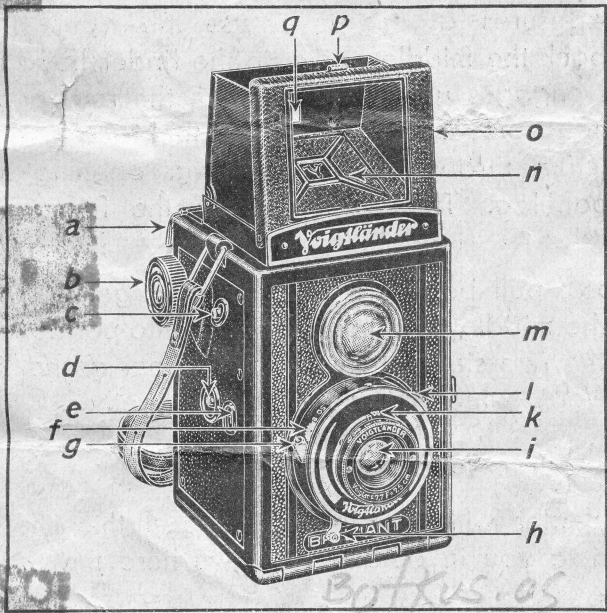

- | | |
|--|---|
| a) Back panel catch | i) Front lens with scale |
| b) Film transport spool-pin | k) Adjusting mark for focussing |
| c) (beneath carrying strap) re-
lease button of film trans-
port catch | l) Diaphragm adjustment |
| d) Indicator release | m) Finder lens |
| e) (at rear) window for film
numbers | n) Frame finder flap of finder
hood cover |
| f) Shutter adjustment | o) Finder hood cover with frame
finder |
| g) Nozzle for shutter cable re-
lease | p) Closing catch for finder hood |
| h) Shutter release | q) Rear panel with viewing
aperture for frame finder |

1. Finder:

Open the finder hood cover *o* by lifting catch *p* (preferably with thumb). Look vertically down into the finder hood and view the subject.

For exposures at eye level use the frame finder: Press back the middle part *n* in the finder hood cover until it engages under the boss on the rear panel *q*. Press the camera tightly against the face and view the picture through the rectangular opening in the rear panel *q*. The front part of the frame finder shows the exact angle of view.

To close, pull back the rear panel *q* gently, whereupon the middle part *n* springs back into position. Now close the two sides, then the rear panel *q* and finally the cover *o* which holds the whole together.

2. Shutter and diaphragm:

Your dealer will be glad to explain this important section to you in detail. We give here the essential points:

The lever operating the shutter adjustment is indicated on the illustration by "f". 50 means $\frac{1}{50}$ th of a second. For the B adjustment the shutter remains open as long as the release is pressed down, while for T it opens on the first pressure and closes on the second.

When releasing the shutter, hold the Brilliant firmly in both hands, view the picture and press the release lever *h* gently down. Do not jerk, or the picture will be "shaky". Hold the camera still and straight.

For long time exposures fix the camera on a tripod. The screw-bush is on the base of the Brilliant. Release shutter with wire release attached to g.

Diaphragm adjustment *l* is also on the shutter. The diaphragm controls the time of exposure and depth of focus. (Read up this point in a good text book.) The greater the number, the smaller the diaphragm aperture.

Double the time of exposure when the diaphragm aperture is set to the next smaller value.

*20 SEC. INSIDE 15-30 SEC. OUTSIDE
3. Focussing: RARELY MORE THAN 1 MIN. IF
ANY LIGHT AT ALL*

Revolve front lens mount by milled ring. Adjust red dot on the appropriate word (Landscapes, Groups, Portraits) beneath the indicator mark *k*. These distinguishing words greatly facilitate focussing:

at Landscapes the sharpness extends from 20 feet to infinity (infinity, i. e. anything over 100 feet),

at Groups the sharpness extends from 7 feet to 20 feet,

at Portraits the sharpness extends from 4 feet to 7 feet.

4. Film Chamber: *120 film*

Hold the front part of the Brilliant in the left hand. Press together the knobs *a* and open back panel.

Remove empty spool from lower chamber. Pull out large film transport knob *b* and keep it in that position by turning it a quarter way round. Open out the film protecting cover by the handle on the left,

place the empty spool on the pin, so that the slot faces the film winding-key. Turn the latter until it engages in the slot.

Then insert the full spool in the bottom chamber, hold it secure, and tear off and remove the adhesive strip. Hold the spool gently in the chamber and pull out the protective paper with the black side downwards, and insert the ~~one~~ in the wide slit on the empty spool. Turn the film key twice and make sure that the paper is being gripped. The paper must wind exactly between the two spool flanges. Close the camera.

5. The Indicator:

Butkus.us

Hold the camera in the left hand, as above, and pull up the knob *c* by the index finger. Now observe on the rear panel the red film-window which when closed can be opened by turning the milled knob to the left, and turn the film knob *b* until (after hands and dots) the figure "1" appears. Let go knob *c* and press knob *d* towards the number window *e* until the figure "1" is also visible there. When using panchromatic film, the red film-window has to be closed by turning the milled knob to the right. The Brilliant is now ready for the first exposure.

N. B. — Make it a rule to turn on immediately after each exposure.

To be able to turn the film on, the knob *c* must be pressed up once more. Without consulting the film or number window, you may now turn on as far as the knob will go and then make the second exposure.

This procedure is repeated up to the twelfth exposure. The number window *e* indicates how many exposures have been made.

After the twelfth exposure there is a thirteenth stop, which is also overcome by lifting knob *c*, then turn on until the protective paper is no longer visible in the red film window.

Now open the rear panel, remove the full spool and secure it by means of the adhesive band. Hold it securely while doing so, to prevent it from unwinding.

6. The "Hold-all"

Butkus 05

This compartment is built into the side of the camera not shown in the illustration. It is provided with a door which opens by pulling the small handle back. This compartment is intended to accommodate yellow filters, portrait lenses and the excellent Brilliant exposure meter. These accessories are placed on the discs on the cover and secured by turning to the right.

7. Accessories:

Yellow filters are indispensable for well-balanced pictures with correct tonal values, and particularly for attractive landscapes. Voigtländer make a light filter (Moment, 2X) and a dense filter (Normal, 4X), both of special glass and absolutely plan-parallel. Size required: 29 mm. diameter.

Portrait lenses are also available for your Brilliant, namely Portrait-Focar No. 67 and Near-Focar No. 30*.

* Near-Focar No. 30 cannot be accommodated in the "hold-all".

which make it possible to approach very closely the subject taken. The following distances (very accurately measured) are possible:

Brilliant F/7,7 2 3/4 3/4

Focussed on	Sharpness (measured from lens) lies:	
	Portrait-Focar 67	Near-Focar 30
Portraits	24 in.	15 in.
Groups	31 in.	17 in.
Landscapes	40 in.	20 in.

The Voigtländer Lens Hoods impart brilliance to pictures, as they cut off all disturbing side light. Particularly for exposures against the light, they are quite indispensable.

The Brilliant Exposure Meter is the most suitable instrument for your camera. It measures extremely rapidly and accurately the correct time of exposure. Have everything demonstrated to you by your dealer, and in particular — use Voigtländer film! The orthochromatic "Illustra" (18/10° DIN) and the panchromatic "Bessapan" (19/10° DIN) are available for your use — two films which have great latitude for exposure and, above all, give brilliance and richness of tone to your pictures.