

will'tek

Willtek 3600D/4300

Mobile Service Tester



TDMA Full Rate Burst Power Measurement

This release provides the 3600/4300 user with the ability to measure the average power of a TDMA burst transmitted by a mobile phone that may or may not be synchronized with the test set.

Summary of Changes

- 1 TDMA Burst Power measurement function added.
- Two front panel screens added.
- Remote commands added.

Related information

This addendum is a supplement to the following documents:

- 6510-00-0271 Rev. H, 3600 Manual, Operation
- 6510-00-0438 Rev. B, 4300 Manual, Operation
- 6510-40-0001 Rev. B, 4300 Manual, Reference

Features and capabilities

The TDMA Burst Power measurement function provides continuous measurement at a rate greater than or equal to 1 refresh per second.

Input Criteria The mobile must be transmitting an IS-136 compliant burst signal and the 3600D/4300 must be in Burst Power mode.

Note: No mobile messaging is decoded during burst measurement.

Measurement Capability If the bursting signal passes a minimum threshold, the average power of the burst envelope is displayed on the screen in user-selected units of dBW, dBm, Watts.

Additionally, the full envelope or selected sample point data is also available through the remote port or sequence program.

Theory The 3600D/4300 employs a window search to acquire and lock onto the mobile's burst timing. The 3600D/4300 continuously monitors the burst timing and automatically adjusts to drift in the burst timing.

To access the TDMA tuning spectrum screen:

At the Manual Mode screen

Manual Mode		Register Mobile
Feb 29 2000, 08:00:01 AM		Accept Originatn
Performance Specification EIA		Page Mobile
Verify that mobile has acquired service.		Service Mode
RF Input: Direct		System Setup
Cable Selection: 1		RF Input
Pwr Level 2 Base Pwr -75.0		DCCH Messages
Channel 330		Base Pwr ON/OFF
System A		

press Service Mode soft key to invoke the TDMA Summary screen.

Note: If the TDMA Summary screen is not displayed, press the Service Mode soft key.

Press the Channel type key until "TDMA" is displayed. Return to the TDMA Summary screen by pressing the Return soft key.

Note: An alternate method to invoke the TDMA Summary screen:

At the Manual Mode screen, press System Setup and select "TDMA" as the Initial type. Press Return to display the Manual Mode screen and press the Service Mode soft key.

Note: This method selects TDMA as the Initial type for both Manual and Service Mode operation.

TDMA Summary		Service Setup
Mobile Transmitter		Signal Quality
Power	0.0 dBW	Voice Setup
Freq Offset	0.00 kHz	Transmit Tests
RMS EVM	0.0 %	Receiver Tests
Origin Offset	0.0 dBc	Vector Tests
Time Alignment	0.000 sym	Tuning Mode
Mobile Receiver		Return
Bit Error Rate	----- %	
DC Power	0.0 W 0.00 V 0.00 A	
Pwr Level	2 Base Pwr -70.0	
Channel	363 No Valid Burst	
Slot	1+4 No Mobile Sync	

At the TDMA Summary screen, the message "No Valid Burst" may be displayed, even if the mobile bursts are active. This is a normal condition caused by the fact that the 3600D/4300 is not yet in autosynchronization mode.

To access the CDMA burst Summary screen

At the TDMA Summary screen, press the Tuning Mode soft key to access the TDMA Tuning Mode screen.

TDMA Tuning Mode		
Burst Power - Measures average power of an unsynchronized TDMA burst.		Burst Power
Tuning Spectrum - Displays spectrum information of an unsynchronized TDMA burst.		Tuning Spectrum
Channel 330	Base Pwr -64.0	Summary

At the Tuning Mode screen, press the Burst Power soft key to invoke the Burst Power screen.

TDMA Burst Power	
Burst Power - 52.3 dBW	
Channel 330	Base Pwr -64.0
	Return

The burst measurement is displayed as new measurements are made.

If no burst is found, the reading is displayed as all dashes along with:

TDMA Burst Power	
Burst Power - - - - - dBW	
Channel 330	Base Pwr -64.0
	No Signal
	Return

"No Signal" (threshold not met), in the status window or

TDMA Burst Power	
Burst Power - - - - - dBW	
Channel 330	Base Pwr -64.0
	No Valid Burst
	Return

"No Valid Burst" (threshold met, no valid burst found).

New Remote Commands

MEASure:SRVMode:BURSt?

This command begins burst envelope measurements and waits for the next measurement to complete. If a valid burst is measured, the results (mod envelope power data, average power) are copied to a buffer to allow access to the individual elements of the last burst measurement by using the (READ:SRVMode:BURSt) commands. The valid measurement status is returned by this command to indicate whether a valid burst was captured.

The 3600D/4300 must be in TDMA spectrum/burst measurement mode (CALL:SRVM:SPEC:STAT ON) prior to receiving this command or a settings conflict error -221 (return code -603) will be indicated.

Returns:

- 0 if a valid burst was detected
- 1 if minimum threshold for burst not exceeded (No signal indication)
- 2 if threshold exceeded but burst not valid (No valid burst indication)

Example:

```
CALL:SRVM:TYPE TDMA; BAND CELL;
CHAN 330; IMM
CALL:SRVM:SPEC:STAT ON
MEAS:SRVM:BURSt?
0
MEAS:POW:TRAN:UNIT DBM
READ:SRVM:BURSt:POW?
-10.2
CALL:SRVM:SPEC:STAT OFF
```

The first two preceding commands set the unit up for TDMA service mode and then enter the spectrum/burst measurement mode. A burst envelope measurement is then performed on line 3, which responds 8 December 2000 with a value of 0, indicating a valid burst was received.

The average power measurement is then read from the burst measurement in dBm units (-10.2 dBm). Finally, the normal service mode measurement mode is restored.

READ:SRVMode:BURSt:POWer [:AVERAge]?

This command returns the average power from the last captured burst envelope measurement. This command must be preceded by the MEASure:SRVMode:BURSt? command to acquire the measurement. The power is reported in units selected by MEASure:POWer:TRANsmitter:UNITs.

Returns:

numeric floating point value

READ:SRVMode:BURSt:POWer:ENVelope[:DATA]?

This command returns power measurements for each sample from the last captured burst envelope measurement. This command must be preceded by the MEASure:SRVMode:BURSt? command to acquire the measurement. Measurements are taken at 41.152 microseconds intervals, with each power reported in dBW units. This provides a total capture time of approximately 6914 microseconds.

Returns:

comma-separated numeric floating point values. Number of entries indicated by READ:SRVM:BURSt:POW:ENV:POIN?.

READ:SRVMode:BURSt:POWer:ENVelope: SAMPLE? < index >

This command returns the power measurement for the specified sample from the last captured burst envelope measurement. Each sample represents 1 symbol/time duration, or approximately 41.152 microseconds. This command must be preceded by the MEASure:SRVMode:BURSt? command to acquire the measurement.

The power is reported in units selected by MEASure:POWer:TRANsmitter:UNITs.

Returns:

numeric floating point value

Example:

```
MEAS:POW:TRAN:UNIT MW
READ:SRVM:BURS:POW:ENV:SAMP? 149
890
```

This is an example of how to query a specific sample point of the captured burst envelope. Sample index 149 is the 150th element of the envelope array. The result (890) indicates a power level of 890 mW based on the unit selection of MW in the preceding command.

```
READ:SRVMode:BURSt:POWer:ENVelope:POINts?
```

This command returns the number of samples in the last captured burst envelope measurement. This command must be preceded by the MEASure:SRVMode:BURSt? command to acquire the measurement.

Returns:

numeric integer value

Example:

```
READ:SERV:BURS:POW:ENV:POIN?
168
```

This example indicates that 168 samples are available for reading in the burst power array.

The sample index range for READ:SRVM:BURS:POW:ENV:SAMP would be 0 - 167.

Specifications

Average Power Range

Same as 3600D/4300 specifications

Power Range Accuracy

Same as 3600D/4300 specifications

Width

TIA/EIA-136-270-A compliant burst width: $\pm 206\mu\text{S}$

Front Panel Refresh Rate

greater than or equal to 1.0 per second

© Copyright 2003 Willtek Communications GmbH. All rights reserved. Willtek Communications, Willtek and its logo are trademarks of Willtek Communications GmbH. All other trademarks and registered trademarks are the property of their respective owners.

Note: Specifications, terms and conditions are subject to change without prior notice.

Willtek Communications GmbH
85737 Ismaning
Germany
Tel: +49 (0) 89 996 41-0
Fax: +49 (0) 89 996 41-440
info@willtek.com

Willtek Communications Inc.
Indianapolis
USA
Tel: +1 317 595 2021
Tel: +1 866 willtek
Fax: +1 317 595 2023
willtek.us@willtek.com

Willtek Communications Ltd.
Chessington
United Kingdom
Tel: +44 (0) 20 8408 5720
Fax: +44 (0) 20 8397 6286
willtek.uk@willtek.com

will'tek