


Adding ink

Approximate time to complete: 1 minute

The front panel displays a message telling you when the printer is low on ink, giving you time to make a minimal number of prints before stopping to load ink. When the printer is out of ink, it displays an **Out of Ink** message. Add up to three ink sticks to the printer before continuing to print. To avoid printing delays, immediately reorder and maintain a stock of each color ink stick.

7. Open the top cover.
8. Drop the appropriate color Phaser 340 ColorStix ink stick into the ink loading bin that appears low. Each ink stick is uniquely shaped to fit into the correct ink-loading bin.

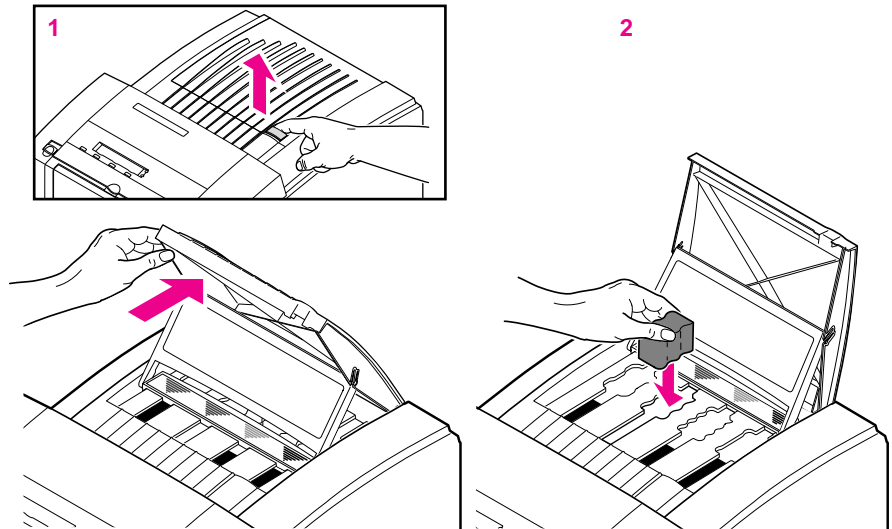

9101-21

9. After loading the appropriate color ink stick, a front panel message directs you to close the top cover.

For typical office document printing, you'll use one of each color ColorStix ink stick to print approximately 1000 pages. To reorder additional ink sticks, contact your local dealer or, in the United States, call Tektronix at **1-800-835-6100**.

Printer ink sticks

016-1307-00	Phaser 340 ColorStix solid ink — 3 Black sticks
016-1308-00	Phaser 340 ColorStix solid ink — 3 Cyan sticks
016-1309-00	Phaser 340 ColorStix solid ink — 3 Magenta sticks
016-1310-00	Phaser 340 ColorStix solid ink — 3 Yellow sticks