

## Printing the configuration page

The configuration page contains a variety of information especially useful for network installation and troubleshooting.

There are several ways to print the configuration page:

- Use the printer's front panel menu, according to the following instructions.
  1. While the Ready message is displayed, press the **Menu** button. The printer displays the first item in the menu:

```
Help Pages
<----- <-----> Menu
```

2. Press the **Menu** button to access the Help Pages. The following message appears:

```
Menu Map
<----- <-----> Print
```

3. Press the left arrow (<-----) or right arrow (<----->) buttons until the following message appears:

```
Configuration Page
<----- <-----> Print
```

4. Press the **Print** button to print a configuration page.
- Send a PostScript language file to the printer. See the *PhaserShare Network Cards and Software System Administrator User Manual* or the *Phaser 340 Drivers and Utilities Printing Reference* for more information on the configuration page.
  - Use your World Wide Web browser. Refer to the *PhaserShare Status Software User Manual* for more information.