

Enabling and disabling the startup page

You can choose to have a startup page print each time the printer is turned on or reset, or you can disable the startup page.

Use the following files for your computer type.

Macintosh file name	PC file name
LaserWriter Utility	NOSTRTPG.PS STARTPG.PS

Macintosh users

1. Install the utility files from either the printer's CD-ROM or the Printer Software for Macintosh diskette.
2. Select the appropriate printer in the **Chooser**.
3. Locate the *LaserWriter Utility* in the *PhaserTools* folder on your hard disk, and double-click its icon to start the application.
4. Choose **Set Startup Page** from the **Utilities** menu.
5. Select either the **on** or **off** button, then click **OK**.

PC and workstation users

1. Install the utility files from either the printer's CD-ROM or the Printer Software for Windows diskette.
2. Locate the installed files in the "PHSR" subdirectory inside the *PHSRTOOL* directory on your hard disk, and select one of the following files:
 - Use the *STARTPG.PS* file to enable printing of the printer's startup page.
 - Use the *NOSTRTPG.PS* file to stop the printer from printing a startup page.
3. Use one of the following methods to send the desired file to the printer:
 - **PC users:** Use the DOS **COPY** command to send the file to the printers. (Windows 3.1 users can also use the **Copy** command in the **File Manager**.)
 - **Workstation users:** Send a file to the printer as you would any PostScript file.