

## Replacing the maintenance tray


### Approximate time to complete: 1 minute

The printer uses the maintenance tray, located inside the printer behind the front cover, prior to each printing and during cleaning operations. A front panel message tells you when the maintenance tray is low, allowing you to make a minimal number of prints before the tray is depleted. Install a new maintenance tray to continue printing. Each replacement maintenance tray has a print capacity of approximately 10,000 prints. To avoid printing delays, keep an extra maintenance tray available for use in the printer.

**Note** *There is a 15-minute warm-up period required after replacing the maintenance tray.*

To order a maintenance tray (Tektronix order number 436-0294-03), contact your local dealer or, in the United States, call Tektronix at **1-800-835-6100**.

1. Open the front cover.

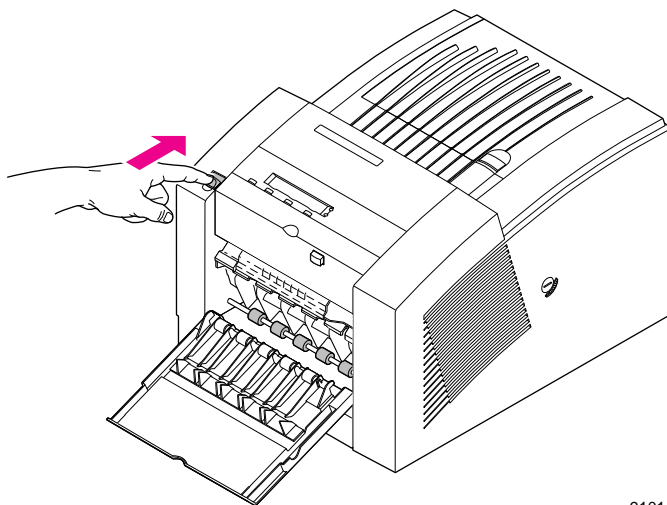


**Caution** *Some surfaces inside the printer may be hot. Be careful not to touch the areas marked with this caution icon:*



2. When you open the front cover, the following message appears:

Caution Hot Surfaces  
Replace Maintenance Tray

3. Grasp the maintenance tray by the front edge and lift up while sliding it out of the printer.

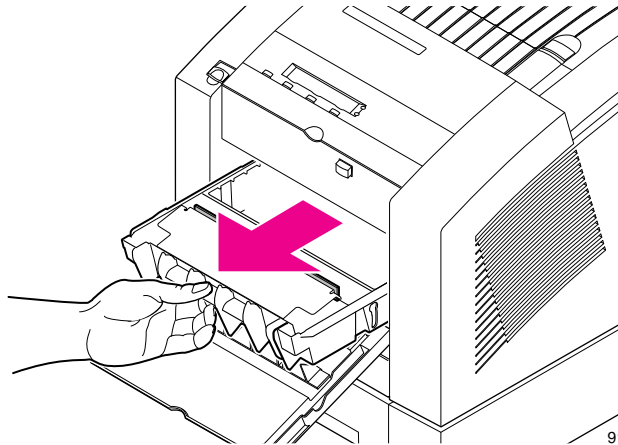

9101-53

**Note** *Once the maintenance tray has been partially used, it leaks drum fluid if tipped. Never ship a partially used maintenance tray. Contact with the drum fluid poses no known health risk.*

4. Install a new maintenance tray in the printer.

**Note** *Be sure to push on both sides of the maintenance tray to latch it firmly into the printer.*

5. Close the front cover and wait for the printer to warm-up.
6. To prevent leaking, seal the used maintenance tray in the plastic bag from the new (replacement) maintenance tray. Treat the used maintenance tray as normal office waste.