

Front panel menu map

The front panel menu map provides a convenient navigation aid for quickly determining the location of menu items. The menu map prints in English, regardless of the front panel language setting.

You can print the menu map from the front panel using the following instructions:


1. While the `Ready` message is displayed, press the **Menu** button. The printer displays the first item in the menu:

```
Help Pages
<----- <----->      Menu
```

2. Press the **Menu** button to access the Help Pages. The following message appears:

```
Menu Map
<----- <----->      Print
```

3. Press the **Print** button to print a menu map page.

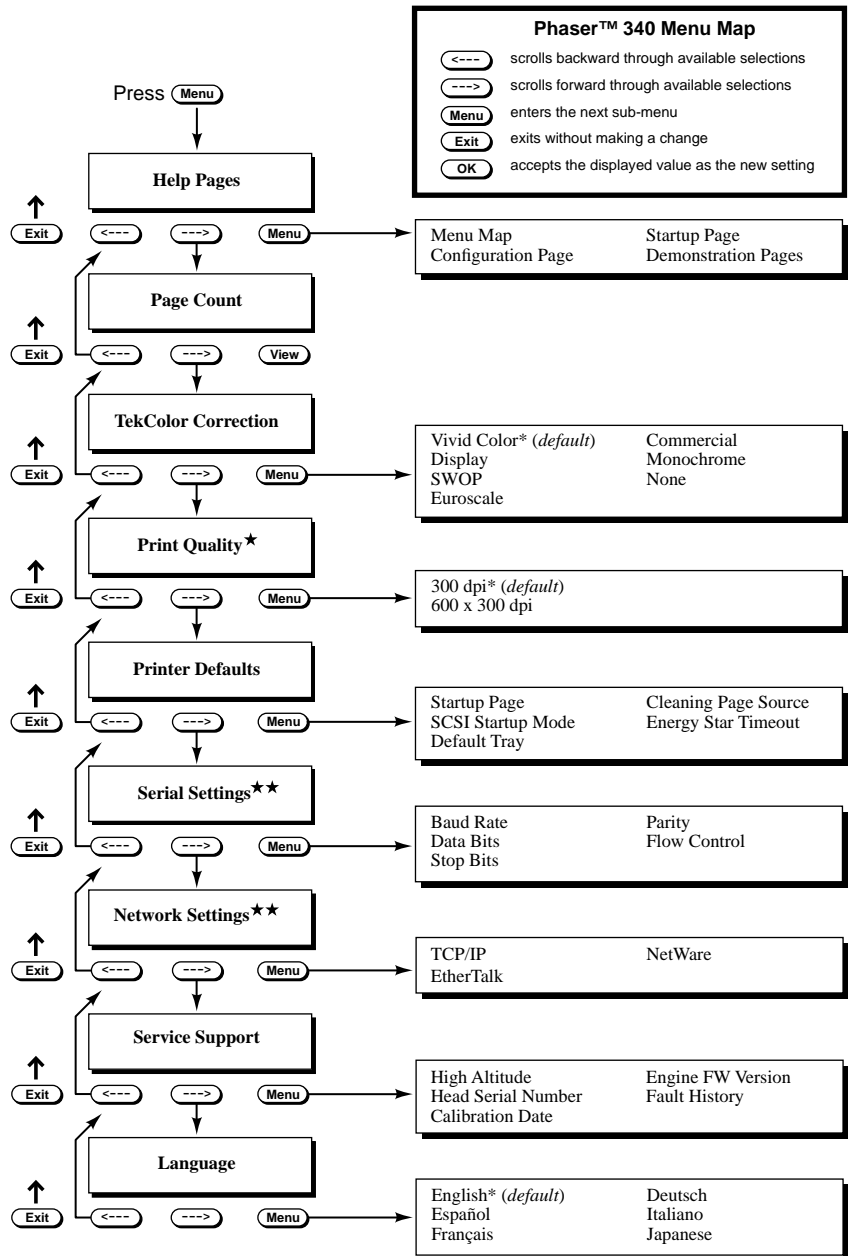

* 600 dpi configuration only.

** Appears when optional Phaser™ Share card is installed.