

## Print quality modes

The Phaser 340 provides a 300 dpi resolution print quality mode. 600 x 300 dpi resolution is optionally available.

**300 dpi** The default print-quality setting. This is the fastest mode for full color printing on paper and transparencies. In this mode, the printer operates at 4 ppm (pages-per-minute) for paper and 2 ppm for transparencies.

**600 x 300 dpi** Available with the optional features provided by the Plus configuration. The Plus configuration also includes 24 Mbytes of memory and a total of 69 fonts. 600 x 300 dpi resolution produces better looking text and the smoothest color blends on paper. In this mode, the printer operates at 2 ppm. This print mode is not available for transparency printing.

### Selecting print quality modes from the front panel

Use the following steps to change the print quality mode through the printer's front panel menu.

**Note** *The Print Quality selection is only available for the optional 600 x 300 dpi configuration.*

1. When the printer is on and the Ready message appears, press the **Menu** button. The printer displays the first selection in the menu:


```
Help Pages  
<----- <-----> Menu
```

2. Using the left arrow (<-----) or right (<----->) arrow buttons, scroll through the selections until the following message appears:

```
Print Quality  
<----- <-----> Menu
```

3. Press the **Menu** button to access print quality selections. The printer displays the following message:

```
Print Quality:300 dpi*  
<----- <-----> OK
```

4. Using the right or left arrow buttons, scroll between the print quality selections until you reach the appropriate setting. An asterisk next to the selection indicates the currently active setting.
5. Press the **OK** button to confirm your selection.
6. Return to the top level of the menu by pressing the  **Exit** button until the printer displays the **Ready** message.