

Printing the startup page

By default, printing of the startup page is enabled on power up. However, you can print the startup page anytime when you need to learn the number of pages that have been printed, the amount of installed memory, the number of fonts in memory, and installed interface ports.

Note *If the printer detects a non-fatal failure, it automatically prints a startup page containing diagnostic information regardless of the startup page setting.*

There are two ways to print the startup page:

- Use your World Wide Web browser. Refer to the *PhaserShare Status Software User Manual* for more information.
 - Use the printer's front panel menu, according to the following instructions.
1. While the Ready message is displayed, press the **Menu** button. The printer displays the first item in the menu:

```
Help Pages
<----- <-----> Menu
```

2. Press the **Menu** button to access the Help Pages. The following message appears:

```
Menu Map
<----- <-----> Print
```

3. Press the left arrow (<-----) or right arrow (<----->) buttons until the following message appears:

```
Help Pages:Startup Page
<----- <-----> Print
```

4. Press the **Print** button to print a startup page.