

Enabling and disabling the startup page

You can enable and disable printing of the startup page in several ways:

- On a PC, send a PostScript language utility file to the printer. For more information, refer to the *Phaser 340 Drivers and Utilities Printing Reference* manual.
- On a Macintosh, use the *LaserWriter utility*.
- Use your World Wide Web browser. Refer to the *PhaserShare Network Cards and Software User Manual* for more information.
- Through the printer's front panel, according to the following instructions:

1. While the **Ready** message is displayed, press the **Menu** button. The printer displays the first item in the setup menu:

```
Help Pages
<----- <-----> Menu
```

2. Using the left arrow (<-----) or right arrow (<----->) buttons, scroll through the selections until the following message appears:

```
Printer Defaults
<----- <-----> Menu
```


3. Press the **Menu** button to access the printer defaults settings.
4. Using the left arrow (<-----) or right arrow (<----->) buttons, scroll through the selections until the following message appears:

```
Startup Page
<----- <-----> Menu
```

5. Press the **Menu** button to access the startup page settings.

6. Press the right arrow (---->) button once for the following message:

```
Startup Page:Disabled
<----      ---->      OK
```

7. Press the OK button to disable printing of the startup page.
8. To return to the top level of the menu, press the  button until the printer displays the Ready message.