

Front Panel

This topic includes:

- "Front Panel Features" on page 1-5
- "Front Panel Layout" on page 1-6
- "Error and Warning Messages" on page 1-7
- "Print Icon" on page 1-7
- "Menu Map" on page 1-7
- "Information Pages" on page 1-7
- "Sample Pages" on page 1-8

Front Panel Features

The front panel:


- Displays the printer's operating status (for example, **Printing, Ready to Print**, printer errors and warnings).
- Prompts you to load paper, replace supplies, and clear jams.
- Enables you to access tools and information pages to help resolve problems.
- Enables you to change printer and network settings.

Go to [Reference/Features/Printer Settings](#) on the *User Documentation CD-ROM* for details about front panel settings.

Front Panel Layout

The front panel on your printer has three components:

- Multi-colored LED
- Graphic display
- Six button cluster

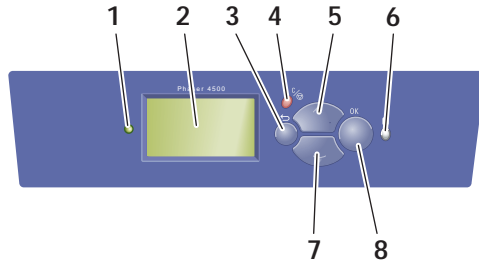

4500-074


1. Status Indicator LED:
 - Blinking green** = Printer is busy or in Standby mode
 - Steady green** = Ready to print or Power Saver mode
 - Blinking yellow** = Warning, continues to print
 - Blinking red** = Error condition
 - Steady red** = Startup sequence
2. Graphic display shows status messages and menus.
3. **Back** button
Returns to the previous menu item.
4. **Cancel** button
Cancels the current print job.
5. **Up Arrow** button
Scrolls upward through the menus.
6. **Information (i)** button
Displays a help message with information about the printer, such as printer status, error messages, and maintenance information.
7. **Down Arrow** button
Scrolls downward through the menus.
8. **OK** button
Accepts the setting selected.

The Graphic Display has two sections:

- The top section displays status messages and titles for the printer.
- The bottom section displays the front panel menus and information text.

Error and Warning Messages

When there is a problem with the printer, the front panel displays (1) an error or warning message. Press the **i** button (2) for more information about the error or warning message and ways to solve the problem.

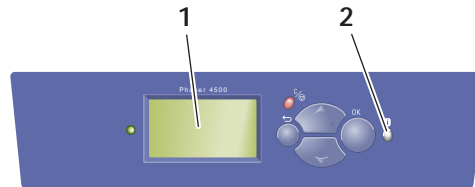

4500-075

Print Icon



There are a number of information pages accessible through the front panel. When the print icon appears before a title on the front panel display, press the **OK** button to print that page.

Menu Map

The “Menu Map” is a visual representation of the front panel Menu Map structure. To print the “Menu Map”:

1. At the printer’s front panel, select **Information**, then press the **OK** button.
2. Select **Menu Map**, then press the **OK** button to print.

Note

Print the “Menu Map” to see other information pages available for printing.

Information Pages

Your printer comes with a set of information pages that helps you solve printing problems and obtain the best results from your printer. Access these pages from the printer’s front panel.

To print information pages:

1. At the printer’s front panel, select **Information**, then press the **OK** button.
2. Select **Information Pages**, then press the **OK** button.

3. Select the appropriate information page, then press the **OK** button to print.

Note

Print the “Menu Map” to see other information pages available for printing.

Sample Pages

Your printer comes with a set of sample pages which demonstrate different printer functions.

To print sample pages:

1. At the printer’s front panel, select **Information**, then press the **OK** button.
2. Select **Sample Pages**, then press the **OK** button.
3. Select the desired sample page, then press the **OK** button to print.