

Rear panel switches

Rear panel switches

Switch	Function	Settings
1	Reset/run	<p><i>Up:</i> The printer resets and does not accept data while the switch is in this position.</p> <p><i>Down:</i> The printer runs a self-test, then proceeds to run normally. Leave the switch <i>down</i> for normal operation.</p>
2, 3, and 4	Diagnostics	<p><i>Up:</i> When only Switch 4 is moved from <i>down</i> to <i>up</i>, the printer prints a configuration page. See table Switches 2, 3, and 4: Diagnostics.</p> <p><i>Down:</i> Normal operation.</p>
5	Start Job	<p><i>Up:</i> The Sys/Start job on the hard disk does not run.</p> <p><i>Down:</i> The Sys/Start job runs if the file exists on the disk.</p>
6	Cleaning mode	<p><i>Up:</i> At power-up, the printer rotates the rollers for a few seconds, then stops the rotation.</p> <p><i>Down:</i> Normal operation.</p>
7	Baud Rate	<p><i>Up:</i> Fixed. Sets the serial communication parameters to 1200 baud, software flagging, and ignore parity.</p> <p><i>Down:</i> Variable. Lets you change the serial communication parameters. The factory setting is 9600 baud, software flagging, and ignore parity.</p>
8 and 9	Color correction	See table Switches 8 and 9: Color Correction Modes .

Switches 2, 3, and 4: Diagnostics

Switch 2	Switch 3	Switch 4	Function
Down	Down	Down	Default, normal operation
Down	Down	Up	Prints configuration page
Up	Down	<i>Down or Up</i>	For qualified service personnel
Down	Up	<i>Down or Up</i>	For qualified service personnel
Up	Up	<i>Down or Up</i>	For qualified service personnel

Switches 8 and 9: Color Correction Modes

Switch 8	Switch 9	Function
Down	Down	No color correction
Down	Up	SWOP Press (matches output of a web offset press)
Up	Down	Vivid Blue
Up	Up	Use NVRAM setting (default setting is Euroscale Press)