

Photographic images appear grainy

- Check the Print Quality menu in the front panel. If the selected mode is **Presentation**, change it to **Standard**.

The **Presentation** print-quality selection in the front panel substitutes **Presentation** mode rendering when **Standard** mode is selected in the driver.