

Fonts

This topic includes:

- "Types of Fonts" on page 1-21
- "Resident Printer Fonts" on page 1-21
- "Viewing a List of Resident Fonts" on page 1-21
- "Printing a List of Resident Fonts" on page 1-22
- "Downloading Fonts" on page 1-23

Types of Fonts

Your printer uses the following types of fonts:

- Resident fonts
- Fonts downloaded into printer RAM, hard drive, or flash memory
- Fonts downloaded with your print job from the application

Adobe Type Manager (ATM) software enables your computer to display these fonts on your computer screen as they will appear in your prints.

If you do not have ATM on your computer:

1. Install it from the *Printer Installer and Utilities CD-ROM*.
2. Install the printer's screen fonts for your computer from the ATM folder.

Resident Printer Fonts

Printer-resident PostScript and PCL fonts are always available for printing.

Viewing a List of Resident Fonts

To view a list of resident PCL or PostScript fonts, use CentreWare IS:

1. Launch your web browser.
2. Enter your printer's IP address in the browser's **Address** field (<http://xxx.xxx.xxx.xxx>).
3. Select **Properties**.
4. Select the **Web Server** folder on the left sidebar.
5. Select **Font Files**.

Printing a List of Resident Fonts

To print a list of resident PostScript or PCL fonts, use:

- The printer's front panel
- CenterWare IS
- The printer driver

Using the Printer's Front Panel

To print either a PostScript or PCL font list at the front panel:

1. Select **Information**, then press the **OK** button.
2. Select **Information Pages**, then press the **OK** button.
3. Select either **PCL Font List** or **PostScript Font List**, then press the **OK** button to print.

Using CentreWare IS

To print either a PostScript or PCL font list from CenterWare IS:

1. Launch your web browser.
2. Enter your printer's IP address in the browser's **Address** field (<http://xxx.xxx.xxx.xxx>).
3. Select **Properties**.
4. Select the **Web Server** folder on the left sidebar.
5. Select **Font Files**.
6. Click the **Printer** icon to print the list of fonts.

Using a PC Printer Driver

To print either a PostScript or PCL font list from your printer driver:

1. Select **Start**, select **Settings**, then select **Printers**.
2. Right-click the **5500** printer, then select **Properties**.
3. Select the **Troubleshooting** tab.
4. Click the drop-down arrow in the **Printer Information** field to view the list of options.
5. Select **PostScript Font List** or **PCL Font List** from the drop-down list.
6. Click **Print**.

Downloading Fonts

To supplement the resident fonts (which are always available for printing), downloadable fonts can be sent from your computer and stored in the printer's RAM, optional flash memory, or on the printer's optional hard drive.

Note

If you turn the printer off, the fonts you download to RAM are deleted. You must download them again when you turn the printer on.

Before printing, verify that the fonts specified in your document are installed in the printer or are set up to download correctly. If your document has a font not currently in your printer, or downloaded with your print job, a different font will be used.

The printer accepts the following downloadable fonts:

PCL Font Type Support:

- Type 0
- Type 10
- Type 11
- Type 15
- Type 20

Postscript Font Type Support:

- Type 1
- Type 3
 - Adobe
 - Agfa
 - Bitstream
 - Microsoft
 - Apple

TrueType (Scalable to any point size; looks the same on-screen and printed)

Downloading Fonts from CentreWare Font Management Utility

The CentreWare Font Management Utility (FMU) is a Windows and Macintosh application that helps manage fonts, macros and forms on a printer's hard drive. Downloading fonts to a printer can improve printing performance and reduce network traffic. You can list, print, delete, and download PostScript and PCL fonts using the Font Management Utility.