

## Labels

This topic includes:

- "Guidelines" on page 2-53
- "Printing Labels" on page 2-53

Labels can be printed only from Tray 1 (MPT). The maximum number of sheets that can be loaded in Tray 1 (MPT) is 30.

To order supplies, contact your local reseller or visit the Xerox web site at [www.xerox.com/office/7750supplies](http://www.xerox.com/office/7750supplies).


## Guidelines

- Do not use any sheet where labels are missing; it may damage the printer.
- Store unused labels flat in their original packaging. Leave the sheets of labels inside the original packaging until ready to use. Return any unused sheets of labels to the original packaging and reseal it.
- Do not store labels in extremely dry or humid conditions or extremely hot or cold conditions. Storing them in extreme conditions may cause print quality problems or cause them to jam in the printer.
- Rotate stock frequently. Long periods of storage in extreme conditions can cause labels to curl and jam the printer.
- Print only on one side of the sheet of labels.

## Printing Labels

If your application has a setting for labels, use it as a template.

1. Insert the label sheets **long-edge feed** and **facedown** into Tray 1 (MPT). Place the **top** of the page toward the **front** of the printer.

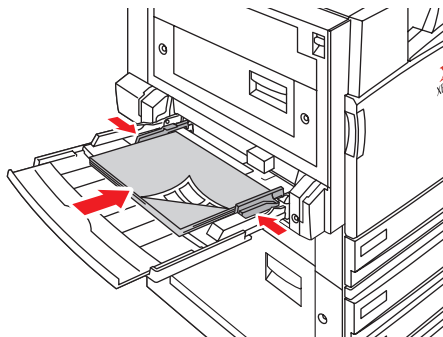

7750-099

2. Adjust the paper guides to the size of the label sheets.

## **Selecting Front Panel Settings to Print Labels**

- 1.** At the printer's front panel, do one of the following:
  - Press the **OK** button if both **Labels** and the correct paper size are selected. Go to Step 4.
  - Select **Change** if a different paper type or incorrect paper size is selected, then press the **OK** button. Go to Step 2.
- 2.** Select **Labels**, then press the **OK** button.
- 3.** Select the paper size, then press the **OK** button to save your selection.
- 4.** In the printer driver, select either the paper type or **Tray 1 (MPT)** as the paper source.