

Your printer's configuration page

Your printer can generate a configuration page that lists the following types of information:

- General printer information
- Communication and network parameters for all ports
- TekColor settings
- SCSI disk settings (if the printer has a SCSI port)

The information supplied on the configuration page is very helpful when you are installing and configuring the printer on a network.

There are three ways to print the configuration page:

- **Use the printer's front panel.** You can easily print the configuration page from the printer's front panel. See your printer's user manual for instructions, or refer to the topic *Printing a configuration page from the printer's front panel*. Use this method if your printer is not yet configured on the network.
- **Use PhaserLink.** With a TCP/IP connection and a World Wide Web browser, you can use PhaserLink.
- **Send a PostScript file from your printer's network utilities diskettes to the printer.** See the topic "Your printer's network utilities diskettes" for more information.
 - **From a PC:** send the file *PRNTCNFG.PS* in the *NET-UTIL* directory. Use the DOS **COPY** command to send the file to the printer.
 - **From a UNIX workstation:** send the file *prntcnfg.ps*.
 - **From a Macintosh:** send the file *Configuration Page*. Send the file to your printer using the *LaserWriter Utility*.

Note *Do not attempt to use the **Print Configuration Page** command in the LaserWriter Utility's **Utilities** menu to print the configuration page.*

Using the *LaserWriter Utility* to send a PostScript file to the printer

1. Select the printer in the **Chooser**.
2. Locate the *LaserWriter Utility* on the Macintosh version of your printer's PhaserShare Software diskettes.
3. Double-click on the **LaserWriter Utility** icon.
4. From the **Utilities** menu, select **Download PostScript File**. Select the file *Configuration Page* from the list, then click the **Open** button.
5. At the prompt `Save PostScript output as:` you are prompted to name the log file that the *LaserWriter Utility* creates for PostScript errors. Use either the default name given in the edit box or type in a new name. Click **Save** to send the file to the printer.
6. If the printer reports no PostScript errors, the *LaserWriter Utility* displays a dialog box. Click **OK** in the box to continue.

Printing a configuration page from the printer's front panel

Print the printer's configuration page and note the print server name. On the Phaser 340, Phaser 540 and Phaser 550 printers, you can print the configuration page from the printer's front panel:

1. While the **Ready** message is displayed, press the **Menu** button. The printer displays the first item in the menu:

```
Help Pages
<----- <-----> Menu
```

2. Press the **Menu** button to access the Help Pages. The following message appears:

```
Menu Map
<----- <-----> Print
```

3. Press the left arrow (<-----) or right arrow (<----->) buttons until the following message appears:

```
Configuration Page
<----- <-----> Print
```

4. Press the **Print** button to print a configuration page.