




# DVD-C996

DVD / VIDEO CD / CD PLAYER




OWNER'S MANUAL

# IMPORTANT SAFETY INSTRUCTIONS

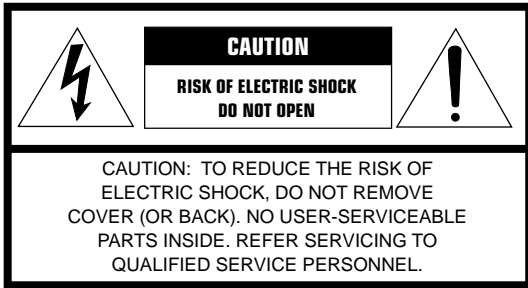

- Explanation of Graphical Symbols

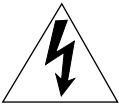 


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING**  
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## FCC INFORMATION (for US customers only)

**1. IMPORTANT NOTICE : DO NOT MODIFY THIS UNIT!**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

**2. IMPORTANT :** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

**3. NOTE :** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

## We Want You Listening For A Lifetime

YAMAHA and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, YAMAHA and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



**IMPORTANT**

Please record the serial number of this unit in the space below.

**MODEL:**

Serial No.:

The serial number is located on the rear of the unit. Retain this Owner's Manual in a safe place for future reference.

**WARNING**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

# CAUTION: READ THIS BEFORE OPERATING YOUR UNIT.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this unit in a well ventilated, cool, dry, and clean place with at least 5 cm above, behind and on the both sides of this unit - away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold.
- 3 Position this unit away from other electrical appliances, motors and transformers to avoid humming sounds, do not place this unit where it may get exposed to rain or any kind of liquid to prevent fire or electrical shock.
- 4 Avoid extreme temperature swings or excessive use of humidifier in the room where this unit is installed to prevent condensation inside this unit, which may cause an electrical shock, fire damage to this unit, and/or personal injury.
- 5 Do not cover this unit with a newspaper, a tablecloth, a curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit and/or personal injury.
- 6 Avoid installing this unit in a place where foreign objects and liquid might fall. It might cause a fire, damage to this unit and/or personal injury. Do not place the following objects on this unit:
  - Other components, as they may cause damage and/or discoloration on the surface of this unit.
  - Burning objects (i.e., candles), as they may cause fire, damage to this unit and/or personal injury.
  - Containers with liquid in them, as they may cause an electrical shock to the user and/or damage to this unit.
- 7 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 8 Do not use force on switches, controls or connection cables. Never pull the cables when disconnecting them.
- 9 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may result in fire or other accidents. YAMAHA will not be held responsible for any damage resulting from the use of this unit with a voltage other than that specified.
- 10 Do not attempt to clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 11 Disconnect the power cord from the wall outlet when not planning to use this unit for a long period of time, or during an electrical storm, as they may cause damage by lightning.
- 12 Do not attempt to modify or fix this unit. Contact the qualified YAMAHA service personnel when any service is needed. Cabinet should never be opened for any reasons.
- 13 Be sure to read 'TROUBLESHOOTING' section regarding common operating errors before concluding that this unit is faulty.

## DANGER

Visible laser radiation when open. Avoid direct exposure to beam.

When this unit is plugged to the wall outlet, do not place your eyes close to the opening of the disc tray and other openings to look into inside.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

 
---

This unit is designed for home use only. Do not use this unit for business purposes.

**Be sure to place this unit on a level surface.** If not so, this unit will fail to work normally at the PLAYXCHANGE operation and cause damage to the disc(s) and this unit itself.

### Caution for moving this unit

- When moving this unit, first remove all discs from the disc table and close the table by pressing the **OPEN/CLOSE** button, and then switch off the power after you confirm that the front panel display indicates as follows.

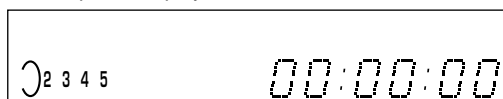

Never switch off the power if the front panel display is not pictured as above, otherwise the unit will break down during moving because the internal mechanism is not locked.

- When moving this unit, be sure to first disconnect the power cord from the AC outlet and disconnect all cords connecting this unit to other equipment.

---

### Voltage selector [General model]

The voltage selector on the rear panel of this unit must be set for your local main voltage BEFORE plugging into the AC power supply. Voltages are 110/120/220/240 V AC, 50/60 Hz.

### FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.

This Class B digital apparatus complies with Canadian ICES-003.

# FEATURES

- 5-Disc Auto-changer for playing DVD-Video, audio CD and Video CD
- PLAYXCHANGE; Disc Changing Capability while playing another
- 1 OPTICAL and 1 COAXIAL Digital Outputs for Dolby Digital, DTS, MPEG and Linear PCM
- 96 kHz, 24 Bit Audio DAC for high sound quality
- Compatible with almost all features of DVD discs (Multi-angle, Multi-language, Parental control, etc.)
- Easy Operation through On-screen Menu (Graphical User Interface)
- Multi-speed Playback Capability
- Component Video [U.S.A, Canada, Australia and General models], S-Video Outputs for high picture quality

# CONTENTS

## INTRODUCTION

<b>FEATURES</b> .....	<b>1</b>
<b>GETTING STARTED</b> .....	<b>2</b>
Checking the Package Contents .....	2
Disc Information .....	2
<b>CONTROLS AND FUNCTIONS</b> .....	<b>4</b>
Front Panel/Remote Control .....	4
Display .....	6

## PREPARATION

<b>REMOTE CONTROL</b> .....	<b>7</b>
Installing Batteries in the Remote Control ...	7
Battery Replacement .....	7
Using the Remote Control .....	7
<b>CONNECTIONS</b> .....	<b>8</b>
Notes about Audio Connections .....	8
Digital Terminals .....	9
Analog Terminals .....	9
Video Terminals .....	10
Remote Control in/out Terminals [U.S.A. and Canada models] .....	11

## PLAYBACK

<b>BASIC OPERATION</b> .....	<b>12</b>
Before Starting Playback .....	12
Playing a Disc .....	13
Search (to advance or reverse playback rapidly) .....	14
Skipping Chapters / Tracks .....	14
Still Picture (to pause playback) .....	15
Frame Advance / Reverse .....	15
Slow-Motion Play .....	15
<b>SELECTING PLAY MODES</b> .....	<b>16</b>
Repeat Play .....	16
A-B Repeat .....	17
Random-Sequence Play [VCD] [CD] .....	17
Program Play [VCD] [CD] .....	18

<b>ADVANCED FEATURES</b> .....	<b>19</b>
Menu Screen [DVD] .....	19
Playback Control [VCD] .....	19
Switching Audio Tracks [DVD] [VCD] .....	20
Switching Subtitle Tracks [DVD] .....	21
Switching Camera Angles .....	21
<b>ON-SCREEN MENU</b> .....	<b>22</b>
Operating On-Screen Menu .....	22
Disc Information Screen .....	23
Player's Information Screen .....	24
Shuttle Screen .....	24

## SETUP MENU

<b>SETUP MENU</b> .....	<b>25</b>
Operating the Setup Menu .....	25
<b>DESCRIPTION OF EACH ITEM</b> .....	<b>26</b>
1. Disc Language [DVD] .....	26
2. Ratings [DVD] .....	27
3. Menu Language .....	28
4. On-Screen Messages .....	28
5. FL Display .....	28
6. TV Aspect .....	28
7. Digital Audio Output .....	29
9. Other Settings .....	30

## APPENDIX

<b>TROUBLESHOOTING</b> .....	<b>31</b>
<b>GLOSSARY</b> .....	<b>33</b>
<b>LANGUAGE CODE LIST</b> .....	<b>33</b>
<b>SPECIFICATIONS</b> .....	<b>34</b>



 
Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992 - 1997 Dolby Laboratories, Inc. All rights reserved.

# GETTING STARTED


## Checking the Package Contents

Check that the following items are included in your package.


### Remote control

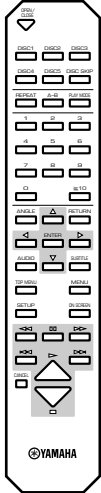

### Batteries (AA, R06, UM-3)

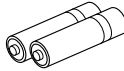 

### RCA pin cable (audio/video)

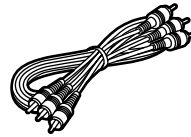

## Disc Information

This DVD changer is designed for use with following types of disc only. Never attempt to load any other type of disc into this unit because it may damage this unit.

Type of disc	DVD-Video 8 cm disc/12 cm disc	Video CD 8 cm disc/12 cm disc	Audio CD 8 cm disc/12 cm disc
Mark printed on the disc			

### Notes













- This unit is not compatible with CD-R, CD-RW, Photo-CD, CD-ROM, DVD-Audio, DVD-ROM, DVD-RAM, SVCD, CDV, etc.
- Do not use any non standard shaped discs (heart, etc.).
- Do not use disc with tape, seals, or paste on it, damage to the unit may result.
- To reproduce DTS sound, it is necessary to connect a DTS decoder to this unit.
- Some DVD and VCD features described in this manual may not be available or may operate in a different way because they are subject to software producer's design. Check each disc's instruction.

### Example:

'⊙' appears when you press the skip buttons to move to the next section.


## ■ Region management information DVD

This DVD player is designed to meet DVD standard that supports region management system. Check the regional code number marked on the disc packages. If the number does not match this unit's region number (see the below table or the back of this unit), this unit refuses to play that disc.


Model	Region number of this unit	Discs can be played
U.S.A. and Canada models		 ,  or a mark which includes the region number '1'.
Europe and U.K. models		 ,  or a mark which includes the region number '2'.
General model		 ,  or a mark which includes the region number '3'.
Australia model		 ,  or a mark which includes the region number '4'.

## ■ Notes about handling discs

- Hold discs by touching only the edges or center hole.

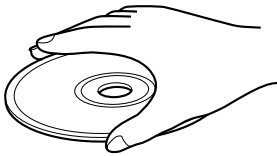


- When a disc is not currently being loaded on the disc tray, store it in an appropriate case.
- Playback of discs is generally not affected by small particles of dust or fingerprints on their playing surface. Even so, they should be kept clean. Wipe by using a clean, dry cloth. Do not wipe with a circular motion; wipe straight outward from the center.

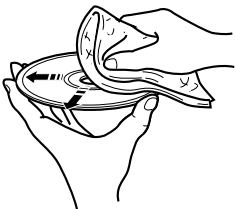

- Do not try to clean the disc's surface by using any type of disc cleaner, record spray, anti-static spray or liquid, or any other chemical-based liquid, because such substances might irreparably damage the disc's surface.
- Do not expose discs to direct sunlight, high temperature or high humidity for a long period of time, because these might warp or otherwise damage the disc.


# No!

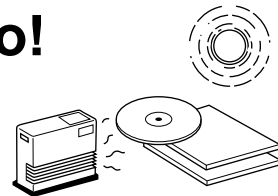


# CONTROLS AND FUNCTIONS

## Front Panel/Remote Control

### Front Panel

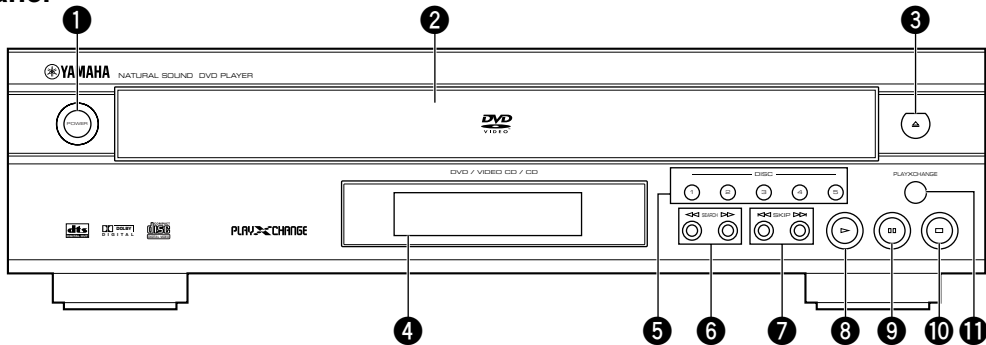

### Remote Control

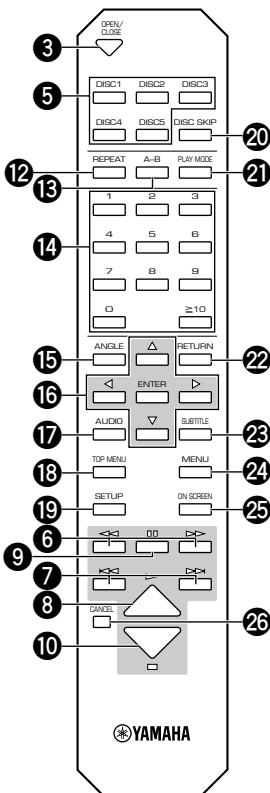

#### ❶ POWER (p.13)

Press to turn the power on and off.

#### ❷ Disc tray (p.13)

Up to 5 discs can be loaded on this tray.

#### ❸ open/close (OPEN/CLOSE) (p.13)

Press to open and close the disc tray.

#### ❹ Display panel

See p.6.

#### ❺ DISC (1,2,3,4,5) (p.13)

Press to play the disc loaded on the guide of the corresponding number.

#### ❻ <<, >> (SEARCH) (p.14)

Use to advance or reverse playback rapidly.

#### ❼ <<<, >>> (SKIP) (p.14)

>>>: Press to skip to the beginning of the next chapter (track).

<<<: Press to skip to the beginning of the currently played chapter (track).

#### ❽ ▷ (PLAY) (p.13)

Press to start playback.

#### ❾ ◻◻ (PAUSE) (p.15)

Press to pause.

#### ❿ ◻ (STOP) (p.13)

Press to stop playback.

#### ⓫ PLAYXCHANGE (p.14)

Press to open and close the disc tray during playback. You can exchange discs other than the one being played.



**12 REPEAT (p.16)**

Press to repeat playback of a title, chapter, track, etc.

**13 A-B (p.17)**

Press to specify two points and to repeat playback between them.

**14 Numeric buttons**

Use to select a title, chapter, track, etc.

**15 ANGLE**

Press to change angles when the scene of the disc being played contains two or more angles.

**16 Cursor buttons, ENTER**

Use to select and determine an item on menu screen, etc.

**17 AUDIO (p.20)**

Press to change audio track language and/or format when the disc being played contains two or more different audio tracks.

**18 TOP MENU**

Press to go to the initial screen when operating in the menu screen.

**19 SETUP (p.25)**

Press to call up SETUP MENU screen.

**20 DISC SKIP**

Press to select another disc.

**21 PLAY MODE (p.17, 18)**

Press to switch among random play, program play, and normal play.

**22 RETURN (p.25)**

Press to go back to the previous screen when operating in the menu screen.

**23 SUBTITLE (p.21)**

Press to change subtitles when the disc being played contains several subtitles.

**24 MENU (p.19)**

Press to call up menu screen contained in the disc.


**25 ON SCREEN (p.22)**

Press to turn the on-screen menu (GUI icons) on and off on the video monitor.

**26 CANCEL**

Press to cancel a specific mode or a setting.

## Display

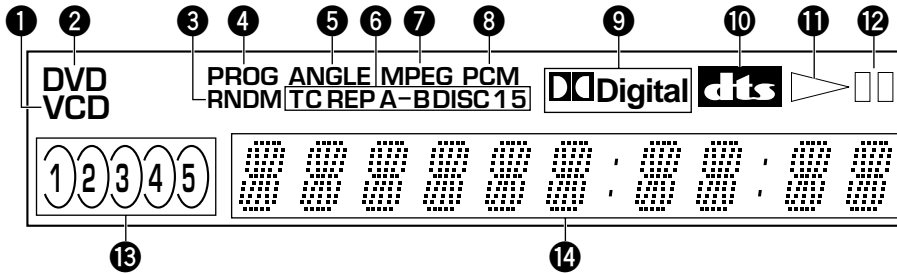

### 1 VCD

VCD lights up when a Video CD is selected and CD lights up when a CD is selected.

### 2 DVD

Lights up when a DVD is selected.

### 3 RNDM

Lights up during random-sequence play.

### 4 PROG

Lights up during program play.

### 5 ANGLE

Lights up when the scene currently played contains different angle(s).

### 6 Repeat mode indicator

- T and REP light up when repeating a title or a track.
- C and REP light up when repeating a chapter.
- REP and A-B light up when repeating between the two points you have specified.
- REP and DISC 1 light up when repeating the currently selected disc.
- REP and DISC 5 light up when repeating all the discs loaded on the disc tray.

### 7 MPEG [DVD]

Lights up when an audio track encoded with MPEG format is selected.

### 8 PCM [DVD]

Lights up when an audio track encoded with Linear PCM format is selected.

### 9 [Digital] [DVD]

Lights up when an audio track encoded with Dolby digital format is selected.

### 10 dts [DVD] [CD]

Lights up when an audio track encoded with DTS format is selected.

### 11 ▷

Lights up during playback.

### 12 □□

Lights up while playback is paused.

### 13 1 2 3 4 5


One of these numbers lights up to show the currently selected disc, which is loaded on the guide of the corresponding number.

### 14 Multi-information display

Shows various information such as title, chapter or track number, elapsed playing time etc.

# REMOTE CONTROL

## Installing Batteries in the Remote Control

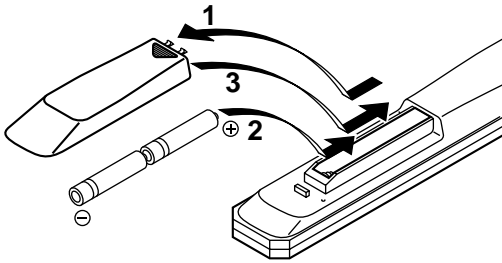

- 1** Turn the remote control over and slide the battery compartment cover in the direction of the arrow.
- 2** Insert the batteries (AA, R06, UM-3 type) according to the polarity markings on the inside of the battery compartment.
- 3** Close the battery compartment cover.


## Battery Replacement

If the remote control operates only when it is close to the unit, the batteries are weak. Replace all the batteries with new ones.

### Notes

- Use only AA, R06 or UM-3 batteries for replacement.
- Be sure the battery polarity is correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control will not be used for an extended period of time.
- If the batteries have leaked, dispose of them immediately. Avoid touching the leaked material or letting it come into contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.

## Using the Remote Control

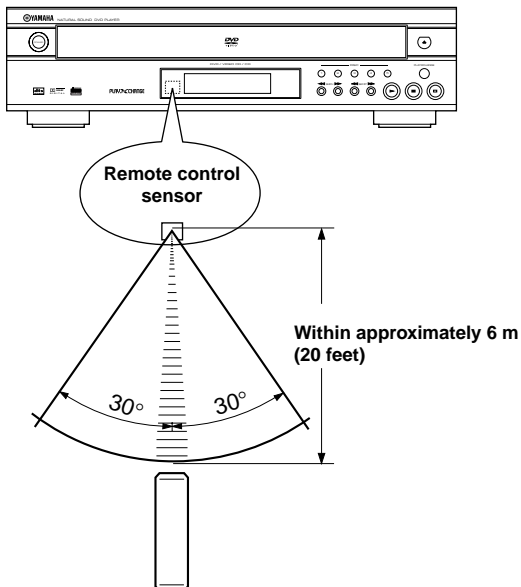

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor during operation. When the sensor is covered or there is a large object between the remote control and the sensor, the sensor cannot receive signals. The sensor may not be able to receive signals properly when it is exposed to direct sunlight or a strong artificial light (such as a fluorescent or strobe light). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

### Notes


- Handle the remote control with care.
- Do not spill water, tea or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following conditions:
  - high humidity or temperature such as near a heater, stove or bath;
  - dusty places; or
  - extremely low temperature.

# CONNECTIONS

## CAUTION

- Never connect this unit and other equipment to power supply until all connections have been completed.

Be sure all connections are made correctly, observing the color-coding of terminals of both this unit and the equipment to be connected. Also refer to the instructions of the equipment to be connected.

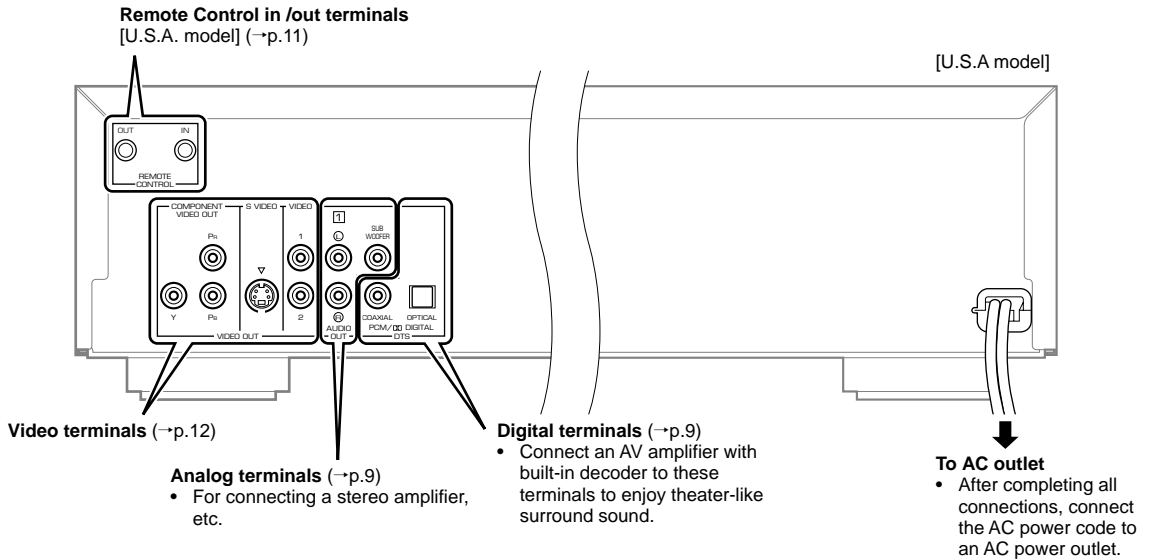

## Notes about Audio Connections

Select the correct output format at '7 Digital Audio Output' on the SETUP MENU in accordance with your AV system.

Equipment to be connected	Appropriate settings at '7 Digital Audio Output'			
	1. PCM Down Conversion*	2. Dolby Digital	3. DTS Digital Surround	4. MPEG (Europe, U.K. and Australia models)
AV amplifier with digital input(s) and Dolby Digital/DTS/MPEG decoder	Yes	Bitstream	Bitstream	Bitstream
AV amplifier with digital input(s) and Dolby Digital/ MPEG*1 decoder (without DTS decoder)	Yes	Bitstream	Off**	Bitstream
AV amplifier with Dolby Prologic decoder	Yes	PCM***	Off**	PCM***
Stereo amplifier without digital input	No	PCM***	Off**	PCM***


\* Select 'No' when the connected equipment has 96-kHz/24-bit D/A converter to enjoy high-fidelity audio. However, no digital signal is output if the disc you play is copyright-protected.

\*\* No signal is output from this unit's digital audio output terminal.

\*\*\* Multi-channel signals are downmixed to 2-channels Linear PCM and then output from both digital and analog output terminals.

- See p.29 for further information.


## Digital Terminals

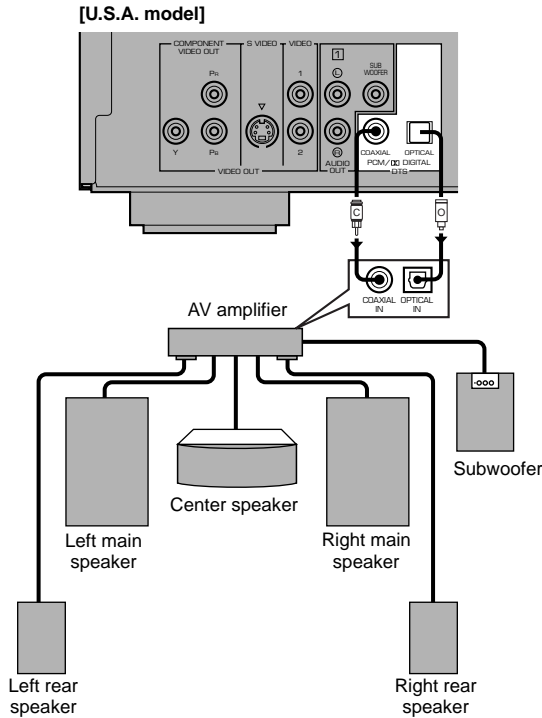


This unit has COAXIAL and OPTICAL digital output terminals. Connect one or both of them to your AV amplifier equipped with Dolby digital, DTS, or MPEG decoder using each specific cable (separate purchase).

### ■ When connecting the optical fiber cable

- Remove the cover when using the OPTICAL terminal. Keep the cover and attach it when the terminal is not being used to protect it from dust.
- Bend an optical cable as little as possible.
- Use commercially available optical fiber cable that conforms to EIA standards. Other cables may not function correctly.

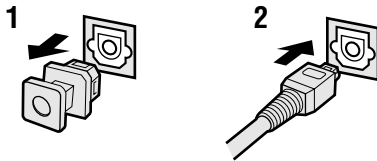

## Analog Terminals

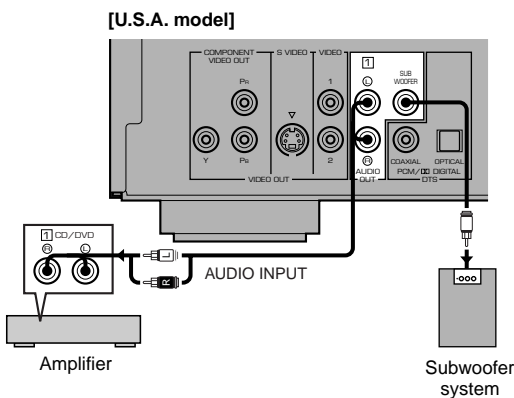


Connect AUDIO OUT L (left) and R (right) terminals of this unit to corresponding input terminals of your audio equipment such as stereo amplifier.

If the audio equipment does not have subwoofer output, you can use this unit's SUBWOOFER terminal to connect your subwoofer system (subwoofer with built-in amplifier). In that case, set the 'subwoofer' item on the on-screen menu to 'ON' (→p.24).

## Video Terminals

[U.S.A. model]

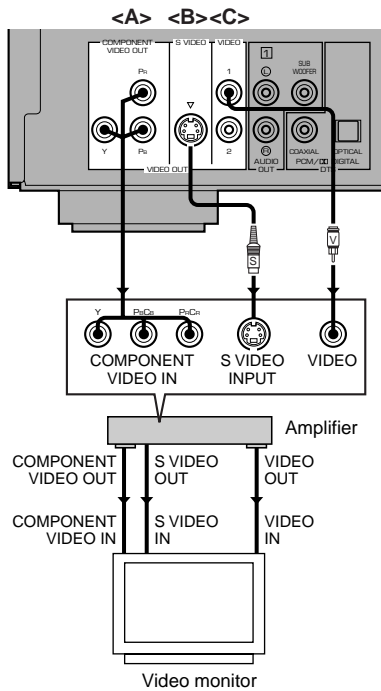

If your AV amplifier has video output terminals, connect your amplifier (and then to your video monitor) so that you can use one video monitor for several different video sources (LD, VCR etc.) by simply switching the input source selector of your amplifier.

This unit has three types of video output terminals. Use one of them in accordance with the input terminals of the equipment to be connected.

### Note

- Do not connect this unit to a video monitor through a video cassette recorder. If you do so, the picture may not be played back properly due to the copyright protection technology incorporated in this unit.

### Component Video terminal <A>

#### U.S.A, Canada, Australia and General models

Component video connection achieves high fidelity in reproducing colors (better performance than S-video connection), separating video signal into luminance (Y, terminal color-coded as green), and color difference (Pb, blue/Pr, red). Use commercially available coaxial cables. Amplifier (and Video monitor) with component input is required. Observe the color of each terminal when connecting. If your amplifier does not have component output terminals, connecting this unit's component output directly to your video monitor's component input can reproduce better video image.

### Note

- Do not connect this unit's COMPONENT VIDEO OUT terminals to component video input terminals special for HD (High-Definition) TV.

### S-Video terminal <B>


S (separate) video connection achieves a clearer picture than composite video connection by separating color and luminance when transmitting signals. Use commercially available S-video cable. Amplifier (and Video monitor) with S-video input is required.

### Composite Video terminal (1, 2) <C>

Use RCA video cable supplied with this unit when connecting this unit to a video monitor.

VIDEO 1, 2 terminals of VIDEO OUT output the same signal. You can connect one to your amplifier's input using supplied RCA cable, and the other to another amplifier or a video monitor.

[U. K. model]

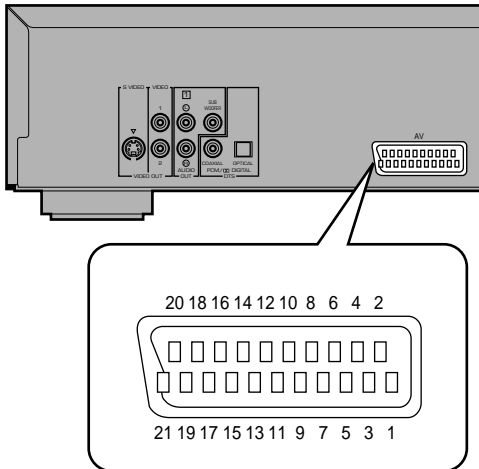

## ■ 21-pin SCART terminal

### U.K. and Europe models

If your video monitor has only 21-pin terminal for video input, and you want to connect it directly to this unit, you can use this unit's 21-pin SCART output terminal (this terminal does not output RGB component signals).


Pin no.	Video	S video
1	Audio output (R)	Audio output (R)
3	Audio output (L)	Audio output (L)
4	Audio GND	Audio GND
8	Switching voltage	Switching voltage
13	No connection	S video (C) output GND
14	Blanking GND	Blanking GND
15	No connection	S video (C) output
16	Blanking	Blanking
17	Video output GND	S video (Y) output GND
18	Video input GND	Video input GND
19	Video output	S video (Y) output
21	GND	GND

(Pin no.2, 5 to7, 9 to 12, 20: no connection)

- You can select 'Video' or 'S-Video' at the '6 AV output' on the setup menu '9.Other settings'. See p.30.

## Remote Control in/out Terminals [U.S.A. and Canada models]

[U.S.A. model]

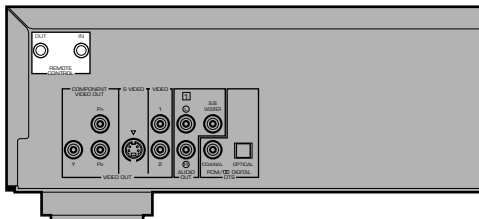

These terminals are used for custom installation system that transmits remote control signals via cables. Connect this unit's REMOTE CONTROL IN to the Remote control output of the control unit of your system.

By connecting this unit's REMOTE CONTROL OUT to another piece of equipment's Remote control input terminal, you can also operate that equipment with the system remote control.

# BASIC OPERATION

## Before Starting Playback

To play a disc properly, you need to adjust the formats of audio and video signals output from this unit in accordance with the equipment connected to this unit. See p.25 to 30 for more detailed information.

### CAUTION

- Be sure to select the appropriate positions at '7 Digital Audio Output' on the SETUP MENU. Otherwise, there may be a case where digital signal which the connected equipment cannot process will be output and its noise could damage your ears and your speakers.

## ■ 6 TV Aspect

Type of the connected video monitor	Appropriate setting
Conventional type	1. 4:3
Widescreen type	2. 16:9

## ■ 7 Digital Audio Output

- To output digital signal from this unit

The connected audio equipment has	Corresponding item	Appropriate setting
96-kHz/24-bit D/A converter	1. PCM Down Conversion	No
Dolby Digital decoder	2. Dolby Digital	Bitstream
DTS decoder	3. DTS	Bitstream
MPEG decoder	4. MPEG [Europe and U.K. models only]	Bitstream

### Notes

- When you select 'No' at 1. PCM Down Conversion, digital signal may not be output depending on the disc you play.
- Make sure to connect digital terminals of both this unit and the audio equipment as instructed on page 9.



- To output analog signal from this unit

Item in '7 Digital Audio Output'	Appropriate setting
1. PCM Down Conversion	No
2. Dolby Digital	PCM
3. DTS	Off
4. MPEG [Europe and U.K. models only]	PCM


- Adjust some other settings such as on-screen display language, ratings, etc. as necessary. See SETUP MENU (p.25 to 30) for detail.




# Playing a Disc

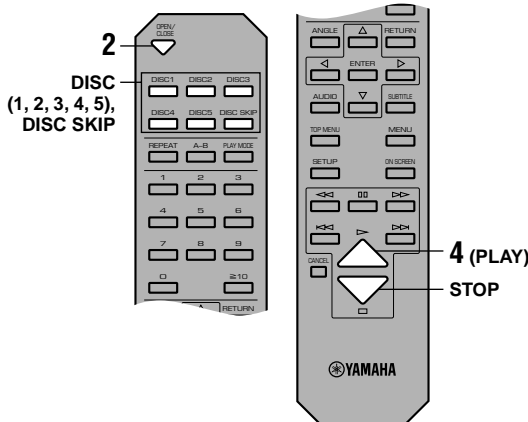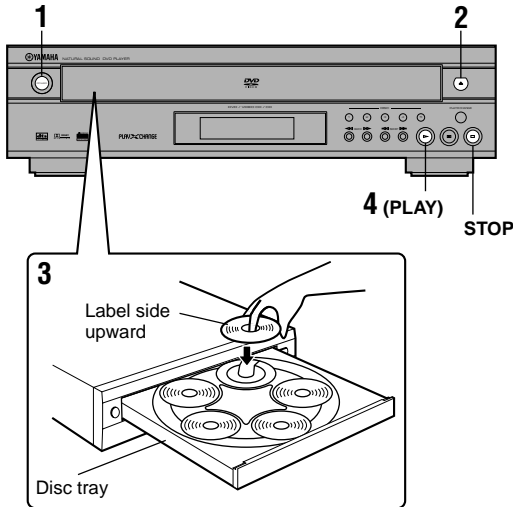

**U.S.A., Canada and General models**

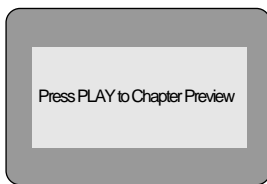

**Europe, U.K. and Australia models**

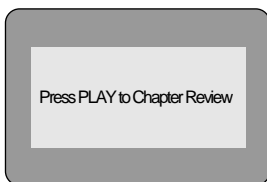

## Preparation

Select DVD as the input source on your AV amplifier.

- 1 Press POWER to turn the power on.**
- 2 Press OPEN/CLOSE (or  $\Delta$ ) to open the disc tray.**
- 3 Load discs.**  
Use the disc guides (numbered, 1 to 5) to align the discs correctly.
- 4 Press  $\triangleright$  (PLAY).**  
The disc tray closes and playback starts. This unit plays all discs on the tray in sequence.



- If necessary, select a desired disc using DISC SKIP or one of the DISC (1, 2, 3, 4 or 5) buttons.
- When a menu screen appears:  
DVD See 'Operating Menu Screen' in p.19.  
VCD See 'Playback Control' in p.19.

### Note

- When this unit finishes playing a DVD, this unit stops playback or shows the menu screen and does not start playing the next disc.

## To stop playback

Press  $\square$  (STOP).

### Resume function

This unit memorizes where  $\square$  (STOP) was pressed ( $\blacktriangleright$  indicator flashes on the display). When you press  $\triangleright$  (PLAY) in this status, playback resumes from where it was stopped. To clear the memory, press  $\square$  (STOP) once more so that the  $\blacktriangleright$  indicator goes off.

### Notes

- This function may not work with some discs or on some part of a disc.
- If you turn the power off, resume function is cleared.


### Chapter review function [DVD]

This function plays the first few seconds of each chapter from the beginning of the title up to where the operation was stopped before starting normal playback so that you can review previous chapters.

- 1 Press  $\triangleright$  (PLAY) while the message as illustrated on the left is displayed on the screen.**
- 2 Press  $\triangleright$  (PLAY) again while the message is displayed on the screen.**

### Notes

- This function may not work with some DVDs.
- Canceling resume function will also clear the chapter review function.

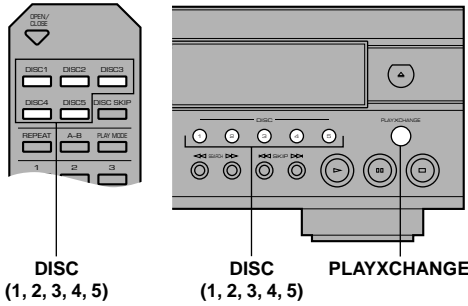

**■ After operation**

When this unit is not in use, remove discs and press POWER.


**■ To select a specific disc**

Press DISC (1, 2, 3, 4 or 5).

**Playxchange**

By pressing PLAYXCHANGE, you can open the disc tray and load or replace discs without interrupting play. **However, never load a disc on the guide half hidden inside the unit because the disc currently being played is to be placed there.**

**Search (to advance or reverse playback rapidly)**

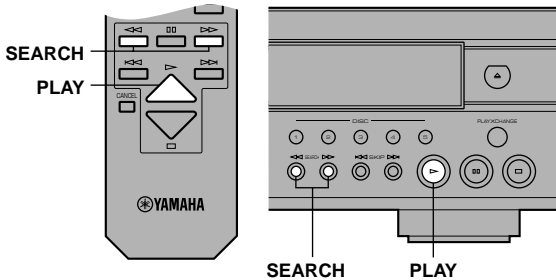


Press SEARCH  $\triangleright\triangleright$  (or  $\triangleleft\triangleleft$ ) to search forward (or backward) during playback.

- To return to normal play, press  $\triangleright$  (PLAY).



- Pressing the button repeatedly increases searching speed.

**Skipping Chapters / Tracks**

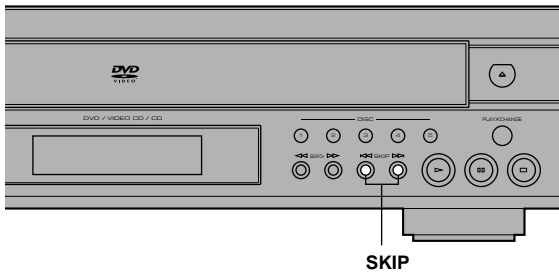

Press SKIP  $\triangleright\triangleright$  to skip forward or  $\triangleleft\triangleleft$  to skip backward. Press once for each chapter (track) to be skipped.

**Note**


- When playing a VCD with playback control, skip operation may not function as described above.

**■ To select a specific track VCD CD**


Enter a desired track number using numeric buttons. To select a two-digit number, press  $[\geq 10]$  and then enter the upper figure and the last figure successively.

Example (to select track 17):

- 1 Press  $[\geq 10]$
- 2 Press [1].
- 3 Press [7].

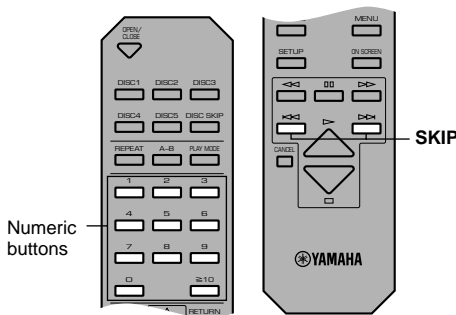


## Still Picture (to pause playback)

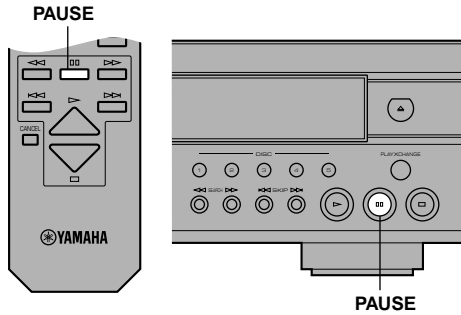

Press **⏸** (PAUSE).

- To resume play, press **▶** (PLAY).

## Frame Advance / Reverse

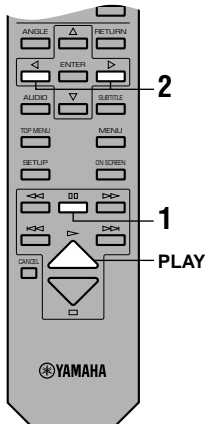


**DVD VCD**

- 1 Press **⏸** (PAUSE) during playback.
- 2 Press the cursor buttons [**◀**, **▶**].

Each press advances (or reverses) still picture by one frame.

- To return to normal play, press **▶** (PLAY).

## Slow-Motion Play

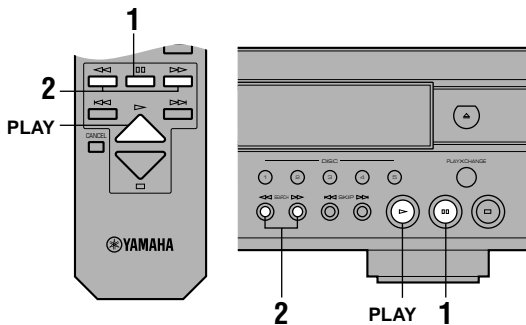

**DVD VCD**

- 1 Press **⏸** (PAUSE) during playback.
- 2 Press [**◀◀**, **▶▶**].


- To return to normal play, press **▶** (PLAY).



- Pressing the button repeatedly increases the speed.

# SELECTING PLAY MODES


## Repeat Play

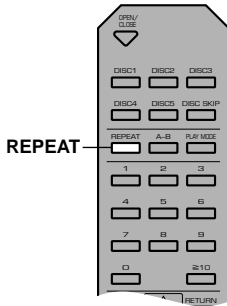


This function allows you to play your desired chapter, track or disc repeatedly.

### Press [REPEAT] during playback.


Each time this button is pressed, repeat mode changes as follows. The name of the selected repeat mode scrolls once on the multi-information display and the corresponding indicators light up.

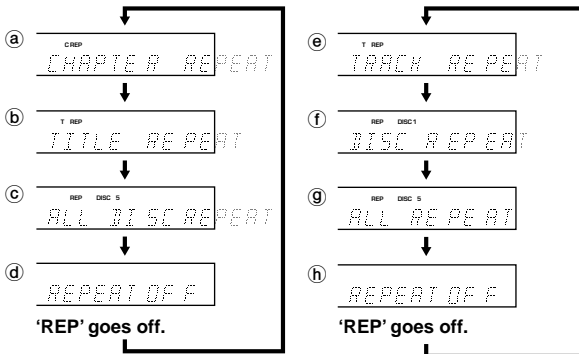

### Program repeat

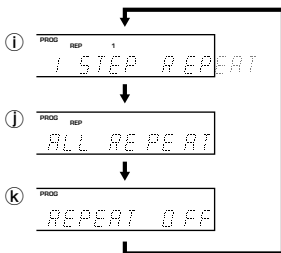

### Random-sequence repeat

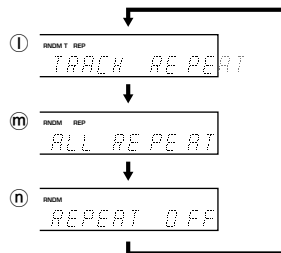

### DVD

- a **CHAPTER REPEAT**: The current chapter is played repeatedly.
- b **TITLE REPEAT**: The current title is played repeatedly.
- c **ALL REPEAT**: All the discs loaded on the tray (DVD, VCD or CD) are played repeatedly.
- d **REPEAT OFF**: Repeat play mode is canceled.

### VCD CD

- e **TRACK REPEAT**: The current track is played repeatedly.
- f **DISC REPEAT**: The current disc is played repeatedly.
- g **ALL REPEAT**: All the discs loaded on the tray (DVD, VCD or CD) are played repeatedly.
- h **REPEAT OFF**: Repeat play mode is canceled.

Pressing [REPEAT] while playback is stopped switches 'ALL REPEAT' to 'REPEAT OFF' or vice versa.

### Program repeat VCD CD

If REPEAT is pressed during program play (p.18), repeat mode changes as follows.

- i **1 STEP REPEAT**: Repeating the track being played
- j **ALL REPEAT**: Repeating all the programmed tracks
- k **REPEAT OFF**: Canceling repeat mode (go back to normal program play)

### Random-sequence repeat VCD CD



If REPEAT is pressed during random-sequence play (p.17), repeat mode changes as follows.

- l **TRACK REPEAT**: Repeating the track being played
- m **ALL REPEAT**: Playing all the tracks repeatedly, each time in different random-sequence.
- n **REPEAT OFF**: Canceling repeat mode (go back to normal random-sequence play)

### Notes

- Repeat play may not work properly with some DVDs.
- Repeat play does not work with an interactive DVD or during menu play of a VCD with playback control.

## A-B Repeat

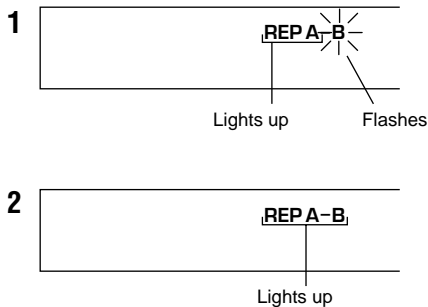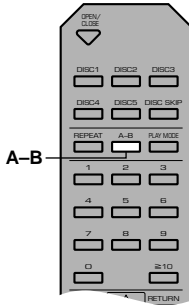

This function allows you to specify two points and play between them repeatedly.

**1** Press A-B during play at the point where you want to start A-B repeat.  
'REP' and 'A-' light up and 'B' flashes on the display.

**2** Press A-B at the point where you want to end A-B repeat.  
REP A-B appears on the display and repeat play of the section between point A and B starts.


### To cancel A-B repeat

Press A-B repeatedly until A-B indicator on the display goes off.

#### Notes

- This function may not be available with some DVDs.
- This function works only within a title (DVD) or a track (VCD, CD).

## Random-Sequence Play [VCD] [CD]

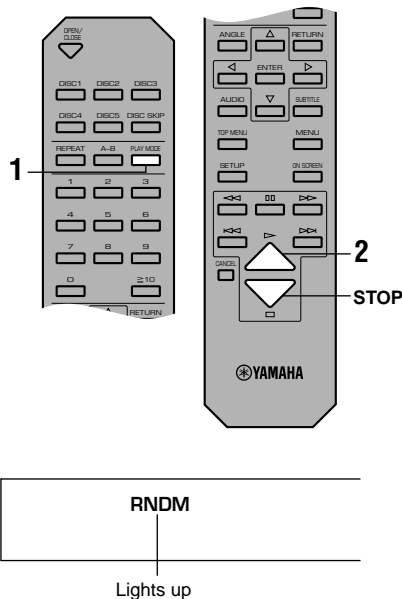

When you select this mode, this unit plays all tracks on all CDs and/or Video CDs loaded on the disc tray in random sequence.

**1** Press PLAY MODE once or more while playback is stopped.  
RNDM indicator lights up on the display.

**2** Press ▷ (PLAY) to start random-sequence play.

### To cancel random-sequence mode

- 1 Press □ (STOP) twice during play.  
Random-sequence play is suspended.
- 2 Press PLAY MODE once.  
RNDM indicator goes off.


If you press ▷ (PLAY) successively, normal playback starts from the beginning of the disc having been played before canceling random-sequence mode.

Opening the disc tray also cancels this mode.

#### Note

When this unit is in random-sequence mode while a Video CD (ver.2.0) is loaded, playback control is canceled during random-sequence playback.

## Program Play [VCD] [CD]

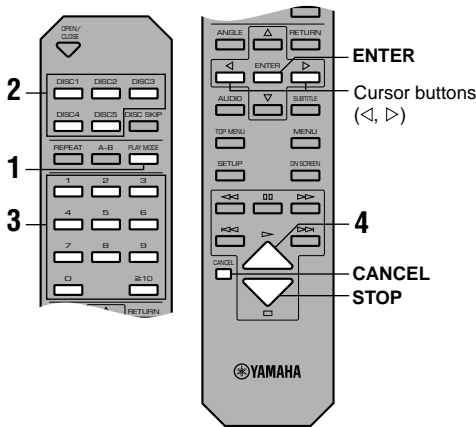

You can enjoy listening to your favorite tracks selected from one or more discs in any desired order by programming tracks.

**1 Press PLAY MODE once or more while playback is stopped.**

The display shows the step information.

- To exit programming mode, press PLAY MODE twice.

**2 Press DISC (1-5) to select the disc.**

**3 Press numeric buttons to select the track.**

- Repeat step 2 and 3 to program other tracks in your desired order.
- See p.14 about how to enter the track with numeric buttons.
- To program a whole disc, press ENTER ('ALL' appears on the display).
- Pressing □ (STOP) cancels all tracks programmed so far.

You can program up to 32 tracks to be played in desired order.

**4 Press ▷ (PLAY) to start program play.**

 


**■ To cancel the programmed tracks**

- 1 Press the cursor buttons (▷, ◁) to select the track you want to cancel.
- 2 Press CANCEL.

Opening the disc tray also cancels this mode.

**Note**


When you program a track of a Video CD (ver.2.0), playback control is canceled during program play.

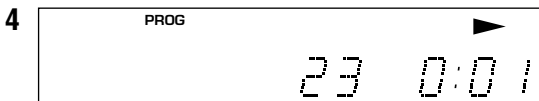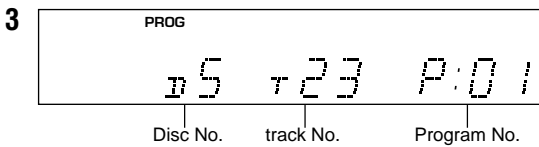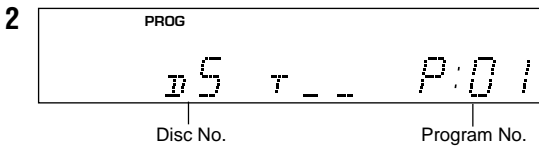

# ADVANCED FEATURES

Refer to the discographic information of each disc to determine whether the disc supports these features.


## Menu Screen [DVD]

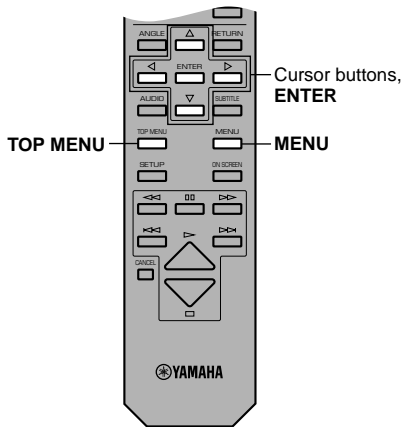

There are DVDs which contain DVD menu screens that enable you to select title, chapter and audio track language, etc or other interactive operations. This section gives you general instruction about how to operate these screens. However, the operation methods may differ depending on the disc.

- 1 Press TOP MENU or MENU during playback to show menu screen.**
  - With some discs, menu screen appears automatically when you start playback.
- 2 Press the cursor buttons ( $\Delta$ ,  $\nabla$ ,  $\triangleleft$ ,  $\triangleright$ ) to select the desired item.**
- 3 Press ENTER to go to the screen of the selected item or to start playing the selected item.**
  - You may also use the numeric buttons to operate steps 2 and 3.

## Playback Control [VCD]

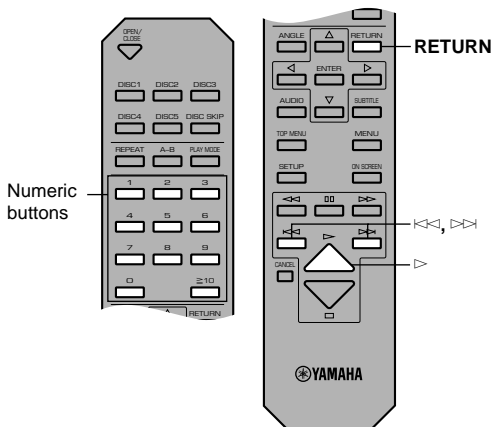

When 'PBC' appears on the display, this unit is in playback control mode. Menu screen appears on the video monitor so that you can use interactive functions supported by the disc being played.

### ■ To operate menu screen

- You can operate menu screens using the following buttons.
  - Numeric buttons: Press to select the desired item.
  - RETURN:** Press to go back to the previous screen
  - $\triangleright$ : Press to play the selected item
  - $\triangleright \triangleright$ : Press to show the next screen
  - $\triangleleft \triangleleft$ : Press to show the previous screen


### ■ To cancel playback control

Press  $\square$  (STOP) when the playback control screen appears.

#### Note


Playback control is automatically canceled during program play or random-sequence play.

# Switching Audio Tracks [DVD] [VCD]

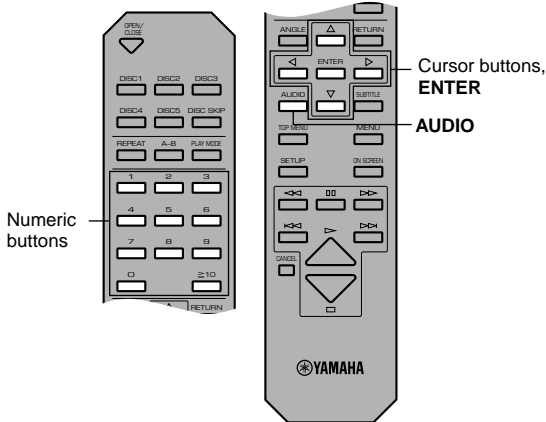


### Audio track

Soundtrack number being played (“-” indicates a soundtrack is not recorded.)

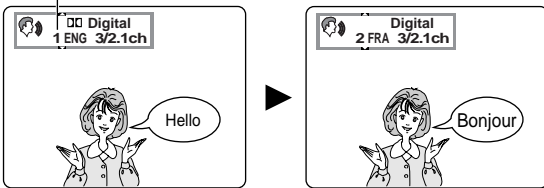

### Karaoke Discs

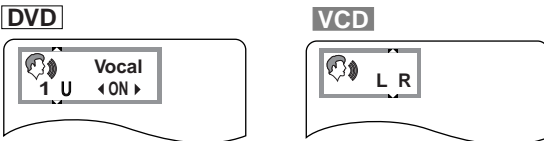

Some DVDs are encoded with several audio tracks so that you can select the language, and/or the sound format.

- 1 Press AUDIO during playback.**  
The current audio track appears on the video monitor.
- 2 Press AUDIO repeatedly to select the desired audio track.**
  - You can also use the cursor buttons (Δ, ∇) or the numeric buttons.

### Note

With some discs, switching audio tracks during playback is prohibited. In that case, use SETUP MENU (p.26) to select it.

## Turning on and off vocal for Karaoke disc

1. Press AUDIO during playback.
2. Press the cursor buttons [Δ, ∇, ◀, ▶] or press AUDIO to change the setting.

DVD Karaoke	Solo —: Vocal OFF ON: Vocal ON
	Duet —: Vocal OFF 1+2: Vocal 1,2 ON V1: Vocal 1 ON, Vocal 2 OFF V2: Vocal 2 ON, Vocal 1 OFF
VIDEO CD	LR: Vocal heard from the right L: Vocal OFF R: Vocal heard from both left and right

### Note


With some discs, you may need to operate additional steps. Refer to the disc’s instructions.

## To turn the display off

Press ENTER.



## Switching Subtitle Tracks [DVD]

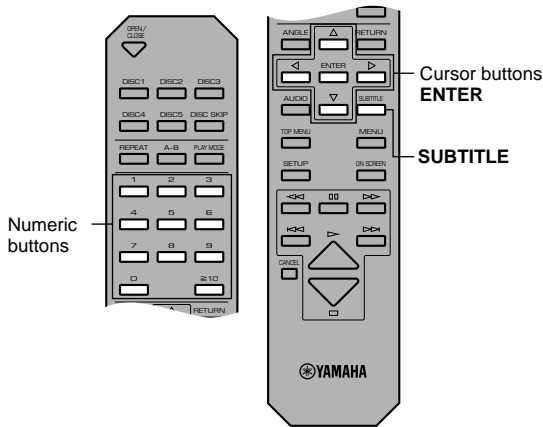

Some DVDs are encoded with multilingual subtitle tracks so that you can select one of them.

### 1 Press SUBTITLE during playback.

On-screen display that shows currently selected subtitle track language appears on the video monitor.

### 2 Press SUBTITLE repeatedly to select the desired subtitle track.

- You can also use the cursor buttons ( $\Delta$ ,  $\nabla$ ) or the numeric buttons.
- Pressing the cursor buttons ( $\triangleleft$ ,  $\triangleright$ ) switches subtitles on and off.

#### Note


'-' appears if the disc does not have a subtitle.

### ■ To turn the display off


Press ENTER.

#### Subtitle

Subtitle language number being played

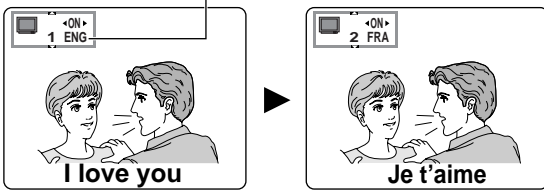

## Switching Camera Angles

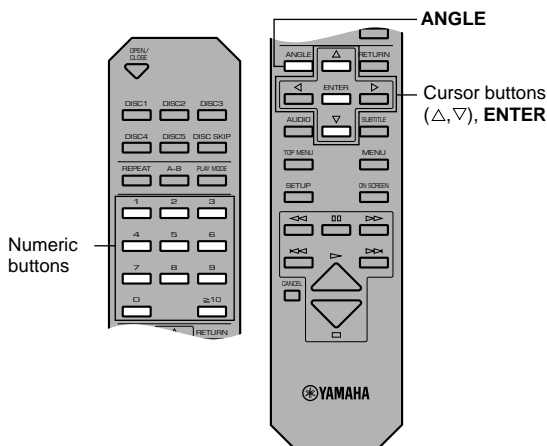

Some DVDs have scenes encoded with multiple camera angles so that different viewpoint can be selected during playback. ANGLE lights up on the front panel display while a scene encoded with multiple angles is being played.

### 1 Press ANGLE while ANGLE on the front panel display lights up.

On-screen display that shows currently selected angle appears on the video monitor.

### 2 Press ANGLE repeatedly to select the desired angle.


- You can also use the cursor buttons ( $\Delta$ ,  $\nabla$ ) or the numeric buttons.

### ■ To turn the display off

Press ENTER.

#### Angle


Angle number being played

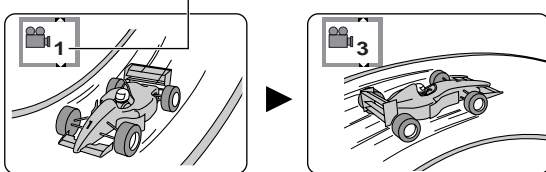

# ON-SCREEN MENU


This unit features On-Screen Menu icons (Graphical User Interface) that makes operation easy and intuitive. Graphics that represent the functions appear in alignment on the upper side of the video monitor.

## Operating On-Screen Menu

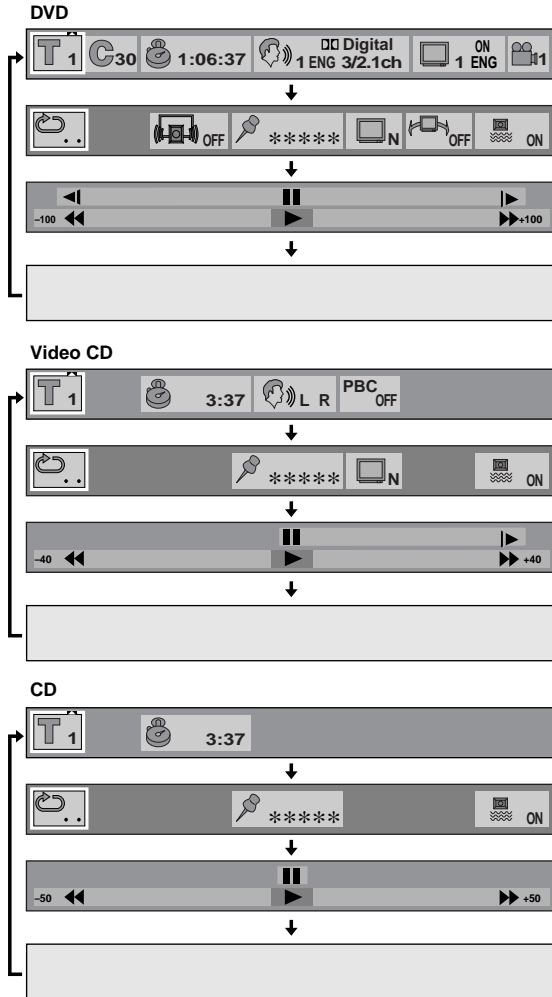

### 1 Press ON SCREEN.

Each time ON SCREEN is pressed, the screen changes and appears on the video monitor as below.

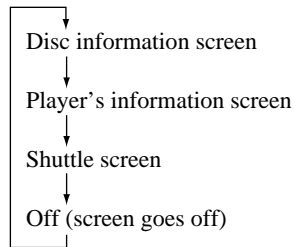


### 2 Press the cursor buttons (◀, ▶) to select the item you want to adjust.

The selected item is highlighted in yellow.


### 3 Press the cursor buttons (△, ▽) to change setting.

 - With some items, you need to press ENTER or ▶ (PLAY) to determine the setting.
- You can also use the numeric buttons when entering numbers to select a chapter, etc.
- You can also use RETURN or CANCEL to turn the screen off.
- △ and ▽ around the icon means that the item can be changed using the cursor buttons [△, ▽].

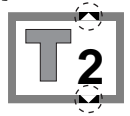

### Note

- These screens may not be displayed, or partly cut off depending on the disc being played, or when the video monitor (TV)'s automatic zoom function is on. You can change their position lower at '4 On-Screen Message' on the SETUP MENU.

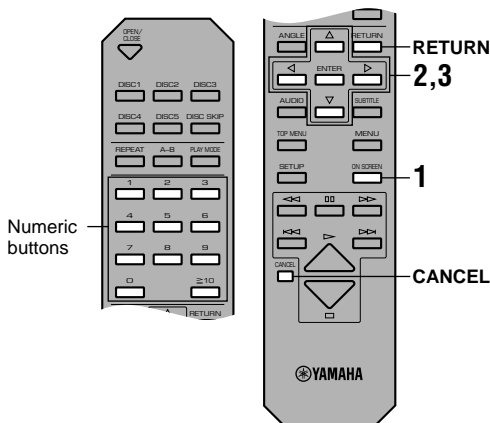

## Disc Information Screen

Each icon shows the status of the currently played disc.

	<b>Title No.</b> <b>DVD</b> <b>Track No.</b> <b>VCD CD</b> Select the desired title/track number and press ENTER to start playback.
	<b>Chapter No.</b> <b>DVD</b> Select the desired chapter number and press ENTER to start playback.
	<b>Time Index (hour:minute:second)</b> <b>DVD</b> Enter the time and press ENTER to start playback from there. Example: To specify 1:06:37, press the numeric buttons 1, 0, 6, 3 and 7.
	<b>Time display (minute:second)</b> <b>VCD CD</b> Elapsed time cannot be changed. When playing a VCD with playback control, elapsed time does not appear. Each time the cursor buttons (Δ, ∇) is pressed, the display changes as below. Elapsed time → Time remaining on the current track → Time remaining on the disc
	<b>Audio Track</b> <b>DVD</b> Select the desired audio track (language and sound format). Each time the cursor buttons (Δ, ∇) is pressed, the combination of language and sound format switches to another, in accordance with the disc's available audio tracks. Example: 1 ENG/LPCM → 1 ENG/Digital → 2 FRA/LPCM → 2 FRA/Digital... <b>a</b> Language: See the table <b>a</b> . <b>b</b> Sound format: See the table <b>b</b> for detail.
	<b>Audio Track</b> <b>VCD</b> Select the desired channel(s) from LR (both left and right channels), L (left channel output from both left and right speakers) or R (right channel output from both left and right speakers). There are VCDs that contain one language on the left channel and another on the right so that you can select the desired language from the two.
	<b>Subtitle, ON/OFF</b> <b>DVD</b> Select the desired subtitle track. See the table <b>a</b> .
	<b>Angle</b> <b>DVD</b> Select the desired camera angle while a scene encoded with multiple angles is played.
	<b>Playback Control</b> <b>VCD</b> Shows whether playback control is on or off (cannot be changed here). • To cancel the playback control function, see p.19.

### a Language

ENG: English	SVE: Swedish	CHI: Chinese
FRA: French	NOR: Norwegian	KOR: Korean
DEU: German	DAN: Danish	MAL: Malay
ITA: Italian	POR: Portuguese	VIE: Vietnamese
ESP: Spanish	RUS: Russian	THA: Thai
NLD: Dutch	JPN: Japanese	*: Others

### b Sound format







LPCM	96k/48k: Sampling frequency (kHz)
	16b/20b/24b: Number of sample signals (bit)
Digital/DTS/MPEG [Europe, U.K. and Australia models]	ch: number of channels 3 / 2 . 1 ch (example) └─ Low frequency effect output from the subwoofer └─ Two rear channels output from Surround (left/right) speakers └─ Three front channels output from main (left/right) and center speakers

### Notes

- Display may differ in accordance with the disc's specification.
- Time remaining on the disc does not appear during program or random-sequence play.
- MPEG multi-channels may not appear properly (Europe, U.K. and Australia models).

## Player's Information Screen

This screen enables you to operate various features equipped with this unit to expand your enjoyment for audio listening and video watching.


	<p><b>A-B Repeat</b> Press ENTER during playback to specify the point A, then press ENTER again to specify the point B. This unit starts A-B repeat play. Pressing ENTER one more time cancels A-B repeat.</p>
	<p><b>Cinema Dialogue</b> <b>DVD</b> Turn this function on and off using the cursor buttons (Δ, ▽). When this function is on, volume level for dialogue increases so that you can catch it clearly even playing a disc at low volume.</p>
	<p><b>Marker</b> You can mark up to five parts so that you can start playback these parts immediately. First press ENTER to select this item, then select one from five asterisks with the cursor buttons (◀, ▶) and press ENTER during playback to specify the point to start (the selected asterisk turns to be the marker no.). Press ENTER again to specify the point to complete marking.</p> <ul style="list-style-type: none"> <li>• <b>To recall a marker</b> : Select the marker no. using the cursor buttons [◀, ▶] and press ENTER.</li> <li>• <b>To clear a marker</b> : Select the marker no. using the cursor buttons [◀, ▶] and press CANCEL. Markers are all cleared when you open the tray or turn this unit off.</li> </ul>
	<p><b>Cinema Image</b> <b>DVD</b> <b>VCD</b> (for U.S.A. and Canada models) You can select the preferred video image. N: Normal C: Cinema (suited for movie viewing)</p>
	<p><b>Virtual Surround Sound (V.S.S)</b> <b>DVD</b> When this function is on, you can enjoy a surround-like effect without using rear surround speakers. For optimum effect, keep the distance from main speakers to your listening position about 3 to 4 times the distance between the left and right main speakers. OFF: V.S.S off 1: V.S.S natural effect 2: V.S.S emphasized effect</p>
	<p><b>Subwoofer Output</b> Decide whether to output signals from this unit's subwoofer output terminal. ON: Select this position if a subwoofer is connected to this unit's subwoofer output terminal. OFF: Select this position if this unit's subwoofer output terminal is not used.</p>

### Notes

- Subtitles around the markers may not appear.
- Virtual surround sound is only effective with discs encoded with multi-channel Dolby Digital format (except for karaoke discs).
- When virtual surround sound is on, only the main speakers output the sound.

## Shuttle Screen

You can operate multi-speed playback with this screen.

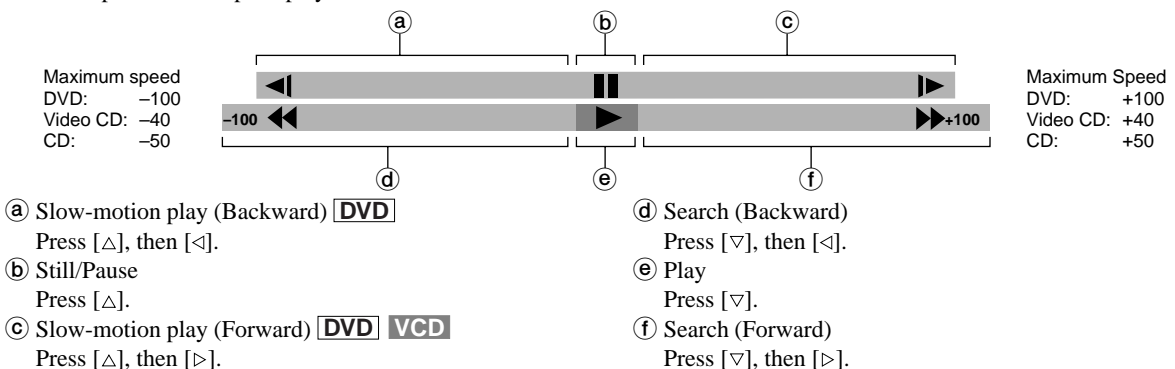

- Pressing the cursor button [▶] (or [◀]) increases (or decreases) the speed of searching and slow-motion play up to five steps.

# SETUP MENU


This unit provides you with the following items on the Setup menu to maximize the performance of this unit and your AV system. Select the appropriate positions as necessary.

1. Disc Language (→ p.26)
2. Ratings (→ p.27)
3. Menu Language (→ p.28)
4. On-Screen Messages (→ p.28)
5. FL Display (→ p.28)
6. TV aspect (→ p.28)
7. Digital Audio Output (→ p.29)
9. Other Settings (→ p.30)

## Note

- Item no.8 does not exist.

## Operating the Setup Menu

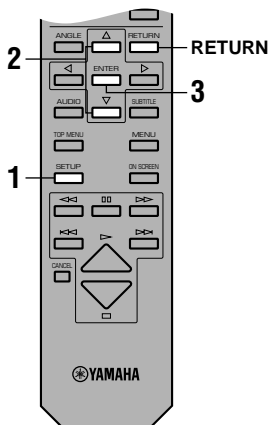

This section shows common procedures (some items require additional steps). Use the remote control to operate the setup menu.

### 1 Press SET UP while playback is stopped.

The menu screen appears on the video monitor.


### 2 Select the desired item using the cursor buttons (Δ, ▽) and press ENTER.

Operating screen of the selected item appears on the video monitor.

### 3 Select the desired position using the cursor buttons (Δ, ▽) and press ENTER.



- To go back to the previous screen, press RETURN.
- To get out from the Setup menu mode, press SET UP.

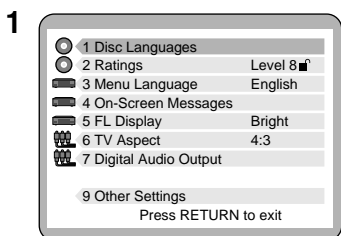

# DESCRIPTION OF EACH ITEM

## 1. Disc Language [DVD]



You can select the language of audio track, subtitle track and disc menu.

### U.S.A. and Canada models

1 Audio	1 English 4 Original*	2 French 5 Other**	3 Spanish
2 Subtitle	1 Automatic*** 4 Spanish	2 English 5 Other**	3 French
3 Menus	1 English 4 Other**	2 French	3 Spanish

### Europe, U.K. and Australia models

1 Audio	1 English 4 Italian 7 Other**	2 French 5 Spanish	3 German 6 Original*
2 Subtitle	1 Automatic*** 4 German 7 Other**	2 English 5 Italian	3 French 6 Spanish
3 Menus	1 English 4 Italian	2 French 5 Spanish	3 German 6 Other**

### General model

1 Audio	1 English 4 Other**	2 Chinese	3 Original*
2 Subtitle	1 Automatic*** 4 Other**	2 English	3 Chinese
3 Menus	1 English	2 Chinese	3 Other**

\* The original language of each disc is selected.

\*\* You can select another language by selecting this position and entering the code for the desired language (see the 'Language code list' on p.33).


\*\*\* Subtitle track language is automatically determined according to the current status on '1 Audio'.

- When the audio track language reproduced during playback is the one selected at '1 Audio', the subtitle is not shown.
- When the audio track language reproduced during playback is other than the one selected at '1 Audio', subtitle is shown in the language selected at '1 Audio'.

### Notes


- If the disc does not have audio track of the selected language, the language designated by each disc is reproduced.
- Subtitle does not appear if the disc does not have one.

## 2. Ratings [DVD]

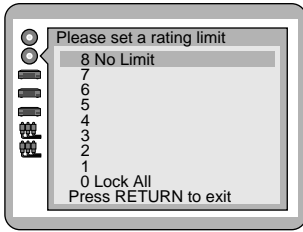

Depending on software capability, you can prevent discs or scenes with objectionable material from being played according to your desired rating. You can select the level and lock it by designating password.

Level 8	All DVDs can be played.
Level 7 to 1	Level of restriction becomes severer as the number gets smaller.
Level 0	All DVDs cannot be played.

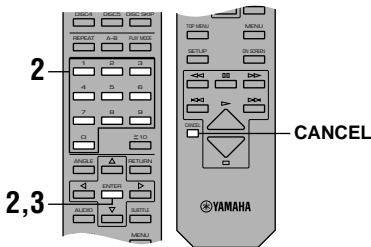


### ■ Setting method

**1** Follow steps 1 to 3 of 'Operating the Setup Menu' (see p.25) to select the desired level.



**2** Enter 4-digit number with numeric buttons and press ENTER.

- Press CANCEL if you want to re-enter other number.  
The screen that confirms your password appears. Do not forget your password.


**3** Press ENTER.

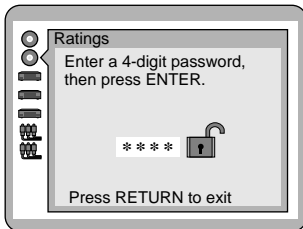

When you select a disc that exceeds the rating you have set, a message appears on the monitor. If you want to play the disc, select 'Yes' and enter your password. The unit unlocks the setting temporarily, locking again when the disc tray is opened or the unit is turned off.

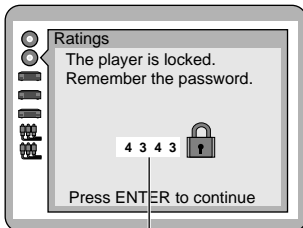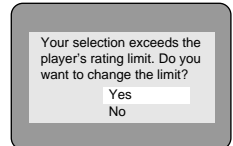

Example: "4343"

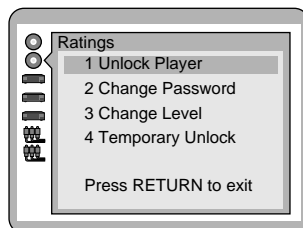

### ■ To Change Settings


You must enter your designated password when you unlock the player (level is set to 8), change the level, change the password, or unlock the playback of currently selected disc.

Select '2 Ratings' and then follow each procedure appears on the screen.

#### Note

- In case you have lost the password and if you want to change the ratings settings, you must return the entire setup menu to the factory setting to cancel the previously specified password. See p.32 about resetting method.

### 3. Menu Language

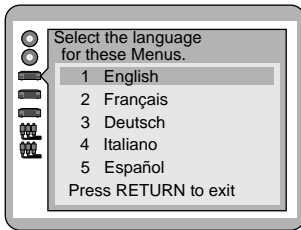


Select the language used for on-screen display and setup menu.

#### U.S.A. and Canada models

- 1 English
- 2 Français
- 3 Español

Example: If you selected "2 Français"

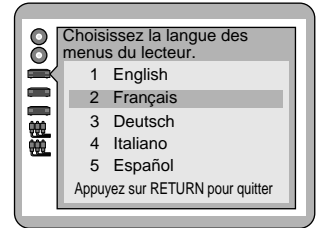


#### Europe, U.K. and Australia models

- 1 English
- 2 Français
- 3 Deutsch
- 4 Italiano
- 5 Español

#### General model

- 1 English
- 2 中文

### 4. On-Screen Messages

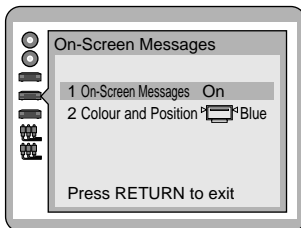


You can select whether to show on-screen message (information of the current status such as Play, Still, etc.) or not, and its color and position.

On-Screen Messages	1 On		
	2 Off		
Color and Position	1		Blue
	2		Violet
	3		Green
	4		Blue
	5		Violet
	6		Green

Shown slightly lower. Select if the top of the screen is cut off.


### 5. FL Display

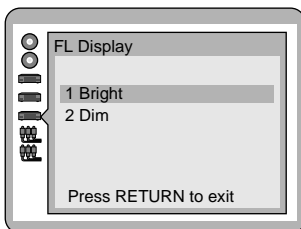

Select the brightness of the front panel display.

- 1 Bright
- 2 Dim

### 6. TV Aspect

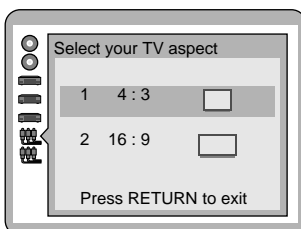

Change the setting to suit your type of video monitor.

- 1 4:3

Select when a conventional 4:3 aspect ratio video monitor is connected.

- 2 16:9

Select when a wide-screen type video monitor is connected.


- Regardless of the above description, select the optimum setting for your video monitor.




## 7. Digital Audio Output

Select the appropriate position for your AV system (AV amplifier, etc.) which this unit is connected to. When you setup your AV system, you must adjust this setting before starting playback. Otherwise, there may be a digital signal which the connected equipment cannot process and the consequent noise could damage your ears and your speakers.

### U.K., Europe and Australia models

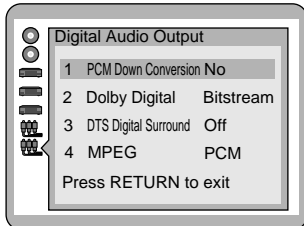

### U.S.A, Canada and General models

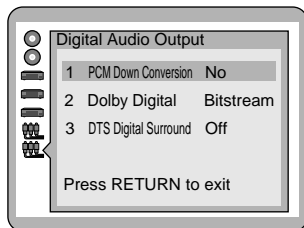

<p><b>1 PCM Down Conversion</b> When playing a 96 kHz linear PCM disc, you can choose whether to output high-fidelity analog signal, or convert it down to 48 kHz to output digital signal.</p>	<p><b>1 No</b> When playing a DVD recorded in 96 kHz linear PCM, signal of 96 kHz /24 bit sampling frequency is output and you can enjoy high quality sound. If the DVD is copyright-protected, no digital signal is output unless converted to 48 kHz.</p> <ul style="list-style-type: none"> <li>• Select this position when connecting equipment without digital input.</li> </ul> <p><b>2 Yes</b> When playing a DVD recorded in 96 kHz linear PCM, signal is converted to 48 kHz /16 bit sampling frequency and can be output from digital output terminal even if the DVD is copyright-protected.</p> <ul style="list-style-type: none"> <li>• It is recommended to select this position when connecting equipment with digital input.*</li> </ul>
<p><b>2 Dolby Digital</b> To select the signal format output from this unit when playing a DVD encoded with Dolby Digital.</p>	<p><b>1 Bitstream</b> Dolby Digital bitstream signal is output from this unit's digital output.</p> <ul style="list-style-type: none"> <li>• Select this position when connecting equipment incorporates Dolby Digital decoder.</li> </ul> <p><b>2 PCM**</b> Signals converted to 2ch linear PCM is output from this unit.</p> <ul style="list-style-type: none"> <li>• Select this position when connecting equipment which does not have Dolby Digital decoder.</li> </ul>
<p><b>3 DTS Digital Surround</b> Select whether to output DTS digital signal or not.</p>	<p><b>1 Off**</b> No digital signal is output even though the disc being played is encoded with DTS to prevent digital signal to be output.</p> <ul style="list-style-type: none"> <li>• Select this position when connecting equipment which does not have a DTS decoder.</li> </ul> <p><b>2 Bitstream</b> DTS bitstream is output when playing a disc encoded with DTS format.</p> <ul style="list-style-type: none"> <li>• Select this position when connecting equipment incorporates a DTS decoder.</li> </ul>
<p><b>Europe, U.K. and Australia models</b></p> <p><b>4 MPEG</b> To select the signal format output from this unit when playing a DVD encoded with MPEG audio.</p>	<p><b>1 PCM**</b> Signals converted to 2ch linear PCM is output from this unit.</p> <ul style="list-style-type: none"> <li>• Select this position when connecting equipment which does not have a MPEG decoder.</li> </ul> <p><b>2 Bitstream***</b> MPEG bitstream signal is output from this unit's digital output.</p> <ul style="list-style-type: none"> <li>• Select this position when connecting equipment incorporates a MPEG decoder.</li> </ul>


\* Select 'No' if the digital audio input of your audio equipment (AV amplifier, etc.) can handle 96 kHz /24 bit signal. If it is not acceptable for 96 kHz /24 bit digital audio signal, or the 96 kHz linear PCM disc you want to play is copyright-protected, it is recommended to set '1 No' and make analog connection to enjoy high quality sound. If it is set to '2 Yes', signal is converted to linear PCM 48 kHz before being output from analog output.

\*\* When connecting equipment which does not have decoder for each format, be sure to select this position to prevent noise output as it could damage your ears and your speakers.


\*\*\* Depending on disc's capability, MPEG audio bitstream may not be output properly.

## 9. Other Settings


### U.S.A. and Canada models

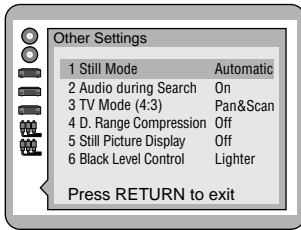


### U.K. and Europe models

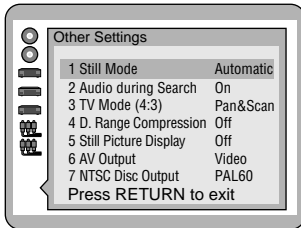

### General and Australia models

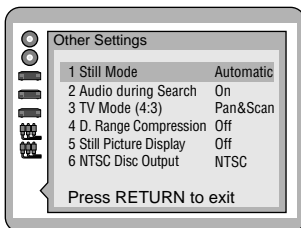
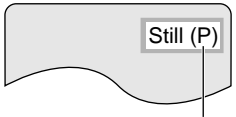 
<p><b>1 Still Mode</b> To adjust the quality of still picture.</p>	<p><b>1 Automatic</b> <b>2 Field</b> If jittering occurs when '1 Automatic' is selected, switch to this position. <b>3 Frame</b> If detail such as small patterns or letters of still picture is not clear when '1 Automatic' is selected, switch to this position.</p>
<p><b>2 Audio during Search</b> To select whether to hear audio during search forward at the initial search speed when playing DVD or VCD (CD can be heard at any speed).*</p>	<p><b>1 On</b> <b>2 Off</b></p>
<p><b>3 TV Mode (4:3)</b> To select the picture style when playing a widescreen video disc on a standard 4:3 width-to-height ratio video monitor.</p>	<p><b>1 Pan &amp; Scan</b> The video appears in pan and scan style, with either one or both ends cut off. <b>2 Letterbox</b> The video appears in letterbox style, with black bands on top and bottom of the monitor.</p>
<p><b>4 D.(Dynamic) Range Compression</b> To compress the dynamic range (the difference between the maximum level and the minimum level of sounds) as necessary. This item is only effective for Dolby Digital DVD.</p>	<p><b>1 Off</b> Played back with disc's original dynamic range. <b>2 On</b> The range is compressed to make it easier to hear dialog, etc. even at low volume level. Select this position in occasions such as viewing late at night.</p>
<p><b>5 Still Picture Display [DVD]</b> To show I, P or B** during still picture mode.</p>	<p><b>1 Off</b> <b>2 On</b></p>  <p>Example: 'P' Picture</p>

\* DTS audio is not heard during search regardless of the setting.

\*\* I/P/B: When 'I' appears, it indicates that the frame is the original one and has greater amount of information than that of 'P' or 'B'. 'P' is made from 'I', and 'B' is to fill in the space between 'I' and 'P'. It is recommended to use 'I' picture for adjusting video image.

<p><b>Black Level Control</b> <b>U.S.A. and Canada models</b> To adjust luminosity of black color according to the type of video connection you have made.</p>	<p><b>1 Lighter</b> Select when you made video connection through the composite or S-video terminals. <b>2 Darker</b> Select when you made video connection through the component terminals.</p>
<p><b>AV output</b> <b>Europe and U.K. models</b> To select the video signal type (composite or S-video) to be output from the SCART terminal.</p>	<p><b>1 Video</b> Composite signal is output. <b>2 S Video</b> S-video signal is output.</p>
<p><b>NTSC Disc Output</b> <b>Europe, U.K., General and Australia models</b> To select video signal format (PAL 60 or NTSC) to be output when playing NTSC disc.</p>	<p><b>1 PAL 60</b> Select when the connected video monitor can accept PAL 525/60 system. <b>2 NTSC</b> Select when a Multi-system video monitor is connected.</p>

# TROUBLESHOOTING

If this unit fails to operate normally, check the following points to determine whether the fault can be corrected, or if the fault is not listed in the PROBLEM column, disconnect the power cord and contact your authorized YAMAHA dealer or service center.

## ■ General

PROBLEM	POSSIBLE CAUSE	WHAT TO DO	Refer to Page
<b>This unit fails to turn on when the POWER switch is pressed.</b>	The power cord is not connected or the plug is not completely inserted.	Firmly connect the power cord.	—
	The voltage selector on the rear panel is not set to the proper position.	Disconnect the power cord and set the selector to the position for your local main voltage.	—
<b>This unit does not work normally.</b>	This unit is affected by an external shock (lightning, excessive static electricity, incorrect operation, etc.)	Turn the power off and disconnect the power cord. After about 30 seconds have passed, connect the power and operate the unit again.	—
<b>Playback does not start.</b>	The disc is damaged.	Check the disc carefully; replace it if necessary.	—
	There is moisture on the laser pickup.	Wait 20 to 30 minutes after switching the unit ON before trying to play a disc.	—
	The disc has been loaded upside down.	Reload the disc with the label side facing up.	13
	The disc is dirty.	Clean the disc.	3
<b>No picture.</b>	Incorrect video connections.	Connect this unit and other equipment properly.	10
	This unit's video input is not selected at the video monitor.	Set the video input at the video monitor to the position where this unit is connected (e.g. VCR2).	—
<b>Play is delayed, or starts at the wrong place.</b>	The disc may be scratched or damaged.	Check the disc carefully; replace it if necessary.	—
<b>This unit does not recognize discs ('No disc' appears on the display, or the display shows the status when no disc is loaded).</b>	The disc(s) is not placed properly.	Place the disc(s) correctly along the guide(s).	—
<b>No sound.</b>	Incorrect output cable connections.	Connect the cables properly. If the problem persists, the cables may be defective.	9
	Incorrect amplifier operation.	Set the amplifier controls to the correct input selection.	—
<b>Sound distorted.</b>	V.S.S effect is emphasized too much.	Turn V.S.S. off.	24
<b>Sound 'skips'.</b>	This unit is being subjected to vibrations or impacts.	Relocate the unit.	—
	The disc is dirty.	Clean the disc.	3
<b>Sound 'hums'.</b>	Incorrect cable connections.	Securely connect the audio cables. If the problem persists, the cables may be defective.	9
<b>Noise from a nearby tuner.</b>	The tuner is too close to the unit.	Place the tuner and the unit farther apart.	—
<b>Noise from inside of the unit.</b>	The disc maybe warped.	Replace the disc.	—
<b>The remote control does not work.</b>	The batteries are weak.	Replace all batteries with new ones.	7
	Direct sunlight or lighting (from an inverter type of fluorescent lamp, etc.) is striking the remote control sensor of this unit.	Relocate the unit.	7

## ■ DVD

PROBLEM	POSSIBLE CAUSE	WHAT TO DO	Refer to Page
Picture does not match your video monitor.	The setting at '6 TV Aspect' on the setup menu is not correct.	Select the proper position.	28
Audio track and/or subtitle language is not the selected one.	The disc does not contain the language you have selected.		—
No subtitles.	The disc does not have subtitles.		—
	Subtitle is turned off.	Show subtitles by pressing SUBTITLE or using on-screen menu.	21, 23
Angle cannot be changed.	The disc or the scene being played does not support multi-angle.		—
No sound from effect speakers (center and rear left/right) when digital signals from this unit are selected as the input source on your AV amplifier.	The setting at '7 Digital Audio Output' on the setup menu is not correct.	If your AV amplifier has built-in decoders for Dolby Digital, DTS or MPEG, Select 'Bitstream' at corresponding position.	29
No sound when playing a disc encoded with DTS.	Digital connection is not made between this unit and your amplifier.	Make digital connection between this unit and your amplifier and adjust the settings at '7 Digital Audio Output' on the setup menu.	9, 29
The password for setting parental level has been forgotten.		Clear all settings on the setup menu. See 'Returning setup menu to the factory-setting' below this table.	—

## ■ Returning setup menu to the factory-setting

While playback is stopped, press and hold **PAUSE**, and then **PLAYXCHANGE** on the front panel until 'Initialized' appears on the video monitor. All settings on the setup menu return to the factory settings.

## ■ Video CD

PROBLEM	POSSIBLE CAUSE	WHAT TO DO	Refer to Page
Menu does not appear.	The disc does not have playback control function.		—

# GLOSSARY / LANGUAGE CODE LIST

## ■ Title

'Title is a unit to divide the contents on a DVD disc. Generally, one title is assigned to one movie. When a disc has two or more titles, they are numbered in sequence as title 1, title 2, etc.

## ■ Chapter

A title on a DVD is subdivided into smaller divisions. They are referred as 'chapters' and numbered in sequence. You can use them to search the desired scene on a movie, etc.

## ■ Track

Tunes (or pictures) recorded on a CD or Video CD are referred as 'tracks'. Tracks are numbered in sequence as track 1, track 2, etc. They are useful for quick search for the desired tune (or picture).

## ■ Dolby Digital

Dolby Digital is a digital audio format which mainly provides high-quality multi-channel audio tracks for movies. It provides up to 6 independent channels compatible with 6 speaker configurations: Left main, right main, center, left surround, right surround and subwoofer. It stores a large volume of digital sound signals as data into a DVD, etc. with a high level data-compression technology.

## ■ DTS

DTS (Digital Theater System) is also a multi-channel digital audio format, providing 6 channel audio track. DTS encodes high-quality, 20 bit audio onto a compact disc, and a DVD with less data-compression.

## ■ Linear PCM

A basic digital audio format used in CDs. It is based on Pulse Code Modulation (PCM), an analog-to-digital conversion technology. No compression is applied to the data.

## ■ MPEG

There are two types of MPEG (Moving Picture Expert Group) audio format. MPEG 1 is mainly used in Video CDs. MPEG 2, improved from MPEG 1, provides high-quality multi-channel audio track up to 8 channels. MPEG 2 technology is mainly used in Europe, Australia, etc.

## ■ Playback control

This function is recorded on a Video CD, version 2.0. Pictures, music, etc. you want to play can be selected on a screen menu shown on the video monitor.

### Language code list

6565: Afar	6890: Bhutani	7285: Hungarian	7679: Laotian	8084: Portuguese	8469: Telugu
6566: Abkhazian	6976: Greek	7289: Armenian	7684: Lithuanian	8185: Quechua	8471: Tajik
6570: Afrikaans	6978: English	7365: Interlingua	7686: Latvian, Lettish	8277: Rhaeto-Romance	8472: Thai
6577: Ameharic	6979: Esperanto	7378: Indonesian	7771: Malagasy	7771: Malagasy	8473: Tigrinya
6582: Arabic	6983: Spanish	7383: Icelandic	7773: Maori	8279: Romanian	8475: Turkmen
6583: Assamese	6984: Estonian	7384: Italian	7775: Macedonian	8285: Russian	8476: Tagalog
6588: Aymara	6985: Basque	7387: Hebrew	7776: Malayalam	8365: Sanskrit	8479: Tonga
6590: Azerbaijani	7065: Persian	7465: Japanese	7778: Mongolian	8368: Sindhi	8482: Turkish
6665: Bashkir	7073: Finnish	7473: Yiddish	7779: Moldavian	8372: Serbo-Croatian	8484: Tatar
6669: Byelorussian	7074: Fiji	7487: Javanese	7782: Marathi	8373: Singhalese	8487: Twi
6671: Bulgarian	7079: Faroese	7565: Georgian	7783: Malay	8375: Slovak	8575: Ukrainian
6672: Bihari	7082: French	7575: Kazakh	7784: Maltese	8376: Slovenian	8582: Urdu
6678: Bengali; Bangla	7089: Frisian	7576: Greenlandic	7789: Burmese	8377: Samoan	8590: Uzbek
6679: Tibetan	7165: Irish	7577: Cambodian	7865: Nauru	8378: Shona	8673: Vietnamese
6682: Breton	7168: Scots Gaelic	7578: Kannada	7869: Nepali	8379: Somali	8679: Volapük
6765: Catalan	7176: Galician	7579: Korean	7876: Dutch	8381: Albanian	8872: Wolof
6779: Corsican	7178: Guarani	7583: Kashmiri	7879: Norwegian	8382: Serbian	8872: Xhosa
6783: Czech	7185: Gujarati	7585: Kurdish	7982: Oriya	8385: Sundanese	8979: Yoruba
6789: Welsh	7265: Hausa	7589: Kirghiz	8065: Punjabi	8386: Swedish	9072: Chinese
6865: Danish	7273: Hindi	7665: Latin	8076: Polish	8387: Swahili	9085: Zulu
6869: German	7282: Croatian	7678: Lingala	8083: Pashto, Pushto	8465: Tamil	

# SPECIFICATIONS

## ■ Audio Section

Frequency response	
DVD (48 kHz sampling):	2 Hz to 22 kHz
DVD (96 kHz sampling):	2 Hz to 44 kHz
CD, Video CD:	2 Hz to 20 kHz
Harmonic distortion + noise (1 kHz):	0.002%
S/N ratio:	115 dB (Weighted)
Dynamic range	
DVD (48 kHz, 24 bit):	103 dB
CD, Video CD:	99 dB
Output level (1 kHz, 0 dB):	2±0.3 V

## ■ Video Section

VIDEO output:	1 Vp-p (75 ohms)
S VIDEO output	
Y output:	1 Vp-p (75 ohms)
C output:	
[U.S.A and Canada models]	
.....	0.286 Vp-p (75 ohms)
[Other than above models]	
.....	0.3 Vp-p (75 ohms)
COMPONENT VIDEO output	
Y output:	1 Vp-p (75 ohms)
P <sub>B</sub> output:	0.7 Vp-p (75 ohms)
P <sub>R</sub> output:	0.7 Vp-p (75 ohms)

## ■ General

Power supply:	
[U.S.A. and Canada models]	120 V, 60 Hz
[Europe and U.K. models]	230 V, 50 Hz
[Australia model]	240 V, 50 Hz
[General model]	110/120/220/240 V, 50/60 Hz
Power consumption:	18W
Laser pickup:	
Wave length	665nm
Laser power	CLASS II
Laser output	Max. 1.0mW (Continuous)
Output value determined by 21 CFR CHAPTER1, SUBCHAPTER J	
Dimensions:	435 (W) × 404 (D) × 116 (H) mm
Weight:	6.1 kg
Accessories:	RCA pin cable (audio/video)
.....	Remote control
.....	Batteries (AA, R6, UM-3)

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### ATTENTION

L'emploi de commandes, de réglages ou un choix de procédures différents des spécifications de cette brochure peut entraîner une exposition à d'éventuelles radiations pouvant être dangereuses.

### ACHTUNG

Die Verwendung von Bedienungselementen oder Einstellungen oder die Durchführung von Bedienungsvorgängen, die nicht in dieser Anleitung aufgeführt sind, kann zu einem Kontakt mit gefährlichen Laserstrahlen führen.

### OBSERVERA

Användning av kontroller och justeringar eller genomförande av procedurer andra än de som specificeras i denna bok kan resultera i att du utsätter dig för farlig strålning.

### ATTENZIONE

Uso di controlli o regolazioni o procedure non specificamente descritte può causare l'esposizione a radiazioni di livello pericoloso.

### PRECAUCIÓN

El uso de los controles o los procedimientos de ajuste o utilización diferentes de los especificados en este manual pueden causar una exposición peligrosa a la radiación.

### VOORZICHTIG

Gebruik van bedieningsorganen of instellingen, of uitvoeren van handelingen anders dan staan beschreven in deze handleiding kunnen leiden tot blootstelling aan gevaarlijke stralen.


### VARO!

**AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.**

### WARNING!

**OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.**

**CLASS 1 LASER PRODUCT  
LASER KLASSE 1 PRODUKT  
LUOKAN 1 LASERLAITE  
KLASS 1 LASER APPARAT**

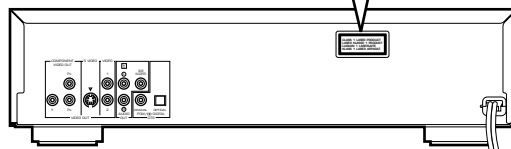

(Except U.S.A. model)

CAUTION - VISIBLE AND / OR INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.  
VARNING - SYNLIIG OCH / ELLER OSYNLIIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STRÅLEN ÄR FARLIG.  
VARO! AVATTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE JA / TAI NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.  
VARNING - SYNLIIG OCH / ELLER OSYNLIIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.  
VORSICHT! SICHTBARE UND / ODER UNSICHTBARE LASERSTRÄHLUNG WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.

