

Quick-Connect Guide

YHT-F1500

Home Theater in a Box

home theater

YAMAHA®

Yamaha created this package to greatly enhance your audio and home theater enjoyment. This Quick-Connect Guide will help you get started. Follow the steps to assemble and connect the speakers first. Then connect your DVD Player and other components. Refer to your Owner's Manuals as well as those that came with your other components for complete instructions and precautions. Be sure to turn off all power while making connections. You will need the following which are not included in the package: Phillips screwdriver, wire cutter/stripper, brackets, toggle bolts, molly anchor screws or sheet metal screws.

1 Your System

Inspect Contents After unpacking, inspect the contents to confirm you have the above items: 1 two main speakers, 2 three surround speakers, 3 one front center speaker, 4 bulk speaker wire, 5 two bases, 6 two speaker stands, 7 two finishing brackets, 8 RCA cable, one bag each of 9 long screws (8) and 10 short screws (4), 11 front center speaker bracket and screw, 12 powered subwoofer, 13 audio/video RCA cable, 14 RX-SL100 A/V Receiver with remote control, 15 DV-SL100 DVD Player with remote control, 16 non-skid pads for base, 17 non-skid pads for stands, and 18 cable protection seal for base. Also included, but not shown, are 6 pairs of colored cable tags, AM and FM antennas and three related Owner's Manuals.

2 Room Layout

Speaker Placement After assembly of the speakers place them so they appear in the approximate positions as shown in the diagram above.

3 Main Speaker Assembly

Attach Bases to Stands Apply the non-skid pads 16 as shown in the inset. Identify both speaker stands 6 and both bases 5 and attach using short screws 10 as shown.

use this size screw

4 Thread Speaker Wires

Thread Speaker Wires Cut speaker wire 4 to appropriate lengths for all speaker connections and set aside. Place each long stand upright on its base. Thread main speaker wire through oval opening on stand and pull through opening on underside of base. Pull wire all the way through leaving extra length near oval opening as shown. Attach color cable tags to all speaker wires as shown in Step 10. Apply non-skid pads 17 on stands.

5 Attach Main Speakers

Attach Main Speakers Lay stands down. Line up holes so that oval opening is near speaker wire connections on speaker. Attach main speakers using long screws as shown. Attach cable protection seal 18 to base as shown in inset.

use this size screw

6 Connect Front Main Speaker Wire

Connect Front Main Speaker Wire For illustration purposes, stand, which is now attached to speaker, is not shown in diagram above. Locate screw-type input terminals at the rear of each of the speakers. Connect the speaker wire as shown. The positive (+) side of the wire with the white stripe attaches to the red terminal. The negative (-) side attaches to the black terminal. (Please see your NS-AP9500 Owner's Manual for more detailed instructions on speaker wire connections.) Place assembled main speakers in desired location to the left and right of the viewing/audio source. (See Step 2, Room Layout.)

NOTE Banana plug connectors (not included) can be used to connect speaker wire to speaker terminals. Please see your Owner's Manual for directions.

7 Rear Speakers

Mount Surround Speakers and Surround Back Speaker Fasten mounting screws into a firm wall or wall support as shown. Hang the keyholes on the back of the each of the speakers 2 on the protruding screws. Attach speaker wire as shown in Step 6.

WARNING If you are unsure of how to securely and safely fasten speakers to a wall, please contact a reliable source about the best type of hardware for your particular wall's construction. Secure installation is the purchaser's responsibility. See Owner's Manual for additional instructions and precautions.

16 7/32"

16 7/32"

1 3/4"

For mounting screws, use minimum 1 3/4" tapping screw (not included). Leave 1/4" space between screw head and wall.


8 Attach Finishing Brackets

Attach Finishing Brackets 7 on top of two speaker stands.

9 Front Center Speaker Assembly

Attach Bracket and Speaker Wire Attach bracket 11 to center speaker 3 using supplied screw as shown. Attach speaker wire as shown in Step 6.

10 Speaker Connections

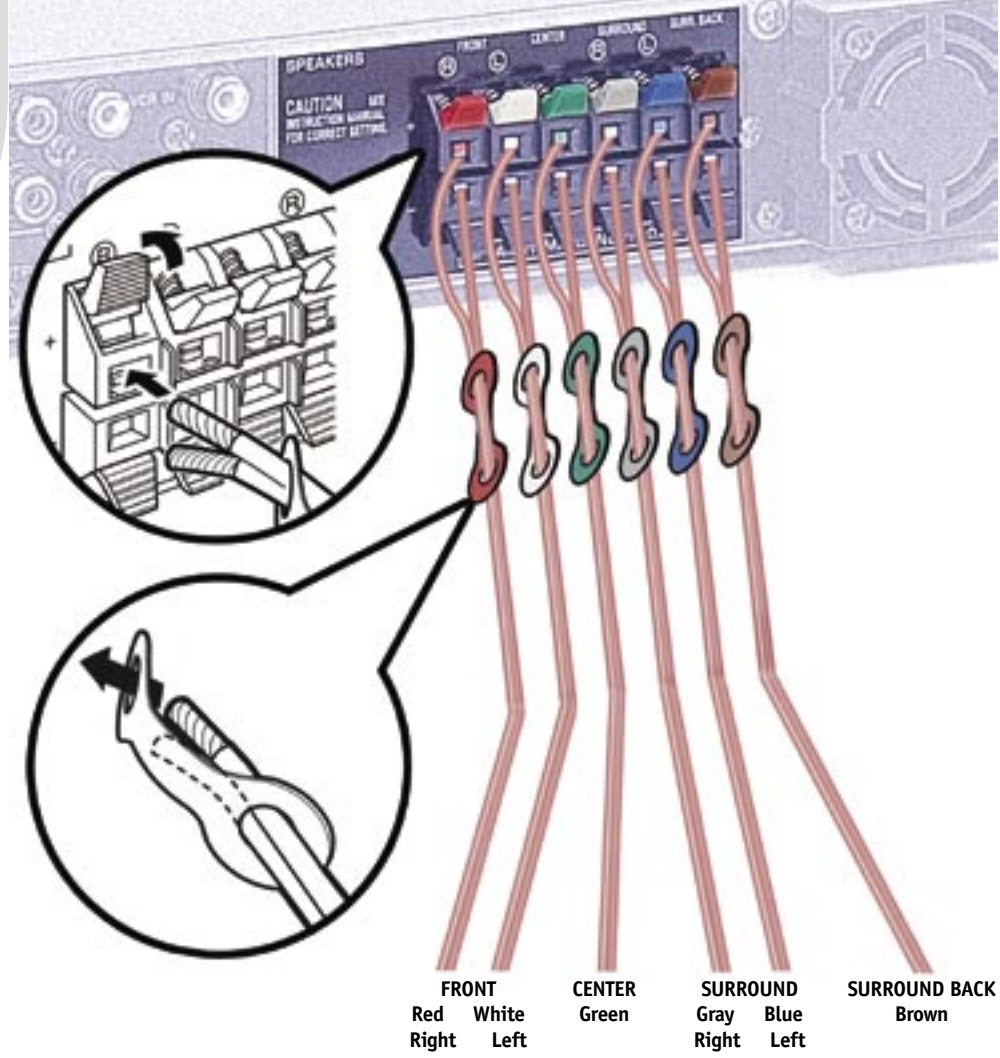


Connect Speakers Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal. Attach appropriate colored cable tags as shown.

CAUTION Receiver must not be plugged in while connecting speakers.

13

DVD Player Connection

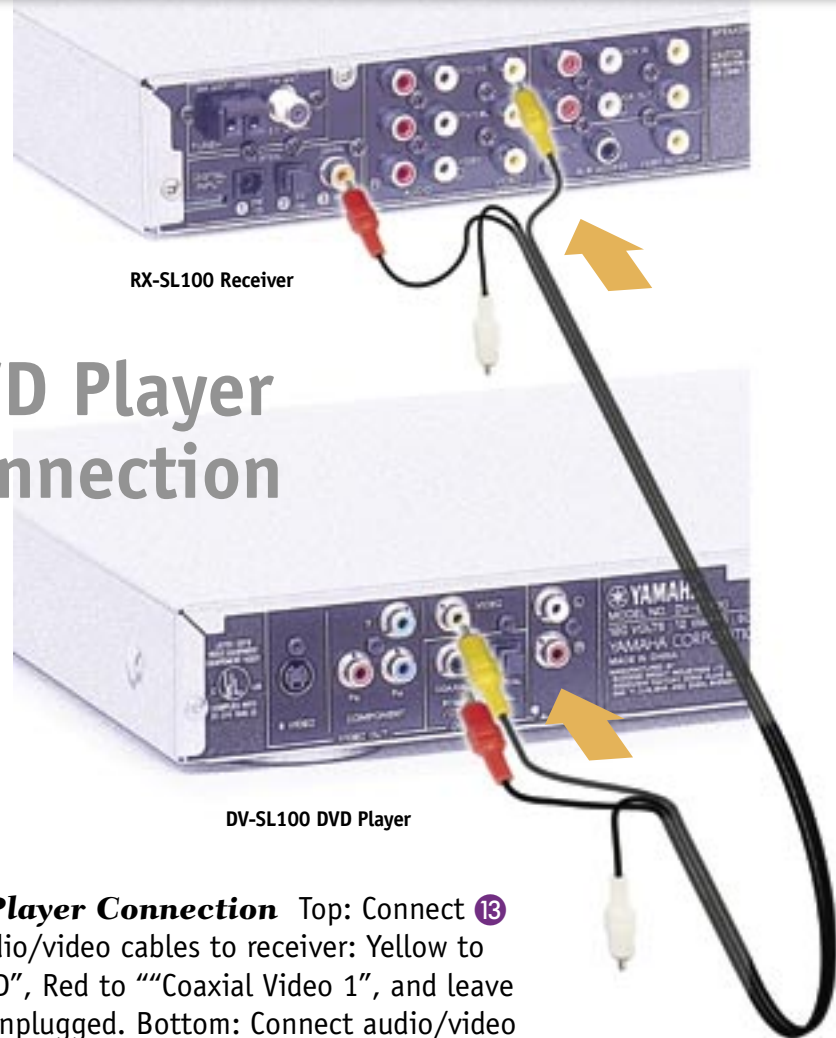


DVD Player Connection Top: Connect 13 RCA audio/video cables to receiver: Yellow to "DVD/CD", Red to "Coaxial Video 1", and leave White unplugged. Bottom: Connect audio/video cables to DVD player from receiver: Yellow to "Video", Red to "Coaxial", and leave White unplugged.

NOTE Refer to page 41 of RX-SL100 Owner's Manual for information about reassigning coaxial digital input.


16

Video Game Console Connection

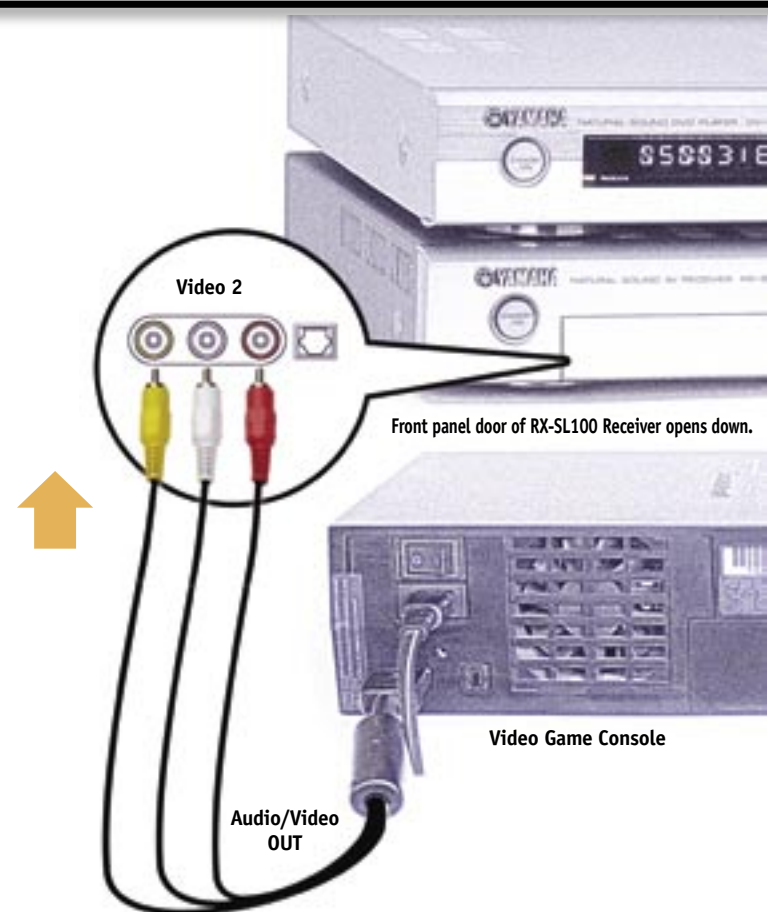

Connect Game Console or Video Camera (optional) Connect RCA audio/video cables (not included) or optical cable (not included) as shown.


11 Subwoofer Connection

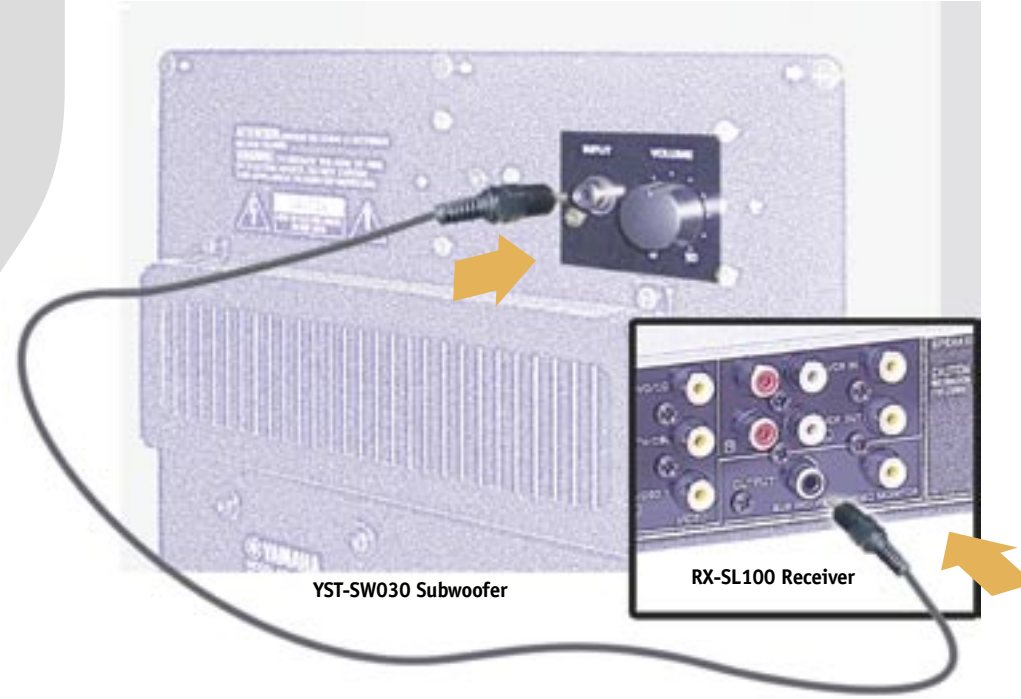

Connect RCA Cable Unplug subwoofer 12 before proceeding. Connect RCA cable 8 to subwoofer. Set subwoofer VOLUME control to half-way mark and POWER to OFF. Connect RCA cable to receiver from subwoofer.


CAUTION Subwoofer must not be plugged in while connecting it.

14

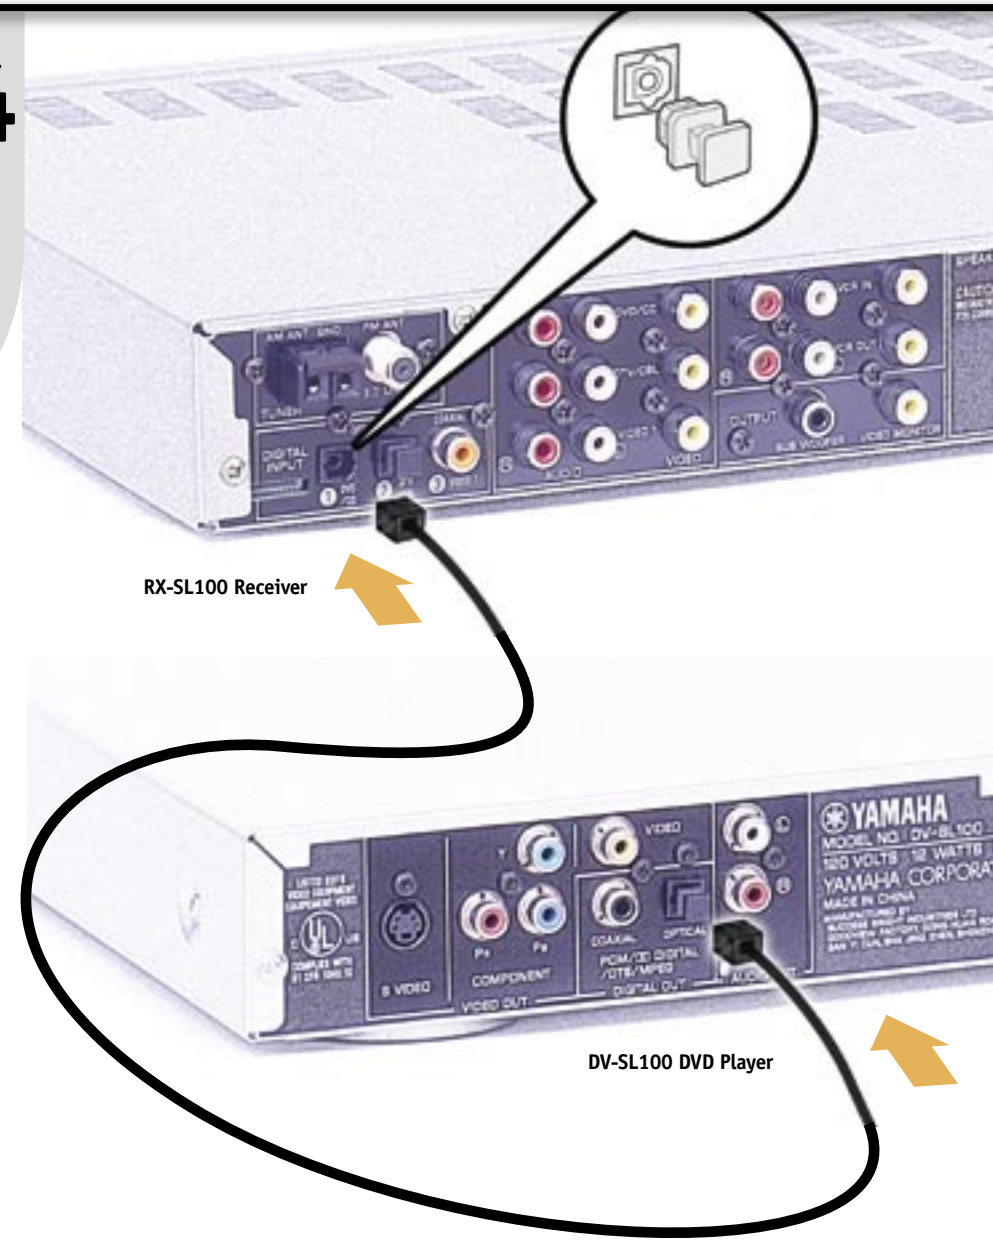


DVD Player Optical Connection (optional) Remove dust cap on optical input as shown on inset. Connect optical cable (not included) to receiver. Connect optical cable to DVD player from receiver.

12 Antenna Connection

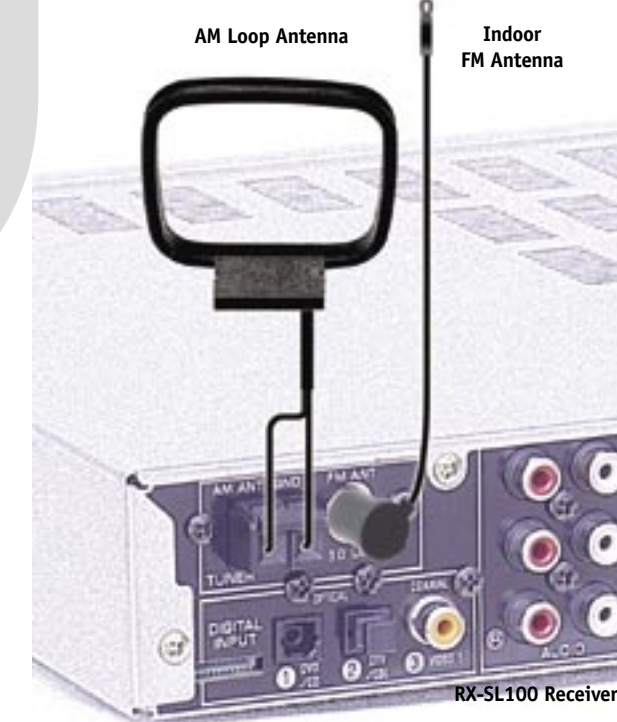

Connect Antennas to Receiver Locate AM loop antenna and indoor FM antenna. Connect as shown. For more information about obtaining clear reception and grounding, see your Owner's Manual.

15 VCR Connection

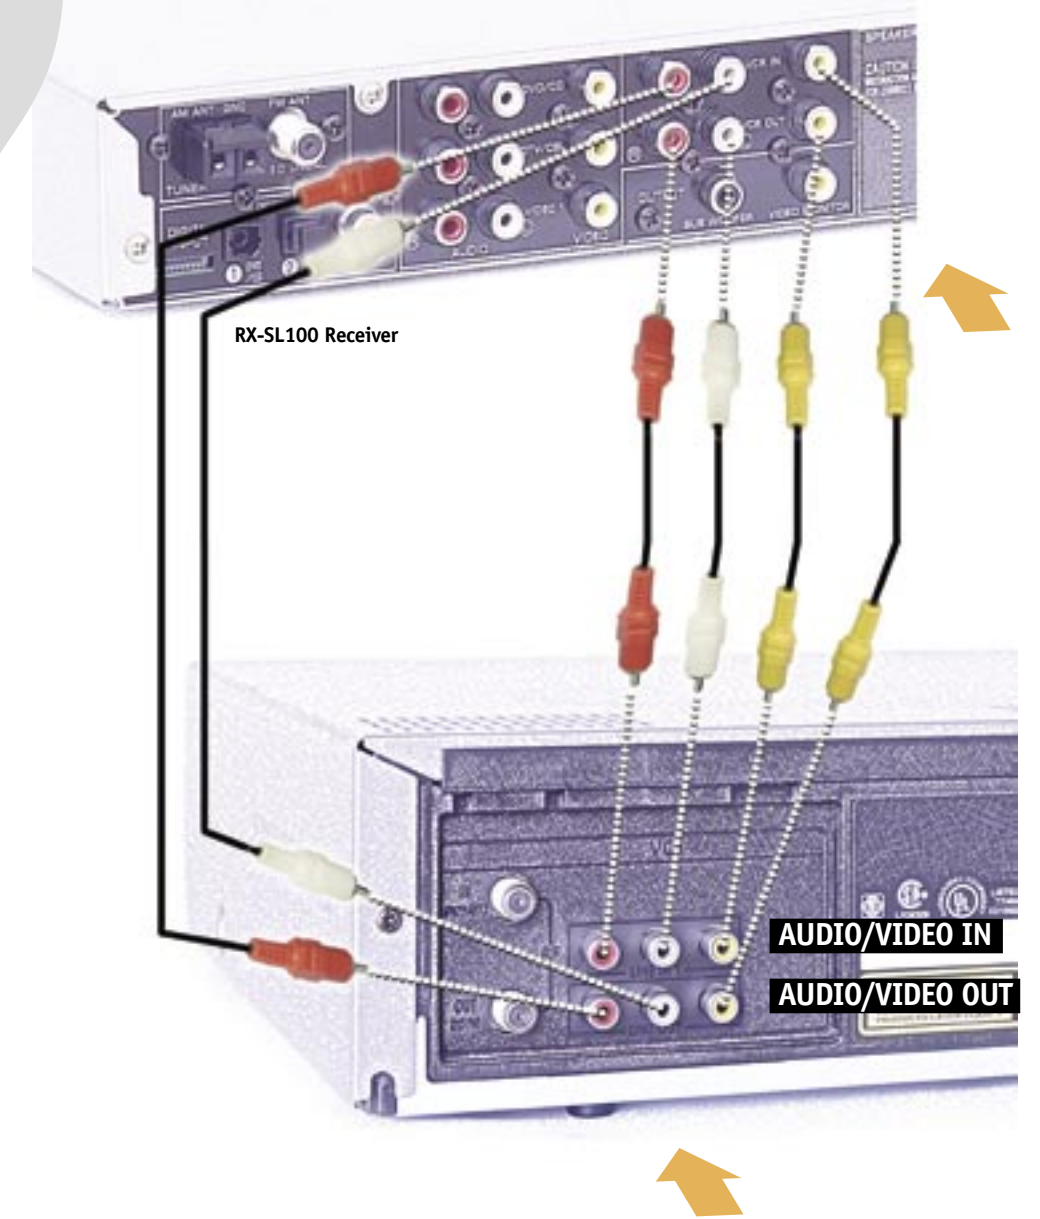


Connect VCR (optional) Connect audio/video cables (not included) as shown.

NOTE When using a hi-fi-stereo VCR, set the Tuner/Line switch on the VCR to "Line" position to record from another source connected to the RX-SL100 receiver.

17


DSS/Cable/HDTV Tuner Connection

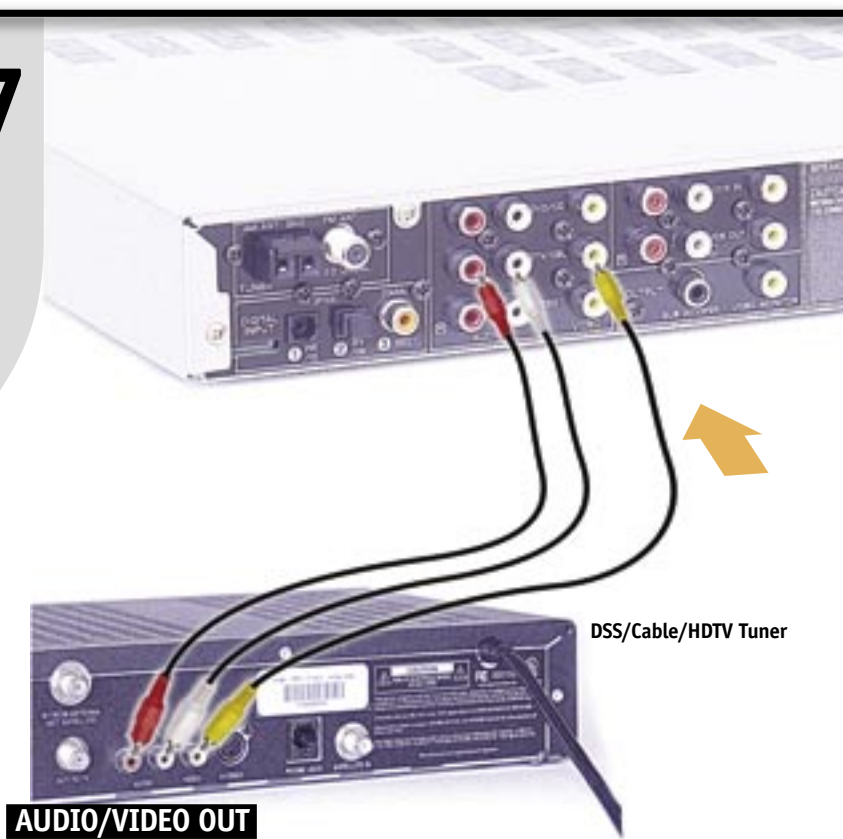

Connect DSS/Cable/HDTV Tuner Box (optional) Connect RCA audio/video cables (not included) or optical cable (not included) to "DTV/CBL" terminals on receiver as shown.

18

Video Monitor Connection

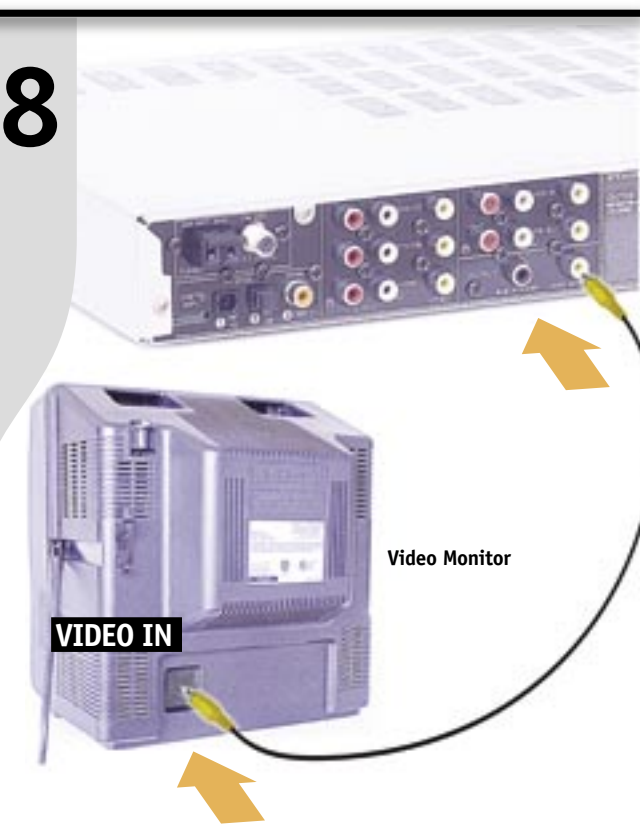

Connect a Video Monitor Connect an RCA video cable (not included) to receiver from your video monitor as shown.

19



Plug In Plug in the subwoofer, receiver, DVD player and other components. Power on the receiver first, then the subwoofer, and the others next. Adjust volume on the receiver. Please see each of your respective Owner's Manuals for recommended guidelines and settings.

Enjoy the Yamaha Home Theater Experience

Be sure to put batteries in your remotes (see Owner's Manuals for instructions). Refer to your Owner's Manuals for each component in your system for more information. Now, relax and enjoy the unparalleled sound of your Yamaha Home Theater system.



YAMAHA ELECTRONICS CORPORATION, USA
6660 Orangethorpe Avenue
Buena Park, CA 90620
<http://www.yamaha.com>
Phone: 1-800-292-2982

©2004 Yamaha Electronics Corporation
Printed in USA