

Quick-Connect Guide

YHT-750

Home Theater in a Box

home theater




Yamaha created this package to greatly enhance your audio and home theater enjoyment. This Quick-Connect Guide will help you get started. Follow the steps to connect the speakers first. Then connect your DVD Player and other components. Refer to your Owner's Manuals as well as those that came with your other components for complete instructions and precautions. *Be sure that all components are not plugged in while making connections.* You will need the following which are not included in the package: Phillips screwdriver, wire cutter/stripper, brackets, toggle bolts, molly anchor screws or sheet metal screws.

1 Your System




Inspect Contents After unpacking, inspect the contents to confirm you have the above items: ① two front speakers, ② three surround speakers, ③ one center speaker, ④ powered subwoofer, ⑤ HTR-5740 A/V Receiver with remote control, ⑥ DV-C6660 DVD Player with remote control, ⑦ speaker wire, ⑧ RCA cable, ⑨ audio/video RCA cable. Also included, but not shown, are AM and FM antennas and three related Owner's Manuals.

2 Room Layout

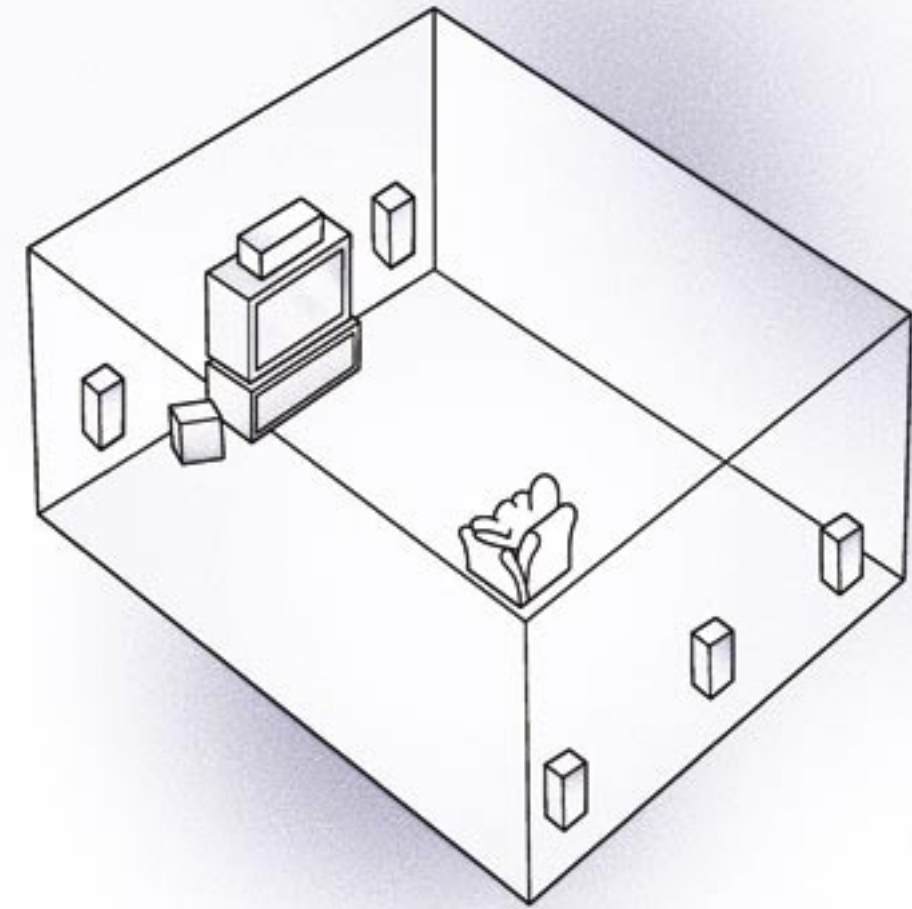

Speaker Placement After connection of the speakers place them so they appear in the approximate positions as shown in the diagram above.

3

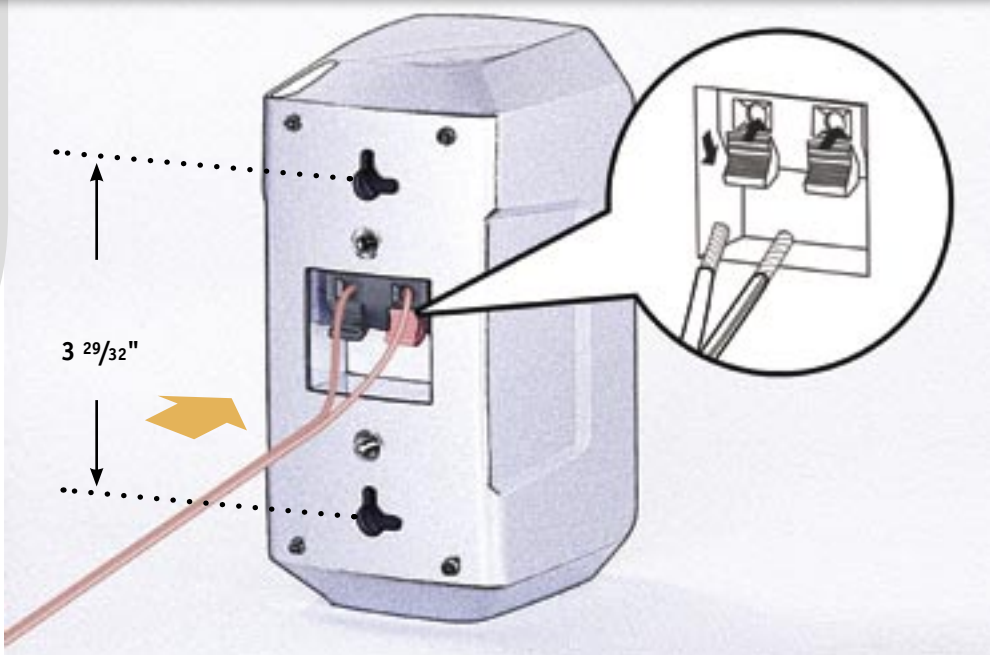


Connect Speaker Wire

Cut speaker wire ⑦ to appropriate lengths for all speaker connections. Connect speaker wire for front ①, and surround speakers ②. The positive (+) side of the wire with the white stripe attaches to the red terminal. The negative (-) side attaches to the black terminal. (See your HTR-5740 Owner's Manual for more information on speaker wire connections.)

Mount Surround Speakers (optional) Fasten mounting screws into a firm wall or wall support. Leave 1/4" space between head and wall. Hang the keyholes on the speaker backs on the protruding screws.

WARNING Please contact a reliable source about the best type of hardware for your particular wall's construction. Secure installation is purchaser's responsibility. See your Owner's Manual for additional precautions.


4

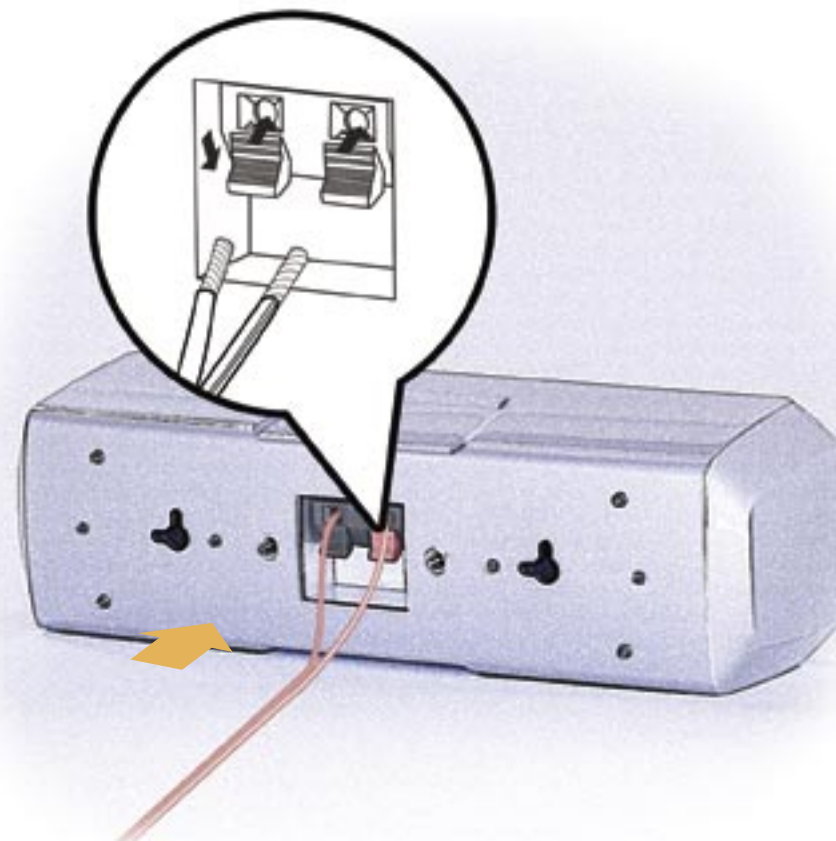

Connect Center Speaker Wire

Connect Center Speaker Wire as shown. The positive (+) side of the wire with the white stripe attaches to the red terminal. Place all speakers in desired location as shown in Step 2, Room Layout.

5

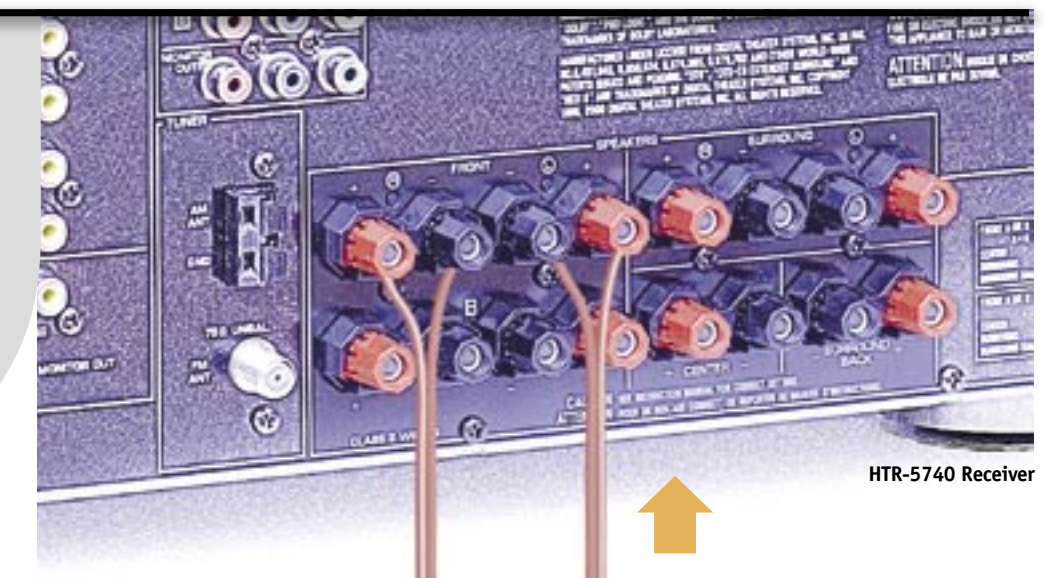


Speaker Connections

Connect Front Speakers Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

CAUTION Receiver must not be plugged in while connecting speakers.


6

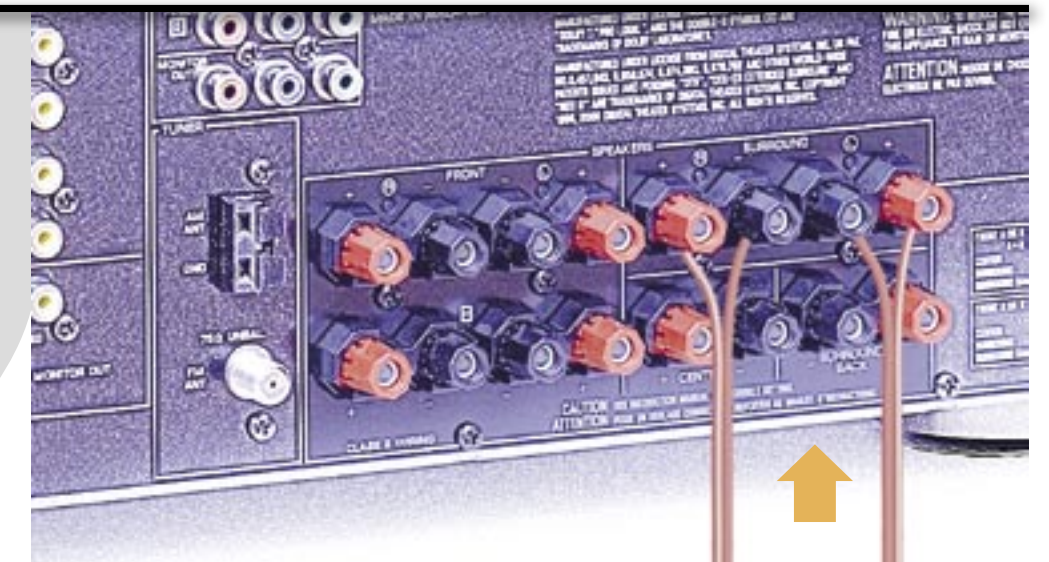

Connect Surround Speakers Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

CAUTION Receiver must not be plugged in while connecting speakers.

7

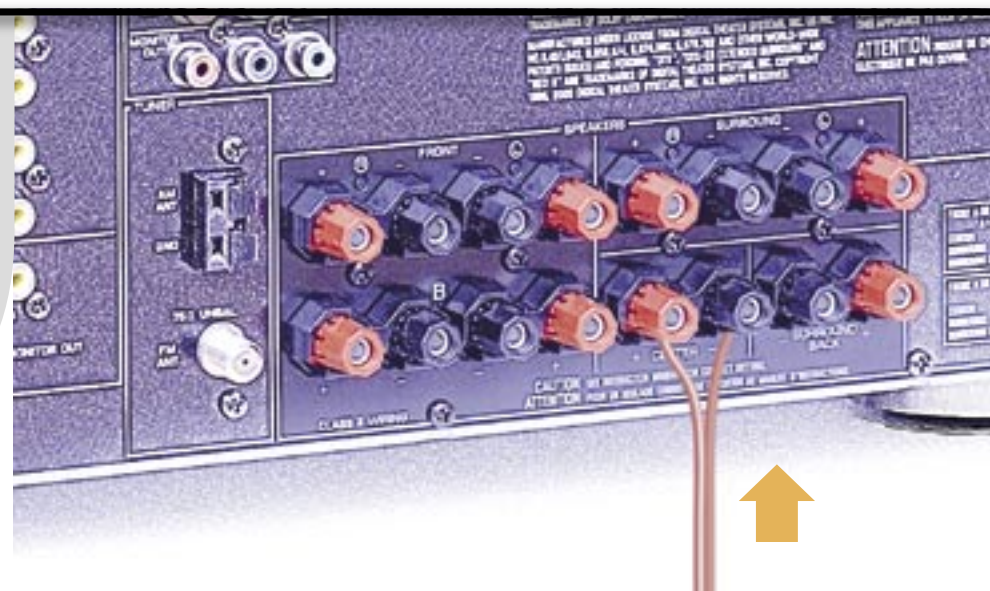

Connect Center Speaker Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

CAUTION Receiver must not be plugged in while connecting speakers.

9




Subwoofer Connection

Connect RCA Cable Connect RCA cable ⑧ to subwoofer ④. Set subwoofer VOLUME control to half-way mark and POWER to OFF. Connect RCA cable to receiver from subwoofer.

WARNING Components must not be plugged in while connecting them.


8

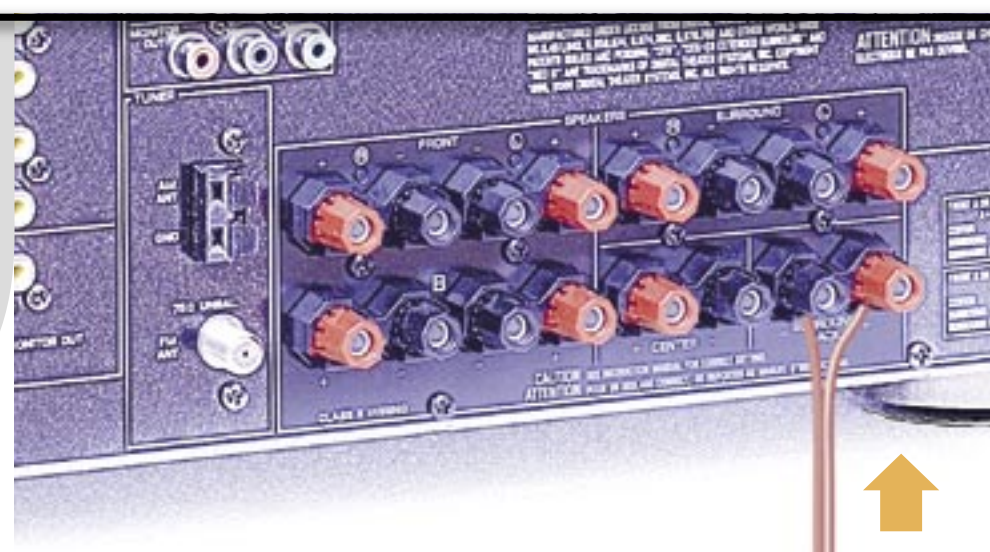

Connect Surround Back Speaker Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

CAUTION Receiver must not be plugged in while connecting speakers.

10 Antenna Connection

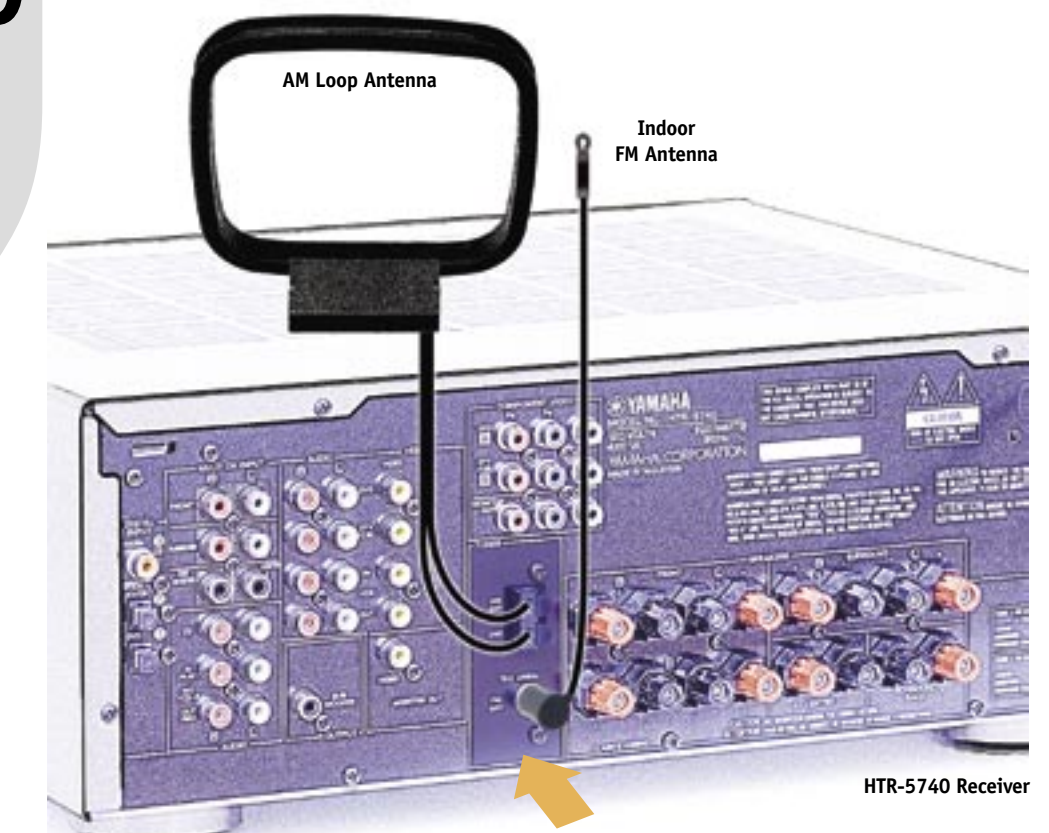

Connect Antennas to Receiver Locate AM loop antenna and indoor FM antenna. Keeping receiver unplugged, connect as shown. For more information about obtaining clear reception and grounding, see your Owner's Manual.

11

DVD Player Connection

Connect DVD Player

Top: Connect RCA audio/video cables to receiver: Yellow to "DVD," Red to "Digital Input CD Coaxial" as shown, and leave White unplugged.

NOTE Refer to page 48 of HTR-5740 Owner's Manual for information about reassigning coaxial digital input.


Bottom: Connect audio/video cables to DVD player from receiver: Yellow to "Video", Red to "Coaxial", and leave White unplugged.



DV-C6660 DVD Player

WARNING Components must not be plugged in while connecting them. Wait until all connections are made before plugging in your components.

12

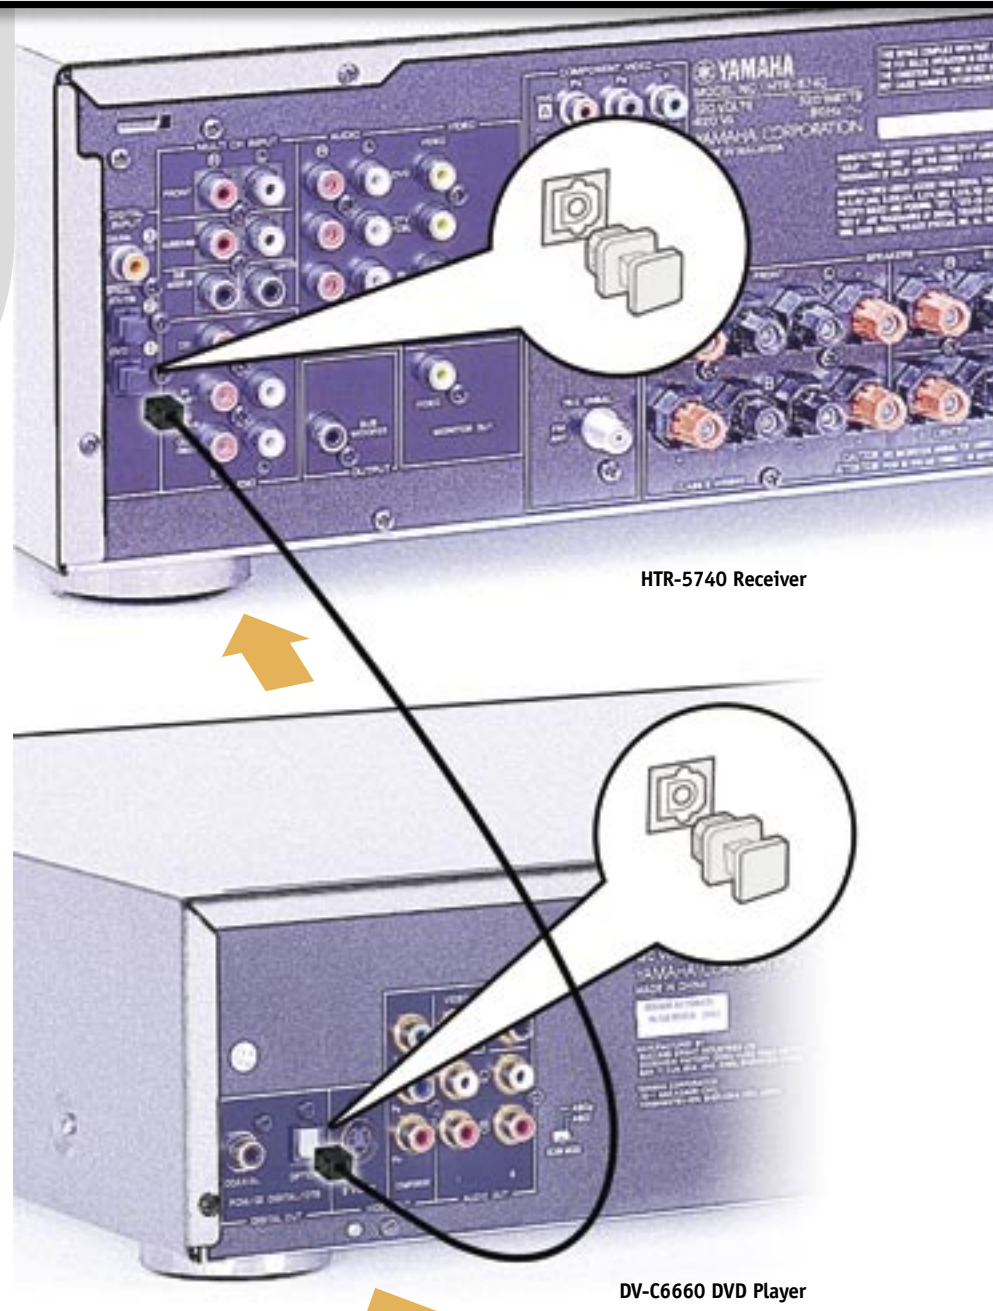


HTR-5740 Receiver

DV-C6660 DVD Player

DVD Player Optical Connection (optional) Remove dust cap on optical input as shown on insets. Connect optical cable (not included) to receiver. Connect optical cable to DVD player from receiver.

13

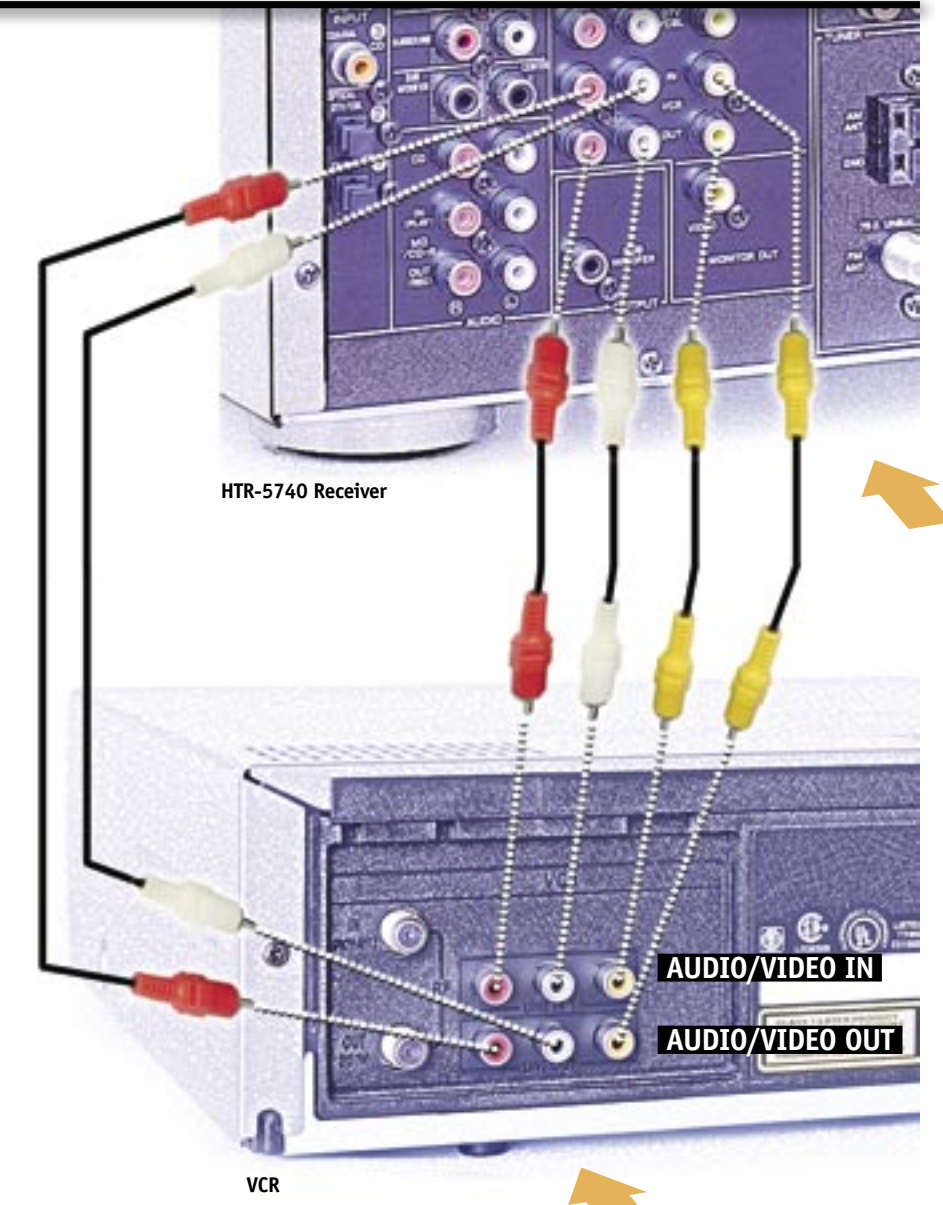

HTR-5740 Receiver


VCR

VCR Connection

Connect VCR (optional) Connect audio/video cables (not included) as shown.

NOTE VCR shown is for illustration purposes only. When using a hi-fi stereo VCR, set the Tuner/Line switch on the VCR to "Line" position to record from another source connected to the HTR-5740 receiver.

14

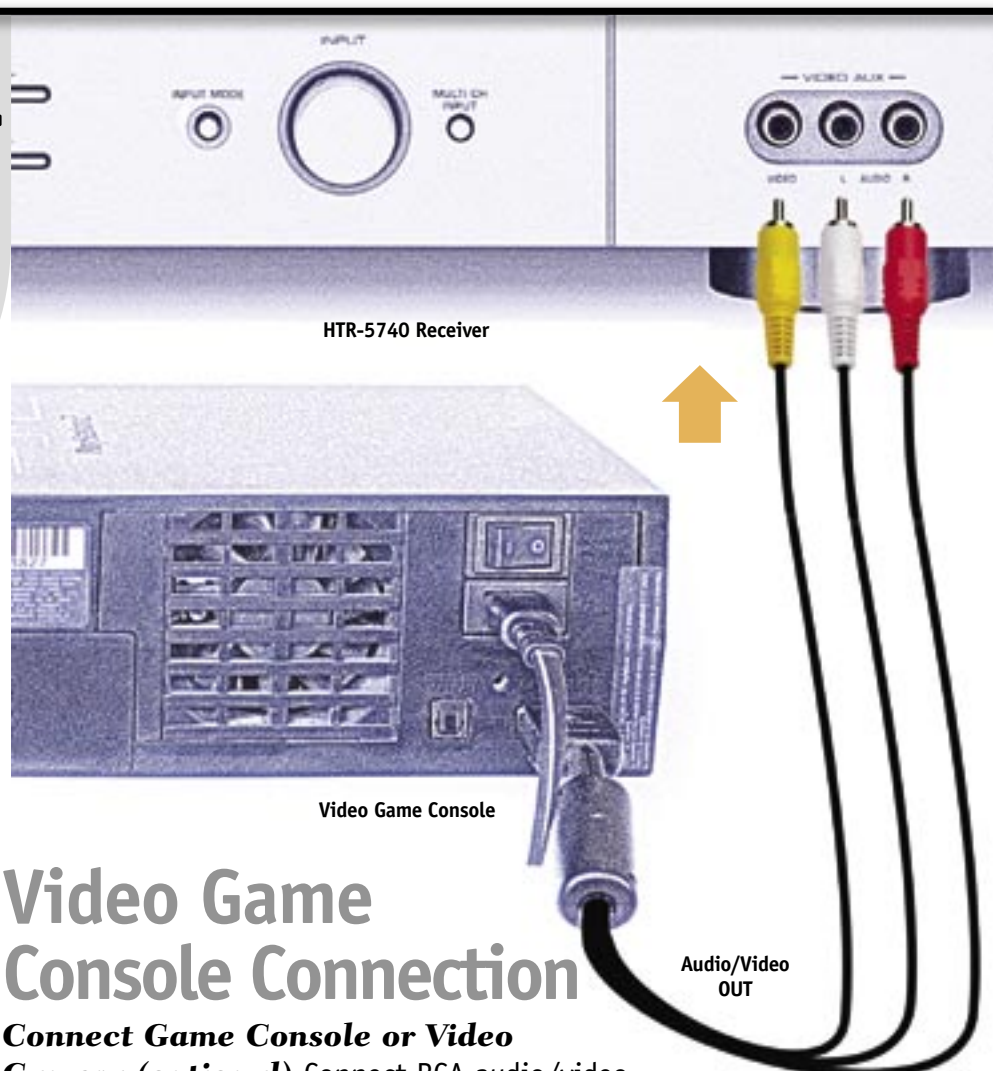

HTR-5740 Receiver


Video Game Console

Audio/Video OUT

Video Game Console Connection

Connect Game Console or Video Camera (optional) Connect RCA audio/video cables (not included) as shown.

15

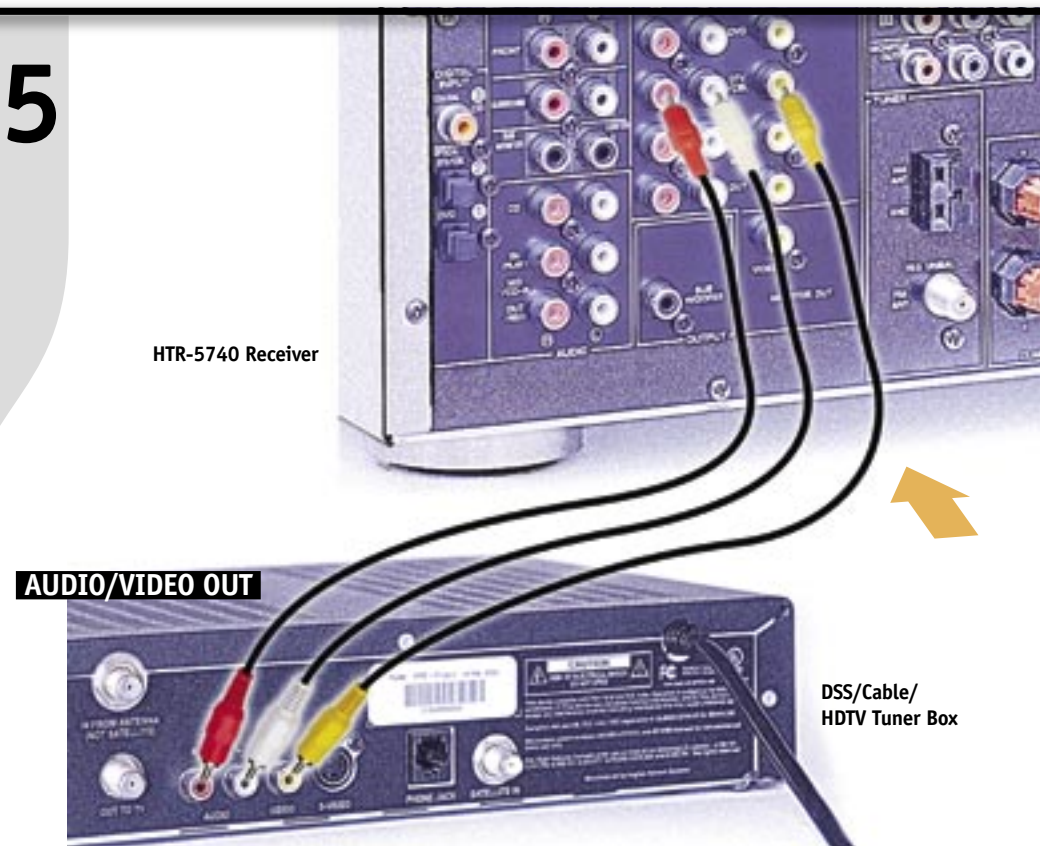

HTR-5740 Receiver


AUDIO/VIDEO OUT

DSS/Cable/HDTV Tuner Box

DSS/Cable/HDTV Tuner Connection

Connect DSS/Cable/HDTV Tuner Box (optional) Connect RCA audio/video cables (not included) and optional optical cable (not pictured) to "DTV/CBL" terminals on receiver to A/V OUT connections on Box as shown.

16

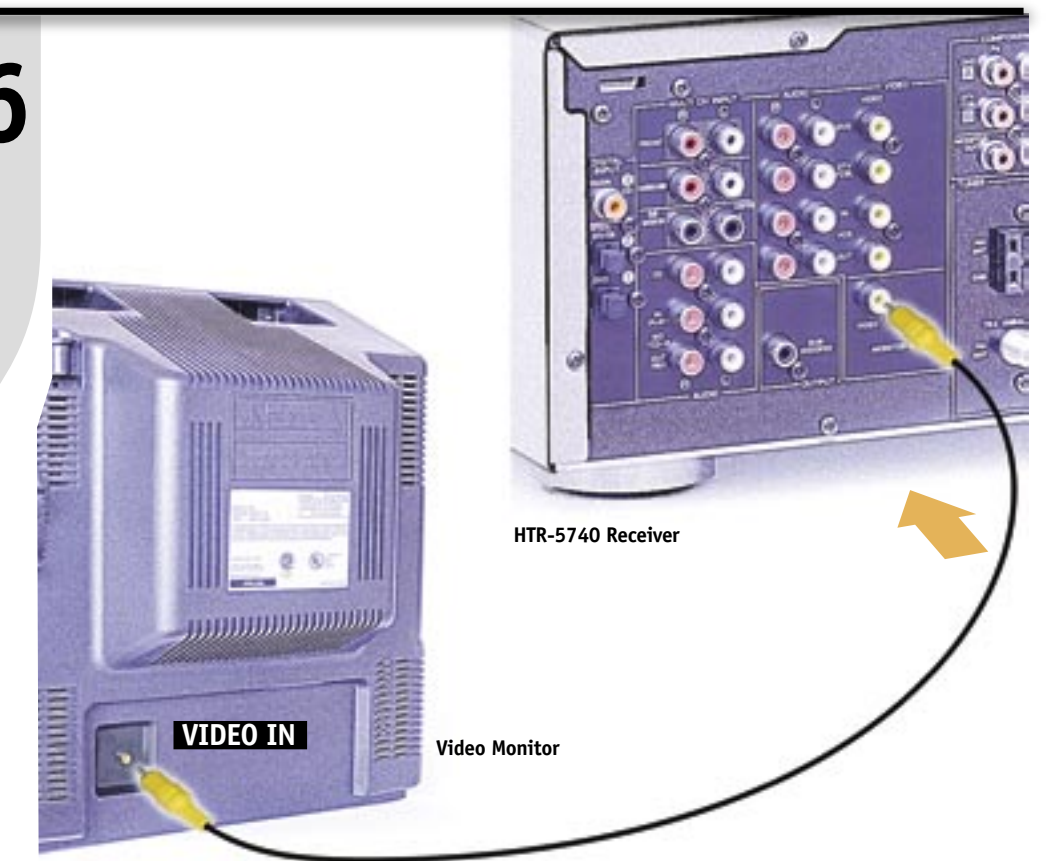

HTR-5740 Receiver


VIDEO IN

Video Monitor

Video Monitor Connection

Connect a Video Monitor (optional) Connect an RCA video cable (not included) to receiver Monitor OUT from your video monitor as shown.

17

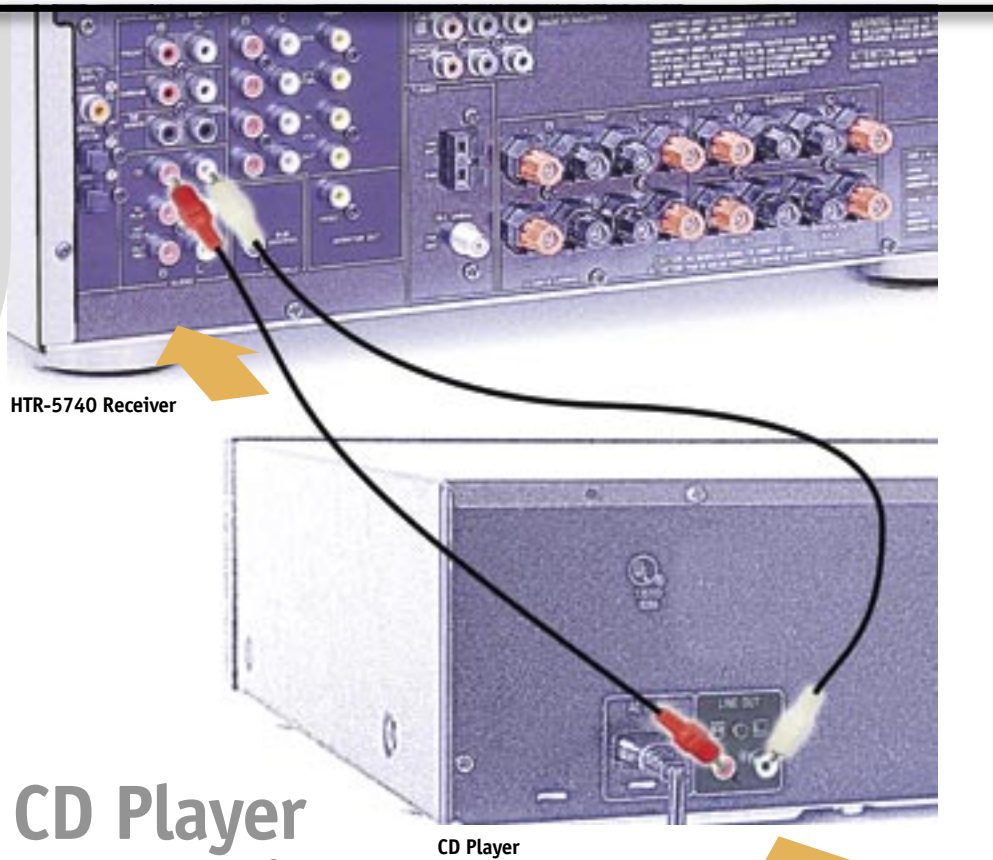


HTR-5740 Receiver

CD Player

CD Player Connection

Connect CD Player (optional) Connect RCA audio cables (not included) to "CD" terminals on receiver as shown. If your CD Player has digital output terminal, connect digital cable (not included) to HTR-5740 Receiver Digital Input terminal. See page 17 of your HTR-5740 Owner's Manual for more information.

18

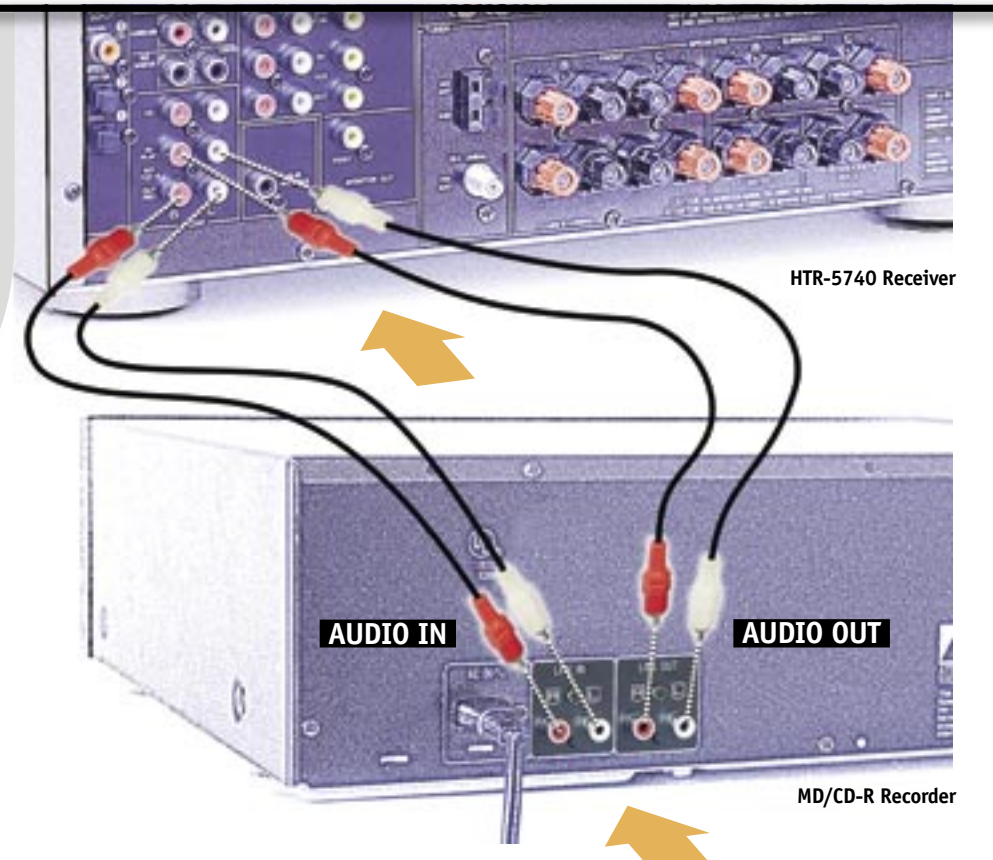

HTR-5740 Receiver

AUDIO IN

AUDIO OUT

MD/CD-R Recorder

MD/CD-R Player Connection

Connect MD/CD-R Recorder (optional) Connect RCA audio cables (not included) to "MD/CD-R" terminals on receiver as shown.

19



Plug In Plug in the subwoofer, receiver, DVD player and other components. Power on the receiver first, then the subwoofer, and the others next. Adjust volume on the receiver. Please see each of your respective Owner's Manuals for recommended guidelines and settings.



YAMAHA ELECTRONICS CORPORATION, USA
6660 Orangethorpe Avenue
Buena Park, CA 90620
<http://www.yamaha.com>
Phone: 1-800-292-2982

©2004 Yamaha Electronics Corporation
Printed in USA

Enjoy the Yamaha Home Theater Experience

Be sure to put batteries in your remotes (see Owner's Manuals for instructions). Refer to your Owner's Manuals for each component in your system for more information. Now, relax and enjoy the unparalleled sound of your Yamaha Home Theater system.