

 
REMOTE CONTROL FEATURES

In addition to controlling this unit, the remote control can also operate other A/V components made by YAMAHA and other manufacturers. To control other components, you must set up remote control with the appropriate manufacturer codes.

Control area

■ Controlling this unit

The shaded areas below can be used to control this unit when the AMP mode is selected. Press AMP to activate the AMP mode.

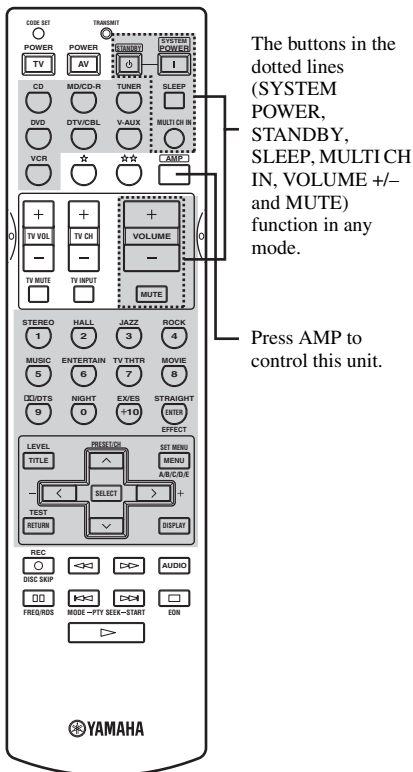

■ Controlling other components

 
The shaded areas below can be used to control other components. Each button has a different function depending on the selected components. Select the component you want to control by pressing an input selector button.

☆/☆☆ buttons and the input selector buttons switch the function of the component control area below.

* Use the ☆/☆☆ buttons to control other components regardless of whether they are connected to this unit.

Component control area

You can control up to 9 different components by setting appropriate manufacturer codes (see page 52).

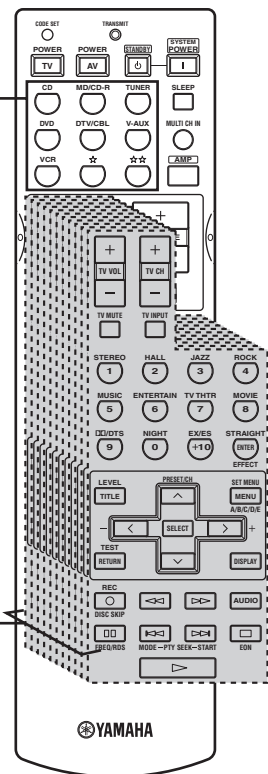

Setting manufacturer codes

You can control other components by setting the appropriate manufacturer codes. Codes can be set up for each input area. For a complete list of available manufacturer codes, refer to “LIST OF MANUFACTURER CODES” at the end of this manual.

The following table shows the factory preset component (Library: component category) and the manufacturer code for each area.

Input area	Component category (Library)	Manufacturer	Code
CD	CD	YAMAHA	0005
MD/CD-R	MD	YAMAHA	0024
TUNER	TUNER	YAMAHA	0023* ¹ 0003* ²
DVD	DVD	YAMAHA	0098
DTV/CBL	—	—	—
V-AUX	—	—	—
VCR	—	—	—
☆	—	—	—
☆☆	—	—	—

 
*¹ U.K. and Europe models

*² Other models

Note

You may not be able to operate your YAMAHA component even if a YAMAHA manufacturer code is initially set as listed above. In this case, try to set other YAMAHA manufacturer code(s).

- Press an input selector button or ☆/☆☆ to select the component you want to set up.

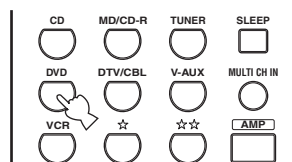


- Press CODE SET using a ballpoint pen or similar object.

The TRANSMIT indicator on the remote control flashes twice.



- Press the numeric buttons to enter the four digit manufacturer's code for the component to be used.

 Refer to “LIST OF MANUFACTURER CODES” at the end of this manual.

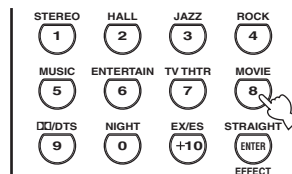


The TRANSMIT indicator on the remote control flashes twice.

Notes

- If the manufacturer of your component has more than one code, try each of them until you find the correct one.
- If you wait for more than 30 seconds during step 3, the setup process is canceled. If this happens, start over from step 2.

Controlling other components

 Once you set the appropriate manufacturer codes, you can use this remote to control your other components. Note that some buttons may not correctly operate the selected component. Use the input selector buttons to select the component you want to operate. The remote control automatically switches to the appropriate control mode for that component.

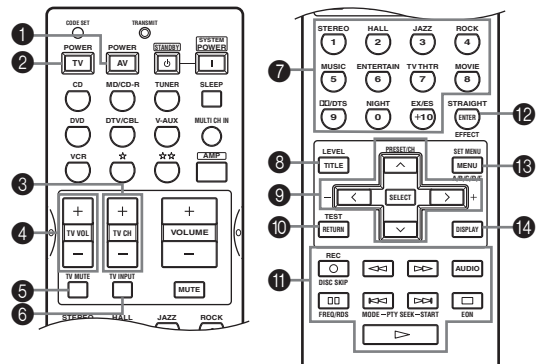

	DVD player/ DVD recorder	VCR	Digital TV/ Cable TV	CD player	MD/CD recorder	Tuner
1 AV POWER	Power *1	Power *1	VCR power *3	Power *1	Power *1	Power *1
2 TV POWER	TV power *2	TV power *2	TV power	TV power *2	TV power *2	TV power *2
3 TV CH +	TV channel up *2	TV channel up *2	TV channel up	TV channel up *2	TV channel up *2	TV channel up *2
TV CH -	TV channel down *2	TV channel down *2	TV channel down	TV channel down *2	TV channel down *2	TV channel down *2
4 TV VOL +	TV volume up *2	TV volume up *2	TV volume up	TV volume up *2	TV volume up *2	TV volume up *2
TV VOL -	TV volume down *2	TV volume down *2	TV volume down	TV volume down *2	TV volume down *2	TV volume down *2
5 TV MUTE	TV mute *2	TV mute *2	TV mute	TV mute *2	TV mute *2	TV mute *2
6 TV INPUT	TV input *2	TV input *2	TV input	TV input *2	TV input *2	TV input *2
7 1-9, 0, +10	Numeric buttons	Numeric buttons	Numeric buttons	Numeric buttons	Numeric buttons	Preset stations (1-8)
8 TITLE	Title					
9 PRESET/CH ^	Up	VCR channel up				Preset up
PRESET/CH v	Down	VCR channel down				Preset down
PRESET/CH <	Right					
PRESET/CH >	Left					
10 RETURN	Return					
11 REC/DISC SKIP	Disc skip (player) Rec (recorder)	Rec	VCR rec *3		Rec (MD)	
▷	Play	Play	VCR play *3	Play	Play	
◀◀	Search backward	Search backward	VCR search backward *3	Search backward	Search backward	
▶▶	Search forward	Search forward	VCR search forward *3	Search forward	Search forward	
AUDIO	Audio					
⏸	Pause	Pause	VCR pause *3	Pause	Pause	
◀◀◀	Skip backward			Skip backward	Skip backward	
▶▶▶	Skip forward			Skip forward	Skip forward	
□	Stop	Stop	VCR stop *3	Stop	Stop	
12 ENTER	Title/Index	Enter	Enter	Index	Index	
13 MENU	Menu					A/B/C/D/E
14 DISPLAY	Display		Display	Display	Display	

*1 This button functions only when the original remote control of the component has a POWER button.

*2 These buttons can operate your TV without switching the input if the manufacturer code is set in DTV/CBL or ☆☆.

 
When the manufacturer code for your TV is set up in both the DTV/CBL and ☆☆ areas, priority is given to the signal in the DTV/CBL area.

*3 These buttons can operate your VCR without switching the input to VCR if the manufacturer code is set in VCR.

Clearing setup manufacturer codes

■ Clearing a setup manufacturer code for component control

- 1 Press an input selector button or ☆/☆☆ to select the component control for which you want to clear the manufacturer code.

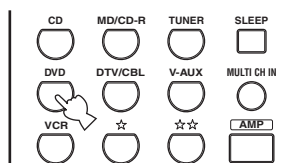

- 2 Press CODE SET using a ballpoint pen or similar object.

The TRANSMIT indicator on the remote control flashes twice.



- 3 If you do not press any button within 30 seconds after step 2, the clearing process is canceled. If this happens, start over from step 1.

- 4 Enter the code number "0000".

The TRANSMIT indicator on the remote control flashes twice, and the manufacturer code for the selected component is cleared.



You can clear all setup manufacturer codes at once by entering the code number "9990".

LIST OF MANUFACTURER CODES

TV		DAYTRON	0941, 1031	JBL	0101	NECKERMANN	1001
A TANDY	0941	DECCA	0271, 1001	JCB	0951	NEI	1001
ABEX	1151	DIXI	0331, 1001, 1071	JENSEN	0311	NIKKAI	0271, 0431, 1001, 1151
ADMIRA	1141	DUMONT	0891, 1031	JINXING	1531, 1541, 1551, 1561, 1571, 1621, 1631, 1641, 1651, 1691, 1731	NIKKO	0861, 1111, 1121
ADVENTURA	1131	DYNATECH	0881			NOVABEAM	0721
AIKO	1121	ELECTROBAND	0951, 1011			NTC	1121
AIWA	1481	ELECTROHOME	0941	JVC (VICTOR)	0261, 0281, 0641, 0651, 0661, 0841	ONWA	1051
AKAI	0331, 1101, 1111	ELECTRON	0941			OPTIMUS	0551
ALBA	0431	ELIN	1001	KAWASHO	0901	OPTONICA	0541, 1141
ALLERON	1091	ELTA	0331	KAYPANI	1021	ORION	0831, 1001
AMBASSADOR	1081	EMERSON	0001, 0021, 0061, 0071, 0081, 0091, 0111, 0811, 0821, 0831, 0841, 0851, 0861, 0871, 0901, 0921, 0941, 0981, 1011, 1031, 1051, 1081, 1091	KENWOOD	0361, 1031, 1111	OSAKI	0271, 1151
AMSTRAD	0481, 1081			KLOSS	0631, 0721, 1131	OTTO VERSAND	1001
ANAM	0251, 1041, 1051, 1061, 1071			KTV	0921, 0941, 1011, 1051, 1111	PANASONIC	0101, 0191, 0251, 0751, 1041, 1311, 1371, 1431
ANAM NATIONAL	1041			LEYCO	1001	PANDA	1541, 1721
AOC	0361, 1021, 1031, 1111, 1161			LG (GOLDSTAR)	0031, 0121, 0351, 0411, 0731, 0741, 0861, 0941, 0971, 1001, 1031, 1111, 1151	PENNY	0161, 0361, 0521, 0531, 0621, 0731, 0751, 0761, 0781, 0791, 0861, 0931, 0941, 1031, 1041, 1111, 1151, 1161
ARCHER	1161	ENVISION	0361, 1111	LIESENK & TTER	1001	PEONY	1561, 1621
AUDIOSONIC	1001	ERRES	1001	LLOYTRON	0941	PHILCO	0361, 0581, 0591, 0601, 0611, 0631, 0961, 1031, 1111
AUDIOVOX	1051, 1161	ETRON	0331	LOEWE	1001		0101, 0401, 1001
BAUER	0441	FERGUSON	1001	LOGIK	0991, 1771	PHILIPS	1001
BAUR	1001	FINLUX	1001	LUXMAN	0351, 0971	PHONOLA	1001
BEIJING	1511, 1551, 1561	FISHER	0171, 0801, 0981	LXI	0101, 0621, 0761, 0861, 0981	PILOT	0941, 1031, 1111
BELCOR	1031	FORMENTI	0441	MAGNAVOX	0101, 0341, 0391, 0401, 0411, 0421, 0581, 0591, 0601, 0611, 0631, 0661, 0961, 1111	PIONEER	0511, 0551, 0871
BELL & HOWELL	0981, 0991	FORMONTI	1001			PORTLAND	0941, 1031, 1121
BEON	1001	FORTRESS	1141			PRICECLUB	0931
BRADFORD	1051	FUJITSU	1091	MAJESTIC	0991	PRISM	0751
BROCKWOOD	1031	FUNAI	1051, 1091, 1501, 1521	MARANTZ	0101, 0221, 0361, 1001, 1111	PROSCAN	0761
BROKSONIC	1161			MARK	1001	PROTECH	1001
BUSH	1001	FUTURETECH	1051	MATSUI	0271, 0331, 1001	PROTON	0501, 0861, 0941, 1021, 1161
CANDLE	0351, 0361, 0961, 0971, 1111, 1131	GE	0131, 0161, 0201, 0751, 0761, 0771, 0781, 0791, 0811, 0861, 1041	MEDIATOR	1001	PULSAR	0891
CAPEHART	1021	GEC	0271, 1001	MEGATRON	0691, 0861, 1161	PULSER	1031
CARVER	0101	GEMINI	0391	MEI	1011	QUASAR	0251, 0751, 1041
CATHAY	1001	GENEXXA	0431	M-ELECTRONIC	1001	QUELLE	1001
CELEBRITY	0951	GIBRALTER	0891, 1031, 1111	MEMOREX	0331, 0571, 0861, 0971, 0981, 0991, 1771	RADIO SHACK	0541, 0941, 1031, 1051, 1151
CENTURION	0411	GOODMANS/TASHIKO	0271, 0661, 1001	METZ	1791, 1831, 1891, 1901, 1911, 1921, 1931, 1941	RADIOLA	1001
CHANGHONG	1541, 1551, 1561, 1621	GRANADA	1001	MGA	0361, 0561, 0571, 0861, 1031, 1111	RCA	0051, 0141, 0151, 0181, 0411, 0491, 0531, 0761, 0771, 0871, 1031
CITIZEN	0351, 0361, 0921, 0931, 0941, 0961, 0971, 1111, 1121, 1131	GRUNDIG	1781, 1791, 1801, 1811, 1821, 1831, 1841, 1851, 1861, 1871, 1881	MIDLAND	0751, 0761, 0891, 0941, 1151	REALISTIC	0541, 0861, 0941, 0971, 0981, 1031, 1051, 1111, 1151
CLAIRTONE	1011			MITSUBISHI	0221, 0321, 0561, 0571, 0661, 0861, 1031, 1101, 1381	RHAPSODY	1011
CLARIVOX	1001	GUNPY	1051, 1091	MONTGOMERY	1091	R-LINE	1001
CONCERTO	0351, 0971	HARMAN/KARDON	0721	MOTOROLA	1041, 1141	RUNCO	0891, 1111
CONROWA	1751	HALLMARK	0861	MTC	0351, 0361, 0881, 0931, 0971, 1011, 1031, 1111	SAISHO	0331, 1081
CONTEC	0901, 0911, 1011, 1051	HANSEATIC	1001			SAMPO	0361, 0941, 1021, 1111, 1151
CORANDO	0941	HARVARD	1051, 1061	MULTITECH	0881, 1051	SAMSUNG	0331, 0341, 0351, 0361, 0861, 0931, 0941, 0971, 1001, 1031, 1111, 1151
CRAIG	0251, 1051	HINARI	1001, 1091	NAD	0551, 0621, 0861	SAMSUX	0941
CROWN	0941, 1051	HITACHI	0181, 0351, 0671, 0681, 0691, 0701, 0711, 0871, 0941, 0971, 1351	NEC	0241, 0351, 0361, 0661, 0971, 1031, 1111, 1321, 1711		
CURTIS MATHES	0161, 0361, 0931, 0941, 0981, 1111						
CXC	1051	HYPSON	1001				
DAEWOO	0291, 0301, 0331, 0721, 0941, 1001, 1031, 1121, 1191, 1531, 1581, 1591, 1601	IMA	1051				
		INDIANA	1001				
		INFINITY REFERENCE	0101				
DANSAI	1001	INTERFUNK	1001				
		ITT	0611				
		JANEIL	1131				

HARMAN/KARDON	PROSCAN	1002, 1012, 1022,	YAMAHA	0202, 0632	ALPINE	1215, 1305
0632, 1082		1032, 1042, 1052,	ZENITH	0042, 0362, 0512,	AUDIO-TECHNICA	0545
HARWOOD 0752, 0852		1062		0672	BSR	0245, 0655, 0775
HEADQUARTER 0612	PULSAR	0512				CALIFORNIA AUDIO LAB
HI-Q 0842	QUARTER	0612	DVD PLAYER			0055
HINARI 0852	QUARTZ	0272, 0612	AKAI	0058	CAPETRONIC	1205
HITACHI 0102, 0562, 0572,	QUASAR	0382, 0392, 0932	AIWA	0218	CARRERA	0245
0582, 0592, 0602,	RADIO SHACK	0912, 0992	DENON	0188	CARVER	0285, 1135
0992	RADIX	0912	HITACHI	0198	CASIO	0345
ITT 0942	RANDEX	0912	JVC (VICTOR)	0088, 0178	CROWN	0185
JVC (VICTOR) 0202, 0522, 0532,	RCA	0112, 0382, 0392,	KENWOOD	0148	CURTIS MATHES	0345
0542, 0552		0482, 0592, 0602,	LG (GOLDSTAR)	0228	DENON	0275, 0875, 0885
KENWOOD 0202, 0542, 0612,		0662, 0822, 0942	MAGNAVOX	0128	DEUAL (E)	0505
0632, 0902	REALISTIC	0402, 0472, 0612,	MITSUBISHI	0138	DYNAMIC BASS (H)	0555
KLH 0852		0682, 0842, 0902,	ONKYO	0068, 0128	EMERSON	0205, 0325, 1105
KODAK 0912, 0932		0912, 0922, 0932,	PANASONIC	0028	EROICA	1275
LG (GOLDSTAR) 0082, 0632,		0992	PHILIPS	0098, 0128	FISHER	0095, 0555, 0925,
0912	RICOH	0352, 0362	PIONEER	0108, 0118	1005	
LLOYD 0992	SAISHO	0212, 0582, 0722,	PROSCAN	0158	GARRARD	0365
LOGIK 0852		0732, 0742, 0772	RCA	0158	GENEXXA	0305, 0325, 1105
LUXOR 0942	SALORA	0612, 0762	SAMSUNG	0078	HARMAN/KARDON	0105, 0175,
LXI 0022, 0912	SAMSUNG	0212, 0312, 0922,	SHARP	0038	0465, 0995	
MAGNAVOX 0002, 0482, 0492,	SANKY	0472, 0512	SONY	0018	HITACHI	0195, 0205, 0505,
0502, 0512, 0932	SANSUI	0292, 0542, 0832	TECHNICS	0028	0815	
MAGNIN 0922	SANYO	0242, 0612, 0842,	THOMSON	0168	INKEL	0115, 0395
MARANTZ 0002, 0202, 0402,		0902, 0922	TOSHIBA	0048, 0128	JVC (VICTOR)	0315
0632, 0932	SBR	0002, 0282	YAMAHA	0008, 0028, 0098	KENWOOD	0045, 0095, 0405,
MARTA 0912	SCHEIDER	0852	ZENITH	0128	0585, 0725, 0735,	
MATSUSHITA 0932	SCOTT	0342, 0712, 0762,				0745, 0755, 0895
MATSUI 0722		0872, 0882, 0892	DVD RECORDER			KYOCERA 0025
MEI 0222, 0932	SEARS	0302, 0592, 0602,	PANASONIC	0238, 0248, 0258	LG (GOLDSTAR)	1135, 1225,
MEMOREX 0232, 0242, 0472,		0612, 0682, 0692,	PHILIPS	0208	1265, 1335	
0512, 0612, 0842,		0842, 0902, 0912,	PIONEER	0278, 0288, 0298	LUXMAN	0075, 0425, 0675,
0902, 0912, 0922,		0932	TOSHIBA	0268	0705, 0715, 0985	
0932, 0992	SHARP	0402, 0472	YAMAHA	0208	MAGNAVOX	0165, 0215, 0645,
MGA 0762, 0952	SHINTOM	0852				0955
MGA TECHNOLOGY 0922	SHOGUN	0922	LD PLAYER			MARANTZ 0215, 0235, 0375,
MINOLTA 0592, 0602	SINGER	0852	AIWA	0157	0785, 1345	
MITSUBISHI 0452, 0462, 0542,	SONY	0032, 0332, 0352,	DENON	0147	MCINTOSH	0355, 1085
0762, 0952, 1082		0362, 0672, 0792,	DISCO VISION	0017	MCS	0905, 1315
MOTOROLA 0472, 0932		0932	FUNAI	0157	MEMOREX	0205, 0225, 0235,
MTC 0922, 0992	STS	0602	HITACHI (E)	0017	0305, 0325, 1105	
MULTITECH 0852, 0992	SUNPAK	0352	KENWOOD	0087, 0107	MGA	0135
NAD 0442	SYLVANIA	0002, 0492, 0502,	MAGNAVOX	0027	MISSION	0215
NEC 0122, 0202, 0292,		0762, 0932, 0992	MARANTZ	0027	MITSUBISHI	0135, 0445
0422, 0432, 0542,	SYMPHONIC	0992	MITSUBISHI	0137	MTC	1255
0632	TANDY	0992	NAD	0137	NAD	0035, 0615, 0685,
NIKKO 0912	TASHIKO	0712, 0992	PANASONIC	0077, 0177	0695	
NOBLEX 0922	TEAC	0992	PHILIPS	0027	NAKAMICHI	0125, 0435, 0515
OLYMPUS 0412, 0932	TECHNICS	0932	PIONEER	0017, 0037, 0137	NEC	0255, 0905, 0965

SAE	0215	OPTIMUS	0034, 0064, 0204,
SAMSUNG	1285		0334
SANSUI	0215, 0625, 0975,	ONKYO	0364, 0374
	1025, 1105	PHILIPS	0094
SANYO	0145, 0555, 0635,	PIONEER	0034, 0044, 0064
	0765	REVOX	0354
SCOTT	0325, 1105	SANSUI	0094, 0344
SEARS	0345	SHARP	0264
SHARP	0235, 0665, 0895,	SHERWOOD	0334
	1065, 1075	SONY	0054, 0084, 0324
SHERWOOD	0115, 0235, 0395,	TEAC	0194, 0254
	0475	TECHNICS	0074, 0314
SIEMENS GARRARD		WARDS	0034
	1245	YAMAHA	0004, 0014, 0104,
SIGNATURE	0175		0114, 0164, 0174,
SONTEC	1165		0264
SONY	0065, 0565, 0865,		
	1145		
STARON	1235		
STS	0025		
SYLVANIA	0215		
SYMPHONIC	0335		
TANDY	0305		
TANGBERG	1195		
TEAC	0235, 0335, 0385,		
	0525, 0795, 0835,		
	1355		
TECHNICS	0055, 0605, 1095		
TECHWOOD	1325		
TELEFUNKEN (E)	0505		
THOMSON (E)	0505		
TOSHIBA	0035, 0685		
VECTOR RESEARCH			
	0065, 1135		
WARDS	0175		
YAMAHA	0005, 0015, 0085,		
	0415, 0545, 0575,		
	1065		

CD RECORDER

HITACHI	0474
JVC (VICTOR)	0504
MARANTZ	0484, 0494
PHILIPS	0444
PIONEER	0454
YAMAHA	0414

MD RECORDER

KENWOOD	0384
PIONEER	0424
SHARP	0434
SONY	0394
YAMAHA	0024, 0394, 0404,
	0514

TAPE DECK

AIWA	0094, 0214, 0224
AKAI	0184
CARVER	0094
DENON	0304
FISHER	0144
GARRARD	0194, 0204
JVC (VICTOR)	0274, 0284, 0294
KENWOOD	0124, 0134, 0154,
	0234, 0244, 0264
MAGNAVOX	0094
MARANTZ	0094, 0344
MITSUBISHI	0184

**LIST OF MANUFACTURER CODES
LISTE DES CODES DE FABRICANT
LISTE DER HERSTELLERCODES
LISTA ÖVER TILLVERKARKODER
LISTA DEI CODICI DEI FABBRICANTI
LISTA DE CÓDIGOS DE FABRICANTES
LIJST MET FABRIKANTENCODES
СПИСОК КОДОВ ПРОИЗВОДИТЕЛЕЙ**

TV							
ADMIRAL	0411, 0451, 0911, 1021, 1081	CITIZEN	0791	FINLUX	0021, 0261, 0491, 0521, 0781, 0811, 0871, 1081, 1411, 1421, 1981, 2051, 2091, 2121, 2151, 2551	HITACHI	0001, 0011, 0031, 0081, 0141, 0291, 0331, 0341, 0451, 0601, 0631, 0701, 1281, 1561, 1601, 1821, 1831, 1841, 1861, 1871, 1881, 1891, 1941, 1981, 2051, 2321, 2341
AIKO	0891	CLARIVOX	0821, 0961, 1971	FIRST LINE	1981	HYPER	0591, 0601, 1511, 1621
AKAI	0061, 0101, 0231, 1191, 1351, 1591, 1641, 1791, 1891, 1981	CLATRONIC	1181, 1331	FISHER	0021, 0091, 0141, 0511, 0601, 0801, 0821, 0981, 1021, 1081, 1981, 2091	IMPERIAL	0451, 0491, 0811, 0981, 1401, 1611, 1621, 2201, 2251, 2271
AKURA	1331	CONCERTO	0791	FORGESTONE	2281	INGERSOL	1511
ALBA	1241, 1331, 2361	CONDOR	0761	FORMENTI	0451, 0491, 0761, 1081, 1451, 1541, 1981	INNO HIT	0581, 0601, 0841, 1101, 1331, 1371, 1511, 2011
ALBIRAL	1971	CONTEC	0151, 1171	FORMENTI-PHOENIX	0021, 0431, 0451, 0591, 1411	INNOVATION	2591, 2601, 2611, 2621, 2641, 2651, 2661, 2711, 2721, 2761, 2771, 2781
AMSTRAD	1301, 1511	CONTINENTAL EDISON	0571, 0651, 0901	FORTRESS	1081	INTERFUNK	0031, 0041, 0061, 0121, 0181, 0451, 0491, 1081, 1641, 1791, 1821, 1981, 2231
ANAM	1171	CRAIG	1171	FRONTECH	0451, 1181, 1981	IRRADIO	0491, 1321, 1331, 1371, 1411, 1511, 2011
ARC EN CIEL	0571	CROSLEY	0021, 0491, 1021, 1081, 1401, 1981, 2201, 2251, 2271	FUJITSU	1261	ISUKAI	1331
ARCAM	0571, 0761	CROWN	2541	FUNAI	0391, 0691, 1171, 1181, 1261	ITT	0031, 0041, 0051, 0061, 0071, 0081, 0181, 0411, 0451, 0491, 1241, 1291, 1351, 1501, 1601, 1641, 1741, 1921, 1981, 2091, 2331, 2431
ARISTONA	0751	CTC CLATRONIC	0261	GELOSO	0021, 0411, 0451, 1321, 1511, 1621, 1981	ITT-NOKIA	0031, 0041, 0051, 0061, 0071, 0081, 0181, 0411, 0451, 0491, 1241, 1291, 1351, 1501, 1601, 1641, 1741, 1921, 1981, 2091, 2331, 2431
ARTHUR MARTIN	0451, 1641	CXC	1171	GENERAL TECHNIC	2681	JVC (VICTOR)	0071, 0721, 1441, 1581, 1591, 1741, 1791
ASA	0411, 0451, 0521, 0781, 0871, 1021, 1081, 1421, 2051, 2091, 2151, 2551	DAEWOO	0101, 1501, 1511, 2611	GENEXXA	0451, 1331	KAISUI	0591, 1321, 1331
ASTRA	1511	DANSAI	0101	GOODMANS	0141, 1101, 1371, 1641, 2301	KAMOSONIC	0601
ATANTIC	0761	DECCA	0271, 0581, 0601, 0971, 1101, 1691	GORENJE	0981, 1061	KARCHER	0591, 0601, 0841, 1091, 1321, 1511, 1561, 2051
ATLANTIC	0761	DECCA (UK)	0271, 0581, 0601, 1101, 1681	GRAETZ	0451	KAWASHO	0761
ATORI	1511	DEGRAAF	0451, 1351	GRANADA	0141, 0451, 0491, 0581, 0601, 1101, 1111, 1351, 1981, 2321	KENDO	0261
AUDIOSONIC	1181, 1321, 1511	DIXI	0991, 1511	GRANADA (UK)	0081, 0141, 0451, 0491, 0581, 1031, 1311, 1521, 1561, 1641	KENNEDY	0021, 0351, 0951, 1981
AUSIND	0491, 1411	DOMEOS	0101	GRUNDIG	0221, 0231, 0471, 0491, 0711, 0741, 1381, 2021, 2041, 2141, 2151	KONKA	2701
AUTOVOX	0091, 0351, 0481, 0491, 0601, 0781, 0951, 1051, 1081, 1391, 1421	DORIC	1031	HANSEATIC	0021, 0121, 0141, 0431, 0591, 1561		
BAIRD	1101, 1351	DUAL	0091, 0601, 1611, 1641, 2101	HANTAREX	0581		
BANG & OLUFSEN	1081	DUAL-TEC	0601, 1511, 1621, 2111	HEMMERMANN	0061		
BASIC LINE	1321, 1331	DUMONT	0261, 0521, 0781, 1021, 1081, 1981, 2121, 2151	HIFIVOX	0331, 0571		
BAUER	1451	DYNATRON	0101	HINARI	0071, 0141, 0451, 1261, 1351, 1511, 1641, 1981, 2011		
BAUR	0041, 0061, 0121, 0131, 0221, 1561	ELBE	1551, 1971, 2031				
BEKO	2491, 2501	ELECTRO TECH	1511				
BLAUPUNKT	0221, 0231, 0241, 0251, 0471, 0741, 2201, 2211, 2221, 2231, 2241, 2261, 2571, 2581	ELEKTRONSKA	0771				
BRANDT	0571, 0651, 0731, 0901, 1821	ELMAN	0261, 1621				
BRIONVEGA	1021, 1051, 1081	ELTA	1511				
BRITANNIA	0761	EMERSON	0921, 1021, 1081, 1121, 1171, 1261, 1301				
BRUNS	0821, 0991, 1021, 1081	ERRES	0101				
BSR	0391, 0691, 1621, 1901, 1981	ETRON	1981				
BUSH	0451, 1241, 1331, 1641, 1741, 2131, 2151	EUROPHON	0261, 0581, 0601, 0771, 1091, 1621, 2001				
BUSH (UK)	0481, 1561, 1611	FENNER	0101, 1511				
CANDLE	0791	FERGUSON	0281, 0371, 0551, 0651, 0781, 0861, 0881, 1131, 1181, 1361, 1461, 1971, 1991, 2281, 2311, 2341				
CENTURY	1021, 1081	FIDELITY	0451, 0761, 2281				
CGE	0491, 0811, 0981, 1401, 1531, 1611, 1621, 1981, 2201, 2251, 2271	FIDELITY (UK)	0561, 0591, 1931, 2281				
		FILMNET	1141				
		FINLANDIA	0451, 2321				

KORTING	0431, 1011, 1021, 1081, 1541	MURPHY	0451, 2091	PRANDONI-PRINCE	SCOTT	1171, 1261	
KTV	0601, 1171	MURPHY (UK)	0081, 1031	0411, 0451, 0491, 0581, 1411	SEG	0261, 0601, 0821, 0991	
LENOIR	0601, 1511	N.E.I.	0101, 0961	PRANDONI-PROMCE	SEI	0641, 0691, 1081, 1301, 1481, 1981	
LEYEO	1181	NAD	1341	0451, 0491, 0581	SELECO	0071, 0101, 0351, 0411, 0451, 0951, 1901, 2061, 2101, 2111	
LG (GOLDSTAR)	0591, 0601, 0761, 0791, 1371, 1491, 1511, 1561, 1621, 1641	NEC	0141, 1711, 1721, 1731	PRIMA			
LIFETEC	2591, 2601, 2611, 2621, 2641, 2651, 2661, 2671, 2681, 2691, 2711, 2761, 2771, 2781	NECKERMANN	0451, 0601, 0981, 1081, 1561, 1931, 1981, 2211, 2231, 2241	PROFEX			
LOEWE OPTA	0121, 0131, 0581, 0611, 1081	NEDIATOR	0101	PROTECH	SENTRA	1601	
LOGIC	1691, 2281	NICAMAGIC	0761	QUELLE	SHARP	0141, 0151, 0191, 1761, 1781	
LOGIK	0551, 1681, 2281	NIKKAI	1101, 1331, 1641, 1701, 2011		SIAREM	0021, 0261, 0581, 0641, 1021, 1081, 1981	
LOWEWE	0831	NOBLIKO	0261, 0491, 0591, 0641, 1381, 1411		SICATEL	1971	
LUMA	0351, 0451, 1901	NOGAMATIC	0571		SIEMENS	0151, 0221, 0231, 0451, 0741, 2011, 2201, 2211, 2221, 2231, 2241, 2261, 2571, 2581	
LUXMAN	0791	NOKIA	0031, 0041, 0051, 0061, 0071, 0081, 0181, 0411, 0451, 0491, 1241, 1291, 1351, 1501, 1601, 1641, 1741, 1921, 1981, 2091, 2331, 2431, 2461, 2791	RADIOMARELLI	0101, 0451, 0661, 0771, 1081	SILVER	1181
LUXMAN STEREO TUNER	0791			RADIONETTE	0031, 2051, 2091	SINGER	0021, 0261, 1021, 1081
LUXOR	0001, 0061, 0181, 0341, 0421, 0451, 0461, 0491, 0601, 0671, 1351, 1371, 1561, 1601, 1911, 1921, 1981	NORDMENDE	0031, 0291, 0331, 0451, 0531, 0541, 0571, 1051, 1131, 1591, 1791, 1811, 1821, 1891, 1941, 2631	RADIOLA	2291	SINUDYNE	0021, 0061, 0101, 0261, 0391, 0641, 0691, 0851, 0941, 1021, 1081, 1241, 1301, 1321, 1481, 1631, 1981
LYCO	1181			RANK	0481, 2151	SKANTIC	0451
MAGNADYNE	0021, 0061, 0261, 0581, 0641, 0771, 1021, 1081, 1621, 1981	OCEANIC	0321, 1651, 1981	RBM	2131, 2151	SOLAVOX	0451, 1641, 2011
MAGNAFON	0261, 0491, 0581, 0591, 0641, 0761, 1091, 2001	OCEANIC (F)	0031, 0061, 0321, 0441, 1661	RBM (UK)	0481	SONOKO	0101, 1181, 1511
MANESTH	0101	ONCEAS	0601	REDIFFUSION	0451, 0661, 1641, 1981, 2331	SONY	0141, 0171, 1121, 1681, 1691, 2751
MARANTZ	0101	ONWA	1171	REDIFFUSION (UK)	0061, 0081, 1031	SOUNDESIGN	1171
MARELLI	1081	ORION	0061, 0391, 0691, 0851, 1211, 1241, 1251, 1301, 1481, 1511, 1681, 1691, 1981, 2371, 2421	REX	0071, 0101, 0351, 0411, 0451, 0951, 1901, 2061, 2101, 2111	SSS	1171
MARK	0101			RFT	0991, 2511	STERN	0071, 0101, 0351, 0411, 0451, 0951, 1901, 2061, 2101, 2111
MATSUI	0061, 0451, 0601, 0691, 1101, 1151, 1241, 1271, 1301, 1511, 1561, 1681, 1691	OSAKA	2011	ROADSTAR	1321, 1511	SUNKAI	0691
MAXIMAL	0071, 1981	OSAKI	1101, 1331, 2011	ROTEL	0151	SUPRA	0791
MCMICHAEL	1281	OSUME	0151	SABA	0291, 0331, 0421, 0451, 0531, 0541, 0571, 0581, 0651, 0731, 0931, 1021, 1071, 1081, 1131, 1791, 1811, 1821, 1891, 1941, 2631	TANDBERG	0161, 0331, 0611, 1021, 1421, 1771, 1791, 2081
MEDION	2591, 2601, 2611, 2621, 2641, 2651, 2661, 2671, 2681, 2691, 2711, 2721, 2761, 2771, 2781	OTTO VERSAND	0021, 0121, 0141, 0221, 0601, 1561, 1741, 1981	SACCS	1971	TANDY	0191, 0451, 1331, 1531
MEMOREX	1511	PAEL	0591, 1411	SAISHO	0451, 0601, 1161, 1241, 1301, 1511, 1671, 1681, 1691	TASHIKO	0141
METZ	0231, 0741, 1001, 1041, 1081, 1481, 2071, 2081	PANASONIC	0031, 0201, 0211, 0451, 0701, 1311, 1751, 1961, 2561, 2741	SALORA	0011, 0041, 0061, 0071, 0341, 0451, 0671, 1291, 1351, 1521, 1561, 1601, 1641, 1911, 1921, 1931, 1981, 2321	TATUNG	0271, 0581, 0601, 0971, 1101, 1681, 1691
MGA	1231	PANORAMIC	2351	SAMBERS	0261, 0491, 0581, 0641, 1091, 1371, 1411, 2001	TCM	2621, 2641, 2711, 2761, 2771, 2781
MICROMAXX	2591, 2621, 2641, 2651, 2711, 2761, 2771, 2781	PATHE MARCONI	0571	SAMSUNG	0101, 0601, 0841, 0981, 1101, 1181, 1371, 1511, 2011	TECHNICS	1311
MINERVA	0221, 0231, 0491, 1381, 2141, 2151	PATHE' CINEMA (F)	0431, 0591, 1621, 1661, 1971	SANYO	0141, 0151, 0401, 0601, 0801, 0821, 0981, 1021, 1101, 1111, 1291, 1351, 1691, 1741, 2051, 2091, 2551	TECHWOOD	0791
MISTRAL	2281	PAUSA	1511			TEKNIKA	1171, 1231, 1261
MITSUBISHI	0141, 0201, 0231, 0661, 1191, 1201, 1231, 1671, 1691, 1741	PAUZA	1511			TELE	1141
MIVAR	0491, 0501, 0581, 0591, 0761, 0771, 1371, 1431, 2031	PERDIO	0891, 1101			TELEAVIA	0571, 0651, 0731, 1821
MTC	0791	PHILCO	0021, 0491, 0811, 0981, 1021, 1081, 1401, 1611, 1621, 1751, 2201, 2251, 2271, 2451, 2471			TELEFUNKEN	0291, 0301, 0311, 0551, 0731, 1131, 1471, 1591, 1791, 1801, 1811, 1821, 1991, 2161, 2171, 2181, 2191, 2201, 2251, 2271, 2521, 2631
MULTITECH	0261, 0581, 0601, 0641, 0981, 1321, 1511	PHILIPS	0101, 0361, 0591, 0621, 0681, 0751, 0761, 1021, 1081, 1281, 2031, 2281, 2291, 2431, 2441, 2511, 2731	SBR	0681, 0751, 1281, 2281	TELETECH	1511
		PHOENIX	1081	SCHAUB LORENZ	0451	TEMPEST	2381, 2391, 2401, 2411
		PHONOLA	0751, 1081	SCHNEIDER	0021, 0071, 0091, 0451, 0511, 0591, 0601, 0751, 1321, 1361, 1621, 1641, 2101, 2111, 2291	TENSAI	1331, 2091
		PIONEER	0291, 0451, 1341, 1821			TEXET	0601

THOMSON	0331, 0481, 0531, 0571, 0631, 0651, 0731, 0901, 1241, 1571, 1591, 1791, 1811, 1821, 1891, 1941, 2531	STS 1466 TANDBERG 1366 TELE 1436 TELE +1 1436 TELESERVICE 1406, 1476 TUDI 1376 UNITED CABLE 1416 ZENITH 1406	MASPRO 0016, 0116, 0256, 0956 MEDION 1326, 1346 METZ 0966 MICROMAXX 1326, 1346 MITSUBISHI 0966 MORGANS 0596 MURATTO 0406 NEC 0286, 0316, 0766, 0786, 0836 NETWORK 0046 NIKKO 1136, 1146 NOKIA 0066, 0126, 0176, 0446, 1156, 1166, 1336 NORSAT 0786 OTTO VERSAND 0966 PACE 0046, 0176, 0296, 0936, 0956, 1306, 1566, 1576 PACE MSS 0946 PACE SKY DIGITAL BOX (UK) 1526 PALCOM 0616, 0686, 0706 PALSAT 0396 PALTEC 0706 PANASONIC 0806, 1306 PANSAT 1076 PHILIPS 0326, 0346, 0476, 0956, 1126, 1186, 1196, 1206, 1216, 1306, 1316 PROSAT 1176 PTT TELECOM 0306, 0896 QUELLE 0966 RADIX 1056 REDIFFUSION 0316, 0786 RFT 1186, 1196, 1206, 1216 SAGEM 1256, 1546 SAKURA 0566, 0816 SALORA 0066, 0126, 0136, 0446, 0456, 0486, 0496, 0576 SAMSUNG 0746, 0756 SAT 0406 SATCOM 0896 SATECO 0646 SECTOR 1266 SEDEA 1096 SENTRA 0416 SIEMENS 0896, 0966 SINTRACK 0906 SKYLAB 0476 SKYSCAN 0876 SONY 0736, 0946 STELLA 0306 STRONG 0156, 0396, 1036, 1086 STV 0636 TANDBERG 1116 TANDY 0916 TANTEC 0616 TATUNG 0516, 0546 TECHNISAT 0086, 0096, 0526, 0556, 1056 TELECOM 0306 TELEMAX 0586 THORN-FERGUSON 0046, 0076, 0176, 0186, 0956 TOSHIBA 0946 TPS (FRANCE) 1546 TRIAD 0406	UNIDEN 0036, 0216, 0676, 0716, 0726 US ELECTRONICS 0886 VORTEC 0756, 1036, 1076 VTECH 0436 WINERSAT 0246 WISI 0056, 0356, 0376, 0386, 0406, 0656, 1056, 1156 WOLSEY 0916 XCOM MULTIMEDIA 1556 XSAT (FRANCE) 1556 ZEHNDR 0266, 0406 ZENDER 0406
THORN	0741, 0861, 2091, 2251, 2271, 2281			
THORN-FERGUSON	0281, 0371, 0551, 0651, 0781, 0861, 0881, 1131, 1181, 1361, 1461, 1971, 1991, 2281			
TMK	0141, 0791, 1471			
TOSHIBA	0141, 0381, 0481, 1221, 1271, 1701, 1741, 1851, 2151, 2801, 2811			
TRANS CONTINENS	0451			
TRISTAR	2281			
TRIUMPH	0481, 0581, 2121			
UHER	0431, 0451, 0481, 0491, 0511, 1311, 1541			
ULTRAVOX	0021, 0261, 0591, 1021, 1081, 1981			
UNIVERSUM	1181, 2051			
UNIVOX	0971			
VEGAVOX	0811			
VEXA	0101, 1511			
VIDEOTON	2481			
VORTEC	0101, 0651			
VOXSON	0411, 0451, 0491, 1021, 1081			
WALTHAM	0451			
WATSON	0431, 2201, 2241			
WATT RADIO	0021, 0061, 0261, 0591, 0641, 0761, 1091, 1971, 1981, 2001			
WEGA	0141, 1081, 1981			
WEGA COLOR	1021			
WELTBlick	0101			
WESTON	1621			
WHITE WESTINGHOUSE	0101, 0261, 0431, 0591, 0761, 1401, 1541			
YOKO	0601, 1511			
ZANUSSI	0071, 0101, 0351, 0411, 0451, 0951, 1901, 2061, 2101, 2111			
ZOPPAS	0451			
CABLE TV				
CABLETIME	1446, 1456, 1476			
CLYDE CABLEVISION	1426			
FILMNET	1396, 1436			
FRANCE TELECOM	1386			
GEC	1426			
JERROLD	1416			
MOVIE TIME	1466			
NSC	1466			
PHILIPS	1386			
PIONEER	0006			
SAMSUNG	1496			
SCIENTIFIC ATLANTA	1486, 1506			
STARCOM	1416			
AKAI	1276			
ALBA	0826, 1276			
AMSTRAD	0166, 0796, 1016, 1026, 1296			
ANKARO	0476			
AST	0406			
ASTRA	0126			
BARCOM	0476			
BLAUPUNKT	0966			
BMC SATELLITE	0106			
BRITISH TELECOM	1276			
BUSH	0826			
BUSH (UK)	0956			
CAMBRIDGE	0196, 1276			
CANAL PLUS (FRANCE)	1536			
CHAPARRAL	0016, 0696, 1006			
COLUMBUS	0616			
CONNEXIONS	0306, 0426			
DISCUS ELIPSE	0856, 0866			
DISKXPRESS	0426, 0476			
DRAKE	1516			
ECHOSTAR	0226, 0236, 0606, 0626, 0666, 0926, 0996, 1046, 1056, 1066, 1106			
ELTA	1286			
ELTA SAT	0146			
EURODEC	1226, 1236, 1246			
FERGUSON	0046, 0176, 0186, 0296, 0846, 0956, 1306			
FINLUX	0976			
FRACARRO	0026, 0536, 0776			
FUBA	0476, 0616, 0636, 1056			
GIUCAR RECORD	0206, 0336			
GRUNDIG	0176, 0946, 0956, 0966			
HIGH PERFORMANCE	0916			
HIRSCHMANN	0756, 0966			
HITACHI	0446, 0516, 0706, 0946			
ICX INTERNATIONAL	0886			
ITT	0066, 0126, 0176, 0446, 1156			
ITT/NOKIA	0066, 0126, 0176, 0446, 1156			
JEEMON	0146			
JERROLD	0846, 0986			
JOHANSSON	0246			
JVC	1276			
KATHREIN	0116, 0266, 0276, 0366, 1586			
KOSMOS	0266			
KYOSTAR	1036, 1086			
LENG	0246			
LIFESAT	1326, 1346, 1356			
LUXOR	0126, 0136, 0446, 0466, 0506, 1156			
MACAB	0356			
SATELLITE TUNER				
VCR				
AIWA	0042, 0352, 0432			
AKAI	0042, 0422, 0492, 0582, 0612, 0642, 0652, 0762, 0912			
ALBA	0002, 0112, 0282, 0332, 0342, 0972			
AMSTRAD	0322, 0432, 0452			
ANITECH	0002			
ANITSCH	1002			
ASA	0012, 0052			
AUDIOSONIC	0002			
BAIRD	0042, 0282, 0492			
BANG & OLUFSEN	0042			
BAUR	0052, 0062, 0812			
BLAUPUNKT	0062, 0092, 0252, 0462, 0672, 0992			
BRIONVEGA	0032			
BUSH	0002, 0282, 0332, 0342, 0512, 0972			
BUSH (UK)	0812			
CAPEHART	0112			
CGE	0042, 0432, 0762			
CRAIG	0072, 0482			
CROWN	0112, 0282, 0622			
DAEWOO	0112, 0282, 0622			
DANSAI	0012			
DAYTRON	0112			
DECCA	0042, 0052, 0432, 0942			
DECCA (UK)	0052			
DEGRAAF	0052, 0132, 0432, 0532, 0602			
DIXI	0442			
DUAL	0042, 0632			
DUMONT	0052, 0432, 0532			
DYNATECH	0432			
DYNATRON	0012			
ELBE	0122			
ELIN	0072			
EMERSON	0012, 0162, 0202, 0432, 0512, 0522			
ERRES	0012			
FERGUSON	0042, 0712, 0722, 0852, 0902, 1012, 1022, 1082			
FIDELITY	0432			
FINLANDIA	0052, 0532			
FINLUX	0012, 0042, 0052, 0082, 0262, 0382, 0432, 0462, 0492, 0532, 0572, 0602, 0912			
FIRST LINE	0002, 0912			
FISHER	0162, 0482, 0532, 0542, 0572, 0592			
FORMENTI-PHOENIX	0012, 0052			

FRONTECH	0112	MITSUBISHI	0052, 0062, 0142, 0912, 0922	SANSUI	0042, 0142	HITACHI	0198
FUNAI	0432			SANYO	0482, 0532, 0562, 0572	JVC	0088, 0178
GBC	0002	MTC	0072, 0432			KENWOOD	0148
GEC (UK)	0022, 0052	MULTITECH	0002, 0052, 0062, 0282, 0432	SBR	0052, 0152, 0182	LG (GOLDSTAR)	0228
GELOSO	0002	MURPHY	0432	SCHAUB LORENZ	0022, 0042	MAGNAVOX	0128
GENERAL TECHNIC	1172	N.E.I.	0012, 0052	SCHNEIDER	0002, 0012, 0052, 0072, 0432	MITSUBISHI	0138
GOODMANS	0002, 0072, 0282, 0432, 0502	NATIONAL	0462	SEG	0002, 0072	ONKYO	0068, 0128
GOODMANS (UK)	0002	NEC	0042, 0122, 0142	SEI-SINUDYNE	0442	PANASONIC	0028
GRAETZ	0022, 0042	NECKERMANN	0032, 0042, 0052, 0072, 0092, 0202, 0522, 0572, 0762, 0812	SELECO	0042	PHILIPS	0098, 0128
GRANADA	0052, 0132, 0532, 0572			SENTRA	0112	PIONEER	0108, 0118
GRANADA (UK)	0052, 0092, 0462, 0602, 0812, 0822	NIKKAI	0112	SHARP	0132, 0502, 0702	PROSCAN	0158
GRUNDIG	0052, 0062, 0092, 0232, 0252, 0262, 0752, 0802	NOBLIKO	0092	SHINTOM	0002	RCA	0158
HANSEATIC	0052, 0812	NOKIA	0022, 0032, 0042, 0072, 0292, 0492, 0532, 0572, 0762, 1152	SIEMENS	0062, 0092, 0252, 0572	SAMSUNG	0078
HARMAN/KARDON	0122, 0922			SINUDYNE	0052, 0382, 0442, 0932	SHARP	0038
HCM	0002	NORDMENDE	0042, 0102, 0142, 0192, 0222, 0242, 0392, 0402, 0632, 0732, 0742, 0762, 0782, 0792, 0832, 0842, 0872	SONOKO	0282	SONY	0018
HINARI	0002, 0202, 0412, 0442, 0522					TECHNICS	0028
HITACHI	0042, 0172, 0292, 0432, 0602, 0662, 0812, 1022	OLYMPUS	0462	STS	0602	THOMSON	0168
IMPERIAL	0072, 0432	OPTONICA	0132, 0502	SYLVANIA	0432, 0912	TOSHIBA	0048, 0128
INGERSOL	0442	ORION	0162, 0202, 0312, 0442, 0512, 0522, 0982	SYMPHONIC	0432, 0912	YAMAHA	0008, 0028, 0098
INNO HIT	0002, 0052, 0072			TANDBERG	0062, 0162, 0522, 0932	ZENITH	0128
INNOVATION	1142, 1162, 1172	OSAKA	0432	TASHIKO	0132, 0432		
INTERFUNK	0022, 0052	OSAKI	0002, 0012, 0432	TATUNG	0042, 0052, 0432, 0922		
IRRADIO	0002, 0012	OTTO VERSAND	0052, 0062, 0812	TCM	1142, 1162, 1172		
ITT	0022, 0032, 0042, 0072, 0292, 0492, 0532, 0572, 0762	PANASONIC	0022, 0212, 0462, 0672, 0992, 1092, 1102, 1182	TEAC	0042, 0432		
ITT-NOKIA	0022, 0032, 0042, 0072, 0292, 0492, 0532, 0572, 0762	PENTAX	0172, 0602	TECHNICS	0462		
JENSEN	0042	PERDIO	0432	TEKNIKA	0012, 0432		
JVC (VICTOR)	0042, 0102, 0142, 0272, 0742, 0762, 0782, 0902	PHILCO	1062	TELEFUNKEN	0042, 0192, 0632, 0732, 0742, 0762, 0782, 0882, 0892		
KARCHER	0052, 0072, 0812	PHILIPS	0052, 0082, 0092, 0152, 0182, 0362, 0372, 0382, 0472, 0502, 1072	TEMPEST	1032, 1042, 1052		
KENDO	0492	PHONOLA	0052, 0152	TENOSAL	0002		
KENWOOD	0042, 0142, 0572	PILOT	0012	THOMSON	0042, 0102, 0142, 0192, 0402, 0632, 0762		
LG (GOLDSTAR)	0012, 0122, 0812, 0952	PIONEER	0052, 0142, 0372, 0472	THORN	0042, 0902		
LIFETEC	1142, 1162, 1172	PORTLAND	0112	THORN-FERGUSON	0042, 0222, 0302, 0712, 0722, 0742, 0762, 0852, 0862, 0872, 0902		
LLOYD	0432	PROLINE	0432				
LOEWE OPTA	0052, 0092, 0152	PYE	0052, 0152	TMK	0522		
LOGIK	0002, 0072, 0442	QUARTZ	0572	TONSAI	0002		
LUMA	0162	QUELLE	0012, 0032, 0042, 0052, 0062, 0072, 0092, 0202, 0462, 0522, 0942	TOSHIBA	0042, 0622, 0912		
LUXOR	0492, 0572, 0812			TOTEVISION	0012, 0072		
M ELECTRONIC	0432	RADIONETTE	0022	TRIUMPH	0922		
MAGNADYNE	0052	REALISTIC	0012, 0072, 0132, 0432, 0482, 0502, 0532, 0572	UHER	0042, 0072		
MAGNASONIC	0572			ULTRAVOX	0032		
MANESTH	0012			UNITECH	0072		
MARANTZ	0012, 0052, 0092, 0122, 0502	RET	1072	VECTOR RESEARCH	0122		
MARK	0012	REX	0042, 0742, 0782	VIDEON	1162, 1172		
MARTA	0012	RICOH	0952	WELTBlick	0012		
MATSUI	0012, 0442, 0512, 0522, 0812, 0972	SABA	0042, 0142, 0192, 0222, 0242, 0392, 0632, 0732, 0742, 0762, 0772, 0782, 0792, 0872	WHITE WESTINGHOUSE	0032		
MEDION	1142, 1162, 1172			XENON	0162		
MEMOREX	0012, 0132, 0432, 0482, 0532, 0572	SAISHO	0162, 0202, 0292, 0442, 0512, 0522, 0972	YAMAHA	0042, 1202		
METZ	0062, 0092, 0932			YOKO	0012, 0062, 0072		
MGA	0912						
MICROMAXX	1142, 1162, 1172	SALORA	0192, 0572, 0812, 0822, 0912				
MINERVA	0062, 0092, 0252	SAMSUNG	0052, 0072, 0622, 0652, 1192				
MINOLTA	0172, 0602						

DVD RECORDER

PANASONIC	0238, 0248, 0258
PHILIPS	0208
PIONEER	0278, 0288, 0298
TOSHIBA	0268
YAMAHA	0208

LD PLAYER

AIWA	0137
FUNAI	0137
HITACHI	0047
MAGNAVOX	0077
PANASONIC	0027
PIONEER	0037
RCA	0067
REALISTIC	0137
SAMSUNG	0017, 0087
SONY	0057, 0097, 0107, 0117
VICTOR	0127
YAMAHA	0007

CD PLAYER

ACCUPHASE	0315
ADC	0865
ADCOM	0785, 1015
AKAI	0115, 0125, 0725, 0735, 0745, 0935, 1155
ARCAM	1875
ARCAM-ROTEL	0165
AUDIO-TECHNICA	0835
AUDIOSONIC	0155
AIWA	1105, 1235, 1245, 1765, 1915, 1935
BSR	0875
CALIFORNIA AUDIO LAB	1075
CARRERA	0555, 0875
CARVER	0825, 1415
CYRUS-ROTEL	0205
DENON	0045, 0955, 1045, 1595, 1795, 1805
DUAL	1005
ELIN	0185
EMERSON	1015, 1285, 1675
FISHER	0105, 0595, 0605, 0825, 1165, 1175

DVD PLAYER

AKAI	0058
AIWA	0218
DENON	0188

GENEXXA	0525, 0825, 0855, 0875, 0995, 1265, 1285, 1345, 1355, 1485, 1575, 1675, 1715, 1825	ROTEL	1875	PIONEER	0034, 0114
GRUNDIG	0175	SABA	1005	SONY	0094, 0104
HARMAN KARDON		SAE	1875	YAMAHA	0004, 0014
	0325, 0495, 0565, 1135, 1145, 1155	SALORA	0185		
HITACHI	0065, 0585, 0685, 0945, 1005, 1015, 1225, 1545	SANSUI	0415, 0965, 0975, 0985, 1255, 1675, 1875		
INNOVATION	1995, 2005, 2015	SANYO	0625, 0825, 0845, 0915		
ITT-NOKIA	0185	SCHNEIDER	1845, 1855		
JVC (VICTOR)	0385, 0395, 0455, 0575, 0585	SCOTT	1285, 1675		
KARCHER	0485	SHARP	0025, 0035, 1025, 1115, 1275, 1635, 1785, 1815, 1825, 1835		
KENWOOD	0025, 0055, 0145, 0215, 0595, 0675, 0695, 0705, 0715, 0925, 1355, 1485, 1575, 1675, 1715, 1825	SHERWOOD	1275, 1445		
KORTING	0175	SIEMENS	1085		
LG (GOLDSTAR)	0555, 1185, 1195, 1585	SIGNATURE	1155		
LIFETEC	2015	SONY	0345, 0355, 0365, 0375, 0865, 1685, 1695, 1705, 1715, 1725, 1735, 1745		
LIGHT CONTROL	1155, 1645, 1655, 1665	SYLVANIA	1875		
LINN	0165, 1875	TANDBERG	1885		
LUXMAN	0265, 0275, 0795, 0805, 1295, 1305, 1555, 1925	TASHIKO	1525		
LUXOR	0185, 1895, 1905	TCM	1985, 2015		
MAGNAVOX	1865, 1875	TEAC	0235, 0245, 1275, 1365, 1375, 1395, 1435, 1465, 1475		
MARANTZ	0165, 0175, 0545, 0665, 1275, 1335, 1405, 1505, 1875, 1955	TECHNICS	0465, 0475, 1065, 1075, 1625		
MATSUSHITA	1095, 1605	TELEFUNKEN	1005		
MCS	0535	THETA DIGITAL	1865		
MEDION	0075, 1995, 2005, 2015	THOMSON	1005		
MEMOREX	0525, 1015, 1265, 1275, 1285, 1675	TOSHIBA	0755, 0765		
MGA	1125	VECTOR RESEARCH			
MICROMAXX	2015		0555, 0865		
MISSION	0165, 1875	YAMAHA	0005, 0015, 0085, 0345, 0615, 0655, 0815, 0835, 0895, 1815		
MITSUBISHI	1125, 1205				
NAD	0135, 0255, 0285, 0295, 0305, 0345, 0755, 0765, 1315, 1325				
NAKAMICHI	0635, 0645, 1565				
NEC	0405, 0535, 0775, 0785				
NECKERMAN	0155, 0225				
NIKKO	0835, 1165				
OCEANIC	0185				
OKANO	0155, 0225				
ONKYO	0885, 1385, 1425, 1455, 1515				
PANASONIC	1055, 1075, 1615, 1625				
PHILIPS	0165, 0175, 0195, 1865, 1875				
PIONEER	0095, 0335, 0425, 0435, 0445, 0525, 0855, 1035, 1945				
PROTON	0905, 1875				
QUASAR	1075				
RADIOLA	1845, 1855				
RADIOTONE	0485				
REALISTIC	0825, 1015, 1265, 1275, 1285, 1575				

CD RECORDER

HITACHI	0304
JVC	0334
MARANTZ	0314, 0324
PHILIPS	0274
PIONEER	0284, 0294
YAMAHA	0244

MD RECORDER

KENWOOD	0214
PIONEER	0254
SHARP	0264
SONY	0224
YAMAHA	0024, 0224, 0234, 0344

TAPE DECK

AKAI	0124
DENON	0204
GRUNDIG	0134
HARMAN	0044
JVC	0194
KENWOOD	0164
KORTING	0134
LUXMAN	0054, 0064, 0074, 0084
MARANTZ	0134, 0144
NAD	0174
ONKYO	0184
PHILIPS	0134, 0144, 0154