

 
REMOTE CONTROL FEATURES

In addition to controlling this unit, the remote control can also operate other A/V components made by YAMAHA and other manufacturers. To control other components, you must set up remote control with the appropriate remote control codes.

Control area

■ Controlling this unit

The shaded areas below can be used to control this unit when the AMP mode is selected. Press AMP to activate the AMP mode.

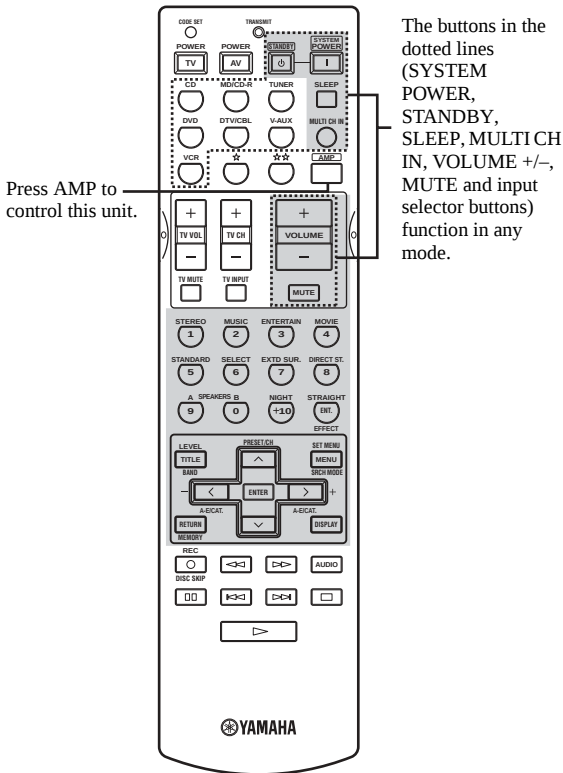

■ Controlling other components

 
The shaded areas below can be used to control other components. Each button has a different function depending on the selected components. Select the component you want to control by pressing an input selector button.

☆☆ buttons and the input selector buttons switch the function of the component control area below.

* Use the ☆☆☆ buttons to control other components regardless of whether they are connected to this unit.

Component control area

You can control up to 9 different components by setting appropriate remote control codes (see page 66).

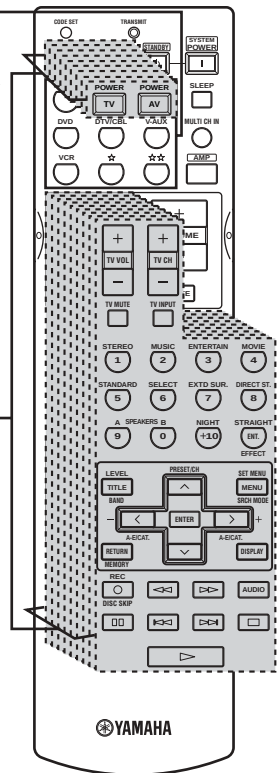

Setting remote control codes

You can control other components by setting the appropriate remote control codes. Codes can be set up for each input area. For a complete list of available remote control codes, refer to “LIST OF REMOTE CONTROL CODES” at the end of this manual.

The following table shows the default component (Library: component category) and the remote control code for each area.

Remote Control Code Default Settings

Input area	Library (component category)	Manufacturer	Default YAMAHA code
CD	CD	YAMAHA	0005
MD/CD-R	MD	YAMAHA	0024
TUNER	TUNER	YAMAHA	0023*1 0033*2
DVD	DVD	YAMAHA	0098
DTV/CBL	—	—	—
V-AUX	—	—	—
VCR	—	—	—
☆	DVR	YAMAHA	0208
☆☆	—	—	—

 
*1 U.K. and Europe models

*2 Other models

Notes

You may not be able to operate your YAMAHA component even if a YAMAHA remote control code is initially set as listed above. In this case, try to set other YAMAHA remote control code(s).

- 1 Press an input selector button or ☆/☆☆ to select the component you want to set up.

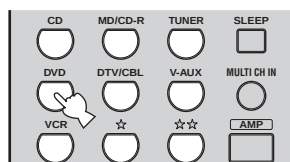


- 2 Press CODE SET using a ballpoint pen or similar object.

The TRANSMIT indicator on the remote control blinks twice.



- 3 Press the numeric buttons (0 to 9) to enter the four-digit remote control code for the component to be used.

 Refer to “LIST OF REMOTE CONTROL CODES” at the end of this manual.

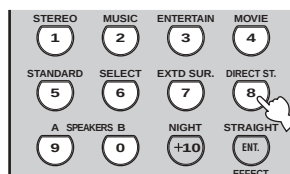


The TRANSMIT indicator on the remote control blinks twice, and the remote control code for the selected component is set.

Notes

- If the manufacturer of your component has more than one code, try each of them until you find the correct one.
- If you wait for more than 30 seconds during step 3, the setup process is canceled. If this happens, start over from step 2.

Controlling other components

 Once you set the appropriate remote control codes, you can use this remote to control your other components. Note that some buttons may not correctly operate the selected component. Use the input selector buttons to select the component you want to operate. The remote control automatically switches to the appropriate control mode for that component.

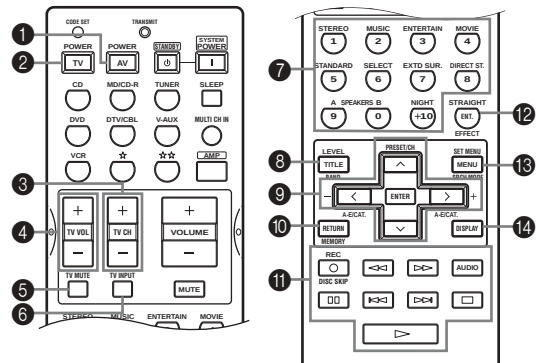

	DVD player	VCR	Digital TV/ Cable TV	CD player	MD/CD recorder	Tuner*4
1 AV POWER	Power *1	Power *1	VCR power *3	Power *1	Power *1	Power *1
2 TV POWER	TV power *2	TV power *2	TV power	TV power *2	TV power *2	TV power *2
3 TV CH +	TV channel up *2	TV channel up *2	TV channel up	TV channel up *2	TV channel up *2	TV channel up *2
TV CH -	TV channel down *2	TV channel down *2	TV channel down	TV channel down *2	TV channel down *2	TV channel down *2
4 TV VOL +	TV volume up *2	TV volume up *2	TV volume up	TV volume up *2	TV volume up *2	TV volume up *2
TV VOL -	TV volume down *2	TV volume down *2	TV volume down	TV volume down *2	TV volume down *2	TV volume down *2
5 TV MUTE	TV mute *2	TV mute *2	TV mute	TV mute *2	TV mute *2	TV mute *2
6 TV INPUT	TV input *2	TV input *2	TV input	TV input *2	TV input *2	TV input *2
7 1-9, 0, +10	Numeric buttons	Numeric buttons	Numeric buttons	Numeric buttons	Numeric buttons	Preset stations (1-8)
8 TITLE	Title					
9 PRESET/CH u	Up	VCR channel up				Preset up (1-8)
PRESET/CH d	Down	VCR channel down				Preset down (1-8)
j	Left					Preset down (A-E)
i	Right					Preset up (A-E)
ENTER	Enter					
0 RETURN	Return					
A REC/ DISC SKIP	Disc skip (player)	Rec	VCR rec *3	Disc skip	Rec (MD)	
p	Play	Play	VCR play *3	Play	Play	
w	Search backward	Search backward	VCR search backward *3	Search backward	Search backward	
f	Search forward	Search forward	VCR search forward *3	Search forward	Search forward	
AUDIO	Audio					
e	Pause	Pause	VCR pause *3	Pause	Pause	
b	Skip backward			Skip backward	Skip backward	
a	Skip forward			Skip forward	Skip forward	
s	Stop	Stop	VCR stop *3	Stop	Stop	
B ENT.	Title/Index	Enter	Enter	Index	Index	
C MENU	Menu					
D DISPLAY	Display		Display	Display	Display	

*1 This button functions only when the original remote control of the component has a POWER button.

*2 These buttons can operate your TV without switching the input if the remote control code is set in DTV/CBL or ☆☆.

When the remote control code for your TV is set up in both the DTV/CBL and ☆☆ areas, priority is given to the signal in the DTV/CBL area.

*3 These buttons can operate your VCR without switching the input to VCR if the remote control code is set in VCR.

*4 The U.K. model is not equipped with the tuner reception function.

Switching library codes

You can select the unit you want to operate with the remote control by entering the library code.

1 Press CODE SET using a ballpoint pen or similar object.

The TRANSMIT indicator on the remote control blinks twice.



2 Enter the code number "9991" or "9992" (see the table below).

The TRANSMIT indicator on the remote control blinks twice, and the library code is changed.

AMP library code (remote control setting)	Function	Remote control ID (unit setting: see page 64)
9991	To operate this unit using the default code.	ID1 (initial setting)
9992	To operate this unit using an alternative code.	ID2

 
When using multiple YAMAHA receivers/amplifiers, you may be able to operate the other components simultaneously with the default code setting. In this case, set one of the alternative codes to operate this unit separately.

Note

You must also make settings for the receiver/amplifier.

Clearing set up remote control codes

1 Press an input selector button or ☆/☆☆ to select the component control for which you want to clear the remote control code.

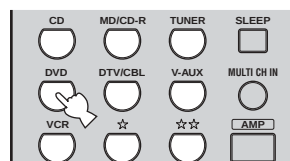

2 Press CODE SET using a ballpoint pen or similar object.

The TRANSMIT indicator on the remote control blinks twice.



3 Enter the code number "0000".

The TRANSMIT indicator on the remote control blinks twice, and the remote control code for the selected component is cleared.

- If you do not press any button within 30 seconds after step 2, the clearing process is canceled. If this happens, start over from step 1.
- You can clear all setup remote control codes at once by entering the code number "9990".

LIST OF REMOTE CONTROL CODES

TV		ELIN	1001	LEYCO	1001	PENNY	0161, 0361, 0521,
A TANDY	0941	ELTA	0331	LG (GOLDSTAR)	0031, 0121,		0531, 0621, 0731,
ABEX	1151	EMERSON	0001, 0021, 0061,		0351, 0411, 0731,		0751, 0761, 0781,
ADMIRA	1141		0071, 0081, 0091,		0741, 0861, 0941,		0791, 0861, 0931,
ADVENTURA	1131		0111, 0811, 0821,		0971, 1001, 1031,		0941, 1031, 1041,
AIKO	1121		0831, 0841, 0851,		1111, 1151		1111, 1151, 1161
AIWA	1481		0861, 0871, 0901,	LIESENK & TTER	1001	PEONY	1561, 1621
AKAI	0331, 1101, 1111		0921, 0941, 0981,	LLOYTRON	0941	PHILCO	0361, 0581, 0591,
ALBA	0431		1011, 1031, 1051,	LOEWE	1001		0601, 0611, 0631,
ALLERON	1091	ENVISION	1081, 1091	LOGIK	0991, 1771		0961, 1031, 1111
AMBASSADOR	1081		0361, 1111	LUXMAN	0351, 0971	PHILIPS	0101, 0401, 1001
AMSTRAD	0481, 1081	ERRES	1001	LXI	0101, 0621, 0761,	PHONOLA	1001
ANAM	0251, 1041, 1051,	ETRON	0331		0861, 0981	PILOT	0941, 1031, 1111
	1061, 1071	FERGUSON	1001	MAGNAVOX	0101, 0341, 0391,	PIONEER	0511, 0551, 0871
ANAM NATIONAL	1041	FINLUX	1001		0401, 0411, 0421,	PORTLAND	0941, 1031, 1121
AOC	0361, 1021, 1031,	FISHER	0171, 0801, 0981		0581, 0591, 0601,	PRICECLUB	0931
	1111, 1161	FORMENTI	0441		0611, 0631, 0661,	PRISM	0751
ARCHER	1161	FORMONTI	1001		0961, 1111	PROSCAN	0761
AUDIOSONIC	1001	FORTRESS	1141	MAJESTIC	0991	PROTECH	1001
AUDIOVOX	1051, 1161	FUJITSU	1091	MARANTZ	0101, 0221, 0361,	PROTON	0501, 0861, 0941,
BAUER	0441	FUNAI	1051, 1091, 1501,		1001, 1111		1021, 1161
BAUR	1001		1521	MARK	1001	PULSAR	0891
BEIJING	1511, 1551, 1561	FUTURETECH	1051	MATSUI	0271, 0331, 1001	PULSER	1031
BELCOR	1031	GE	0131, 0161, 0201,	MEDIATOR	1001	QUASAR	0251, 0751, 1041
BELL & HOWELL	0981, 0991		0751, 0761, 0771,	MEGATRON	0691, 0861, 1161	UELLE	1001
BEON	1001		0781, 0791, 0811,	MEI	1011	RADIO SHACK	0541, 0941,
BRADFORD	1051		0861, 1041	M-ELECTRONIC	1001		1031, 1051,
BROCKWOOD	1031	GEC	0271, 1001	MEMOREX	0331, 0571, 0861,		1151
BROKSONIC	1161	GEMINI	0391		0971, 0981, 0991,	RADIOLA	1001
BUSH	1001	GENEXXA	0431		1771	RCA	0051, 0141, 0151,
CANDLE	0351, 0361, 0961,	GIBRALTER	0891, 1031, 1111	METZ	1791, 1831, 1891,		0181, 0411, 0491,
	0971, 1111, 1131	GOODMANS/TASHIKO	0271, 0661, 1001		1901, 1911, 1921,		0531, 0761, 0771,
CAPEHART	1021				1931, 1941		0871, 1031
CARVER	0101	GRANADA	1001	MGA	0361, 0561, 0571,	REALISTIC	0541, 0861, 0941,
CATHAY	1001	GRUNDIG	1781, 1791, 1801,		0861, 1031, 1111		0971, 0981, 1031,
CELEBRITY	0951		1811, 1821, 1831,	MIDLAND	0751, 0761, 0891,		1051, 1111, 1151
CENTURION	0411		1841, 1851, 1861,		0941, 1151	RHAPSODY	1011
CHANGHONG	1541, 1551, 1561,	GUNPY	1871, 1881	MITSUBISHI	0221, 0321, 0561,	R-LINE	1001
	1621		1051, 1091		0571, 0661, 0861,	RUNCO	0891, 1111
CITIZEN	0351, 0361, 0921,	H/K	0721		1031, 1101, 1381	SAISHO	0331, 1081
	0931, 0941, 0961,	HALLMARK	0861	MONTGOMERY	1091	SAMPO	0361, 0941, 1021,
	0971, 1111, 1121,	HANSEATIC	1001	MOTOROLA	1041, 1141		1111, 1151
	1131	HARVARD	1051, 1061	MTC	0351, 0361, 0881,	SAMSUNG	0331, 0341, 0351,
CLAIRTONE	1011	HINARI	1001, 1091		0931, 0971, 1011,		0361, 0861, 0931,
CLARIVOX	1001	HITACHI	0181, 0351, 0671,		1031, 1111		0941, 0971, 1001,
CONCERTO	0351, 0971		0681, 0691, 0701,	MULTITECH	0881, 1051		1031, 1111, 1151
CONROWA	1751		0711, 0871, 0941,	NAD	0551, 0621, 0861	SAMSUX	0941
CONTEC	0901, 0911, 1011,		0971, 1351	NEC	0241, 0351, 0361,	SANYO	0171, 0231, 0271,
	1051	HYPSON	1001		0661, 0971, 1031,		0661, 0801, 0911,
CORANDO	0941	IMA	1051		1111, 1321, 1711		0981, 1231, 1251,
CRAIG	0251, 1051	INDIANA	1001	NECKERMANN	1001		1261
CROWN	0941, 1051	INFINITY REFERENCE	0101	NEI	1001	SBR	1001
CURTIS MATHES	0161, 0361,		0101	NIKKAI	0271, 0431, 1001,	SCHEIDER	1001
	0931, 0941,	INTERFUNK	1001		1151	SCIMITSU	1031
	0981, 1111	ITT	0611	NIKKO	0861, 1111, 1121	SCOTCH	0861
CXC	1051	JANEIL	1131	NOVABEAM	0721	SCOTT	0831, 0861, 0941,
DAEWOO	0291, 0301, 0331,	JBL	0101	NTC	1121		1031, 1051, 1091
	0721, 0941, 1001,	JCB	0951	ONWA	1051	SEARS	0101, 0161, 0171,
	1031, 1121, 1191,	JENSEN	0311	OPTIMUS	0551		0351, 0481, 0521,
	1531, 1581, 1591,	JINXING	1531, 1541, 1551,	OPTONICA	0541, 1141		0621, 0761, 0801,
	1601		1561, 1571, 1621,	ORION	0831, 1001		0861, 0971, 0981,
DANSAI	1001		1631, 1641, 1651,	OSAKI	0271, 1151		1091
DAYTRON	0941, 1031		1691, 1731	OTTO VERSAND	1001	SHANGHAI	1561, 1681
DECCA	0271, 1001	JVC	0261, 0281, 0641,	PANASONIC	0101, 0191, 0251,	SHARP	0461, 0471, 0541,
DIXI	0331, 1001, 1071		0651, 0661, 0841		0751, 1041, 1311,		0661, 0911, 0941,
DUMONT	0891, 1031	KAWASHO	0901		1371, 1431		1141
DYNATECH	0881	KAYPANI	1021	PANDA	1541, 1721	SHOGUN	1031
ELECTROBAND	0951, 1011	KENWOOD	0361, 1031, 1111			SIGNATURE	0991, 1771
ELECTROHOME	0941	KLOSS	0631, 0721, 1131			SIMPSON	0581, 0961
ELECTRON	0941	KTV	0921, 0941, 1011,			SOLAVOX	1151
			1051, 1111			SONOKO	1001

SONTEC	1001	BBT	0076	STANDARD COMPONENTS		CRAIG	0832, 0842, 0852, 0912, 0922
SONY	0371, 0451, 0661, 0841, 0951, 1281, 1441	CABLETIME	0166		0186	CURTIS MATHES	0662, 0822, 0932
SOUNDESIGN	0861, 0961, 1051, 1091	CABLEVISION	0196	STARCOM V	0256	CYBERNEX	0922
SOUNDWAVE	1001	COLOUR VOICE	0306, 0346	STARGATE	0276	DAEWOO	0802, 0812, 0982
SPECTRICON	1161	COMTRONICS	0216, 0276	SYLVANIA/TEXSCAN	0376, 0496	DBX	0202
SQUAREVIEW	0481	EAGLE COMTRONICS		TEKNIKA	0176	DYNATECH	0472, 0992
SSS	1031, 1051		0276	TELESERVICE	0056	ELECTROHOME	0912
STAR-LITE	1051	EASTERN	0066	TELEVIEW	0276	ELECTROPHONIC	0912
SUPREM	0951	ELECTRICORD	0206	TEXSCAN	0186, 0376	EMEREX	0792
SUPRE-MACY	1131	ELECTUS	0266	TFC	0026	EMERSON	0072, 0132, 0142, 0152, 0162, 0172, 0182, 0192, 0212, 0702, 0712, 0722, 0732, 0742, 0752, 0762, 0772, 0782, 0872, 0882, 0892, 0912, 0952, 0992, 1072
SURPA	0351, 0971	GEC CABLE SYSTEM	0116, 0126	TOCOM	0226, 0356	FINLUX	0002, 0992
SYLVANIA	0101, 0361, 0441, 0581, 0591, 0601, 0611, 0631, 0961, 1111	GENERAL INSTRUMENT	0196	TOCOM 5503A	0526	FISHER	0682, 0692, 0842, 0902
SYMPHONIC	0481	JERROLD	0926, 0936, 0946	TOCOM 5503VIP/5507		FUJI	0672, 0932
SYSLINE	1001	HAMLIN H5	0676	TOCOM 5516	0516	FUNAI	0992
TANDY	0271, 0431, 1141	HAMLIN H6	0666	TOCOM TC56	0506	GARRARD	0992
TATUNG	0271, 0881, 1001, 1041, 1161	HAMLIN H6S	0656	TOSHIBA	0386	GE	0662, 0822, 0932
TCL	1561, 1631, 1701	HAMLIN H8	0646	TUDI	0046	GO VIDEO	0642, 0652
TECHNICS	0751	HAMLIN H9	0636	UNIKA	0136	GOODMANS	0402
TECHWOOD	0351, 0751, 0971	JERROLD	0256	UNIVERSAL	0136, 0156, 0206, 0286	GRADIENTE	0992
TEKNIKA	0101, 0351, 0571, 0931, 0941, 0961, 0971, 0991, 1031, 1051, 1091, 1121, 1131, 1771	JERROLD 400L	0626	VIEWSTAR	0216	GRUNDIG	0002
TELETECH	0331	JERROLD 450L	0616	ZENITH	0246, 0386, 0486	H/K	1082
TERA	0501	JERROLD 550	0606			HARLEY DAVIDSON	0992
THAKRAL	1671	JERROLD OSD CATV				HARMAN/KARDON	
THORM	1001		0596				0632, 1082
TMK	0351, 0861, 0971, 1081	JERROLD SPRUCER	0436			HARWOOD	0752, 0852
TOSHIBA	0381, 0521, 0621, 0661, 0931, 0981, 1301	MAGNAVOX/PHILIPS	0416, 0426			HEADQUARTER	0612
TOSONIC	1011	MAMM	0296			HI-Q	0842
TOTEVISION	0941	MEMOREX	0386			HINARI	0852
TRICAL	0911	MOTOROLA	0956, 0966			HITACHI	0102, 0562, 0572, 0582, 0592, 0602, 0992
UNIVERSAL	0781, 0791	MOVIE TIME	0146, 0206			ITT	0942
UNIVERSUM	1001	NORTHCOAST	0016			JVC (VICTOR)	0202, 0522, 0532, 0542, 0552
VECTOR RESEARCH		NSC	0146			KENWOOD	0202, 0542, 0612, 0632, 0902
VESTEL	1001	OAK	0106			KLH	0852
VICTOR	0651	OAK SIGMA 450	0546			KODAK	0912, 0932
VIDEO CONCEPT	1101	OAK SIGMA 550	0536			LG (GOLDSTAR)	0082, 0632, 0912
VIDIKRON	0101, 0211	PANASONIC TZ 120/130	0476			LLOYD	0992
VIDTECH	0861, 1031	PANASONIC TZ 170/180	0446			LOGIK	0852
VIKING	1131	PANASONIC TZ140	0466			LUXOR	0942
WARDS	0101, 0361, 0451, 0541, 0581, 0591, 0601, 0611, 0771, 0781, 0791, 0861, 0971, 0991, 1031, 1091, 1111, 1771	PANASONIC TZ150/160	0456			LXI	0022, 0912
WATSON	1001	PARAGON	0386			MAGNAVOX	0002, 0482, 0492, 0502, 0512, 0932
XOGEGO	1611, 1621, 1661, 1741, 1761	PHILIPS	0036, 0216, 0306, 0316, 0326, 0336, 0346			MAGNIN	0922
YAMAHA	0361, 1031, 1111, 1951, 1961, 1971, 1981	PIONEER	0006, 0086			MARANTZ	0002, 0202, 0402, 0632, 0932
YOKO	1001	PIONEER BR50	0846			MARTA	0912
ZENITH	0011, 0041, 0891, 0991, 1771	PIONEER BR60/70/80/81/82	0696			MATSUSHITA	0932
ZONDA	1161	PIONEER BR90	0556			MATSUI	0722
		PULSAR	0386			MEI	0222, 0932
		RCA DIGITAL SATELLITE SYSTEM	0396, 0406, 0986, 0996, 1006			MEMOREX	0232, 0242, 0472, 0512, 0612, 0842, 0902, 0912, 0922, 0932, 0992
		REALISTIC	0136			MGA	0762, 0952
		REGENCY/EASTERN0686				MGA TECHNOLOGY	0922
		RUNCO	0386			MINOLTA	0592, 0602
		SAMSUNG	0276				
		SCIENTIFIC ATLANTA	0976				
		SCIENTIFIC ATLANTA 175/475	0576				
		SCIENTIFIC ATLANTA 75	0366, 0586				
		SCIENTIFIC ATLANTA 8650	0566				
		SIGNAL	0276				
		SL MARX	0276				
		SPECTAVISION	0236				

CABLE TV

ABC	0256, 0376
ANTRONIX	0136
ARCHER	0136, 0286

APPENDIX-ii

MITSUBISHI	0452, 0462, 0542, 0762, 0952, 1082	SYLVANIA	0002, 0492, 0502, 0762, 0932, 0992	MARANTZ	0027	ONKYO	0155, 0455, 0495, 0805, 1155
MOTOROLA	0472, 0932	SYMPHONIC	0992	MITSUBISHI	0137	OPTIMUS	0225, 0245, 0555, 0595, 0845, 0855, 0865, 0895, 0935
MTC	0922, 0992	TANDY	0992	NAD	0137	PANASONIC	0055, 0825, 1095, 1125
MULTITECH	0852, 0992	TASHIKO	0712, 0992	PANASONIC	0077, 0177	PENNY	0905
NAD	0442	TEAC	0992	PHILIPS	0027	PHILIPS	0165, 0215
NEC	0122, 0202, 0292, 0422, 0432, 0542, 0632	TECHNICS	0932	PIONEER	0017, 0037, 0137	PIONEER	0305, 0935, 1045
NIKKO	0912	TEKNIKA	0322, 0912, 0932, 0992	RCA	0167	PROTON	0215, 1185
NOBLEX	0922	TELEFUNKEN	0252	REALISTIC	0157	QUASAR	0055
OLYMPUS	0412, 0932	TMK	0212, 0732, 0772, 0922	SHARP	0127	RCA	0205, 0915, 1115
OPTIMUS	0442, 0472, 0912	TOSHIBA	0062, 0302, 0342, 0622, 0682, 0712, 0762	SONY	0047, 0057, 0117	REALISTIC	0205, 0225, 0235, 0325, 0555, 0845
OPTONICA	0402	TOTEVISION	0912, 0922	VICTOR	0097	REVOX	1175
ORION	0212, 0722, 0742, 0772	UNITECH	0922	YAMAHA	0007, 0067	ROTEL	0215
OSAKI	0912	VECTOR RESEARCH	0202, 0432, 0632			SABA TELECOMMANDER (E)	0505
PANASONIC	0012, 0052, 0092, 0222, 0372, 0382, 0392, 0412, 0932	VIDEO CONCEPTS	0202, 0432, 0632, 0952			SAE	0215
PENNY	0202, 0432, 0602, 0632, 0692, 0912, 0922, 0932	WARDS	0322, 0402, 0472, 0482, 0602, 0712, 0842, 0852, 0922, 0932, 0992			SAMSUNG	1285
PENTAX	0592, 0602	YAMAHA	0202, 0632			SANSUI	0215, 0625, 0975, 1025, 1105
PERDIO	0992	ZENITH	0042, 0362, 0512, 0672			SANYO	0145, 0555, 0635, 0765
PHILCO	0002, 0932					SCOTT	0325, 1105
PHILIPS	0002, 0282, 0402, 0492, 0932					SEARS	0345
PILOT	0912					SHARP	0235, 0665, 0895, 1065, 1075
PIONEER	0442, 0542					SHERWOOD	0115, 0235, 0395, 0475
PROSCAN	1002, 1012, 1022, 1032, 1042, 1052, 1062					SIEMENS GARRARD	1245
PULSAR	0512					SIGNATURE	0175
QUARTER	0612					SONTEC	1165
QUARTZ	0272, 0612					SONY	0065, 0565, 0865, 1045
QUASAR	0382, 0392, 0932					STARON	1235
RADIO SHACK	0912, 0992					STS	0025
RADIX	0912					SYLVANIA	0215
RANDEX	0912					SYMPHONIC	0335
RCA	0112, 0382, 0392, 0482, 0592, 0602, 0662, 0822, 0942					TANDY	0305
REALISTIC	0402, 0472, 0612, 0682, 0842, 0902, 0912, 0922, 0932, 0992					TANGBERG	1195
RICOH	0352, 0362					TEAC	0235, 0335, 0385, 0525, 0795, 0835, 1355
SAISHO	0212, 0582, 0722, 0732, 0742, 0772					TECHNICS	0055, 0605, 1095
SALORA	0612, 0762					TECHWOOD	1325
SAMSUNG	0212, 0312, 0922, 0962					TELEFUNKEN (E)	0505
SANKY	0472, 0512					THOMSON (E)	0505
SANSUI	0292, 0542, 0832					TOSHIBA	0035, 0685
SANYO	0242, 0612, 0842, 0902, 0922					VECTOR RESEARCH	0065, 1135
SBR	0002, 0282					VICTOR	0315
SCHEIDER	0852					WARDS	0175
SCOTT	0342, 0712, 0762, 0872, 0882, 0892					YAMAHA	0005, 0015, 0085, 0415, 0545, 0575, 1065
SEARS	0302, 0592, 0602, 0612, 0682, 0692, 0842, 0902, 0912, 0932						
SHARP	0402, 0472						
SHINTOM	0852						
SHOGUN	0922						
SINGER	0852						
SONY	0032, 0332, 0352, 0362, 0672, 0792, 0932						
STS	0602						
SUNPAK	0352						

CD PLAYER

ACOUSTIC RESEARCH	1295
ADC	0025, 0065
ADCOM	0205, 0255, 1015
ADS	0265
AIWA	0295, 0945, 1035, 1055
AKAI	0175, 0485, 0535
ALPINE	1215, 1305
AUDIO-TECHNICA	0545
BSR	0245, 0655, 0775
CALIFORNIA AUDIO LAB	0055
CAPETRONIC	1205
CARRERA	0245
CARVER	0285, 1135
CASIO	0345
CROWN	0185
CURTIS MATHES	0345
DENON	0275, 0875, 0885
DEUAL (E)	0505
DYNAMIC BASS (H)	0555
EMERSON	0205, 0325, 1105
EROICA	1275
FISHER	0095, 0555, 0925, 1005
GARRARD	0365
GENEXXA	0305, 0325, 1105
H/K	0105, 0175, 0465, 0995
HITACHI	0195, 0205, 0505, 0815
INKEL	0115, 0395
JVC	0315
KENWOOD	0045, 0095, 0405, 0585, 0725, 0735, 0745, 0755, 0895
KYOCERA	0025
LG (GOLDSTAR)	1135, 1225, 1265, 1335
LUXMAN	0075, 0425, 0675, 0705, 0715, 0985
MAGNAVOX	0165, 0215, 0645, 0955
MARANTZ	0215, 0235, 0375, 0785, 1345
MCINTOSH	0355, 1085
MCS	0905, 1315
MEMOREX	0205, 0225, 0235, 0305, 0325, 1105
MGA	0135
MISSION	0215
MITSUBISHI	0135, 0445
MTC	1255
NAD	0035, 0615, 0685, 0695
NAKAMICHI	0125, 0435, 0515
NEC	0255, 0905, 0965
NIKKO	0545, 1005

CD RECORDER

HITACHI	0474
JVC	0504
MARANTZ	0484, 0494
PHILIPS	0444
PIONEER	0454, 0464
YAMAHA	0414

MD RECORDER

KENWOOD	0384
PIONEER	0424
SHARP	0434
SONY	0394

YAMAHA 0024, 0394, 0404,
0514

TAPE DECK

AIWA	0094, 0214, 0224
AKAI	0184
CARVER	0094
DENON	0304
FISHER	0144
GARRARD	0194, 0204
JVC	0274, 0284, 0294
KENWOOD	0124, 0134, 0154, 0234, 0244, 0264
MAGNAVOX	0094
MARANTZ	0094, 0344
MITSUBISHI	0184
OPTIMUS	0034, 0064, 0204, 0334
ONKYO	0364, 0374
PHILIPS	0094
PIONEER	0034, 0044, 0064
REVOX	0354
SANSUI	0094, 0344
SHARP	0264
SHERWOOD	0334
SONY	0054, 0084, 0324
TEAC	0194, 0254
TECHNICS	0074, 0314
VICTOR	0294
WARDS	0034
YAMAHA	0004, 0014, 0104, 0114, 0164, 0174, 0264



© 2005 YAMAHA CORPORATION All rights reserved.

YAMAHA ELECTRONICS CORPORATION, USA 6660 ORANGETHORPE AVE., BUENA PARK, CALIF. 90620, U.S.A.
YAMAHA CANADA MUSIC LTD. 135 MILNER AVE., SCARBOROUGH, ONTARIO M1S 3R1, CANADA
YAMAHA ELECTRONIK EUROPA G.m.b.H. SIEMENSSTR. 22-34, 25462 RELLINGEN BEI HAMBURG, GERMANY
YAMAHA ELECTRONIQUE FRANCE S.A. RUE AMBROISE CROIZAT BP70 CROISSY-BEAUBOURG 77312 MARNE-LA-VALLEE CEDEX02, FRANCE
YAMAHA ELECTRONICS (UK) LTD. YAMAHA HOUSE, 200 RICKMANSWORTH ROAD WATFORD, HERTS WD18 7GQ, ENGLAND
YAMAHA SCANDINAVIA A.B. J A WETTERGRENS GATA 1, BOX 30053, 400 43 VÄSTRA FRÖLUNDA, SWEDEN
YAMAHA MUSIC AUSTRALIA PTY, LTD. 17-33 MARKET ST., SOUTH MELBOURNE, 3205 VIC., AUSTRALIA

YAMAHA CORPORATION
Printed in Malaysia  WE59750