

Please note the following alterations to the IM 04L41B01-17E.

#### Page 3-28 "WO Sets alarm and DO settings"

##### Set Alarm and DO Settings

Syntax .....

- |    |   |
|----|---|
| p3 | Interval for the <u>low</u> limit on the rate-ofchange (1 to 32)  |
| p4 | Interval for the <u>high</u> limit on the rate-ofchange (1 to 32) |