

Please make the following alterations to the User's Manual IM 04L41B01-61E (see underlined text).

■ Page 4-6 “Scale (display range)”

The range of minimum and maximum values is from -1.0×10^{16} to 1.0×10^{16} .

■ Page 6-20 “Save interval (when recording display data)”

Trend/Storage interval	5 s	10 s	15 s	30 s	1 min
Sampling interval	125 ms	250 ms	500 ms	1 s	2 s
Selectable Save Interval Values	10 min to 12 h	10 min to 1 day	10 min to 3 days	10 min to 7 days	10 min to 14 days
Trend/Storage interval	2 min	5 min	10 min	15 min	20 min
Sampling interval	4 s	10 s	20 s	30 s	40 s
Selectable Save Interval Values	10 min to 14 days	10 min to 31 days	10 min to 31 days	10 min to 31 days	1 h to 31 days
Trend/Storage interval	30 min	1 h	2 h	4 h	10 h
Sampling interval	1 min	2 min	4 min	8 min	20 min
Selectable Save Interval Values	1 h to 31 days	1 h to 31 days	2 h to 31 days	4 h to 31 days	8 h to 31 days

■ Page 6-35 “Relay Action on ACK”

You can select this with MV main unit firmware version 2.0x or later.