

Please make the following alterations to the User's Manual IM 3710-10E (see underlined text).

#### ■ Page 1 "CONTENTS"

 
.....  
4.9 RAM Initialization ..... 4-3

#### ■ Page 2-1 "2.1 Command Summary List"

Type	Command	Function
Entry	<u>FL</u>	Data copying from floppy disk (for optional /FDD code)
Control	<u>CL</u>	<u>RAM initialization</u>
RAM Initialization	<u>GL</u>	Initializes RAM to state at time of shipment

#### ■ Page 4-3 "4. CONTROL COMMANDS"

##### 4.9 RAM Initialization



P1: YES ..... Initialize the settings