


Please make the following alterations to the First Step Guide IM MV1000-02E (see underlined text).

■ Page 12 “MODEL and SUFFIX Code”

Model code	Suffix code	Description
Options	
	<u>/M1</u>	Mathematical functions ^z
	

■ Page 13 “Standard Accessories”

No.	Name	Part Number/Model	Q'ty	Notes
	DAQSTANDARD	<u>DXA120</u>	1	MV configuration and data display software

■ Page 38 “Meas channel > Range, Alarm”

Setting	Selectable Range or Choices	Default Value
Mode=1-5V		
Range	1-5V	1-5V
Span Lower	Numeric value (0.800 to 5.200)	1.000
Span Upper	Numeric value (0.800 to 5.200)	5.000
Scale Lower	Numeric value (<u>-30000 to 30000</u> , decimal place 0 to 4)	0.00
Scale Upper	Numeric value (<u>-30000 to 30000</u> , decimal place 0 to 4)	200.00
Unit	Character string (up to 6 characters)	—
Low-cut	On/Off	Off
Mode=Sqrt		
Range	20mV/60mV/200mV/2V/6V/20V/50V	2V
Span Lower	Numeric value (depends on the range)	-2.0000
Span Upper	Numeric value (depends on the range)	2.0000
Scale Lower	Numeric value (<u>-30000 to 30000</u> , decimal place 0 to 4)	0.00
Scale Upper	Numeric value (<u>-30000 to 30000</u> , decimal place 0 to 4)	200.00
Unit	Character string (up to 6 characters)	—
Low-cut	On/Off	Off
Low-cut value	0.0 to 5.0 (%)	0.5