

Please make the following alterations to the User's Manual IM MV200-01E (see underlined text).

## ■ Page ii “Safety Precautions”

The following general safety precautions must be observed during all phases of operation. If the MV200 is used in a manner not specified in this manual, the protection provided by the MV200 may be impaired. YOKOGAWA Electric Corporation assumes no liability for the customer's failure to comply with these requirements.

Please use this instrument as a measurement category II (CAT II) instrument.

This instrument is for indoor use only.

## ■ Page iv “MODEL”

Please refer to these specifications of the external storage medium instead of the one printed in the user's manual.

Model code	Suffix code	Description
External storage medium	-1	Floppy disk
	-3	CompactFlash card (bundled an adapter for CF card)
	-5	250MB Zip disk

## ■ Page v “Standard Accessories”

Number	Part Name	Part Number/Model	Q'ty	Notes
3	External storage medium	<u>A1056MP</u>	1	<u>250MB Zip disk, included only when the medium suffix code for external storage medium is “-5.”</u>
		B9968NL	1	<u>CompactFlash card (32MB, capacity and model of CompactFlash card may vary) with adapter included only when the suffix code for external storage medium is “-3.”</u>

## ■ Page vi “Optional Accessories (Sold Separately)”

Number	Part Name	Part Number/Model	Q'ty	Notes
2	Zip disk	A1053MP	1	100 MB
		<u>A1056MP</u>	1	<u>250 MB</u>

## ■ Page 1-21 “Saving Data to the External Storage Media”

### External Storage Media

Various data can be saved to the following storage media:

- 3.5" floppy disk (1.44 MB, 2HD)
- Zip disk (100 MB or 250 MB)
- ATA flash memory card (4 MB to 440 MB), or CompactFlash card (32 MB to 512 MB, adapter required).

## ■ Page 2-1 “Handling Precautions”

- Use care when cleaning the MV100, especially any plastic parts. When cleaning, wipe with a dry, soft cloth. Do not use detergent, nor chemicals such as benzene or thinner, since these may cause discoloration, and deformation, or cracking.

---

## ■ Page 2-3 “Installation Location”

Install the instrument indoors, in a location that meets the following conditions. See also the normal operating conditions described in section 14.7, “General Specifications.”

Do not install the MV200 in the following places:

- **Outdoors**
- **In direct sunlight or near heat sources**

## ■ Page 3-5 “3.3 Inserting/Removing the External Storage Medium”

This section describes the procedures to insert and remove the external storage medium. Three types of media can be used depending on the specification.

- Model MV2\*\* -1: Floppy disk
- Model MV2\*\* -5 : Zip disk\*<sup>1</sup>
- Model MV2\*\* -3: ATA flash memory card, or CompactFlash card (adapter required)

For the handling procedure of the storage medium, see section 2.1.

\*1 With model MV2\*\* -5, 250 MB and 100 MB Zip disks can be used. However, 100 MB Zip disks must be formatted using quick (logical) formatting rather than normal (physical) formatting.

## ■ Page 7-25 “7.14 Setting the Brightness of the Screen and the Backlight Saver Function”

### Note

The degradation of the brightness and the discoloration of the screen (become yellowish) tend to progress faster as the brightness is set higher. Extended use at an unnecessary high setting should be avoided. It is also recommended that the backlight saver be used.

## ■ Page 13-5 “13.4 Recommended Replacement Periods for Worn Parts”

### Note

- The LCD replacement period indicates the half life of the brightness when the brightness is set to the factory default setting. The half life is shortened as the brightness is set higher. The deterioration of brightness varies depending on the condition of use, and its determination is subjective. Consider these facts for determining the actual replacement period.
- The color of the LCD may become yellowish as time elapses. The discoloration tends to progress faster as the brightness is set higher.

## ■ Page 14-5 “14.3 Data Storage Specifications”

External storage medium:      Selectable from:

- 1) 3.5-inch floppy disk (2HD, 1.44 MB)
- 2) ATA flash memory card (4 MB to 440 MB), or CF card (32 MB to 512 MB, adapter required)
- 3) Zip disk (100 MB or 250 MB)