User's Manual

Notice of Alterations

DL9040/DL9140/DL9240 Series Digital Oscilloscope Serial Bus Signal Analysis Function

Please make the following alterations to the User's Manual IM701310-51E.

Page 2-13 "ACK Slot"

Add the following description to page 2-13.

ACK Slot

Note.

If you set the trigger mode to ID/Data OR and set the ACK slot to Don't care, set the ACK slot of all data frames or remote frames (ID/Data1 to ID/Data4) to Don't care.

The trigger may not be activated in the correct position, if you mix Don't care and other settings (NON ACK, ACK, NON ACK or ACK).

