

The following items are additions and changes to the user's manual, IM701710-01E.

### Page i "Foreword"

The underlined text below has been added.

Four manuals are provided with the instrument, including this user's manual.

Manual Name	Manual No.	Description
DL1720/DL1740 User's Manual	IM 701710-01E	Describes all functions (except for the communications function) and their operation procedures for the instrument.
DL1720/DL1740 Communication Interface User's Manual	IM 701710-17E	Describes the communications functions of the GP-IB, RS-232, USB, and network interface.
DL1720/DL1740 Operation Guide	IM 701710-02E	Explains basic operations only.
DL1720/DL1740 I <sup>2</sup> C-Bus Analysis Function	IM 701710-51E	Describes the I <sup>2</sup> C-bus analysis function and SPI bus analysis function (option).

### Page ii "DL1720/DL1740 Main Body"

The following option specification has been added.


MODEL	SUFFIX	SPECIFICATIONS
Power Cord	..... -R -H	..... AS standard power cord (A1024WD) Maximum rated voltage: 250 V; maximum rated current: 10 A GB standard power cord (complies with the CCC)(A1064WD) Maximum rated voltage: 250 V, maximum rated current: 10 A
Options	..... /F5	..... I <sup>2</sup> C-Bus Analysis Function (DL1740 only)

### Page iii "Standard Accessories"

The underlined text below has been added.


**Power Cord (one of the following power cords is supplied according to the instrument's suffix codes)**

UL/CSA Standard  
A1006WD

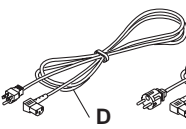


D

VDE Standard  
A1009WD

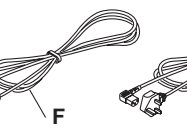


F

BS Standard  
A1054WD

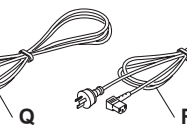


Q

AS Standard  
A1024WD

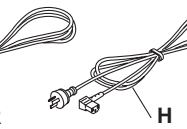


R

GB Standard  
A1064WD




H


**Printer Roll Chart \***  
B9850NX

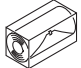


**Fuse**  
A1352EF




**Probe Case**  
B9918EZ

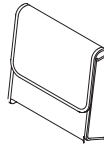


**Front Panel Protection Cover (Clear)**  
B9989FA




**400MHz Passive Probe (x2)**  
700988

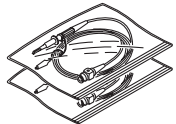


**Rubber Feet (x4)**  
B9989EX



**Communication Interface User's Manual B9989YZ (x1)**




**Communication Interface User's Manual CD-ROM (Paper stating the precautions.) (x1)**

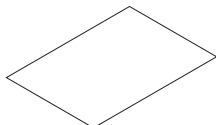

**User's Manual (x1)**

**Operation Guide (x1)**

**I<sup>2</sup>C-Bus Analysis Function User's Manual (Optional)\*\* (x1)**

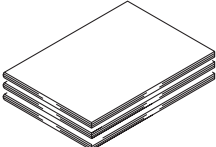

\* A roll chart will be supplied only when the instrument is equipped with a built-in printer.

\*\* Only included with I<sup>2</sup>C-bus analysis function models.

### Page 2-1 "Front Panel/Rear Panel"

The front panel of model DL1740/F5 differs from the standard models as follows:



**Page 3-6 “Turning ON/OFF the Power Switch”**

The following caution has been added.

**CAUTION**

If the power switch to the DL1720/DL1740 is turned ON/OFF while the Zip disk is in the drive, the drive can become damaged. You must first remove the Zip disk from the drive before turning ON/OFF the power switch.

**Page 11-3 “CAUTION”**

The underlined text below has been added.

**CAUTION**

- Removing the Zip disk while the access indicator is ON may damage the data on the Zip disk.
- Do not use the Zip drive with the rear panel facing down. This may damage the data on the Zip disk.
- If the power switch to the DL1720/DL1740 is turned ON/OFF while the Zip disk is in the drive, the drive can become damaged. You must first remove the Zip disk from the drive before turning ON/OFF the power switch.
- Immediately after inserting the Zip disk, the access indicator lights. Do not use the instrument while the access indicator is lit as this may cause a malfunction.

**Page 11-12**

The following note has been added to the subsection, “Saving the File Name/Comment.”

**Note**

If you select Float for the data type, the Comment will not be saved.

**Page 11-21**

The following note has been added to the subsection, “Saving the File Name/Comment.”

**Note**

When saving a waveform that was acquired using the snapshot function, the Comment will not be saved.

**Page 11-24**

The following note has been added to the subsection, “Saving the File Name/Comment.”

**Note**

When saving the results of the automated measurement of waveform parameters, the Comment will not be saved.

**Page 15-11 “Specified Rating”**

The underlined text below has been added.

- Standard: VDE/SEMKO/UL/CSA certified

**Page 16-9 “USB”**

The underlined text below has been added.

Item	Specifications
Supported Systems	<u>A PC with a standard USB port that operates under Windows 98 SE, Windows Me, or Windows 2000 (a separate device driver is required for connection to the PC).</u>

**Page 16-10**

The underlined text below has been added.

Item	Specifications
Fuse	250 V 4 A time lag; <u>VDE/SEMKO/UL/CSA approved.</u>
External Dimensions (details on page 16-12)	220 (W) x 266 (H) x 306 (D) mm
Accessories	<ul style="list-style-type: none"> <li>• Communication Interface User's Manual <u>B9989YZ</u></li> <li>• I<sup>2</sup>C-Bus Analysis Function User's Manual (Only on models with “/F5” suffix)</li> </ul>