

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE MANUAL:

FAULT CATALOG

GUIDED MISSILE

AIR DEFENSE SYSTEM

AN/TSQ- 73

This copy is a reprint which includes current pages from Changes 1 through 5.

HEADQUARTERS, DEPARTMENT OF THE ARMY

2 SEPTEMBER 1980

WARNING

DANGEROUS VOLTAGE

is used in the operation of this equipment

DEATH ON CONTACT

may result if personnel fail to observe safety precautions

Never work on electronic equipment unless there is another person nearby who is familiar with the operation and hazards of the equipment and who is competent in administering first aid. When the technician is aided by operators, he must warn them about dangerous areas.

Whenever possible, the power supply to the equipment must be shut off before beginning work on the equipment. Take particular care to ground every capacitor likely to hold a dangerous potential. When working inside the equipment, after the power has been turned off, always ground every part before touching it.

Be careful not to contact high-voltage connections when installing or operating this equipment.

Whenever the nature of the operation permits, keep one hand away from the equipment to reduce the hazard of current flowing through vital organs of the body.

WARNING

Do not be misled by the term "low voltage." Potentials as low as 50 volts may cause death under adverse conditions.

For Artificial Respiration, refer to FM 21-11.

EXTREMELY DANGEROUS POTENTIALS

greater than 500 volts exist in the following units:

Display console high voltage power supply

Display console CRT

WARNING

For emergencies requiring immediate shutdown of system power, press SYSTEM POWER OFF switch located on power cabinet power transfer unit. Observe that SYSTEM POWER ON indicator light goes off.

Change 3 a

CAUTION

CMOS memories contain electrostatic sensitive devices requiring special handling to avoid electrostatic discharge damage. When removing and replacing memory cards, observe the following precautions:

- a. Immediately prior to handling within the shelter, make physical contact with a grounded surface to discharge any possible buildup of static electricity.
- b. Package the memory storage cards in electrostatic bags prior to removing from the shelter.

Change 3 b

LIST OF EFFECTIVE PAGES

Insert latest change pages, dispose of superseded pages in accordance with applicable regulations.

NOTE:

The portion of the text affected by the changes is indicated by a vertical line in the outer margins of the page.

Dates of issue for original and change pages are:

Original 0 2 Sep 80	Change 3 22 May 86
Change 1 5 Jul 83	Change 4 6 Aug 87
Change 2 1 Aug 84	Change 5 1 May 91

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 517 CONSISTING OF THE FOLLOWING:

Page No.	*Change No.	Page No.	*Change No.	Page No.	*Change No.
a-b	3	2-206-2-221	3	2-362	3
A	5	2-222 Blank	3	2-363-2-380	2
B blank	5	2-223-2-252 Deleted ..	3	2-381	4
i-ii	4	2-253-2-290	0	2-382-2-394	2
1-1 and 1-2	5	2-290.1-2-290.20	3	2-395	4
2-1-2-3	0	2-291-2-301	0	2-396-2-402	2
2-4-2-44.4	4	2-302	1	2-403	4
2-45-2-142.43	4	2-303	4	2-404-2-425	2
2-142.44 Blank	4	2-304-2-316	0	2-426	4
2-143-2-145	4	2-317	4	2-427-2-444	2
2-146	3	2-318-2-330	0	2-445-2-449	3
2-147-2-166	3	2-331	1	2-450 Blank	3
2-167, 2-168	4	2-332-2-336	0	2-451-2-456 Deleted ...	3
2-169-2-185	3	2-337	1	2-457	2
2-186, 2-187	4	2-338-2-342	0	2-458	5
2-188-2-203	3	2-343-2-360	4	2-459-2-482	2
2-204, 2-205	4	2-361 Deleted	3		

Change 5 A/(B blank)

TECHNICAL MANUAL)
)
 No. 9-1430-655-20-2)

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON D. C., 2 September 1980

ORGANIZATIONAL MAINTENANCE MANUAL: FAULT CATALOG

GUIDED MISSILE AIR DEFENSE SYSTEM ANTSQ-73

TABLE OF CONTENTS

Chapter		Page
	LIST OF TABLES	i
1	INTRODUCTION	1-1
	1-1. General	1-1
	1-2. Forms, Records, and Reports	1-1
	1-3. Reporting Equipment Publications Improvements	1-1
	1-4. M&D Fault Catalog Description	1-1
2	M&D FAULT CATALOG IMPLEMENTATION	2-1
	2-1. General	2-1
	2-2. Fault Determination	2-1
	2-3. Fault Catalog Utilization	2-1
	2-4. Error Stop Number Location Matrices ,	2-1
	2-5. MTS Testable and Non-testable Cards	2-1
	2-6. Card Location Data	2-2
	2-7. Card Substitution	2-2
	2-8. M&D Fault Catalog Entries	2-2
	2-9. Fault Isolation Tables	2-3

LIST OF TABLES

Table	Title	Page
1-1.	Subsystem Diagnostic Program FI Codes	1-1
1-2.	Fault Catalog Equipment Subsystem Divisions	1-2
2-1.	ADP Error Stop Location Matrix	2-4
2-2.	CPU Fault Location	2-46
2-3.	IOU Fault Location	2-137
2-4.	Buffer Unit Fault Location	2-142.26
2-5.	Memory 0 Fault Location	2-144
2-6.	Memory 1 Fault Location	2-167
2-7.	Memory 2 Fault Location	2-186
2-8.	Memory 3 Fault Location	2-204

*This manual supersedes TM 9-1430-655-20-2, 6 October 1978.

LIST OF TABLES - Continued

Table	Title	Page
2-9.	Deleted	
2-10.	Deleted	
2-11.	Deleted	
2-12.	Deleted	
2-13.	Display Console - 0 LHS (W/ADP FI) Fault Location	2-253
2-14.	Display Console - 0 CS (W/ADP FI) Fault Location	2-262
2-15.	Display Console - 1 LHS (W/ADP FI) Fault Location	2-265
2-16.	Display Console - 1 CS (W/ADP FI) Fault Location	2-281
2-17.	MTU (GENISCO) - Fault Location	2-284
2-17A.	MTU (W/ADP FI) Fault Location	2-290.1
2-18.	Display Console Error Stop Location Matrix	2-291
2-19.	Display Console LHS Fault Location	2-301
2-20.	Display Console CS Fault Location	2-319
2-21.	Display Console RHS Fault Location	2-322
2-22.	Data Display Group Error Stop Location Matrix	2-338
2-23.	DDG LHS Fault Location.....	2-339
2-24.	DDG RHS Fault Location	2-341
2-25.	RIE Error Stop Location Matrix	2-343
2-26.	RIU Fault Location	2-362
2-27.	VPU Test Fault Location	2-393
2-28.	RIE Analog Test Fault Location	2-421
2-29.	RIE Memory (Single Port) Fault Location	2-445
2-30.	Deleted	
2-31.	VSU Test Fault Location	2-457

CHAPTER 1

INTRODUCTION

1-1. General This manual contains the information necessary to isolate a malfunction in the AN/TSQ-73 system to replaceable circuit cards or modules when used with the procedures of TM 9-1430-655-20-1 and system fault isolation programs. The maintenance and diagnostic (M&D) fault catalog instructions are generated to subsystem and unit levels, and provide definitive directions for isolating an equipment malfunction in the system.

1-2. Forms, Records, and Reports. Refer to DA PAM 738-750 for the use and completion of all forms required for operating and maintaining the MTS.

1-3. Reporting Equipment Publications Improvements. Reporting of errors and omissions and recommendations by the individual user for improving this publication is encouraged. Reports should be submitted on DA Form 2028, Recommended Changes to Publications, and forwarded

to: Commander, U.S. Army Missile Command, ATTN: AMSMI-LC-ME-P, Redstone Arsenal, AL 35898-5238.

1-4. M&D Fault Catalog Description. The M&D fault catalog is a definitive listing of fault isolation program-generated error stop numbers, and is used to locate cards or modules which could cause the indicated malfunction. The numbers listed in the fault catalog which correspond to error stop numbers displayed on the ADP status and control panel DIAGNOSE CODE readout and printed on the KPU, are a result of the execution of a subsystem fault isolation program and are listed by equipment subsystem. Corresponding card or module locations are listed by connector number (JXXXX) and/or by name and part number. Table 1-1 lists the computer commands used to run subsystem fault isolation programs, and table 1-2 contains the fault catalog divisions of error stop number listings.

Table 1-1. Subsystem Diagnostic Program FI Codes

Subsystem	ADP status and control panel PROGRAM/TEST switch	KPU entry
ADP	Bootstrap load -66 or 76	-
RIE	50	CC50
VSU	51	CC51
DDG	52	CC52
KPU	53	CC53
MTU	54	CC54
Data Comm	55	CC55
Display Console	56	CC56

Table 1-2. Fault Catalog Equipment Subsystem Divisions

Fault isolation program	Subsystem	Fault catalog table
ADP FI	ADP error stop location matrix	2-1
	Central processor unit (CPU)	2-2
	Input/output unit (IOU)	2-3
	Buffer unit	2-4
	32K memory unit address 0	2-5
	32K memory unit address 1	2-6
	32K memory unit address 2	2-7
	32K memory unit address 3	2-8
	Display console 0 LHS (W/ADP FI)	2-13
	Display console 0 CS (W/ADP FI)	2-14
	Display console 1 LHS (W/ADP FI)	2-15
	Display console 1 CS (W/ADP FI)	2-16
	MTU FI	Magnetic tape unit (MTU)
Magnetic tape unit (MTU) (W/ADP FI)		2-17A
Display Console FI	Display console error stop location matrix	2-18
	Display console LHS	2-19
	Display console CS	2-20
	Display console RHS	2-21
DDG FI	DDG error stop location matrix	2-22
	DDG LHS	2-23
	DDG RHS	2-24
RIE FI	RIE error stop location matrix	2-25
	Radar integration unit (RIU)	2-26
	Video processor unit (VPU)	2-27
	RIE analog section	2-28
	RIE 16K memory	2-29
VSU FI	Video simulator unit (VSU)	2-31

NOTE: For data COMM FI Diagnose codes, refer to DATA COMM FI Flow Chart in TM 9-1430-655-20-7.

For KPU Fault Isolation procedures, refer to TM 9-1430-655-20-1 and TM 9-1430-656-14-1.

Change 5 1-2

CHAPTER 2

M&D FAULT CATALOG IMPLEMENTATION

2-1. General. The M&D fault catalog is used after execution of a subsystem fault isolation (FI) program and as directed by procedures in TM 9-1430-665-20-1. The FI program generates an error stop number relating to the general area of the malfunction and corresponding to an identical number listed in the subsystem's fault catalog fault location table. The following paragraphs define the use of the fault location tables when used with the procedures contained in TM 9-1430655-20-1.

2-2. Fault Determination. To determine if an actual fault exists when a TMON number is printed on the KPU or displayed in the DIAGNOSE CODE readout, or when a fault is indicated on the data display group (DDG), perform the following procedures before initiating fault isolation procedures.

a. Determine whether the indicated faulty unit is on-line. If the unit is off-line, either bring it on-line or disregard the TMON and/or fault indication.

b. Perform a system RESTART by setting the PROGRAM TEST SELECT thumbwheels to 00 and pressing the RESTART switch.

c. If the TMON is displayed again after the 00 RESTART, perform an 06 RESTART.

d. If the TMON is still displayed after the 06 RESTART, either reconfigure according to TM 9-1430652-10-3 or perform fault isolation according to TM 91430-655-20-1.

2-3. Fault Catalog Utilization. When referring to the M&D fault catalog from the FI flow charts (TM 9-1430655-20-1), five general conditions apply:

a. Determine unit being tested (reference table 1-2).

b. Refer to the appropriate fault location table.

c. Read any special notes which are located prior to the error stop number listings.

d. Locate corresponding error stop number in fault location table. The tables are divided into sections, based on the conditions of the PROG LOAD STATUS and DIAGNOSE STATUS indicators on the ADP status and control panel. The order of division within a given fault location table is as listed below:

PROGRAM LOAD STATUS	IOU	OFF	CPU	OFF
DIAGNOSE STATUS	IOU	OFF	CPU	OFF
PROGRAM LOAD STATUS	IOU	OFF	CPU	OFF
DIAGNOSE STATUS	IOU	OFF	CPU	ON

PROGRAM LOAD STATUS	IOU	OFF	CPU	OFF
DIAGNOSE STATUS	IOU	ON	CPU	OFF
PROGRAM LOAD STATUS	IOU	OFF	CPU	OFF
DIAGNOSE STATUS	IOU	ON	CPU	ON
PROGRAM LOAD STATUS	IOU	OFF	CPU	ON
DIAGNOSE STATUS	IOU	OFF	CPU	OFF
PROGRAM LOAD STATUS	IOU	OFF	CPU	ON
DIAGNOSE STATUS	IOU	OFF	CPU	ON
PROGRAM LOAD STATUS	IOU	OFF	CPU	ON
DIAGNOSE STATUS	IOU	ON	CPU	OFF
PROGRAM LOAD STATUS	IOU	OFF	CPU	ON
DIAGNOSE STATUS	IOU	ON	CPU	ON
PROGRAM LOAD STATUS	IOU	ON	CPU	OFF
DIAGNOSE STATUS	IOU	OFF	CPU	OFF
PROGRAM LOAD STATUS	IOU	ON	CPU	OFF
DIAGNOSE STATUS	IOU	OFF	CPU	ON
PROGRAM LOAD STATUS	IOU	ON	CPU	ON
DIAGNOSE STATUS	IOU	ON	CPU	ON

e. Perform the actions specified for the particular error stop number and appropriate program load and diagnose status conditions.

2-4. Error Stop Number Location Matrices. The ADP, display console, DDG, and RIE error stop location matrices are used with the fault isolation flow charts (TM 9-1430-655-20-1) to determine the proper fault isolation sequence for the unit-under-test. The matrices locate the error stop number, within a subsystem of the unit-under-test. Where an error stop number is located in more than one subsystem, the unit fault isolation flow chart determines which subsystem should be isolated first.

2-5. MTS Testable and Non-testable Cards. An error stop number may indicate cards testable by the MTS as well as those cards which must be substituted in order to determine whether or not they are faulty. The MTS testable cards are designated by their location only (e.g., J1118, J1128, J1209-J1210, etc.). Nontestable cards are indicated by their location, nomenclature, and part number (e.g., J1311 Read/ Write 10282702).

NOTE

If a non-testable card is listed within a group of testable cards, replace it, if necessary, after completing testing of testable cards.

2-6. Card Location Data. Card locations can be determined by the connector number as listed. This connector number corresponds to an A number as used in TM 9-1430-655-20-1 series for card location.

Example: J1234(A1234)

- J = connector (A = card)
- 1 = bay number
- 2 = card shelf
- 34 = card slot

NOTE

MTS testable cards linked with dashes (J1109-J1110) indicate the cards are in adjacent locations on the card shelf.

2-7. Card Substitution. When substituting more than one card, the following procedure should be followed.

- a. Replace first card in group with spare of same type.
- b. If fault is not corrected, replace original card and substitute next card in group with spare of same type (first spare if second card is same).
- c. Continue above procedure until fault is corrected or last card in group has been substituted.
- d. Any failed card should be tagged and handled according to unit SOP.
- e. If the trouble was not corrected, replace spare card in storage and continue further FI procedures.

2-8. M&D Fault Catalog Entries. The following are examples of fault catalog entries and explanations of how they are implemented.

- a. Error stop number only listed once and contains the location of digital card that should be checked using the MTS. Adjacent cards are indicated by the dashes.

Example:

200745 J1102-J1103 J1106 J1109-J1110-J1111
 -J1121-J1122-J1123-J1124 J1126-J1127
 -J1210-J1211-J1212-J1213-J1214-J1215
 -J1224-J1225-J1226-J1227-J1228-J1229
 -J1320-J1321-J1322 J1324

- b. Error stop number listed twice. Perform actions indicated by its first listing. Replace a single non-MTS testable card first. If fault is not corrected, test in the MTS the digital cards listed by the second error-stop listing.

Example:

200755 1. Replace: J1311 Read/Write Memory 10282702.
 2. Test digital cards.

200755 J1118-J1119 J1132 J1134 J1209 J1230

- c. Error stop number listed twice. In this case, the digital card listed under the second error stop listing would be checked first and if the fault was not found, the single non-testable card would be replaced.

Example:

777007 1. Test digital cards.
 2. Replace: J1316 Clock Card 587100.

777007 J1101-J1102-J1103-J1104-J1105
 -J1114-J1115-J1116-J1117-J1118
 -J1128 J1130 J1136-J1137-J1138
 -J1202-J1203-J1204-J1205-J1206
 -J1214-J1215-J1216-J1217-J1218

- d. Double listing of same error stop number. The first action to perform would be to test the digital card and those listed under the second error stop listing. If fault is not found, the non-testable card would be replaced.

Example:

201027 1. Test digital card in J1130 and those listed below.
 2. Replace: J1311 Read/Write Memory 0282702.

201027 J1120-J1121 J1213-J1214-J1215-J1216

- e. Error stop number only listed once. The non MTS testable card would be replaced as the only action required under this error stop number.

Example:

202356 Replace: J1333 Category Select 1
 10281673.

- f. Error stop number only listed once. The card in A would be replaced and if the fault is not corrected, the card in B would be replaced. If the location of a card is different from the fault catalog section where the error stop number is found, its location will be indicated (see B).

Example:

505413 Substitute the following card assemblies:

- A. J1220 Video Mixer 10282719.
- B. In(RIU)J131 Quad 2 587102.

g. Error stop number listed twice. The indicated cards under the first listing and those listed under the second listing would be checked using the MTS. If the fault is not found, non-MTS testable cards would be substituted/replaced in the sequence indicated until the fault is found or all indicated cards have been substituted.

Example:

035203 1. Test digital cards in J1214, J1216 and those listed below.

2. Substitute the following card assemblies:

- A. J2345 Clock Card 587100.
- B. J1215 Adder 587130.
- C. J1217 Adder 587130.
- D. J1218 Adder 587130.
- E. J1219 Adder 587130.
- F. J1220 Adder 587130.
- G. J1221 Adder 587130.

035203 J1113 J1123-J1124-J1125-J1126-J1127-J1128
J1143 J1145-J1146 J1148-J1149-J1150-J1151

2-9. Fault Isolation Tables. Tables 2-1 through 2-31 list the possible error stop numbers for each subsystem in the system.

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX

NOTE:

"Y" INDICATES ERROR STOP IS LOCATED IN INDICATED FAULT CATALOG SECTION.

"-" INDICATES ERROR STOP IS NOT LOCATED IN INDICATED FAULT CATALOG SECTION.

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU	
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS	CS	LHS	CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
000000	Y	Y	Y	Y	Y	Y	Y	Y	-	Y	-	-
000001	Y	-	-	Y	-	-	-	-	-	-	-	-
000002	Y	Y	-	Y	-	-	Y	-	-	-	-	-
000003	Y	Y	-	Y	Y	Y	Y	-	-	-	-	Y
000004	Y	Y	-	Y	-	-	-	-	-	-	-	-
000005	Y	Y	-	Y	-	-	-	-	-	-	-	-
000006	Y	Y	-	Y	-	-	-	-	-	-	-	Y
000007	Y	Y	-	-	-	-	-	-	-	-	-	-
000010	Y	Y	-	Y	-	-	-	-	-	-	-	Y
000011	Y	Y	-	-	-	-	-	-	-	-	-	-
000012	Y	Y	-	-	-	-	-	-	-	-	-	-
000013	Y	-	-	-	-	-	-	-	-	-	-	-
000014	Y	Y	-	-	-	-	-	-	-	-	-	-
000015	Y	-	-	Y	-	-	-	-	-	-	-	-
000016	Y	Y	-	Y	-	-	-	-	-	-	-	Y
000017	Y	Y	-	Y	-	-	-	-	-	-	-	-
000020	Y	-	-	-	-	-	-	-	-	-	-	-
000021	Y	-	-	-	Y	-	-	-	-	-	-	-
000022	Y	Y	-	-	-	-	-	-	-	-	-	-
000023	Y	Y	-	Y	-	Y	-	-	-	-	-	-
000024	Y	Y	-	Y	-	-	-	-	-	-	-	-
000025	Y	Y	-	Y	-	Y	-	-	-	-	-	-
000026	Y	-	-	-	-	-	-	-	-	-	-	-
000027	Y	Y	-	Y	-	-	-	-	-	-	-	-
000030	Y	-	-	-	-	-	-	-	-	-	-	-
000031	Y	-	-	Y	-	-	-	-	-	-	-	-
000032	Y	Y	-	Y	-	-	-	-	-	-	-	-
000033	Y	-	-	-	-	-	-	-	-	-	-	-
000034	Y	-	-	-	-	-	-	-	-	-	-	-
000035	Y	Y	-	Y	-	-	-	-	-	-	-	-
000036	Y	-	-	-	-	Y	-	-	-	-	-	-
000037	Y	Y	-	-	-	-	-	-	-	-	-	-
000040	Y	Y	-	Y	-	-	-	-	-	-	-	-
000041	Y	-	-	-	-	-	-	-	-	-	-	-
000042	Y	Y	-	-	-	-	-	-	-	-	-	-
000043	Y	Y	-	-	-	-	-	-	-	-	-	-
000044	Y	Y	-	Y	Y	-	-	-	-	-	-	-
000045	Y	Y	-	Y	Y	-	-	-	-	-	-	-
000046	Y	-	-	-	-	-	-	-	-	-	-	-
000047	Y	Y	-	-	-	-	-	-	-	-	-	-
000050	Y	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	32K—MEMORY—ADDRESS	0	1	2	3	LHS CS	LHS CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	0	1	2	3	LHS CS	LHS CS	MTU	
000051	Y	Y	-	Y	-	-	-	-	-	-	
000052	Y	Y	-	-	-	-	-	-	-	-	
000053	Y	Y	-	Y	Y	Y	Y	-	-	Y	
000054	Y	Y	-	-	-	-	-	-	-	-	
000055	Y	-	-	Y	-	-	-	-	-	-	
000056	Y	-	-	-	-	-	-	-	-	-	
000057	Y	-	-	-	-	-	-	-	-	-	
000060	Y	-	-	-	-	-	-	-	-	-	
000061	Y	Y	-	Y	-	-	-	-	-	-	
000062	Y	Y	-	-	-	-	-	-	-	-	
000063	Y	Y	-	-	-	-	-	-	-	-	
000064	Y	-	-	-	-	-	-	-	-	-	
000065	Y	-	-	-	-	-	-	-	-	Y	
000066	Y	-	-	-	-	-	-	-	-	-	
000070	Y	-	-	-	-	-	-	-	-	-	
000072	Y	-	-	-	-	-	-	-	-	-	
000073	Y	-	-	-	-	-	-	-	-	-	
000074	Y	-	-	-	-	-	-	-	-	-	
000075	Y	-	-	-	-	-	-	-	-	-	
000076	Y	-	-	-	-	-	-	-	-	-	
000077	Y	-	-	-	-	-	-	-	-	-	
000100	Y	-	-	Y	Y	-	-	-	-	-	
000101	Y	-	-	-	-	-	-	-	-	-	
000102	Y	-	-	-	-	Y	-	-	-	-	
000103	Y	Y	-	-	-	-	-	-	-	-	
000105	Y	-	-	Y	-	-	-	-	-	-	
000106	Y	-	-	Y	-	-	-	-	-	-	
000107	Y	Y	-	-	-	-	-	-	-	-	
000110	Y	-	-	-	-	-	-	-	-	-	
000111	Y	-	-	-	-	-	-	-	-	-	
000112	Y	Y	-	-	-	-	-	-	-	-	
000113	Y	-	-	Y	-	-	-	-	-	-	
000114	Y	-	-	-	Y	-	-	-	-	-	
000115	Y	-	-	-	-	-	-	-	-	-	
000117	Y	-	-	-	-	-	-	-	-	-	
000121	Y	-	-	-	-	-	-	-	-	-	
000123	Y	-	-	-	-	-	-	-	-	-	
000126	Y	-	-	-	-	-	-	-	-	-	
000130	Y	-	-	-	Y	-	-	-	-	-	
000131	Y	-	-	-	-	-	-	-	-	-	
000132	Y	Y	-	Y	Y	-	Y	-	-	-	
000133	Y	Y	-	Y	Y	Y	Y	-	-	Y	
000134	Y	-	-	Y	-	-	-	-	-	-	
000135	Y	-	-	Y	-	-	-	-	-	-	
000136	Y	-	-	-	-	-	-	-	-	-	
000137	Y	-	-	-	-	Y	-	-	-	-	
000140	Y	-	-	-	-	-	-	-	-	-	
000141	Y	Y	-	-	-	-	-	-	-	-	
000142	Y	-	-	-	-	-	-	-	-	-	
000143	Y	-	-	Y	-	-	-	-	-	-	

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
000144	Y	-	-	-	-	-	-	-	-	-	
000145	Y	-	-	-	-	-	-	-	-	-	
000146	Y	-	-	-	-	-	-	-	-	-	
000147	Y	-	-	-	-	-	-	-	-	-	
000150	Y	-	-	-	-	-	-	-	-	-	
000151	Y	Y	-	-	-	-	-	-	-	-	
000152	Y	-	-	-	-	-	-	-	-	-	
000153	Y	-	-	-	-	-	-	-	-	-	
000154	Y	-	-	-	-	-	-	-	-	-	
000155	Y	-	-	-	-	-	-	-	-	-	
000156	Y	-	-	-	-	-	-	-	-	-	
000157	Y	-	-	-	-	-	-	-	-	-	
000160	Y	-	-	-	-	-	-	-	-	-	
000161	Y	-	-	-	-	-	-	-	-	-	
000162	Y	-	-	-	-	-	-	-	-	-	
000163	Y	-	-	-	-	-	-	-	-	-	
000164	Y	-	-	-	-	-	-	-	-	-	
000165	Y	-	-	-	-	-	-	-	-	-	
000166	Y	-	-	-	-	-	-	-	-	-	
000167	Y	Y	-	-	-	-	-	-	-	-	
000171	Y	-	-	-	-	-	-	-	-	-	
000172	Y	Y	-	-	-	-	-	-	-	-	
000173	Y	Y	-	-	-	-	-	-	-	-	
000176	Y	-	-	Y	Y	-	-	-	-	-	
000177	Y	-	-	-	-	-	-	-	-	-	
000200	Y	-	-	-	-	-	-	-	-	-	
000201	Y	-	-	-	-	-	-	-	-	-	
000202	Y	-	-	-	-	-	-	-	-	-	
000203	Y	Y	-	-	-	-	-	-	-	-	
000204	Y	-	-	-	-	-	-	-	-	-	
000205	Y	-	-	-	-	-	-	-	-	-	
000206	Y	-	-	-	-	-	-	-	-	-	
000207	Y	-	-	-	-	-	-	-	-	-	
000210	Y	-	-	-	-	-	-	-	-	-	
000211	Y	-	-	-	-	-	-	-	-	-	
000212	Y	-	-	-	-	-	-	-	-	-	
000213	Y	-	-	-	-	-	-	-	-	-	
000214	Y	-	-	-	-	-	-	-	-	-	
000216	Y	Y	-	-	-	-	-	-	-	-	
000217	Y	-	-	-	-	-	-	-	-	-	
000220	Y	-	-	-	-	-	-	-	-	-	
000221	Y	-	-	-	-	-	-	-	-	-	
000222	Y	-	-	-	-	-	-	-	-	-	
000223	Y	Y	-	-	-	-	-	-	-	-	
000224	Y	-	-	-	-	-	-	-	-	-	
000225	Y	-	-	-	-	-	-	-	-	-	
000226	Y	-	-	-	-	-	-	-	-	-	
000227	Y	Y	-	-	-	-	-	-	-	-	
000230	Y	-	-	-	-	-	-	-	-	-	
000231	Y	-	-	-	-	-	-	-	-	-	

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	CPU OFF				LHS	CS	LHS	CS	
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
000232	-	-	-	-	-	-	-	-	-	-	-	-
000233	-	-	-	-	-	-	-	-	-	-	-	-
000234	-	-	-	-	-	-	-	-	-	-	-	-
000235	-	-	-	-	-	-	-	-	-	-	-	-
000236	-	-	-	-	-	-	-	-	-	-	-	-
000237	-	-	-	-	-	-	-	-	-	-	-	-
000240	-	-	-	-	-	-	-	-	-	-	-	-
000242	-	-	-	-	-	-	-	-	-	-	-	-
000243	-	-	-	-	-	-	-	-	-	-	-	-
000246	-	-	-	-	-	-	-	-	-	-	-	Y
000250	-	-	-	-	-	-	-	-	-	-	-	-
000254	Y	-	-	-	-	-	-	-	-	-	-	-
000263	-	-	-	-	-	-	-	-	-	-	-	-
000276	-	-	-	-	-	-	-	-	-	-	-	-
000316	-	-	-	-	-	-	-	-	-	-	-	-
000317	-	-	-	-	-	-	-	-	-	-	-	-
000320	-	-	-	-	-	-	-	-	-	-	-	-
000321	-	-	-	-	-	-	-	-	-	-	-	-
000325	-	-	Y	-	-	-	-	-	-	-	-	-
000326	Y	-	-	-	-	-	-	-	-	-	-	-
000327	-	-	-	-	-	-	-	-	-	-	-	-
000330	-	-	-	-	-	-	-	-	-	-	-	-
000331	-	-	-	-	-	-	-	-	-	-	-	-
000333	-	-	-	-	-	-	-	-	-	-	-	-
000334	-	-	-	-	-	-	-	-	-	-	-	-
000335	-	-	-	-	-	-	-	-	-	-	-	-
000336	-	-	-	-	-	-	-	-	-	-	-	-
000340	-	-	-	-	-	-	-	-	-	-	-	-
000342	Y	-	-	-	-	-	-	-	-	-	-	-
000343	Y	-	-	-	-	-	-	-	-	-	-	-
000345	-	-	-	-	-	-	-	-	-	-	-	-
000346	-	-	-	-	-	-	-	-	-	-	-	-
000347	-	-	-	-	-	-	-	-	-	-	-	-
000350	-	-	-	-	-	-	-	-	-	-	-	-
000351	-	-	-	-	-	-	-	-	-	-	-	-
000352	-	-	-	-	-	-	-	-	-	-	-	-
000353	-	-	-	-	-	-	-	-	-	-	-	-
000354	-	-	-	-	-	-	-	-	-	-	-	-
000355	-	-	-	-	-	-	-	-	-	-	-	-
000356	-	-	-	-	-	-	-	-	-	-	-	-
000357	-	-	-	-	-	-	-	-	-	-	-	-
000360	-	-	-	-	-	-	-	-	-	-	-	-
000361	-	-	-	-	-	-	-	-	-	-	-	-
000362	-	-	-	-	-	-	-	-	-	-	-	-
000363	-	-	-	-	-	-	-	-	-	-	-	-
000364	-	-	-	-	-	-	-	-	-	-	-	-
000365	Y	-	-	-	-	-	-	-	-	-	-	-
000367	-	-	Y	-	-	-	-	-	-	-	-	-
000371	-	-	-	-	-	-	-	-	-	-	-	-
000372	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS	CS	LHS	CS	
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
000374	Y	-	-	-	-	-	-	-	-	-	-	-
000376	Y	-	-	-	-	-	-	-	-	-	-	-
000377	Y	-	-	-	-	-	-	-	-	-	-	-
000400	Y	-	-	-	-	-	-	-	-	-	-	-
000401	Y	-	-	-	-	-	-	-	-	-	-	-
000402	Y	-	-	-	-	-	-	-	-	-	-	-
000403	Y	-	-	-	-	-	-	-	-	-	-	-
000404	Y	Y	-	-	-	-	-	-	-	-	-	-
000405	Y	-	-	-	-	-	-	-	-	-	-	-
000406	Y	Y	-	-	-	-	-	-	-	-	-	-
000407	Y	-	-	Y	-	-	-	-	-	-	-	-
000410	Y	-	-	-	-	-	-	-	-	-	-	-
009411	Y	-	-	-	-	-	-	-	-	-	-	-
000414	Y	Y	-	-	-	-	-	-	-	-	-	-
000416	Y	-	-	-	-	-	-	-	-	-	-	-
000420	Y	-	-	-	-	-	-	-	-	-	-	-
000422	Y	-	-	-	-	-	-	-	-	-	-	-
000423	Y	-	-	-	-	-	-	-	-	-	-	-
000424	Y	-	-	-	-	-	-	-	-	-	-	-
000430	Y	-	-	-	-	-	-	-	-	-	-	-
000431	Y	-	-	-	-	-	-	-	-	-	-	-
000432	Y	-	-	-	-	-	-	-	-	-	-	-
000433	Y	-	-	-	-	-	-	-	-	-	-	-
000434	Y	-	-	-	-	-	-	-	-	-	-	-
000436	Y	-	-	-	-	-	-	-	-	-	-	-
000437	Y	-	-	-	-	-	-	-	-	-	-	-
000441	Y	Y	-	-	-	-	-	-	-	-	-	-
000442	Y	-	-	-	-	-	-	-	-	-	-	-
000444	Y	-	-	-	-	-	-	-	-	-	-	-
000445	Y	-	-	-	-	-	-	-	-	-	-	-
000447	Y	Y	-	-	-	-	-	-	-	-	-	-
000450	Y	-	-	-	-	-	-	-	-	-	-	-
000451	Y	-	-	-	-	-	-	-	-	-	-	-
000452	Y	-	-	-	-	-	-	-	-	-	-	-
000453	Y	-	-	-	-	-	-	-	-	-	-	-
000454	Y	-	-	-	-	-	-	-	-	-	-	-
000463	Y	-	-	-	-	-	-	-	-	-	-	-
000464	Y	-	-	-	-	-	-	-	-	-	-	-
000465	Y	-	-	-	-	-	-	-	-	-	-	-
000466	Y	-	-	-	-	-	-	-	-	-	-	-
000467	Y	-	-	-	-	-	-	-	-	-	-	-
000470	Y	Y	-	-	-	-	-	-	-	-	-	-
000471	Y	-	-	-	-	-	-	-	-	-	-	-
000473	Y	-	-	-	-	-	-	-	-	-	-	-
000474	Y	Y	-	-	-	-	-	-	-	-	-	-
000475	Y	-	-	-	-	-	-	-	-	-	-	-
000477	Y	-	-	-	-	-	-	-	-	-	-	-
000500	Y	-	-	-	-	-	-	-	-	-	-	-
000501	Y	-	-	-	-	-	-	-	-	-	-	-
000502	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS	LHS CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	LHS CS	MTU
				0	1	2	3				
000503	Y	-	-	-	-	-	-	-	-	-	-
000504	Y	-	-	-	-	-	-	-	-	-	-
000505	Y	-	-	-	-	-	-	-	-	-	-
000506	Y	-	-	-	-	-	-	-	-	-	-
000510	Y	-	-	-	-	-	-	-	-	-	-
000511	Y	-	-	-	-	-	-	-	-	-	-
000513	Y	-	-	-	-	-	-	-	-	-	-
000514	Y	-	-	-	-	-	-	-	-	-	-
000515	Y	-	-	-	-	-	-	-	-	-	-
000516	Y	-	-	-	-	-	-	-	-	-	-
000517	Y	-	-	-	-	-	-	-	-	-	-
000520	Y	-	-	-	-	-	-	-	-	-	-
000522	Y	-	-	-	-	-	-	-	-	-	-
000523	Y	-	-	-	-	-	-	-	-	-	-
000524	Y	-	-	-	-	-	-	-	-	-	-
000525	Y	-	-	-	-	-	-	-	-	-	-
000526	Y	-	-	-	-	-	-	-	-	-	-
000527	Y	-	-	-	-	-	-	-	-	-	-
000531	Y	-	-	-	-	-	-	-	-	-	-
000532	Y	-	-	-	-	-	-	-	-	-	-
000534	Y	-	-	-	-	-	-	-	-	-	-
000536	Y	-	-	-	-	-	-	-	-	-	-
000537	Y	-	-	-	-	-	-	-	-	-	-
000540	Y	-	-	-	-	-	-	-	-	-	-
000541	Y	-	-	-	-	-	-	-	-	-	-
000542	Y	-	-	-	-	-	-	-	-	-	-
000543	Y	-	-	-	-	-	-	-	-	-	-
000544	Y	-	-	-	-	-	-	-	-	-	-
000545	Y	-	-	-	-	-	-	-	-	-	-
000546	Y	-	-	-	-	-	-	-	-	-	-
000547	Y	-	-	-	-	-	-	-	-	-	-
000550	Y	-	-	-	-	-	-	-	-	-	-
000551	Y	-	-	-	-	-	-	-	-	-	-
000552	Y	-	-	-	-	-	-	-	-	-	-
000553	Y	-	-	-	-	-	-	-	-	-	-
000555	Y	-	-	-	-	-	-	-	-	-	-
000556	Y	-	-	-	-	-	-	-	-	-	-
000557	Y	-	-	-	-	-	-	-	-	-	-
000560	Y	-	-	-	-	-	-	-	-	-	-
000561	Y	-	-	-	-	-	-	-	-	-	-
000564	Y	-	-	-	-	-	-	-	-	-	-
000565	Y	-	-	Y	-	-	-	-	-	-	-
000566	Y	-	-	-	-	-	-	-	-	-	-
000567	Y	-	-	-	-	-	-	-	-	-	-
000570	Y	-	-	-	-	-	-	-	-	-	-
000571	Y	-	-	-	-	-	-	-	-	-	-
000572	Y	-	-	-	-	-	-	-	-	-	-
000573	Y	-	-	-	-	-	-	-	-	-	-
000574	-	Y	-	-	-	-	-	-	-	-	-
000575	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	CPU OFF				LHS	CS	LHS	CS	
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
000576	Y	-	-	-	-	-	-	-	-	-	-	-
000577	Y	-	-	-	-	-	-	-	-	-	-	-
000600	Y	-	-	-	-	-	-	-	-	-	-	-
000601	Y	-	-	-	-	-	-	-	-	-	-	-
000602	Y	-	-	-	-	-	-	-	-	-	-	-
000604	Y	-	-	-	-	-	-	-	-	-	-	-
000606	Y	-	-	-	-	-	-	-	-	-	-	-
000610	Y	-	-	-	-	-	-	-	-	-	-	-
000614	Y	-	-	-	-	-	-	-	-	-	-	-
000624	Y	-	-	-	-	-	-	-	-	-	-	-
000625	Y	-	-	-	-	-	-	-	-	-	-	-
000626	Y	-	-	-	-	-	-	-	-	-	-	-
000627	Y	-	-	-	-	-	-	-	-	-	-	-
000630	Y	-	-	-	-	-	-	-	-	-	-	-
000631	Y	-	-	-	-	-	-	-	-	-	-	-
000632	Y	-	-	-	-	-	-	-	-	-	-	-
000633	Y	-	-	-	-	-	-	-	-	-	-	-
000634	Y	-	-	-	-	-	-	-	-	-	-	-
000635	Y	Y	-	-	-	-	-	-	-	-	-	-
000637	Y	-	-	-	-	-	-	-	-	-	-	-
000643	Y	-	-	-	-	-	-	-	-	-	-	-
000644	Y	Y	-	-	-	-	-	-	-	-	-	-
000645	Y	-	-	-	-	-	-	-	-	-	-	-
000646	Y	-	-	-	-	-	-	-	-	-	-	-
000647	Y	-	-	-	-	-	-	-	-	-	-	-
000650	Y	-	-	-	-	-	-	-	-	-	-	-
000651	Y	-	-	-	-	-	-	-	-	-	-	-
000652	Y	-	-	-	-	-	-	-	-	-	-	-
000653	Y	-	-	-	-	-	-	-	-	-	-	-
000654	Y	-	-	-	-	-	-	-	-	-	-	-
000655	Y	Y	-	-	-	-	-	-	-	-	-	-
000656	Y	-	-	-	-	-	-	-	-	-	-	-
000657	Y	-	-	-	-	-	-	-	-	-	-	-
000660	Y	-	-	-	-	-	-	-	-	-	-	-
000661	Y	-	-	-	-	-	-	-	-	-	-	-
000662	Y	-	-	-	-	-	-	-	-	-	-	-
000663	Y	-	-	-	-	-	-	-	-	-	-	-
000664	Y	-	-	-	-	-	-	-	-	-	-	-
000665	Y	-	-	Y	-	-	-	-	-	-	-	-
000666	Y	-	-	-	-	-	-	-	-	-	-	-
000670	Y	-	-	-	-	-	-	-	-	-	-	-
000672	Y	-	-	-	-	-	-	-	-	-	-	-
000674	Y	Y	-	-	-	-	-	-	-	-	-	-
000675	Y	-	-	-	-	-	-	-	-	-	-	-
000676	Y	-	-	-	-	-	-	-	-	-	-	Y
000701	Y	Y	-	-	-	-	-	-	-	-	-	-
000702	Y	-	-	-	-	-	-	-	-	-	-	-
000703	Y	-	-	-	-	-	-	-	-	-	-	-
000704	Y	-	-	-	-	-	-	-	-	-	-	-
000705	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
000706	Y	-	-	-	-	-	-	-	-	-	
000707	Y	-	-	-	-	-	-	-	-	-	
000710	Y	-	-	-	-	-	-	-	-	-	
000711	Y	-	-	-	-	-	-	-	-	-	
000712	Y	-	-	-	-	-	-	-	-	-	
000715	Y	-	-	-	-	-	-	-	-	-	
000716	Y	-	-	-	-	-	-	-	-	-	
000717	Y	-	-	-	-	-	-	-	-	-	
000720	Y	-	-	-	-	-	-	-	-	-	
000721	Y	-	-	-	-	-	-	-	-	-	
000722	Y	-	-	-	-	-	-	-	-	-	
000724	Y	-	-	-	-	-	-	-	-	-	
000725	Y	-	-	-	-	-	-	-	-	-	
000726	Y	-	-	-	-	-	-	-	-	-	
000727	Y	-	-	-	-	-	-	-	-	-	
000730	Y	-	-	-	-	-	-	-	-	-	
000732	Y	-	-	-	-	-	-	-	-	-	
000734	Y	-	-	-	-	-	-	-	-	-	
000735	Y	-	-	-	-	-	-	-	-	-	
000736	Y	-	-	-	-	-	-	-	-	-	
000737	Y	-	-	-	-	-	-	-	-	-	
000740	Y	-	-	-	-	-	-	-	-	-	
000741	Y	-	-	-	-	-	-	-	-	-	
000742	Y	-	-	-	-	-	-	-	-	-	
000745	Y	-	-	-	-	-	-	-	-	-	
000746	Y	-	-	-	-	-	-	-	-	-	
000750	Y	-	-	-	-	-	-	-	-	-	
000751	Y	-	-	-	-	-	-	-	-	-	
000753	Y	-	-	-	-	-	-	-	-	-	
000755	Y	-	-	-	-	-	-	-	-	-	
000760	Y	-	-	-	-	-	-	-	-	-	
000761	Y	-	-	-	-	-	-	-	-	-	
000762	Y	-	-	-	-	-	-	-	-	-	
000763	Y	-	-	-	-	-	-	-	-	-	
000764	Y	-	-	-	-	-	-	-	-	-	
000765	Y	-	-	-	-	-	-	-	-	-	
000766	-	Y	-	-	-	-	-	-	-	-	
000767	Y	-	-	-	-	-	-	-	-	-	
000770	Y	Y	-	-	-	-	-	-	-	-	
000771	Y	-	Y	-	-	-	-	-	-	-	
000772	Y	Y	-	Y	-	-	Y	-	-	-	
000773	Y	-	-	-	-	-	-	-	-	-	
000774	Y	-	-	-	-	-	-	-	-	-	
000775	Y	Y	-	-	-	-	-	-	-	-	
000776	Y	-	Y	-	-	-	-	-	-	-	
000777	Y	-	Y	-	-	-	-	-	-	-	
001000	Y	-	Y	-	-	-	Y	-	-	-	
001001	Y	Y	-	-	-	-	-	-	-	-	
001002	Y	-	-	-	-	-	-	-	-	-	
001003	Y	Y	Y	Y	-	Y	Y	-	-	-	

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0		CNSL-1		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	
				0	1	2	3					
001005	Y	Y	Y	-	-	-	Y	-	-	-	-	-
001006	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-
001007	Y	Y	-	-	-	Y	-	-	-	-	-	-
001010	Y	-	-	-	-	-	-	-	-	-	-	-
001011	Y	-	-	-	-	-	-	-	-	-	-	-
001012	Y	-	Y	-	-	-	Y	-	-	-	-	-
001013	Y	-	-	-	-	Y	-	-	-	-	-	-
001014	Y	-	-	-	-	-	-	-	-	-	-	-
001015	Y	-	-	-	-	-	-	-	-	-	-	-
001016	Y	-	-	-	-	-	-	-	-	-	-	-
001017	Y	-	-	-	-	-	-	-	-	-	-	-
001020	Y	-	-	-	-	-	-	-	-	-	-	-
001021	Y	Y	-	-	-	-	-	-	-	-	-	-
001022	Y	Y	-	-	-	-	-	-	-	-	-	-
001023	Y	-	-	-	-	-	-	-	-	-	-	-
001024	Y	-	-	-	-	-	-	-	-	-	-	-
001025	Y	-	-	-	-	-	-	-	-	-	-	-
001026	Y	-	-	-	-	Y	-	-	-	-	-	-
001030	Y	-	-	-	-	-	-	-	-	-	-	-
001031	Y	-	-	-	-	-	-	-	-	-	-	-
001032	Y	-	-	-	-	-	-	-	-	-	-	-
001033	Y	-	-	-	-	-	-	-	-	-	-	-
001034	Y	-	-	-	-	-	-	-	-	-	-	-
001035	Y	Y	-	-	-	-	-	Y	-	Y	-	-
001037	Y	Y	-	-	-	-	-	-	-	-	-	-
001040	Y	-	-	Y	Y	Y	Y	-	-	-	-	-
001041	Y	-	-	-	-	-	-	-	-	-	-	-
001042	Y	-	-	-	-	-	-	-	-	-	-	-
001043	Y	-	-	-	-	-	-	-	-	-	-	-
001044	Y	-	-	-	-	-	-	-	-	-	-	-
001045	Y	Y	-	-	-	-	-	-	-	-	-	-
001046	Y	-	-	-	-	-	-	-	-	-	-	-
001047	Y	-	-	-	-	-	-	-	-	-	-	-
001050	Y	Y	-	Y	Y	Y	Y	-	-	-	-	-
001051	Y	-	-	Y	-	-	-	-	-	-	-	-
001052	Y	Y	-	-	-	-	-	-	-	-	-	-
001053	-	-	-	-	-	-	-	-	-	-	-	-
001054	Y	-	-	Y	-	-	-	-	-	-	-	-
001055	Y	-	-	-	-	-	-	-	-	-	-	-
001056	Y	-	-	-	-	-	-	-	-	-	-	-
001057	Y	Y	Y	-	Y	-	-	Y	-	Y	-	-
001060	Y	Y	-	-	-	-	-	-	-	-	-	-
001061	Y	Y	-	-	-	-	-	-	-	-	-	-
001062	Y	Y	Y	-	-	-	-	Y	-	Y	-	Y
001063	Y	-	-	-	-	-	-	-	-	-	-	-
001064	Y	-	-	-	-	-	-	-	-	-	-	-
001065	Y	-	-	-	-	-	-	-	-	-	-	-
001066	Y	-	-	-	-	-	-	-	-	-	-	-
001067	Y	-	-	-	-	-	-	-	-	-	-	-
001070	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS	CS	LHS	CS	
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
001071	Y	-	-	-	-	-	-	-	-	-	-	-
001074	Y	-	-	-	-	-	-	-	-	-	-	-
001076	Y	-	-	-	-	-	-	-	-	-	-	-
001077	Y	-	-	-	-	-	-	-	-	-	-	-
001100	Y	-	-	-	-	-	-	-	-	-	-	-
001101	Y	-	-	-	-	-	-	-	-	-	-	-
001103	Y	-	-	-	-	-	-	-	-	-	-	-
001104	Y	-	-	-	-	-	-	-	-	-	-	-
001107	Y	-	-	-	-	-	-	Y	-	-	-	-
001110	Y	-	-	-	-	-	-	-	-	-	-	-
001111	Y	-	-	Y	-	-	-	-	-	-	-	-
001112	Y	-	-	-	-	-	-	-	-	-	-	-
001113	Y	Y	-	Y	-	-	-	Y	-	-	-	-
001114	Y	-	-	-	-	-	-	-	-	-	-	-
001115	Y	-	-	-	-	-	-	-	-	-	-	-
001116	Y	-	-	-	-	-	-	-	-	-	-	-
001117	Y	-	-	-	-	-	Y	Y	-	-	-	-
001120	Y	-	-	-	-	-	-	-	-	-	-	-
001121	Y	-	-	-	-	-	-	-	-	-	-	-
001122	Y	-	-	-	-	-	-	-	-	-	-	-
001123	Y	-	-	-	-	-	-	-	-	-	-	-
001124	Y	-	-	-	-	-	-	-	-	-	-	-
001125	Y	-	-	-	-	-	-	-	-	-	-	-
001127	Y	Y	-	-	-	-	-	Y	-	-	-	-
001131	Y	-	-	-	-	-	-	-	-	-	-	-
001133	Y	-	-	-	-	-	-	Y	-	-	-	-
001134	Y	-	-	-	-	-	-	Y	-	-	-	-
001135	Y	-	-	-	-	-	-	Y	-	-	-	-
001136	Y	-	-	-	-	-	-	-	-	-	-	-
001140	Y	-	-	-	-	-	-	-	-	-	-	-
001141	Y	-	-	-	-	-	-	Y	-	-	-	-
001143	Y	-	-	-	-	-	-	-	-	-	-	-
001144	Y	-	-	-	-	-	-	-	-	-	-	-
001145	Y	-	-	-	-	-	-	-	-	-	-	-
001146	Y	-	-	-	-	-	-	-	-	-	-	-
001147	Y	-	-	-	-	-	-	-	-	-	-	-
001150	-	-	-	-	-	-	-	Y	-	-	-	-
001153	Y	-	-	-	-	-	-	-	-	-	-	-
001155	Y	-	-	-	-	-	-	Y	-	-	-	-
001160	Y	-	-	-	-	-	-	-	-	-	-	-
001163	Y	-	-	-	-	-	-	-	-	-	-	-
001164	Y	-	-	Y	-	-	-	-	-	-	-	-
001166	Y	-	-	-	-	-	-	-	-	-	-	Y
001167	Y	-	-	-	-	-	-	Y	-	-	-	-
001171	Y	-	-	-	-	-	-	-	-	-	-	-
001175	Y	-	-	-	-	-	-	-	-	-	-	-
001176	Y	-	-	-	-	-	-	-	-	-	-	-
001200	Y	Y	Y	Y	-	-	-	-	-	-	-	-
001201	Y	Y	Y	-	-	-	-	-	-	-	-	-
001202	Y	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
001203	Y	Y	Y	-	-	-	-	-	-	-	-
001204	Y	Y	-	-	-	-	-	-	-	-	-
001205	Y	Y	-	Y	-	-	-	Y	-	-	-
001206	Y	Y	-	Y	-	-	-	-	-	-	-
001207	Y	Y	-	Y	-	-	-	-	-	-	-
001210	Y	Y	-	Y	-	-	-	-	-	-	-
001211	Y	Y	-	-	-	-	-	-	-	-	-
001212	Y	Y	-	Y	-	-	-	-	-	-	-
001213	Y	Y	-	-	-	-	-	-	-	-	-
001214	Y	-	-	Y	-	-	-	-	-	-	-
001215	Y	Y	-	Y	-	-	-	-	-	-	-
001216	Y	-	-	-	-	-	-	Y	-	-	-
001217	Y	-	-	-	-	-	-	-	-	-	-
001220	Y	-	-	-	-	-	-	-	-	-	-
001221	Y	-	-	-	-	-	-	Y	-	-	-
001222	Y	-	-	-	-	-	-	-	-	-	-
001224	Y	-	-	-	-	-	-	-	-	-	-
001225	Y	Y	-	-	-	-	-	-	-	-	-
001226	Y	-	-	-	-	-	-	-	-	-	-
001227	Y	-	-	-	-	-	-	-	-	-	-
001230	Y	-	-	-	-	-	-	-	-	-	-
001231	Y	-	-	-	-	-	-	-	-	-	-
001233	Y	-	-	-	-	-	-	-	-	-	-
001235	Y	-	-	-	Y	-	-	-	-	-	-
001236	Y	-	-	-	-	-	-	-	-	-	-
001237	Y	-	-	-	-	-	-	Y	-	-	-
001241	Y	-	-	-	-	-	-	-	-	-	-
001242	Y	-	-	-	-	-	-	-	-	-	-
001243	Y	-	-	-	-	-	-	-	-	-	-
001244	Y	-	-	-	-	-	-	-	-	-	-
001245	Y	-	-	-	-	-	-	-	-	-	-
001247	Y	-	-	-	-	-	-	-	-	-	-
001250	Y	-	-	-	-	-	-	Y	-	-	-
001252	Y	-	-	-	-	-	-	-	-	-	-
001253	Y	Y	-	-	-	-	-	-	-	-	-
001254	Y	-	-	-	-	-	-	Y	-	-	-
001255	Y	-	-	-	-	-	-	-	-	-	-
001256	Y	Y	-	Y	-	-	-	Y	-	-	-
001257	Y	Y	-	Y	-	-	-	-	-	-	-
001260	Y	Y	-	-	-	-	-	-	-	-	-
001261	Y	Y	-	Y	-	-	-	-	-	-	-
001262	-	Y	-	-	-	-	-	-	-	-	-
001263	Y	-	-	-	-	-	-	-	-	-	-
001264	Y	Y	-	-	-	-	-	Y	-	-	-
001265	Y	Y	-	-	-	-	-	-	-	-	-
001266	Y	-	-	-	-	-	-	-	-	-	-
001267	Y	-	-	-	-	-	-	-	-	-	-
001272	Y	-	-	Y	-	-	-	-	-	-	-
001273	Y	-	-	-	-	-	-	-	-	-	-
001275	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS	LHS CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	LHS CS	MTU
				0	1	2	3				
001276	Y	-	-	-	-	-	-	-	-	-	-
001277	Y	-	-	-	-	-	-	-	-	-	-
001302	Y	-	-	-	-	-	-	-	-	-	-
001303	Y	-	-	-	-	-	-	-	-	-	-
001306	Y	-	-	-	-	-	-	-	-	-	-
001307	Y	-	-	-	-	-	-	-	-	-	-
001312	Y	-	-	-	-	-	-	-	-	-	-
001313	Y	-	-	-	-	-	-	-	-	-	-
001316	Y	-	-	-	-	-	-	-	-	-	-
001317	Y	-	-	-	-	-	-	-	-	-	-
001322	Y	-	-	-	-	-	-	-	-	-	-
001323	Y	-	-	-	-	-	-	-	-	-	-
001326	-	-	-	-	-	-	-	Y	-	-	-
001327	Y	-	-	-	-	-	-	-	-	-	-
001332	Y	-	-	-	-	-	-	-	-	-	-
001333	Y	-	-	-	-	-	-	-	-	-	-
001337	Y	-	-	-	-	-	-	-	-	-	-
001366	Y	-	-	-	-	-	-	Y	-	-	-
001367	Y	-	-	-	-	-	-	-	-	-	-
001372	Y	-	-	-	-	-	-	-	-	-	-
001407	Y	-	-	-	-	-	-	-	-	-	-
001410	Y	-	-	-	-	-	-	-	-	-	-
001426	-	-	-	-	-	-	-	Y	-	-	-
001445	Y	-	-	-	-	-	-	-	-	-	-
001466	Y	-	-	-	-	-	-	-	-	-	-
001467	Y	-	-	-	-	-	-	-	-	-	-
001472	Y	-	-	-	-	-	-	-	-	-	-
001541	Y	-	-	-	-	-	-	-	-	-	-
001660	-	-	-	-	-	-	-	-	-	-	Y
001665	Y	-	-	-	-	-	-	-	-	-	-
001666	Y	Y	Y	Y	Y	-	-	Y	-	Y	Y
001667	Y	Y	Y	Y	Y	Y	-	-	-	-	-
001670	Y	Y	Y	Y	Y	Y	Y	-	-	-	-
001702	Y	Y	-	-	Y	-	-	-	-	-	-
001703	Y	-	-	-	-	-	-	-	-	-	-
001704	Y	-	Y	-	-	-	-	-	-	-	-
001707	Y	-	-	Y	-	Y	-	-	-	-	-
001710	Y	-	-	-	-	-	-	-	-	-	-
001711	Y	-	-	-	-	Y	-	-	-	-	-
001712	Y	-	-	-	-	-	Y	-	-	-	-
001713	Y	-	-	-	-	-	-	-	-	-	-
001714	-	-	-	-	-	-	-	-	-	-	-
001716	Y	-	-	-	-	-	-	-	-	-	-
001717	Y	-	-	-	-	-	-	-	-	-	-
001720	Y	-	-	-	-	-	-	-	-	-	-
001721	Y	-	-	-	-	-	-	-	-	-	-
001722	Y	-	-	-	-	-	-	-	-	-	-
001724	Y	-	-	-	-	-	-	-	-	-	-
001725	Y	-	-	-	-	-	-	-	-	-	-
001727	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
061731	Y	-	-	-	-	-	-	-	-	-	
001732	Y	-	-	-	-	-	-	-	-	-	
001733	Y	-	-	-	-	-	-	-	-	-	
001734	Y	-	-	-	-	-	-	-	-	-	
001735	Y	-	-	-	-	-	-	-	-	-	
001737	Y	-	-	-	-	-	-	-	-	-	
001740	Y	-	-	-	-	-	-	-	-	-	
001741	Y	-	-	-	-	-	-	-	-	-	
001743	Y	-	-	-	-	-	-	-	-	-	
001744	Y	-	-	-	-	-	-	-	-	-	
001745	Y	-	-	-	-	-	-	-	-	-	
001746	Y	-	-	-	-	-	-	-	-	-	
001747	Y	-	-	-	-	-	-	-	-	-	
001750	Y	-	-	-	-	-	-	-	-	-	
001751	Y	-	-	-	-	-	-	-	-	-	
001752	Y	-	-	-	-	-	-	-	-	-	
001755	Y	-	-	-	-	-	-	-	-	-	
001756	Y	-	-	-	Y	-	-	-	-	-	
001757	Y	-	-	-	-	-	-	-	-	-	
001760	Y	-	-	-	-	-	-	-	-	-	
001762	Y	-	-	-	-	-	-	-	-	-	
001763	Y	-	-	-	-	-	-	-	-	-	
001764	Y	-	-	-	-	-	-	-	-	-	
001765	Y	-	-	-	-	-	-	-	-	-	
001767	Y	-	-	-	-	-	-	-	-	-	
001777	Y	-	-	-	-	-	-	-	-	-	
002000	Y	-	-	-	-	-	-	-	-	-	
002003	-	Y	Y	-	-	-	-	-	-	-	
002005	-	-	-	-	-	-	-	-	-	Y	
002377	Y	-	-	-	-	-	-	-	-	-	
002420	-	Y	Y	-	-	-	-	-	-	-	
003000	-	Y	-	Y	-	-	-	-	-	-	
003010	-	-	-	Y	-	-	-	-	-	-	
003020	-	-	-	Y	-	-	-	-	-	-	
003046	-	-	-	Y	-	-	-	-	-	-	
003776	Y	-	-	-	-	-	-	-	-	-	
003777	Y	-	-	-	-	-	-	-	-	-	
004000	Y	-	-	-	-	-	-	-	-	-	
004041	Y	-	-	-	-	-	-	-	-	-	
004105	Y	-	-	-	-	-	-	-	-	-	
004107	Y	-	-	-	-	-	-	-	-	-	
004420	-	-	-	-	Y	-	-	-	-	-	
005750	-	Y	-	-	-	-	-	-	-	-	
006000	-	-	-	-	-	Y	-	-	-	-	
006752	Y	-	-	-	-	-	-	-	-	-	
010000	Y	-	-	-	-	-	-	-	-	-	
010173	Y	-	-	-	-	-	-	-	-	-	
010176	-	Y	-	-	-	-	-	-	-	-	
010770	-	Y	-	-	-	-	-	-	-	-	
011146	Y	-	-	Y	-	-	-	-	-	-	

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	32K—MEMORY—ADDRESS	0	1	2	3	LHS	CS	LHS	
ERROR STOP NUMBER	CPU	IOU	BUFFER	0	1	2	3	LHS	CS	LHS	CS	MTU
120000	Y	-	-	-	Y	Y	Y	-	-	-	-	-
012010	-	Y	-	-	Y	Y	Y	-	-	-	-	-
012020	-	-	-	-	Y	Y	Y	-	-	-	-	-
012030	Y	Y	-	Y	Y	Y	Y	-	-	-	-	-
012040	-	-	-	-	-	Y	Y	-	-	-	-	-
012050	-	-	-	-	-	Y	Y	-	-	-	-	-
012060	-	-	-	-	Y	Y	Y	-	-	-	-	-
012070	-	-	-	-	Y	Y	-	-	-	-	-	-
012100	-	-	-	-	Y	-	Y	-	-	-	-	-
012110	-	-	-	-	-	Y	Y	-	-	-	-	-
012150	-	-	-	-	Y	Y	Y	-	-	-	-	-
012160	-	-	-	-	Y	-	-	-	-	-	-	-
012210	-	-	-	-	-	Y	-	-	-	-	-	-
012230	-	-	-	-	Y	-	-	-	-	-	-	-
014002	-	-	Y	-	-	-	-	-	-	-	-	-
014041	-	-	-	-	-	-	-	-	-	Y	-	-
016660	-	-	-	-	-	-	-	-	-	-	-	Y
017770	Y	-	-	-	Y	Y	Y	-	-	Y	-	-
020000	Y	-	-	-	-	Y	Y	-	-	-	-	-
020010	-	-	-	-	-	Y	-	-	-	-	-	-
020020	-	-	-	-	Y	Y	Y	-	-	-	-	-
200030	-	-	-	-	Y	-	Y	-	-	-	-	-
020040	-	-	-	-	Y	Y	Y	-	-	-	-	-
020050	-	-	-	-	Y	Y	Y	-	-	-	-	-
020060	-	-	-	-	Y	-	Y	-	-	-	-	-
020070	-	-	-	-	-	-	Y	-	-	-	-	-
020100	-	-	-	-	-	Y	Y	-	-	-	-	-
020110	-	-	-	-	Y	Y	-	-	-	-	-	-
020120	-	-	-	-	-	Y	Y	-	-	-	-	-
020130	-	-	-	-	-	Y	Y	-	-	-	-	-
020150	-	-	-	-	-	Y	-	-	-	-	-	-
020200	Y	-	-	-	-	-	-	-	-	-	-	-
020407	Y	-	-	-	-	-	-	-	-	-	-	-
021620	Y	-	-	-	-	-	-	-	-	-	-	-
021720	Y	-	-	-	-	-	-	-	-	-	-	-
021750	Y	-	-	-	-	-	-	-	-	-	-	-
021770	Y	-	-	-	-	-	-	-	-	-	-	-
022000	Y	-	-	-	-	-	-	-	-	-	-	-
022020	Y	-	-	-	-	-	-	-	-	-	-	-
022030	Y	-	-	-	-	-	-	-	-	-	-	-
022070	Y	-	-	-	-	-	-	-	-	-	-	-
022100	Y	-	-	-	-	-	-	-	-	-	-	-
022120	Y	-	-	-	-	-	-	-	-	-	-	-
024041	Y	-	-	-	-	-	-	-	-	-	-	-
026055	Y	-	-	-	-	-	-	-	-	-	-	-
027770	-	-	-	-	-	Y	Y	-	-	-	-	-
030000	Y	-	-	-	-	-	-	Y	-	-	-	-
030001	Y	-	-	-	-	-	-	-	-	-	-	-
030010	-	-	-	-	-	-	-	Y	-	-	-	-
030020	Y	-	-	-	-	-	-	Y	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
030030	-	-	-	-	-	-	Y	-	-	-	-
030040	-	-	-	-	-	-	Y	-	-	-	-
030060	-	-	-	-	Y	-	Y	-	-	-	-
030070	-	-	-	-	-	-	Y	-	-	-	-
030100	-	-	-	-	-	-	Y	-	-	-	-
030110	-	-	-	-	-	-	Y	-	-	-	-
030150	-	-	-	-	-	-	Y	-	-	-	-
033000	Y	-	-	-	-	-	-	-	-	-	-
033041	Y	-	-	-	-	-	-	-	-	-	-
033105	Y	-	-	-	-	-	-	-	-	-	-
034000	Y	-	-	-	-	-	-	-	-	-	-
034100	Y	-	-	-	-	-	-	-	-	-	-
035102	Y	-	-	-	-	-	-	-	-	-	-
037770	Y	-	-	-	-	-	Y	-	-	-	-
040000	Y	-	-	-	-	-	-	-	-	-	-
040003	Y	Y	-	-	-	-	-	-	-	-	-
040030	-	Y	-	-	-	-	-	-	-	-	-
040177	-	Y	-	-	-	-	-	-	-	-	-
040203	-	Y	-	-	-	-	-	-	-	-	-
041000	-	-	Y	-	-	-	-	-	-	-	-
041500	-	-	-	Y	-	-	-	-	-	-	-
041554	Y	Y	Y	Y	-	Y	-	-	-	-	-
042002	Y	-	-	-	-	-	-	-	-	-	-
042004	Y	-	-	-	-	-	-	-	-	-	-
042036	Y	-	-	-	-	-	-	-	-	-	-
042072	-	Y	-	-	-	-	-	-	-	-	-
042300	Y	-	-	-	-	-	-	-	-	-	-
042377	Y	-	-	-	-	-	-	-	-	-	-
042530	Y	-	-	-	-	-	-	-	-	-	-
043100	Y	-	-	-	-	-	-	-	-	-	-
046171	-	-	-	Y	-	Y	-	-	-	-	-
046362	-	-	-	Y	-	-	-	-	-	-	-
050001	Y	-	-	-	-	-	-	-	-	-	-
050006	Y	-	-	-	-	-	-	-	-	-	-
051002	Y	-	-	-	-	-	-	-	-	-	-
051004	Y	-	-	-	-	-	-	-	-	-	-
053000	Y	-	-	-	-	-	-	-	-	-	-
053037	Y	-	-	-	-	-	-	-	-	-	-
053043	Y	-	-	-	-	-	-	-	-	-	-
053271	-	Y	-	-	-	-	-	-	-	-	-
054367	Y	-	-	-	-	-	-	-	-	-	-
054734	-	Y	-	-	-	-	-	-	-	-	-
057374	Y	-	-	-	-	-	-	-	-	-	-
060000	Y	-	-	-	-	-	-	-	-	-	-
061000	Y	-	-	-	-	-	-	-	-	-	-
061001	Y	-	-	-	-	-	-	-	-	-	-
061002	Y	-	-	-	-	-	-	-	-	-	-
061461	-	Y	-	-	-	-	-	-	-	-	-
061542	Y	Y	-	Y	Y	Y	-	-	-	-	-
061572	-	Y	-	-	-	-	-	-	-	-	-
061633	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU	
	IOU OFF	IOU OFF	CPU OFF				LHS	CS	LHS	CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS								
				0	1	2	3					
061664	Y	Y	-	Y	-	-	-	-	-	-	-	-
061747	-	Y	-	-	-	-	-	-	-	-	-	-
063677	-	Y	-	-	-	-	-	-	-	-	-	-
064640	Y	-	-	-	-	-	-	-	-	-	-	-
064041	Y	-	-	-	-	-	-	-	-	-	-	-
064724	Y	-	-	-	-	-	-	-	-	-	-	-
065537	Y	-	-	-	-	-	-	-	-	-	-	-
070000	Y	-	-	-	-	-	-	Y	-	-	-	-
070013	Y	-	-	-	-	-	-	-	-	-	-	-
070714	-	Y	-	-	-	-	-	-	-	-	-	-
071003	Y	-	-	-	-	-	-	-	-	-	-	-
071004	Y	-	-	-	-	-	-	-	-	-	-	-
072091	Y	-	-	-	-	-	-	-	-	-	-	-
072662	Y	-	-	-	-	-	-	-	-	-	-	-
072003	-	Y	-	-	-	-	-	-	-	-	-	-
073000	Y	-	-	-	-	-	-	-	-	-	-	-
073045	Y	-	-	-	-	-	-	-	-	-	-	-
073046	Y	-	-	-	-	-	-	-	-	-	-	-
073057	Y	-	-	-	-	-	-	-	-	-	-	-
074000	Y	-	-	-	-	-	-	-	-	-	-	Y
074001	-	-	-	-	-	-	-	-	-	-	-	Y
074003	Y	-	-	-	-	-	-	-	-	-	-	-
074031	Y	-	-	-	-	-	-	-	-	-	-	-
074040	Y	-	-	-	-	-	-	-	-	-	-	-
074041	Y	-	-	-	-	-	-	-	-	-	-	Y
074102	Y	-	-	-	-	-	-	-	-	-	-	-
074763	-	-	-	Y	-	-	-	-	-	-	-	-
075000	-	Y	-	-	-	-	-	-	-	-	-	-
075135	Y	-	-	-	-	-	-	-	-	-	-	-
076750	-	-	-	Y	-	-	-	-	-	-	-	-
077760	-	Y	-	-	-	-	-	-	-	-	-	-
077770	-	Y	-	-	-	-	-	-	-	-	-	-
100000	Y	-	-	Y	-	-	-	-	-	-	-	-
100010	Y	-	Y	Y	Y	-	-	-	-	-	-	-
106020	Y	-	Y	Y	-	-	-	-	-	-	-	-
106030	-	-	-	Y	-	-	-	-	-	-	-	-
100040	-	-	-	Y	-	-	-	-	-	-	-	-
100050	Y	-	-	Y	-	-	-	-	-	-	-	-
100060	-	-	-	Y	-	-	-	-	-	-	-	-
100070	-	-	-	Y	-	-	-	-	-	-	-	-
100100	-	-	-	Y	-	-	-	-	-	-	-	-
100110	-	-	-	Y	-	-	-	-	-	-	-	-
100120	Y	-	-	Y	-	-	-	-	-	-	-	-
100130	-	-	-	Y	-	-	-	-	-	-	-	-
100140	Y	-	-	-	-	-	-	-	-	-	-	-
100150	Y	-	Y	Y	-	-	-	-	-	-	-	-
100160	Y	-	-	-	-	-	-	-	-	-	-	-
100170	-	-	-	-	-	-	-	-	-	-	-	-
100400	Y	-	-	-	-	-	-	-	-	-	-	-
101770	-	-	Y	-	-	Y	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	32K—MEMORY—ADDRESS	0	1	2	3	LHS CS	LHS CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	0	1	2	3	LHS CS	LHS CS	MTU	
103037	Y	-	-	-	-	-	-	-	-	-	
103734	Y	-	-	-	-	-	-	-	-	-	
165051	Y	-	-	-	-	-	-	-	-	-	
110000	Y	Y	-	Y	Y	-	-	-	-	-	
110010	-	-	-	-	Y	-	-	-	-	-	
110020	-	-	-	-	Y	-	-	-	-	-	
110030	-	-	-	-	Y	-	-	-	-	-	
110040	-	-	-	-	Y	-	-	-	-	-	
110050	-	-	-	-	Y	-	-	-	-	-	
110060	-	-	-	-	Y	Y	-	-	-	-	
110070	-	-	-	-	Y	-	-	-	-	-	
110100	-	-	-	-	Y	-	-	-	-	-	
110110	-	-	-	-	Y	-	-	-	-	-	
110120	-	-	-	-	Y	-	-	-	-	-	
110130	-	-	-	-	Y	-	-	-	-	-	
110150	-	-	-	-	Y	-	-	-	-	-	
110170	Y	-	-	-	-	-	-	-	-	-	
111111	Y	Y	Y	Y	Y	Y	Y	-	-	-	
114035	-	Y	Y	-	-	-	-	-	-	-	
120000	Y	Y	-	Y	-	Y	-	-	-	-	
120010	-	-	-	-	-	Y	-	-	-	-	
120020	-	-	-	-	-	Y	-	-	-	-	
120030	-	-	-	-	-	Y	-	-	-	-	
120040	-	-	-	-	-	Y	-	-	-	-	
120050	-	-	-	-	-	Y	-	-	-	-	
126060	-	-	-	-	-	Y	-	-	-	-	
120070	-	-	-	-	-	Y	-	-	-	-	
120100	-	-	-	-	-	Y	-	-	-	-	
120110	-	-	-	-	-	Y	-	-	-	-	
120120	-	-	-	-	-	Y	-	-	-	-	
120130	-	-	-	-	-	Y	-	-	-	-	
120150	-	-	-	-	-	Y	-	-	-	-	
120320	Y	-	-	-	-	-	-	-	-	-	
130000	Y	-	-	-	-	-	Y	-	-	-	
130010	Y	-	-	-	-	-	Y	-	-	-	
130020	-	-	-	-	-	-	Y	-	-	-	
130030	-	-	-	-	-	-	Y	-	-	-	
130040	-	-	-	-	-	-	Y	-	-	-	
130050	-	-	-	-	-	-	Y	-	-	-	
130060	-	-	-	-	-	-	Y	-	-	-	
130070	-	-	-	-	-	-	Y	-	-	-	
130100	-	-	-	-	-	-	Y	-	-	-	
130110	-	-	-	-	-	-	Y	-	-	-	
130120	-	-	-	-	-	-	Y	-	-	-	
130130	-	-	-	-	-	-	Y	-	-	-	
130150	-	-	-	-	-	-	Y	-	-	-	
141231	Y	-	-	-	-	-	-	-	-	-	
142016	Y	-	-	-	-	-	-	-	-	-	
142077	Y	-	-	-	-	-	-	-	-	-	
143072	Y	-	-	-	-	-	-	-	-	-	

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU	
	IOU	OFF	CPU	OFF	CPU	OFF	LHS	CS	LHS	CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
143231	Y	-	-	-	-	-	-	-	-	-	-	-
154003	Y	-	-	-	-	-	-	-	-	-	-	-
165500	-	Y	-	-	-	-	-	-	-	-	-	-
174045	Y	-	-	-	-	-	-	-	-	-	-	-
175100	Y	-	-	-	-	-	-	-	-	-	-	-
175102	Y	-	-	-	-	-	-	-	-	-	-	-
177100	Y	-	-	-	-	-	-	-	-	-	-	-
177137	Y	-	-	-	-	-	-	-	-	-	-	-
177200	-	Y	-	-	-	-	-	-	-	-	-	-
200000	Y	-	-	-	-	-	-	-	-	-	-	-
200120	Y	-	-	-	-	-	-	-	-	-	-	-
200140	Y	-	-	-	-	-	-	-	-	-	-	-
200150	-	Y	-	-	-	Y	-	-	-	-	-	-
200160	Y	-	-	-	-	-	-	-	-	-	-	-
200630	-	Y	-	-	-	-	-	-	-	-	-	-
210000	-	-	-	-	Y	-	-	-	-	-	-	-
220100	-	-	-	-	-	Y	-	-	-	-	-	-
220500	Y	Y	Y	Y	Y	-	-	-	-	-	-	-
221000	-	-	Y	-	-	-	-	-	-	-	-	-
230000	-	-	-	-	-	-	Y	-	-	-	-	-
241700	-	Y	-	-	-	-	-	-	-	-	-	-
264550	Y	-	Y	-	-	-	-	-	-	-	-	-
264720	-	Y	-	-	-	-	-	-	-	-	-	-
300150	Y	-	-	-	-	-	-	-	-	-	-	-
310170	Y	-	-	-	-	-	-	-	-	-	-	-
315326	Y	-	-	-	-	-	-	-	-	-	-	-
330030	-	-	Y	-	-	-	-	-	-	-	-	-
347001	Y	-	-	-	-	-	-	-	-	-	-	-
364104	Y	-	-	-	-	-	-	-	-	-	-	-
374000	Y	-	-	-	-	-	-	-	-	-	-	-
374045	Y	-	-	-	-	-	-	-	-	-	-	-
374102	Y	-	-	-	-	-	-	-	-	-	-	-
374104	Y	-	-	-	-	-	-	-	-	-	-	-
374134	Y	-	-	-	-	-	-	-	-	-	-	-
375153	Y	-	-	-	-	-	-	-	-	-	-	-
377110	Y	-	-	-	-	-	-	-	-	-	-	-
377112	Y	-	-	-	-	-	-	-	-	-	-	-
400000	Y	Y	Y	-	Y	Y	-	-	-	-	-	-
400100	-	Y	-	-	-	-	-	-	-	-	-	-
400150	-	-	-	Y	-	-	-	-	-	-	-	-
401201	Y	-	-	-	-	-	-	-	-	-	-	-
410000	-	Y	Y	-	-	Y	Y	-	-	-	-	-
410150	-	-	-	-	Y	-	-	-	-	-	-	-
420150	-	-	-	-	-	Y	-	-	-	-	-	-
421001	Y	-	-	-	-	-	-	-	-	-	-	-
421003	Y	-	-	-	-	-	-	-	-	-	-	-
430000	-	-	-	-	Y	-	-	-	-	-	-	-
430150	-	-	-	-	-	-	Y	-	-	-	-	-
431001	Y	-	-	-	-	-	-	-	-	-	-	-
431011	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
441554	-	-	Y	-	-	-	-	-	-	-	-
501700	Y	-	-	-	-	-	Y	-	-	-	-
502603	Y	-	-	-	-	-	-	-	-	-	-
510000	Y	-	Y	-	Y	Y	-	-	-	-	-
510033	Y	-	-	-	-	-	-	-	-	-	-
535000	Y	-	-	-	-	-	-	-	-	-	-
535005	Y	-	-	-	-	-	-	-	-	-	-
537003	Y	-	-	-	-	-	-	-	-	-	-
600000	Y	-	-	-	-	-	-	-	-	-	-
600100	-	-	-	Y	-	-	-	-	-	-	-
601554	-	-	Y	Y	-	-	-	-	-	-	-
603020	-	-	-	Y	-	-	-	-	-	-	-
631207	Y	-	-	-	-	-	-	-	-	-	-
635001	Y	-	-	-	-	-	-	-	-	-	-
635007	Y	-	-	-	-	-	-	-	-	-	-
635017	Y	-	-	-	-	-	-	-	-	-	-
641554	Y	Y	Y	Y	-	-	-	-	-	-	-
660025	Y	Y	Y	Y	Y	Y	Y	-	-	-	-
666230	-	-Y	Y	-	-	Y	-	-	-	-	-
666233	-	-	Y	-	-	Y	-	-	-	-	-
670374	-	Y	-	-	-	-	-	-	-	-	-
675000	-	-	Y	-	-	-	-	-	-	-	-
700000	Y	Y	Y	Y	Y	Y	Y	-	-	-	-
700000	Y	Y	Y	Y	-	-	-	-	-	-	-
700002	Y	Y	Y	Y	Y	Y	Y	-	-	-	Y
700003	Y	Y	Y	Y	Y	Y	Y	-	-	-	Y
700004	Y	-	-	Y	-	-	Y	-	-	-	-
700005	Y	Y	-	-	-	-	-	-	-	-	-
700006	Y	Y	-	-	-	-	-	-	-	-	-
700007	Y	-	-	-	-	-	-	-	-	-	-
700010	Y	Y	-	-	-	-	-	-	-	-	-
700011	Y	Y	-	-	-	-	-	-	-	-	-
700012	Y	-	-	-	-	-	-	-	-	-	-
700013	Y	-	-	-	-	-	Y	-	-	-	-
700014	Y	-	-	-	-	-	-	-	-	-	-
700015	Y	-	-	-	-	-	-	-	-	-	-
700016	Y	-	-	-	-	-	-	-	-	-	-
700017	Y	-	-	-	-	-	-	-	-	-	-
700020	Y	Y	-	-	-	-	-	-	-	-	-
700021	Y	-	-	Y	-	-	-	-	-	-	-
700022	Y	Y	-	-	-	-	-	-	-	-	-
700023	-	Y	-	-	-	-	-	-	-	-	-
700024	Y	-	-	-	-	-	-	-	-	-	-
700025	Y	-	-	-	-	-	-	-	-	-	-
700026	-	Y	-	-	-	-	-	-	-	-	-
700027	Y	Y	-	-	-	-	-	-	-	-	-
700030	Y	Y	-	-	-	-	-	-	-	-	-
700031	Y	-	-	-	-	-	-	-	-	-	-
700032	-	Y	-	-	-	-	-	-	-	-	-
700033	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	CPU	IOU	BUFFER	0	1	2	3	LHS	CS	LHS	CS	
700035	Y	-	-	-	-	-	-	-	-	-	-	-
700037	Y	-	-	-	-	-	-	-	-	-	-	-
700040	Y	Y	-	Y	-	-	-	-	-	-	-	-
700041	Y	-	-	-	-	-	-	-	-	-	-	-
700043	Y	-	-	-	-	-	-	-	-	-	-	-
700644	-	Y	-	-	-	Y	-	-	-	-	-	-
700045	Y	-	-	-	-	-	-	-	-	-	-	-
700046	-	-	-	-	Y	Y	-	-	-	-	-	-
700047	-	Y	-	-	-	-	-	-	-	-	-	-
700050	-	Y	-	-	-	-	-	-	-	-	-	-
700051	Y	-	-	-	-	-	-	-	-	-	-	-
700053	Y	-	-	-	-	-	-	-	-	-	-	-
700054	Y	-	-	-	-	-	-	-	-	-	-	-
700057	Y	-	-	-	-	-	-	-	-	-	-	-
700060	Y	Y	-	Y	-	-	-	-	-	-	-	-
700061	Y	-	-	-	-	-	-	-	-	-	-	-
700062	Y	-	-	-	-	-	-	-	-	-	-	-
700063	Y	-	-	-	-	-	-	-	-	-	-	-
700064	Y	Y	-	-	-	-	-	-	-	-	-	-
700065	Y	Y	-	-	-	-	-	-	-	-	-	-
700066	Y	Y	-	-	-	-	-	-	-	-	-	-
700067	Y	-	-	-	-	-	-	-	-	-	-	-
700070	Y	-	-	Y	-	-	-	-	-	-	-	-
700071	Y	Y	-	-	-	-	-	-	-	-	-	-
700072	Y	Y	-	-	-	-	-	-	-	-	-	-
700073	Y	-	-	-	-	-	-	-	-	-	-	-
700074	Y	-	-	Y	-	-	-	-	-	-	-	-
700075	Y	Y	-	-	-	-	-	-	-	-	-	-
700076	Y	Y	-	Y	-	-	-	-	-	-	-	-
700077	Y	-	-	-	-	-	-	-	-	-	-	-
701000	Y	Y	-	Y	-	Y	-	-	-	-	-	-
700110	Y	-	-	Y	-	-	-	-	-	-	-	-
700114	Y	-	-	-	-	-	-	-	-	-	-	-
700230	-	-	-	-	-	-	-	-	-	-	-	Y
700400	Y	-	-	-	-	-	-	-	-	-	-	-
700433	-	-	Y	-	-	-	-	-	-	-	-	-
700525	Y	-	-	-	-	-	-	-	-	-	-	-
700770	-	-	-	-	-	-	-	-	-	-	-	Y
702600	-	-	-	-	-	-	-	-	-	-	-	Y
704100	-	Y	-	-	-	-	-	-	-	-	-	-
704203	Y	-	-	-	-	-	-	-	-	-	-	-
710001	-	Y	-	-	-	-	-	-	-	-	-	-
710020	-	Y	-	-	-	-	-	-	-	-	-	-
720000	Y	-	-	-	-	-	-	-	-	-	-	-
731203	Y	-	-	-	-	-	-	-	-	-	-	-
735005	Y	-	-	-	-	-	-	-	-	-	-	-
735015	Y	-	-	-	-	-	-	-	-	-	-	-
736077	Y	-	-	-	-	-	-	-	-	-	-	-
737000	Y	-	-	-	-	-	-	-	-	-	-	-
737003	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
737004	-Y	-	-	-	-	-	-	-	-	-	
740100	-	Y	-	-	-	-	-	-	-	-	
740502	Y	-	-	-	-	-	-	-	-	-	
770002	Y	-	-	-	-	-	-	-	-	-	
770020	-	-	-	-	-	-	-	-	-	Y	
771014	Y	-	-	-	-	-	-	-	-	-	
772404	-	-	-	-	-	-	-	-	-	Y	
774045	Y	-	-	-	-	-	-	-	-	-	
774500	-	-	-	-	-	Y	-	-	-	-	
774501	Y	-	-	-	-	-	-	-	-	-	
774502	-	-	-	Y	-	-	-	-	-	-	
774525	Y	-	-	-	-	-	-	-	-	-	
774544	-	Y	-	-	-	-	-	-	-	-	
774554	-	Y	-	-	-	-	-	-	-	-	
774564	-	Y	-	-	-	-	-	-	-	-	
775200	-	Y	Y	-	-	-	-	-	-	-	
775213	Y	-	-	-	-	-	-	-	-	-	
777003	Y	-	-	-	-	-	-	-	-	-	
777004	-	-	-	-	-	-	-	-	-	Y	
777007	-	-	-	Y	-	-	-	-	-	-	
777010	Y	-	-	-	-	-	-	-	-	-	
777012	Y	-	-	-	-	-	-	-	-	-	
777014	Y	-	-	-	-	-	-	-	-	-	
777200	Y	-	-	-	-	-	-	-	-	-	
777770	-	-	-	-	-	-	-	-	-	Y	
777777	Y	-	-	-	-	-	-	-	-	Y	

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	IOU OFF	IOU OFF	IOU OFF	LHS CS	LHS CS			
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	MTU	
				0	1	2	3				
000000	Y	Y	Y	-	Y	Y	Y	-	-	-	-
000001	-	-	-	-	-	-	-	-	-	-	Y
000003	Y	-	Y	-	Y	-	-	-	-	-	-
000004	Y	Y	Y	-	-	-	-	-	-	-	-
000005	Y	Y	Y	-	-	-	-	-	-	-	-
000006	-	Y	Y	-	-	-	-	-	-	-	-
000007	Y	Y	Y	-	-	-	-	Y	-	Y	-
000010	Y	Y	Y	-	Y	Y	-	-	-	-	-
000011	Y	Y	Y	-	-	-	-	-	-	-	-
000012	Y	Y	Y	-	-	-	-	-	-	-	-
000014	-	Y	Y	-	-	-	-	-	-	-	-
000016	-	-	Y	-	-	-	-	-	-	-	-
000017	-	Y	-	-	-	-	-	-	-	-	-
000020	Y	Y	-	-	-	-	-	-	-	-	-
000031	-	Y	-	-	-	-	-	-	-	-	-
000033	Y	Y	Y	-	-	-	-	Y	-	Y	-
000037	-	Y	-	-	-	-	-	-	-	-	-
000044	-	-	-	-	-	-	-	-	-	-	Y
000050	Y	Y	-	-	-	-	-	Y	-	-	-
000054	-	Y	-	-	-	-	-	-	-	-	-
000057	Y	-	-	-	-	-	-	-	-	-	-
000070	Y	-	-	-	-	-	-	-	-	-	-
000077	Y	-	-	-	-	-	-	-	-	-	-
000111	Y	-	-	-	-	-	-	-	-	-	-
000132	-	Y	Y	-	Y	Y	-	-	-	-	-
000203	Y	Y	-	-	-	-	-	-	-	-	-
000350	Y	Y	Y	-	-	-	-	-	-	-	-
000352	Y	Y	-	-	-	-	-	-	-	-	-
000442	Y	Y	-	-	-	-	-	-	-	-	-
000735	-	Y	-	-	-	-	-	-	-	-	-
000754	-	-	Y	-	-	-	-	-	-	-	-
000771	Y	-	-	-	-	-	-	-	-	-	-
000772	Y	-	-	-	-	-	-	-	-	-	-
000773	Y	-	-	-	-	-	-	-	-	-	-
000774	Y	-	-	-	-	-	-	-	-	-	-
000775	Y	Y	Y	Y	Y	Y	-	-	-	-	-
000776	Y	-	-	-	-	-	-	-	-	-	-
000777	Y	-	-	-	Y	-	-	-	-	-	-
000100	Y	-	Y	-	-	Y	-	-	-	-	-
001001	-	Y	-	-	-	-	Y	-	-	-	-
001002	Y	Y	-	-	-	-	-	-	-	-	-
001003	Y	-	-	Y	-	-	-	-	-	-	-
001005	Y	-	-	-	-	-	-	-	-	-	-
001006	Y	Y	-	-	-	-	-	-	-	-	-
001010	Y	-	-	-	-	-	-	-	-	-	-
001011	Y	-	-	-	-	-	-	-	-	-	-
001064	-	-	-	-	-	-	-	-	-	-	Y
001500	-	-	Y	-	-	-	-	-	-	-	-
001670	Y	-	-	-	-	Y	-	-	-	-	-
001702	Y	Y	-	-	Y	-	-	-	-	-	-
001703	Y	-	-	-	-	-	-	-	-	-	-
001705	-	-	-	-	-	Y	-	-	-	-	-
001707	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU	
	IOU OFF	IOU OFF	0	1	2	3	LHS	CS	LHS	CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS								
001711	-	-	-	-	-	Y	-	-	-	-	-	
001712	-	-	-	-	-	-	Y	-	-	-	-	
001713	Y	-	-	-	-	-	-	-	-	-	-	
001715	Y	-	-	-	-	-	-	-	-	-	-	
001721	Y	-	-	-	-	-	-	-	-	-	-	
001753	Y	-	-	-	-	-	-	-	-	-	-	
001754	Y	-	-	-	-	-	-	-	-	-	-	
001755	Y	-	-	-	-	-	-	-	-	-	-	
001764	Y	-	-	-	-	-	-	-	-	-	-	
001767	Y	-	-	-	-	-	-	-	-	-	-	
001770	Y	-	-	-	-	-	-	-	-	-	-	
002000	-	-	-	-	-	-	Y	-	-	-	-	
002100	-	Y	-	Y	-	-	-	Y	-	Y	-	
002200	-	-	-	-	-	-	-	-	-	Y	-	
002420	Y	Y	Y	-	Y	Y	-	Y	-	Y	-	
003000	-	-	-	-	Y	-	-	-	-	-	-	
003046	-	-	-	Y	-	-	-	-	-	-	-	
004000	-	Y	-	-	-	-	-	-	-	-	-	
004100	-	Y	-	-	-	-	-	-	-	-	-	
004420	Y	Y	Y	-	-	-	-	-	-	-	-	
010033	-	-	Y	-	-	-	-	Y	-	Y	-	
010050	Y	-	-	-	-	-	-	-	-	Y	-	
010111	Y	-	-	-	-	-	-	-	-	-	-	
011011	Y	-	-	-	-	-	-	-	-	-	-	
011111	Y	-	-	-	-	-	-	-	-	-	-	
012000	-	-	-	-	Y	Y	-	-	-	-	-	
012040	-	Y	-	-	-	-	-	-	-	-	-	
012100	-	Y	Y	-	-	-	Y	-	-	Y	-	
012120	-	Y	-	-	-	-	-	-	-	-	-	
012200	-	-	-	-	-	-	-	Y	-	Y	-	
013221	-	-	-	-	-	-	Y	-	-	-	-	
017770	-	-	-	-	-	Y	-	-	-	-	-	
020000	-	-	-	-	-	Y	-	-	-	-	-	
020033	Y	Y	-	-	-	-	-	Y	-	Y	-	
020040	-	-	-	-	-	-	Y	-	-	-	-	
022100	-	-	Y	-	-	-	-	-	-	-	-	
030030	-	-	-	-	-	-	Y	-	-	-	-	
030033	-	-	-	-	-	-	-	Y	-	Y	-	
032100	-	Y	Y	-	-	-	-	-	-	-	-	
040033	-	-	Y	-	-	-	-	Y	-	Y	-	
040772	-	Y	-	-	-	-	-	-	-	-	-	
041000	-	-	Y	-	-	-	-	-	-	-	-	
041500	-	Y	Y	-	-	Y	-	-	-	-	-	
041554	-	Y	-	-	-	-	-	-	-	-	-	
042100	-	-	Y	-	-	-	-	-	-	-	-	
050033	-	-	-	-	-	-	-	Y	-	Y	-	
052100	-	-	Y	-	-	-	-	-	-	-	-	
060033	-	Y	Y	-	-	-	-	Y	-	Y	-	
062100	-	-	Y	-	-	-	-	-	-	-	-	
065732	-	Y	-	-	-	-	-	-	-	-	-	

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0 LHS CS		CNSL-1 LHS CS		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
065750	-	Y	-	-	-	-	-	-	-	-	-	-
066777	-	Y	-	-	-	-	-	-	-	-	-	-
760033	-	-	Y	-	-	-	-	Y	-	Y	-	-
072100	-	-	Y	-	-	-	-	-	-	-	-	-
074004	Y	-	-	-	-	-	-	-	-	-	-	-
074020	Y	-	-	-	-	-	-	-	-	-	-	-
074004	Y	Y	-	-	-	-	-	-	-	-	-	-
074100	-	Y	Y	-	-	-	-	-	-	-	-	-
101111	Y	-	-	-	-	-	-	-	-	-	-	-
101133	Y	-	-	-	-	-	-	-	-	-	-	-
102040	-	-	-	-	-	-	-	Y	-	-	-	-
103001	Y	-	-	-	-	-	-	-	-	-	-	-
105000	-	Y	-	-	-	-	-	-	-	-	-	-
105001	Y	-	-	-	-	-	-	-	-	-	-	-
110000	-	-	-	-	Y	-	-	-	-	-	-	-
110033	Y	-	-	-	-	-	-	-	-	-	-	-
110111	Y	-	-	-	-	-	-	-	-	-	-	-
111011	Y	Y	Y	-	-	-	-	-	-	-	-	-
111101	Y	Y	Y	-	-	-	-	-	-	-	-	-
111111	Y	-	Y	-	-	-	-	-	-	-	-	-
111113	Y	-	-	-	-	-	-	-	-	-	-	-
111115	Y	-	-	-	-	-	-	-	-	-	-	-
111131	Y	-	-	-	-	-	-	-	-	-	-	-
111151	Y	-	-	-	-	-	-	-	-	-	-	-
113111	Y	-	-	-	-	-	-	-	-	-	-	-
115111	Y	-	-	-	-	-	-	-	-	-	-	-
111511	Y	-	-	-	-	-	-	-	-	-	-	-
111573	-	-	Y	-	-	-	-	-	-	-	-	-
112040	-	-	-	-	-	-	-	-	-	Y	-	-
113111	Y	-	-	-	-	-	-	-	-	-	-	-
115111	Y	-	-	-	-	-	-	-	-	-	-	-
120000	-	-	-	-	-	Y	-	-	-	-	-	-
125500	-	-	-	Y	-	-	Y	-	-	-	-	-
130000	-	-	-	-	-	-	Y	-	-	-	-	-
131111	Y	-	-	-	-	-	-	-	-	-	-	-
151111	Y	-	-	-	-	-	-	-	-	-	-	-
165500	-	Y	Y	Y	Y	Y	Y	-	-	-	-	-
174004	Y	-	-	-	-	-	-	-	-	-	-	-
174030	Y	Y	-	-	-	-	-	-	-	-	-	-
174040	-	Y	-	-	-	-	-	-	-	-	-	-
200020	-	Y	-	-	-	-	-	-	-	-	-	-
220500	-	Y	Y	Y	Y	Y	Y	-	-	-	-	-
220501	-	-	Y	-	Y	-	-	-	-	-	-	-
220710	-	-	-	-	Y	-	-	-	-	-	-	-
221660	-	Y	Y	-	Y	-	-	-	-	-	-	-
241700	-	-	-	Y	-	-	-	-	-	-	-	-
260500	Y	-	-	-	-	Y	-	-	-	-	-	-
264550	-	-	Y	-	-	-	-	-	-	-	-	-
264560	-	Y	-	-	-	-	-	-	-	-	-	-
274040	-	Y	-	-	-	-	-	-	-	-	-	-
311111	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0 LHS CS		CNSL-1 LHS CS		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
314000	-	-	Y	-	-	-	-	-	-	-	-	-
320243	Y	-	-	-	-	-	-	-	-	-	-	-
320427	-	-	-	-	-	Y	-	-	-	-	-	-
374040	-	Y	-	-	-	-	-	-	-	-	-	-
377777	Y	-	-	-	-	-	-	-	-	-	-	-
400000	Y	Y	Y	Y	Y	Y	-	-	-	-	-	-
400400	Y	-	-	-	-	-	-	-	-	-	-	-
400433	Y	-	-	-	-	-	-	-	-	-	-	-
402064	-	Y	-	-	-	-	-	-	-	-	-	-
404500	Y	-	-	-	-	-	-	-	-	-	-	-
410000	-	Y	-	-	Y	Y	-	-	-	-	-	-
474040	-	Y	-	-	-	-	-	-	-	-	-	-
500450	Y	-	-	-	-	-	-	-	-	-	-	-
501700	-	Y	Y	-	-	Y	-	-	-	-	-	-
510000	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-
510020	-	-	-	-	Y	-	-	-	-	-	-	-
510004	Y	Y	Y	Y	-	-	-	-	-	-	-	-
510005	Y	Y	Y	-	-	-	-	-	-	-	-	-
510006	-	Y	Y	-	-	-	-	-	-	-	-	-
510007	-	Y	Y	-	-	-	-	-	-	-	-	-
510001	Y	Y	Y	Y	-	-	-	-	-	-	-	-
510011	-	Y	Y	-	-	-	-	-	-	-	-	-
510012	Y	Y	Y	-	-	-	-	-	-	-	-	-
510013	-	-	Y	-	-	-	-	-	-	-	-	-
510014	-	-	Y	-	-	-	-	-	-	-	-	-
510017	-	Y	-	-	Y	-	-	-	-	-	-	-
510000	-	Y	Y	Y	-	Y	Y	-	-	-	-	-
510021	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-
510023	Y	-	-	-	-	-	-	-	-	-	-	-
510033	Y	Y	Y	-	-	-	-	-	-	-	-	-
510037	Y	-	-	-	-	-	-	-	-	-	-	-
510044	Y	-	-	-	-	-	-	-	-	-	-	-
510050	Y	Y	Y	-	-	-	-	-	-	-	-	-
511000	-	Y	-	-	-	-	-	-	-	-	-	-
511001	Y	-	-	-	-	-	-	-	-	-	-	-
511111	Y	-	-	-	-	-	-	-	-	-	-	-
511224	-	-	-	-	-	-	Y	-	-	-	-	-
511604	-	-	-	-	-	Y	-	-	-	-	-	-
514021	Y	-	-	-	-	-	-	-	-	-	-	-
514033	Y	-	-	-	-	-	-	-	-	-	-	-
534537	Y	-	-	-	-	-	-	-	-	-	-	-
577777	Y	-	-	-	-	-	-	-	-	-	-	-
600000	Y	-	-	-	-	-	-	-	-	-	-	-
602214	-	Y	-	-	-	-	-	-	-	-	-	-
602310	-	Y	-	-	-	-	-	-	-	-	-	-
602314	-	Y	-	-	-	-	-	-	-	-	-	-
640000	-	Y	Y	Y	Y	Y	-	-	-	-	-	-
641554	-	Y	Y	Y	Y	Y	-	-	-	-	-	-
660025	-	-	Y	-	Y	-	-	-	-	-	-	-
666230	-	-	Y	Y	-	-	Y	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	0	1	2	3	LHS	CS	LHS	CS	
ERROR STOP NUMBER	CPU	IOU	BUFFER										
666233	-	Y	Y	-	-	Y	Y	-	-	-	-	-	-
675000	-	-	Y	Y	Y	-	-	-	-	-	-	-	-
677777	Y	-	-	-	-	-	-	-	-	-	-	-	-
700000	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-	-
700001	Y	-	-	-	-	-	-	-	-	-	-	-	-
700002	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-	-
700003	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-	-
700004	Y	-	-	-	-	-	-	-	-	-	-	-	-
700007	Y	-	-	-	-	-	-	-	-	-	-	-	-
700011	-	Y	Y	-	-	-	-	-	-	-	-	-	-
700015	Y	-	-	-	-	-	-	-	-	-	-	-	-
700020	Y	-	-	-	-	-	-	-	-	-	-	-	-
700021	Y	-	-	-	-	-	-	-	-	-	-	-	-
700023	Y	-	-	-	-	-	-	-	-	-	-	-	-
700024	-	Y	-	-	-	-	-	-	-	-	-	-	-
700026	Y	-	-	-	-	-	-	-	-	-	-	-	-
700041	Y	-	-	-	-	-	-	-	-	-	-	-	-
700100	Y	-	-	-	-	-	-	-	-	-	-	-	-
700200	Y	-	-	-	-	-	-	-	-	-	-	-	-
700433	Y	-	-	-	-	-	-	-	-	-	-	-	-
701000	Y	-	-	-	-	-	-	-	-	-	-	-	-
702600	-	-	-	-	-	-	-	-	-	-	-	Y	-
710000	Y	-	-	-	-	-	-	-	-	-	-	-	-
710003	Y	-	-	-	-	-	-	-	-	-	-	-	-
710017	Y	-	-	-	-	-	-	-	-	-	-	-	-
710021	Y	-	-	-	-	-	-	-	-	-	-	-	-
710033	Y	-	-	-	-	-	-	-	-	-	-	-	-
717070	Y	-	-	-	-	-	-	-	-	-	-	-	-
737510	-	Y	-	-	-	-	-	-	-	-	-	-	-
737777	Y	-	-	-	-	-	-	-	-	-	-	-	-
740220	-	Y	Y	-	-	Y	-	-	-	-	-	-	-
757777	Y	-	-	-	-	-	-	-	-	-	-	-	-
767777	Y	-	-	-	-	-	-	-	-	-	-	-	-
770503	-	-	Y	-	-	-	-	-	-	-	-	-	-
772040	-	Y	Y	-	-	-	-	-	-	-	-	-	-
773777	Y	-	-	-	-	-	-	-	-	-	-	-	-
774500	-	-	Y	Y	-	-	-	-	-	-	-	-	-
774512	Y	-	-	-	-	-	-	-	-	-	-	-	-
774573	-	-	-	Y	-	-	-	-	-	-	-	-	-
775777	Y	-	-	-	-	-	-	-	-	-	-	-	-
776067	Y	-	-	-	-	-	-	-	-	-	-	-	-
776777	Y	-	-	-	-	-	-	-	-	-	-	-	-
777000	Y	-	-	-	-	-	-	-	-	-	-	-	-
777377	Y	Y	Y	-	-	-	-	-	-	-	-	-	-
777577	Y	Y	Y	-	-	-	-	-	-	-	-	-	-
777677	Y	Y	Y	-	-	-	-	-	-	-	-	-	-
777737	Y	Y	Y	-	-	-	-	-	-	-	-	-	-
777757	Y	Y	Y	-	-	-	-	-	-	-	-	-	-
777767	Y	Y	Y	-	-	-	-	-	-	-	-	-	-
777770	-	-	-	-	-	-	-	-	-	-	-	Y	-
777773	Y	-	-	-	-	-	-	-	-	-	-	-	-
777775	Y	-	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF								
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
777776	Y	-	-	-	-	-	-	-	-	-	-	-
777777	-	-	-	-	-	-	-	-	-	-	-	Y

Change 4 2-30

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF				CPU OFF				CNSL-0		CNSL-1		MTU
	CPU	IOU	BUFFER		0	1	2	3	LHS	CS	LHS	CS	
000000	Y	-	-	-	-	-	-	-	-	-	-	-	-
000003	-	Y	-	-	-	-	-	-	-	-	-	-	-
000044	Y	-	-	-	-	-	-	-	-	-	-	-	-
000407	-	Y	-	-	-	-	-	-	-	-	-	-	-
000775	-	-	-	-	-	-	Y	-	-	-	-	-	-
001001	-	Y	-	-	-	-	-	-	-	-	-	-	-
001003	Y	Y	-	-	-	-	-	-	-	-	-	-	-
001007	Y	Y	-	-	-	-	-	-	-	-	-	-	-
001016	Y	-	-	-	-	-	-	-	-	-	-	-	-
001017	Y	Y	Y	-	-	-	-	-	-	-	-	-	-
001024	Y	-	-	-	-	-	-	-	-	-	-	-	-
003046	-	-	-	Y	-	-	-	-	-	-	-	-	-
111111	Y	-	-	-	-	-	-	-	-	-	-	-	-
700000	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-	-
700002	-	-	-	Y	-	-	-	-	-	-	-	-	-
700003	-	-	-	-	Y	-	Y	-	-	-	-	-	-
700033	Y	-	-	-	-	-	-	-	-	-	-	-	-
777777	Y	-	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS	CS	LHS	CS	
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
000001	Y	-	-	-	-	-	Y	-	-	-	-	-
000002	-	-	-	-	-	-	Y	-	-	-	-	-
000003	-	-	-	-	-	-	Y	-	Y	-	-	-
000004	-	-	-	-	-	-	Y	-	-	-	-	-
000005	-	-	-	-	-	-	Y	Y	-	-	-	-
000007	-	-	-	-	-	-	Y	-	-	-	-	-
000010	-	-	-	-	-	-	Y	Y	-	-	-	-
000012	-	-	-	-	-	-	Y	-	-	-	-	-
000014	-	-	-	-	-	-	Y	-	-	-	-	-
000016	-	-	-	-	-	-	Y	-	-	-	-	-
000017	Y	-	Y	-	-	-	Y	Y	Y	-	-	-
000052	-	Y	-	-	-	-	-	-	-	-	-	-
000322	-	-	-	-	-	-	Y	-	-	-	-	-
000474	Y	-	-	-	-	-	-	-	-	-	-	-
000522	-	-	-	-	-	-	Y	-	-	-	-	-
000770	-	Y	-	-	-	-	-	-	-	-	-	-
001001	-	Y	-	-	-	-	-	-	-	-	-	-
001003	-	Y	-	-	-	-	-	-	-	-	-	-
001017	-	Y	-	-	-	-	-	-	Y	-	-	-
001022	-	-	-	-	-	-	Y	-	Y	-	-	-
001023	-	-	-	-	-	-	Y	-	-	-	-	-
001666	Y	-	-	-	-	-	-	-	-	-	-	-
001670	Y	-	-	-	-	-	-	-	-	-	-	-
005101	Y	-	-	-	-	-	-	-	-	-	-	-
005203	Y	-	-	-	-	-	-	-	-	-	-	-
010001	-	-	-	-	-	-	-	-	Y	-	-	-
010002	-	-	-	-	-	-	-	-	Y	-	-	-
010003	-	-	-	-	-	-	-	-	Y	-	-	-
010004	-	-	-	-	-	-	-	-	Y	-	-	-
010005	-	-	-	-	-	-	-	-	Y	-	-	-
010007	-	-	-	-	-	-	-	-	Y	Y	-	-
010010	-	-	-	-	-	-	-	-	Y	Y	-	-
010012	-	-	-	-	-	-	-	-	Y	-	-	-
010013	-	-	-	-	-	-	-	-	Y	-	-	-
010014	-	-	-	-	-	-	-	-	Y	-	-	-
010017	-	-	Y	-	-	-	-	-	Y	Y	-	-
010322	-	-	-	-	-	-	Y	-	-	-	-	-
010722	-	-	-	-	-	-	Y	-	-	-	-	-
011017	-	-	-	-	-	-	Y	-	-	-	-	-
011022	-	-	-	-	-	-	Y	-	Y	-	-	-
011023	-	-	-	-	-	-	-	-	Y	-	-	-
015022	Y	-	-	-	-	-	-	-	-	-	-	-
020017	-	Y	-	-	-	-	-	-	-	-	-	-
020050	-	-	-	-	Y	-	-	-	-	-	-	-
030017	-	Y	-	-	-	-	-	-	-	-	-	-
034203	Y	-	-	-	-	-	-	-	-	-	-	-
035203	Y	-	-	-	-	-	-	-	-	-	-	-
040017	-	Y	-	-	-	-	-	-	-	-	-	-
050017	-	Y	-	-	-	-	-	-	-	-	-	-
053777	-	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU	
	IOU OFF	IOU OFF	CPU OFF				LHS	CS	LHS	CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS								
				0	1	2	3					
061461	-	Y	-	-	-	-	-	-	-	-	-	-
100017	Y	Y	-	-	-	-	-	Y	-	Y	-	-
100107	-	-	-	-	-	-	-	-	-	Y	-	-
100117	-	Y	Y	-	-	-	-	Y	-	Y	-	-
100217	-	-	-	-	-	-	-	Y	-	Y	-	-
100317	-	-	-	-	-	-	-	Y	-	-	-	-
100322	-	-	Y	-	-	-	-	-	-	-	-	-
100417	-	-	-	-	-	-	-	Y	Y	Y	-	-
100517	-	-	-	-	-	-	-	Y	-	Y	-	-
160601	-	-	Y	-	-	-	-	-	-	-	-	-
100617	-	-	Y	-	-	-	-	Y	-	Y	-	-
100717	-	-	Y	-	-	-	-	Y	-	Y	-	-
101001	-	-	Y	-	-	-	-	-	-	-	-	-
101002	-	Y	Y	-	-	-	-	-	-	-	-	-
101004	-	-	Y	-	-	-	-	-	-	-	-	-
101007	-	-	Y	-	-	-	-	-	-	-	-	-
101010	-	-	Y	-	-	-	-	-	-	-	-	-
101016	-	-	Y	-	-	-	-	-	-	-	-	-
101017	Y	Y	Y	-	-	-	-	Y	Y	Y	Y	Y
101022	-	Y	Y	-	-	-	-	Y	-	Y	-	-
101023	-	Y	-	-	-	-	-	-	-	-	-	-
111011	Y	-	-	-	-	-	-	-	-	-	-	-
111111	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-
113224	-	-	Y	-	-	-	-	-	-	-	-	-
130000	-	-	-	-	-	-	Y	-	-	-	-	-
147777	-	-	Y	-	-	-	-	-	-	-	-	-
200000	-	-	Y	-	-	-	-	-	-	-	-	-
220500	Y	Y	Y	Y	Y	-	-	-	-	-	-	-
400000	-	-	Y	-	-	-	-	-	-	-	-	-
505022	Y	-	-	-	-	-	-	-	-	-	-	-
510000	-	-	Y	Y	Y	-	Y	-	-	-	-	-
510021	-	-	Y	-	-	-	-	-	-	-	-	-
510033	Y	-	-	-	-	-	-	-	-	-	-	-
510550	-	-	Y	-	-	-	-	-	-	-	-	-
511224	-	-	Y	Y	-	-	-	-	-	-	-	-
511225	-	-	Y	-	-	-	-	-	-	-	-	-
640000	-	-	-	-	Y	-	-	-	-	-	-	-
666233	-	-	-	-	-	Y	-	-	-	-	-	-
700000	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	-
700002	-	Y	Y	-	-	-	Y	-	-	-	-	-
700003	Y	-	-	Y	Y	-	-	-	-	-	-	-
700603	Y	-	-	-	-	-	-	-	-	-	-	-
740603	Y	-	-	-	-	-	-	-	-	-	-	-
760603	Y	-	-	-	-	-	-	-	-	-	-	-
770603	Y	-	-	-	-	-	-	-	-	-	-	-
777003	Y	-	-	-	-	-	-	-	-	-	-	-
777201	Y	-	-	-	-	-	-	-	-	-	-	-
777777	Y	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	CPU	IOU	BUFFER	0	1	2	3	LHS	CS	LHS	CS	
000000	Y	-	-	-	-	-	-	-	-	-	-	Y
000001	Y	Y	-	Y	Y	Y	Y	-	-	-	-	Y
000002	Y	-	-	-	-	-	-	-	-	-	-	-
000003	Y	-	-	Y	-	-	-	-	-	-	-	-
000005	-	-	-	Y	-	-	-	-	-	-	-	-
000006	Y	-	-	-	-	-	-	-	-	-	-	-
000011	Y	-	-	Y	-	-	-	-	-	-	-	-
000013	Y	-	-	-	-	-	-	-	-	-	-	-
000016	Y	-	-	-	-	-	-	-	-	-	-	-
000032	Y	-	-	-	-	-	-	-	-	-	-	-
000037	Y	-	-	-	-	-	-	-	-	-	-	-
000053	Y	-	-	-	-	-	-	-	-	-	-	-
000054	Y	-	-	-	-	-	-	-	-	-	-	-
000055	Y	-	-	-	-	-	-	-	-	-	-	-
000101	Y	-	-	-	-	-	-	-	-	-	-	-
000103	-	-	-	Y	-	-	-	-	-	-	-	-
000105	Y	-	-	Y	-	-	-	-	-	-	-	-
000107	Y	-	-	-	-	-	-	-	-	-	-	-
000175	-	Y	-	-	-	-	-	-	-	-	-	-
000203	Y	-	-	-	-	-	-	-	-	-	-	-
000405	Y	-	-	-	-	-	-	-	-	-	-	-
000477	Y	-	-	-	-	-	-	-	-	-	-	-
000501	Y	-	-	-	-	-	-	-	-	-	-	-
000502	Y	-	-	-	-	-	-	-	-	-	-	-
000561	Y	-	-	-	-	-	-	-	-	-	-	-
000603	Y	-	-	Y	Y	Y	Y	-	-	-	-	-
000633	-	Y	-	-	-	-	-	-	-	-	-	-
000735	-	Y	-	-	-	-	-	-	-	-	-	-
000763	Y	-	-	-	-	-	-	-	-	-	-	-
000765	Y	-	-	Y	-	-	-	-	-	-	-	-
0B0771	Y	-	-	-	-	-	-	-	-	-	-	-
000775	Y	Y	-	Y	-	-	-	-	-	-	-	-
000777	-	Y	-	-	-	-	-	-	-	-	-	-
001002	Y	-	-	-	-	-	-	-	-	-	-	-
001035	Y	-	-	-	-	-	-	-	-	-	-	-
001061	Y	-	-	-	-	-	-	-	-	-	-	-
001101	Y	-	-	-	-	-	-	-	-	-	-	-
001203	Y	-	-	-	-	-	-	-	-	-	-	-
001205	-	Y	-	-	-	-	-	-	-	-	-	-
001211	-	Y	-	-	-	-	-	-	-	-	-	-
001257	Y	-	-	-	-	-	-	-	-	-	-	-
002051	-	-	-	Y	-	-	-	-	-	-	-	-
603017	Y	-	-	-	-	-	-	-	-	-	-	-
003203	Y	-	-	-	-	-	-	-	-	-	-	-
003603	Y	-	-	-	-	-	-	-	-	-	-	-
004101	Y	-	-	-	-	-	-	-	-	-	-	-
004105	Y	-	-	-	-	-	-	-	-	-	-	-
004107	Y	-	-	-	-	-	-	-	-	-	-	-
004203	Y	-	-	-	-	-	-	-	-	-	-	-
004501	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF			CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS	CS	LHS	CS	
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
085101	Y	-	-	-	-	-	-	-	-	-	-	-
005203	Y	Y	Y	-	-	-	-	-	-	-	-	-
007203	Y	-	-	-	-	-	-	-	-	-	-	-
010181	Y	-	-	-	-	-	-	-	-	-	-	-
014101	Y	-	-	-	-	-	-	-	-	-	-	-
014203	Y	-	-	-	-	-	-	-	-	-	-	-
014303	Y	-	-	-	-	-	-	-	-	-	-	-
015101	Y	-	-	-	-	-	-	-	-	-	-	-
015203	Y	-	-	-	-	-	-	-	-	-	-	-
016203	Y	-	-	-	-	-	-	-	-	-	-	-
017203	Y	-	-	-	-	-	-	-	-	-	-	-
021203	Y	-	-	-	-	-	-	-	-	-	-	-
024203	Y	-	-	-	-	-	-	-	-	-	-	-
034101	Y	-	-	-	-	-	-	-	-	-	-	-
034203	Y	-	-	-	-	-	-	-	-	-	-	-
034303	Y	-	-	-	-	-	-	-	-	-	-	-
035101	Y	-	-	-	-	-	-	-	-	-	-	-
035203	Y	-	-	-	-	-	-	-	-	-	-	-
035303	Y	-	-	-	-	-	-	-	-	-	-	-
036101	Y	-	-	-	-	-	-	-	-	-	-	-
036203	Y	-	-	-	-	-	-	-	-	-	-	-
037101	Y	-	-	-	-	-	-	-	-	-	-	-
037203	Y	-	-	-	-	-	-	-	-	-	-	-
040001	Y	Y	-	-	-	-	-	-	-	-	-	-
054101	Y	-	-	-	-	-	-	-	-	-	-	-
054203	Y	-	-	-	-	-	-	-	-	-	-	-
060203	Y	-	-	-	-	-	-	-	-	-	-	-
064101	Y	-	-	-	-	-	-	-	-	-	-	-
064203	Y	-	-	-	-	-	-	-	-	-	-	-
070101	Y	-	-	-	-	-	-	-	-	-	-	-
070203	Y	-	-	-	-	-	-	-	-	-	-	-
070501	Y	-	-	-	-	-	-	-	-	-	-	-
072001	-	Y	-	-	-	-	-	-	-	-	-	-
074071	-	-	-	-	-	-	-	-	-	-	-	Y
074101	Y	-	-	-	-	-	-	-	-	-	-	-
074203	Y	-	-	-	-	-	-	-	-	-	-	-
075101	Y	-	-	-	-	-	-	-	-	-	-	-
075201	Y	-	-	-	-	-	-	-	-	-	-	-
075203	Y	-	-	-	-	-	-	-	-	-	-	-
076101	Y	-	-	-	-	-	-	-	-	-	-	-
076203	Y	-	-	-	-	-	-	-	-	-	-	-
077101	Y	-	-	-	-	-	-	-	-	-	-	-
077203	Y	-	-	-	-	-	-	-	-	-	-	-
100771	-	-	-	Y	-	-	-	-	-	-	-	-
115203	Y	-	-	-	-	-	-	-	-	-	-	-
117203	Y	-	-	-	-	-	-	-	-	-	-	-
137003	Y	-	-	-	-	-	-	-	-	-	-	-
137203	Y	-	-	-	-	-	-	-	-	-	-	-
147203	Y	-	-	-	-	-	-	-	-	-	-	-
163203	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0 LHS CS		CNSL-1 LHS CS		MTU	
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				0	1	2	3		
				0	1	2	3						
167203	Y	-	-	-	-	-	-	-	-	-	-	-	-
174101	Y	-	-	-	-	-	-	-	-	-	-	-	-
174203	Y	-	-	Y	Y	Y	Y	-	-	-	-	-	-
175101	Y	-	-	-	-	-	-	-	-	-	-	-	-
175203	Y	-	-	-	-	-	-	-	-	-	-	-	-
175501	Y	-	-	-	-	-	-	-	-	-	-	-	-
176203	Y	-	-	-	-	-	-	-	-	-	-	-	-
177003	Y	-	-	-	-	-	-	-	-	-	-	-	-
177101	Y	-	-	-	-	-	-	-	-	-	-	-	-
177103	Y	-	-	-	-	-	-	-	-	-	-	-	-
177203	Y	Y	-	-	-	-	-	-	-	-	-	-	-
177303	Y	-	-	-	-	-	-	-	-	-	-	-	-
215203	Y	-	-	-	-	-	-	-	-	-	-	-	-
234203	Y	-	-	-	-	-	-	-	-	-	-	-	-
275203	Y	-	-	-	-	-	-	-	-	-	-	-	-
277101	Y	-	-	-	-	-	-	-	-	-	-	-	-
317203	Y	-	-	-	-	-	-	-	-	-	-	-	-
344203	Y	-	-	-	-	-	-	-	-	-	-	-	-
347203	Y	-	-	-	-	-	-	-	-	-	-	-	-
363203	Y	-	-	-	-	-	-	-	-	-	-	-	-
364101	Y	-	-	-	-	-	-	-	-	-	-	-	-
364203	Y	-	-	-	-	-	-	-	-	-	-	-	-
367003	Y	-	-	-	-	-	-	-	-	-	-	-	-
373203	Y	-	-	-	-	-	-	-	-	-	-	-	-
374101	Y	-	-	-	-	-	-	-	-	-	-	-	-
374103	Y	-	-	-	-	-	-	-	-	-	-	-	-
374203	Y	-	-	-	-	-	-	-	-	-	-	-	-
375101	Y	-	-	-	-	-	-	-	-	-	-	-	-
375203	Y	-	-	-	-	-	-	-	-	-	-	-	-
376203	Y	-	-	-	-	-	-	-	-	-	-	-	-
377003	Y	-	-	-	-	-	-	-	-	-	-	-	-
377101	Y	-	-	-	-	-	-	-	-	-	-	-	-
377203	Y	-	-	-	-	-	-	-	-	-	-	-	-
400501	Y	-	-	-	-	-	-	-	-	-	-	-	-
400603	Y	-	-	-	-	-	-	-	-	-	-	-	-
401603	Y	-	-	-	-	-	-	-	-	-	-	-	-
403603	Y	-	-	-	-	-	-	-	-	-	-	-	-
405101	Y	-	-	-	-	-	-	-	-	-	-	-	-
437203	Y	-	-	-	-	-	-	-	-	-	-	-	-
560603	Y	-	-	-	-	-	-	-	-	-	-	-	-
577003	Y	-	-	-	-	-	-	-	-	-	-	-	-
600041	-	-	-	Y	-	-	-	-	-	-	-	-	-
600203	Y	-	-	-	-	-	-	-	-	-	-	-	-
600501	Y	-	-	-	-	-	-	-	-	-	-	-	-
603603	Y	-	-	-	-	-	-	-	-	-	-	-	-
605603	Y	-	-	-	-	-	-	-	-	-	-	-	-
620501	Y	-	-	-	-	-	-	-	-	-	-	-	-
637203	Y	-	-	-	-	-	-	-	-	-	-	-	-
637603	Y	-	-	-	-	-	-	-	-	-	-	-	-
660603	Y	-	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0		CNSL-1		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	
				0	1	2	3					
676203	Y	-	-	-	-	-	-	-	-	-	-	-
700000	Y	-	-	-	-	-	-	-	-	-	-	-
700001	Y	Y	-	-	-	-	-	-	-	-	-	-
780002	-	-	-	-	-	-	-	-	-	-	-	-
700003	Y	Y	-	-	-	-	-	-	-	-	-	-
700007	Y	-	-	-	-	-	-	-	-	-	-	-
700011	Y	Y	-	-	-	-	-	-	-	-	-	-
700013	-	Y	-	-	-	-	-	-	-	-	-	-
700015	Y	-	-	-	-	-	-	-	-	-	-	-
700021	Y	Y	-	-	-	-	-	-	-	-	-	-
700027	Y	-	-	-	-	-	-	-	-	-	-	-
700033	Y	-	-	-	-	-	-	-	-	-	-	-
700037	Y	-	-	-	-	-	-	-	-	-	-	-
700041	-	Y	-	-	-	-	-	-	-	-	-	-
700043	-	-	-	-	-	-	-	-	-	-	-	-
700051	-	Y	-	-	-	-	-	-	-	-	-	-
700057	Y	Y	-	-	-	-	-	-	-	-	-	-
700061	Y	-	-	-	-	-	-	-	-	-	-	-
700073	Y	-	-	-	-	-	-	-	-	-	-	-
700077	Y	-	-	-	-	-	-	-	-	-	-	-
700501	Y	-	-	-	-	-	-	-	-	-	-	-
700603	Y	-	-	-	-	-	-	-	-	-	-	-
701100	-	-	-	-	-	-	-	-	-	-	-	-
701501	Y	-	-	-	-	-	-	-	-	-	-	-
701603	Y	-	-	-	-	-	-	-	-	-	-	-
737603	Y	-	-	-	-	-	-	-	-	-	-	-
740001	-	Y	-	-	-	-	-	-	-	-	-	-
740501	Y	-	-	-	-	-	-	-	-	-	-	-
740603	Y	-	-	-	-	-	-	-	-	-	-	-
743501	Y	-	-	-	-	-	-	-	-	-	-	-
743603	Y	-	-	-	-	-	-	-	-	-	-	-
757201	Y	-	-	-	-	-	-	-	-	-	-	-
760501	-	-	-	-	-	-	-	-	-	-	-	-
760601	Y	-	-	-	-	-	-	-	-	-	-	-
760603	Y	-	-	-	-	-	-	-	-	-	-	-
770001	Y	-	-	-	-	-	-	-	-	-	-	-
770501	Y	Y	-	-	-	-	-	-	-	-	-	-
770603	Y	-	-	-	-	-	-	-	-	-	-	-
774101	Y	-	-	-	-	-	-	-	-	-	-	-
774203	Y	-	-	-	-	-	-	-	-	-	-	-
774501	Y	Y	-	-	-	-	-	-	-	-	-	-
774502	-	-	-	-	-	-	-	-	-	-	-	-
774513	-	-	-	-	-	-	-	-	-	-	-	-
775003	Y	-	-	-	-	-	-	-	-	-	-	-
775203	Y	-	-	-	-	-	-	-	-	-	-	-
776001	Y	-	-	-	-	-	-	-	-	-	-	-
776003	Y	-	-	-	-	-	-	-	-	-	-	-
776203	Y	-	-	-	-	-	-	-	-	-	-	-
777001	-	-	-	-	-	-	-	-	-	-	-	-
777003	Y	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MIRTRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0		CNSL-1		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	
				0	1	2	3					
777007	Y	-	-	-	-	-	-	-	-	-	-	-
777013	Y	Y	-	-	-	-	-	-	-	-	-	-
777017	Y	-	-	-	-	-	-	-	-	-	-	-
777023	Y	Y	-	-	-	-	-	-	-	-	-	-
777033	-	Y	-	-	-	-	-	-	-	-	-	-
777037	-	-	-	-	-	-	-	-	-	-	-	Y
777043	Y	Y	-	-	-	-	-	-	-	-	-	-
777063	Y	-	-	-	-	-	-	-	-	-	-	-
777101	Y	-	-	-	-	-	-	-	-	-	-	-
777103	Y	Y	-	-	-	-	-	-	-	-	-	-
777143	-	Y	-	-	-	-	-	-	-	-	-	-
777177	-	-	-	-	-	-	-	-	-	-	-	Y
777201	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	Y
777203	Y	Y	-	-	-	-	-	-	-	-	-	-
777343	-	Y	-	-	-	-	-	-	-	-	-	-
777363	-	Y	-	-	-	-	-	-	-	-	-	-
777403	Y	Y	-	-	-	-	-	-	-	-	-	-
777501	Y	-	-	-	-	-	-	-	-	-	-	-
77753	-	Y	-	-	-	-	-	-	-	-	-	-
77761	Y	-	-	-	-	-	-	-	-	-	-	-
777603	Y	Y	-	-	-	-	-	-	-	-	-	-
777773	Y	-	-	-	-	-	-	-	-	-	-	-
777777	-	-	-	-	-	-	-	-	-	-	-	Y

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF				CNSL-0		CNSL-1		MTU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CPU OFF	CPU OFF	LHS CS	LHS CS	LHS CS		
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS CS	LHS CS	LHS CS	MTU
				0	1	2	3				
000021	-	Y	-	-	-	-	-	-	-	-	-
001001	Y	-	-	-	-	-	-	-	-	-	-
0011	Y	-	-	-	-	-	-	-	-	-	-
078033	Y	-	-	-	-	-	-	-	-	-	-
100111	Y	-	-	-	-	-	-	-	-	-	-
111110	Y	-	-	-	-	-	-	-	-	-	-
111111	Y	-	-	-	-	-	-	-	-	-	-
366053	-	-	-	-	-	-	-	-	Y	-	-
377101	Y	-	-	-	-	-	-	-	-	-	-
51008832	Y	-	-	-	-	-	-	-	-	-	-
700001	Y	-	-	-	-	-	-	-	-	-	-
700062	Y	-	-	-	-	-	-	-	-	-	-
78888003	Y	-	-	-	-	-	-	-	-	-	-
777201	-	Y	-	-	-	-	-	-	-	-	-
777777	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF								
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
777281	-	Y	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF								
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
888800007	Y	-	-	-	-	-	-	-	-	-	-	-
075201	Y	-	-	-	-	-	-	-	-	-	-	-
177203	Y	-	-	-	-	-	-	-	-	-	-	-
767201	Y	-	-	-	-	-	-	-	-	-	-	-
773887	Y	-	-	-	-	-	-	-	-	-	-	-
774501	Y	-	-	-	-	-	-	-	-	-	-	-
777201	Y	-	-	-	-	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0		CNSL-1		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	
				0	1	2	3					
00000	Y	-	Y	-	-	-	-	-	-	-	-	-
000464	Y	-	-	-	-	-	-	-	-	-	-	-
001003	Y	-	-	-	-	-	-	-	-	-	-	-
001006	Y	-	-	-	-	-	-	-	-	-	-	-
001062	-	-	Y	-	-	-	-	-	-	-	-	-
001214	Y	-	-	-	-	-	-	-	-	-	-	-
543725	-	-	-	-	-	-	-	-	-	Y	-	-
700002	Y	-	-	-	-	-	-	-	-	-	-	-
700100	Y	-	-	-	-	-	-	-	-	-	-	-
751743	-	-	-	-	-	-	-	-	-	Y	-	-
761304	-	-	-	-	-	-	-	-	-	Y	-	-
777777	-	-	-	-	-	-	-	-	-	-	-	Y

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF								
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
004202	-	-	-	-	-	-	-	-	-	Y	-	-
111111	Y	-	-	-	-	-	-	-	-	-	-	-
700800 88	Y	-	-	-	-	-	-	-	-	-	-	-
777777	-	-	Y	-	-	-	-	-	-	-	-	Y

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF								
DIAGNOSE STATUS		IOU OFF		CPU OFF								
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
600084	-	-	-	-	-	-	-	-	-	Y	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0 LHS CS		CNSL-1 LHS CS		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	MTU
				0	1	2	3					
000044	-	-	-	Y	-	-	-	-	-	-	-	-
000055	-	-	-	Y	-	-	-	-	-	-	-	-
000132	-	-	-	Y	-	-	-	-	-	-	-	-
017207	Y	-	-	-	-	-	-	-	-	-	-	-
036277	Y	-	-	-	-	-	-	-	-	-	-	-
037207	Y	-	-	-	-	-	-	-	-	-	-	-
075203	Y	-	-	-	-	-	-	-	-	-	-	-
177207	Y	-	-	-	-	-	-	-	-	-	-	-
740000	-	-	-	-	-	-	-	-	-	Y	-	-
775207	Y	-	-	-	-	-	-	-	-	-	-	-
775277	-	Y	-	-	-	-	-	-	-	-	-	-
777003	-	Y	-	-	-	-	-	-	-	-	-	Y
777007	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	Y
777017	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	Y
777037	Y	Y	Y	Y	Y	Y	Y	-	-	-	-	Y
777047	-	Y	-	-	-	-	-	-	-	-	-	-
777057	-	Y	-	-	-	-	-	-	-	-	-	-
777077	-	Y	-	-	-	-	-	-	-	-	-	-
777117	-	-	-	-	-	-	-	-	-	-	-	Y
777137	-	Y	-	-	-	-	-	-	-	-	-	-
777147	-	Y	-	-	-	-	-	-	-	-	-	-
777177	-	Y	Y	-	-	-	-	-	-	-	-	Y
777201	Y	-	-	Y	-	-	-	-	-	-	-	-
777207	Y	Y	-	-	-	-	-	-	-	-	-	-
777227	-	Y	-	-	-	-	-	-	-	-	-	-
777257	-	Y	-	-	-	-	-	-	-	-	-	-
777275	-	Y	-	-	-	-	-	-	-	-	-	-
777347	-	Y	-	-	-	-	-	-	-	-	-	-
777357	-	Y	-	-	-	-	-	-	-	-	-	-
777367	-	Y	-	-	-	-	-	-	-	-	-	-
777377	-	Y	-	-	-	-	-	-	-	-	-	-
777607	-	Y	-	-	-	-	-	-	-	-	-	-
777637	-	Y	-	-	-	-	-	-	-	-	-	-
777703	Y	-	-	-	-	-	-	-	-	-	-	Y
777717	-	Y	-	-	-	-	-	-	-	-	-	-
777737	-	Y	-	-	-	-	-	-	-	-	-	-
777747	-	Y	-	-	-	-	-	-	-	-	-	-
777757	-	Y	-	-	-	-	-	-	-	-	-	-
777767	-	Y	-	-	-	-	-	-	-	-	-	-
777777	Y	Y	Y	-	-	-	-	Y	-	Y	-	Y

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF								
DIAGNOSE STATUS		IOU OFF		CPU OFF								
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
037207	Y	-	-	-	-	-	-	-	-	-	-	-
77527	Y	-	-	-	-	-	-	-	-	-	-	-
777777	-	Y	-	-	Y	-	-	-	-	-	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF								
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				CNSL-0		CNSL-1		MTU
				0	1	2	3	LHS	CS	LHS	CS	
743700	-	-	-	-	-	-	-	-	-	Y	-	-
77540088	-	-	-	-	-	-	-	-	-	Y	-	-

TABLE 2-1. ADP ERROR STOP LOCATION MATRIX-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF				CNSL-0		CNSL-1		MTU
ERROR STOP NUMBER	CPU	IOU	BUFFER	32K—MEMORY—ADDRESS				LHS	CS	LHS	CS	
				0	1	2	3					
000000	Y	Y	-	-	-	-	-	-	-	-	-	-
777777	-	Y	Y	Y	Y	Y	Y	-	-	Y	-	-

This page intentionally left blank.

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP									
000000	J1226 J1515 - J1539 J2121 J2304 J2330 - J2422 J2531 -	J1229 J1516 J1549 J2123 J2308 J2331 - J2435 J2532	J1235 J1525 - J2103 J2125 J2310 - J2332 J2439 J2534	J1339 J1526 J2111 J2127 J2311 J2337 - J2443 J2536	J1410 J1528 - J2113 J2203 J2312 J2338 J2447 -	J1417 J1529 - J2114 J2208 - J2314 J2339 - J2448	J1425 J1530 J2116 - J2209 J2315 - J2340 J2502	J1512 - J1533 - J2117 J2227 J2316 J2342 J2505 -	J1513 J1534 J2120 - J2230 J2323 J2419 J2506
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1209	J1215	J1220	J2318	J2334	-	J2335		
000001	J1140 J2113 J2330	J1229 - J2115 - J2332	J1238 J2116	J1419 J2122 -	J1509 J2123	J2107 - J2125	J2108 - J2126	J2109 J2127	J2111 J2206
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
000002	J1228 J1523 J2122 - J2227 J2241 J2325 - J2421 - J2435 - J2444 -	J1241 - J1528 J2123 - J2229 - J2244 - J2326 J2422 - J2436 - J2445 -	J1242 - J2105 J2124 - J2230 - J2245 - J2330 J2423 - J2437 - J2446 -	J1243 J2108 - J2125 - J2231 J2246 J2332 J2425 - J2438 - J2447	J1330 J2109 J2126 - J2233 - J2301 J2407 J2426 - J2439 - J2510	J1509 J2111 J2127 - J2234 - J2304 - J2416 - J2427 - J2440 - J2527	J1514 J2116 J2128 - J2237 J2305 - J2417 - J2428 - J2441 - J2545	J1518 J2120 - J2129 J2239 - J2306 J2418 J2429 J2442 - J2546	J1519 J2121 - J2202 J2240 - J2308 J2420 - J2431 J2443 - J2546
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1234	J2336	J2413						
000003	J1213 - J1326 J1418 J1432 J1521 J1535 - J2125 J2233 J2245 - J2325 - - J2421 J2505 J2547	J1226 J1330 J1420 J1433 - J1525 - J1536 J2127 J2235 - J2246 - J2326 J2425 J2534 - J2548	J1231 J1333 J1423 J1434 J1526 - J1538 - J2202 J2236 - J2301 J2401 - J2427 - J2535 J2540	J1236 - J1340 J1425 - J1436 J1528 J1539 - J2216 J2237 - J2306 - J2402 - J2428 - J2540	J1237 - J1341 J1426 - J1515 J1529 - J1540 J2224 J2238 - J2307 J2404 - J2429 - J2541	J1238 J1408 J1427 - J1516 - J1530 - J1542 J2227 J2239 - J2311 J2312 J2406 - J2430 - J2542	J1320 J1410 J1428 - J1517 J1531 J1547 J2229 - J2240 J2312 J2316 J2407 - J2431 J2544	J1323 J1415 - J1429 J1518 - J1533 - J2120 J2230 J2242 J2316 J2419 - J2435 - J2545	J1325 J1416 J1431 - J1519 J1534 - J2122 J2232 - J2244 - J2317 J2420 J2440 - J2546
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
000004	J1444 J1325	J2136 J1338	J1410	J1411	J1412	-	J1413	J1416	J1418 - J1419

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	J1425 - J1426	J1431 - J1432	J1433	J1435 - J1436	J1585 - J1506					
	J1519 J1521	J1525 - J1526	J1528	J1529 - J1530	J1531 J1536					
	J1537 J1540	J2107 J2109	J2116	J2122 - J2123	J2125 J2127					
	J2128 J2204	J2205 J2213	J2216	J2217 - J2218	J2228 J2223					
	J2225 J2301	J2306 J2331	J2332	J2418 J2420	J2422 - J2423					
	J2424 - J2425	J2426 J2428	J2431	J2437 J2512	J2513 J2530					
	J2532 J2534	J2535 J2542	J2543	J2544 - J2545	J2546 - J2547					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1444	J2336								
000005	J1236 J1242	J1415 J1529	J2123	J2125 - J2126	J2127 J2227					
	J2305 J2417	J2418 J2420	J2421	J2424 J2426	J2427 - J2428					
	J2431 J2437	J2441 J2541	J2543	J2544 J2546						
000006	J1236 J1241	J1242 - J1243	J1325	J1420 J1426	J1428 - J1429					
	J1432 J1435	J2120 J2122	J2123	J2125 J2127	J2129 J2437					
000007	J1236	J1241	J1515	J1546	J2125					
000010	J1236 J1241	J1528 J2109	J2110	J2111	J2115 - J2116	J2125				
	J2127 J2331									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J2335	J2336								
000011	J1236	J1241	J1417	J1418	J2125	J2127	J2128			
000012	J1236	J1241	J1325	J1415	J2120	J2123	J2125	J2127	J2419	
000013	J1236	J1241	J1544							
000014	J1236	J1241	J1330	J1415	J2126	J2127	J2221			
000015	J1236	J1241	J2125	J2223						
000016	J1236 J1241	J1242 - J1243	J1338	J1416	J1529	J2122	J2123			
	J2125 J2419	J2544								
000017	J1236	J1241	J1416	J2125						
000020	J1237 J1241	J1548 J2109	J2111	J2117	J2120	J2125	J2126			
	J2127 J2331									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J2335	J2336								
000021	J1237	J1241	J1425	J2127						

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000022	J1237	J1241	J2127	J2421						
000023	J1237	J1241	J1325	J1415	- J1416	J1506	J1548	J2125		
000024	J1237	J1241	J1416	J1506	J2123	J2125				
000025	J1237 J2440	J1241 J2440	J1416	J1506	J1550	- J1551	J2120	J2241	J2244	
000026	J1237	J1242	- J1243	J1526						
000027	J1237	J1242	J1415	- J1416	J1505	J2423				
000030	J1237	J1242	J2123	J2125	- J2126					
000031	J1237	J1242	J1326	J1408	J1416	J1546				
000032	J1237	J1242	J1326	J1408	J1416	J2122	J2125			
000033	J1238	J1242	J1325	J1330	J1416					
000034	J1238	J1242	J1341	J1415						
000035	J1238	J1242	J1325	J1341	J1407	J1415	J1418	J1544	J2127	
000036	J1238	J1242	- J1243	J1544	J2127					
000037	J1238 J2232	J1242	J1340	- J1341	J1413	J1416	J1420	J2223	J2227	
00040	J1238 J2125	J1242 J2128	J1341 J2331	J1407	J1418	J1420	J2109	J2113	J2117	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J2335	- J2336								
080041	J1238	J1242	J1325	J1341	J1544	J2419	J2510			
000042	J1238	J1242	J1325	J1341	J1416	J1544	J2126			
000043	J1238	J1242	J1325	J1340	- J1341	J1415				
000044	J1340	J1406	J1415	- J1416	J1418	J2120	J2431			
000045	J1112 J1341 J1518 J1548 J2231 J2305	J1141 J1415 - J1519 J1551 J2235 J2307	- J1142 - J1416 J1534 - J2236 - J2310	J1147 - J1417 - J1535 J2123 - J2237 - J2311	- J1148 - J1418 - J1536 J2206 J2239 J2313	- J1149 J1434 J1538 J2211 J2241 - J2314	J1325 J1515 J1544 J2227 J2247 - J2315	- J1326 - J1516 J1546 J2229 - J2248 - J2316	J1339 - J1517 - J1547 - J2230 - J2304 J2325	- - - - - -

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	J2337	- J2338	J2342	J2407	J2415	- J2416	- J2417	- J2418	J2420	-
	J2421	- J2422	- J2423	- J2424	- J2425	- J2426	- J2427	- J2428	J2430	-
	J2431	J2436	- J2437	- J2438	- J2439	J2442	- J2443	J2447	J2534	-
	J2535	J2538	- J2539	J2542	- J2543	- J2544	- J2545	- J2546	- J2547	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2433									
000046	J1511	J1514	- J1515	J1519	J2104	J2120	J2125	J2126	J2229	
	J2232	J2234	J2326	J2420	J2422	J2426				
008047	J1111	J1129	J1515	J1519	J1535	- J1536	J2125	J2129	J2325	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1404									
000050	J1144	J1151	J1325	J1413	J1415	J1515	J1519	J1528	J1535	
	J2419	J2124	J2326	J2342	J2419	J2421	J2435	J2437	- J2438	
	J2440	- J2441								
000051	J1141	- J1142	J1148	- J1149	J1214	J1216	J1325	J1330	J1340	
	J1415	- J1416	- J1417	J1530	J1534	J1535	J1537	J1546	J1548	
	J2123	J2125	J2128	J2227	J2231	J2235	J2401	J2407	J2423	
	J2430									
000052	J1111	J1112	J1115	J1140	J1144	J1210	J1213	J1330	J1411	
	J1510	J1536	J1543	- J1544	J1546	J1548	J1550	J2115	J2122	
	J2526									
000053	J1407	J1515	J1519	J2122	J2125	J2202	J2301	J2315	J2421	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1404									
000054	J1326	J1417	- J1418	J1528	J1551	J2120	J2122	- J2123	J2125	
	- J2126	J2223	J2229	J2223	J2420	- J2421	J2430	J2440	J2445	-
	J2446	J2448	J2534	- J2535	J2538	J2540	J2547			
000055	J1330	J1414	- J1415	J1417	J1419	J1422	J1442	- J1443	J1445	
	J1447	- J1448	J1449	J1451	J1528	J1535	J1543	J1551	J2112	
	J2120	J2122	- J2123	J2125	J2133	J2430	- J2431	- J2432	J2435	
	J2437	J2440	J2445							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1343									
000056	J1150	J1414	- J1415	J1437	- J1438	J1440	- J1441	- J1442	- J1443	
	J1445	- J1446	- J1447	J1449	- J1450	- J1451	J1543	J1551	J2121	
	J2127	J2421	J2444	J2445	J2446					

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1343										
000057	J1437 - J1451	J1438 J1515	J1440 J1543	- J1441 J2112	- J1442 J2133	- J1443 J2344	J1445 J2430	- J1446 J2431	J1450	
000060	J1150 J1445	J1414 - J1446	- J1415 - J1447	J1437 - J1448	- J1438 J1451	J1440 J1543	- J1441 J1551	- J1442 J2124	- J1443 J2126	
000061	J1424 J2125	J1443 J2227	J1446 J2411	- J1447 J2432	- J1448	- J1449	- J1450	- J1451	J1543	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1343										
000062	J1445	J1451	J1543	J2123	J2432					
000063	J1547	J1210	J2120	J2344						
000064	J1150 J1445	J1414 - J1446	- J1415 J1449	J1437 J1451	- J1438 J1515	J1440 J1543	- J1441 J2121	- J1442 J2124	- J1443 J2224	
000065	J1415	J1442	J1451	J1543	J2125					
000066	J2540									
000070	J1437 - J1451	J1438	J1440	- J1441	- J1442	- J1443	J1445	- J1446	J1450	
000072	J1543	J2124	J2128	J2430						
000073	J1418	J2314								
000074	J1340	J1544	J2125							
000075	J1518	J1226								
000076	J1144	J2121	J2126	J2338						
000077	J1422	J2123	J2436							
000100	J1418 J2445	J1514 J2446	J2109	J2111	J2116	J2126	J2332	J2421	J2444	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2335 - J2336										
000101	J1543	J2123	J2127							
000102	J1325	J1415	J2125	J2127						

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000103	J1427	J1515	J2121							
000105	J1427	J2121	J2123	J2126						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2433									
000106	J1326									
000107	J2122	J2125	J2127	J2419						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2433									
000110	J1326	J1330	J2131							
000111	J1144	J1418	J2121	J2127	-	J2128	J2421			
000112	J1111 J1445 J1537 J2421 J2447	J1330 J1446 J1543 J2430 J2448	J1419 J1449 J1549 J2435 J2534	J1437 J1451 J2127 J2436 J2540	-	J1438 J1528 J2231 J2437 J2541	J1440 - J2236 - J2543	J1441 - J2238 - J2544	J1442 - J2241 - J2442	J1443 - J1536 - J2244 - J2445
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1343									
000113	J1116 J1450	J1437 - J1451	J1438 - J1548	J1440 - J2125	J1441 - J2127	J1442 - J2442	J1443 - J2445	J1445	J1446	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1343									
000114	J1423	J2125	J2128	J2445	J2448					
000115	J1437 J1451	- J1438	J1440	- J1441	- J1442	- J1443	J1445	- J1446	J1448	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1343									
000117	J2123	J2125								
000121	J1437 J1451	- J1438 J1543	J1440 - J2445	J1441 - J2448	J1442 - J2544	- J1443	J1445	- J1446	J1449	
000123	J1144									
000126	J1424	J1543	J2430							

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000130	J1415 J2422 J2545	J1530 - J2423	J1534 - J2424	J2120 J2426	J2342 - J2427	J2417 J2440	- J2418 - J2441	J2420 J2447	- J2421 J2543	-
000131	J1216 J1527 J1548 J2423 J2445	J1415 - J1528 J1550 J2425 J2530	- J1417 - J1529 - J1551 J2428	J1419 - J1530 J2325 J2430	J1424 - J1536 J2411 - J2431	- J1425 J1540 J2416 - J2437	J1515 - J1544 - J2417 - J2438	- J1516 - J1545 J2419 - J2440	- J1517 - J1546 - J2420 - J2441	
000132	J1340 J1549 J2202 J2438 J2548	- J1341 - J1550 J2205 - J2439	J1423 J1551 J2210 J2441	- J1424 - J2120 - J2212 J2448	- J1425 - J2121 - J2213 J2508	J1435 J2124 J2222 J2515	J1531 - J2125 - J2223 J2530	J1545 - J2126 - J2231 J2543	J1548 - J2127 - J2421 J2545	
000133	J1341 J1416 J1435 J1519 J1529 J2341 J2444 J2545	J1405 - J1417 J1510 - J1520 J1531 J2341 J2530 - J2546	- J1406 - J1418 J1512 - J1521 - J1533 J2344 J2534 J2548	J1408 - J1419 - J1513 - J1522 - J1534 - J2417 - J2537	- J1409 - J1420 - J1514 - J1523 - J1535 - J2421 - J2538	J1411 - J1425 - J1515 - J1524 - J1536 - J2423 - J2539	- J1412 J1429 - J1516 - J1525 - J1537 - J2426 - J2540	J1413 - J1433 - J1517 - J1526 - J1539 - J2427 - J2543	J1415 - J1434 - J1518 - J1528 - J1540 - J2430 - J2544	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1404	J1430	J2336							
000134	J1406 - J1514 J2523	- J1407 - J1515 J2528	J1411 - J1516 J2534	- J1412 - J1517 J2541	- J1413 - J1518 J2544	J1418 - J1519 J2547	J1425 J1529	J1512 J1536	- J1513 J1544	
0000135	J2420	J2534	- J2535	- J2536	J2538					
000136	J1214 J1332 - J1517 - J2248 J2536	J1216 J1412 - J1518 J2304 J2539	J1223 J1414 J1519 J2407	- J1224 - J1415 J2124 J2417	- J1225 - J1416 J2232 J2422	J1227 - J1417 - J2233 - J2423	J1231 J1419 - J2234 - J2424	J1235 J1515 J2237 - J2425	J1322 - J1516 J2247 J2439	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1215	J1217	- J1218	- J1219	- J1220	- J1221				
000137	J1113 J1238 J2247	J1210 J1244 J2341	J1214 J1322	J1216 J1332	J1223 J1350	- J1224 J2231	- J1225 - J2232	- J1226 J2234	J1231 J2237	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1215	J1217	- J1218	- J1219	- J1220	- J1221				

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000140	J1223 J2422	- J1224	J1244	J1316	J1322	J1324	J1326	J1511	J1515	
000141	J1328 J1442 J1550 J2424 J2441	- J1338 - J1443 - J1551 - J2425 J2448	J1340 J1445 J2123 J2428 J2544	- J1417 - J1446 J2127 J2435 - J2545	J1425 - J1447 J2417 - J2436	J1437 - J1448 - J2418 - J2437	- J1438 J1451 J2421 - J2438	J1440 J1547 - J2422 - J2439	- J1441 - J1549 - J2423 - J2440	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1343	J2433								
000142	J1111 J1445 J2544	J1328 - 1446	J1340 J1544	- J1437 - J1545	- J1438 - J1546	J1440 - J1547	- J1441 J2415	- J1442 J2421	- J1443 J2444	
000143	J1451	J1549	- J1550	J2123	J2428	J2437	J2441	J2448		
000144	J1338	J2227	J2418	J2544						
000145	J1326	J2539	J2544	- J2545						
000146	J1325	- J1326								
000147	J1413	J1419	J2437	J2546						
000150	J1112	J2104	J2125	J2210	J2227	J2306	J2340			
000151	J1528 J2420 J2537	- J1529 - J2421	J2123 J2429	J2126 J2435	- J2231 - J2436	J2242 J2438	J2245 J2441	- J2246 J2447	J2416 J2536	-
000152	J1130 J2121	J1140 J2246	- J1141 - J2311	- J1142	J1144	J1149	J1211	J1235	J1528	
000153	J2123 J2418	J2217 J2421	J2227 J2424	J2309 J2427	J2311 J2510	J2314 J2537	J2316	- J2317	J2340	
000154	J1422	J2121	J2126	- J2127	J2301	J2416	J2425	J2428		
000155	J2126 J2532	J2217 J2542	J2416	- J2417	- J2418	J2420	J2426	J2428	J2441	
000156	J1130 J2232 J2244 J2325 J2429	J1136 J2234 - J2245 - J2326 J2431	J1140 - J2235 J2246 J2404 - J2432	- J1141 - J2236 J2306 J2416 J2436	- J1142 - J2237 - J2307 J2416 J2437	- J1142 - J2238 - J2308 J2420 - J2437	J1144 - J2238 - J2308 - J2421 - J2443	- J1145 J2240 - J2310 - J2422 - J2444	J2135 - J2241 - J2311 - J2423 - J2445	J2227 J2243 J2314 J2428 - J2446

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
SUBSTITUTETHE FOLLOWING CARD ASSEMBLIES: J1135										
000157	J1141	- J1142	- J1143	- J1144	J2244	J2326	J2432	J2544		
000160	J1140	- J1141	J1144	J2326	J2432					
000161	J1141	J1144								
000162	J31141	- J1142	- J1143	- J1144	J2326	J2432				
000163	J1144	J2121								
000164	J1144	J1339								
000165	J1144									
000166	J1141	J1144	J2326	J2431						
000167	J1144	J1526	J2121	J2125						
000171	J2125									
000172	J1141	J1144	J2121	J2314						
000173	J1144	J1326	J1339	J1517	J2124	- J2125	J2128			
000176	J1132	J1140	- J1141	- J1142	- J1143	- J1144	J1235			
000177	J1141	- J1142	- J1143	- J1144						
000200	J1141	- J1142	- J1143	- J1144	J1528	J2109	J2113	J2116	J2332	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2335 - J2336										
000201	J1143	- j1144								
000202	J1141	- J1142	- J1143	- J1144	J2416					
000203	J1143	- J1144								
000204	J1143	- J1144								
000205	J1143	- J1144								
000206	J1141	- J1142	- J1143	- J1144	J1243					
000207	J1144	J1148	J2416							

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
000210	J1144	J1148									
000211	J1144	J1148	J1243								
000212	J1144	J1149	J2406								
000213	J1144	J1149									
006214	J1144	J1149	J2127								
000216	J1111 - J1213 - J2227 - J2244 - J2418 - J2428 - J2445 - J2540	J1112 - J1317 - J2230 - J2248 - J2420 - J2431 - J2446 - J2541	J1113 - J1318 - J2231 - J2310 - J2421 - J2435 - J2532 - J2542	J1114 - J1319 - J2232 - J2401 - J2422 - J2436 - J2534 - J2543	J1115 - J1320 - J2233 - J2402 - J2423 - J2438 - J2535 - J2545	J1116 - J1416 - J2234 - J2406 - J2424 - J2425 - J2439 - J2536 - J2546	J1129 - J1419 - J2238 - J2415 - J2425 - J2441 - J2537	J1210 - J2124 - J2239 - J2416 - J2426 - J2442 - J2538	J1212 - J2226 - J2242 - J2417 - J2427 - J2444 - J2539	-	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1121											
000217	J1111	J1144	J1319 - J1320	J2416	J2420	J2425	J2428				
000220	J1111	J1319	J1520								
000221	J1319	J1521	J2420								
000222	J1112	J1317	J1319	J2416	J2425						
000223	J1319										
000224	J1319	J2410									
000225	J1319	31421									
000226	J1317	J1330	J2125	J2543							
000227	J1111 - J1112	J1210	J1317	J1339							
000230	J1317										
000231	J1317	J1528									
000232	J1317	J2126									
000233	J1317	J1338	J1423	J2436							
000234	J1112	J1317	J1340	J2126							

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP										
000235	J1317	J1338								
000236	J1144 - J2426	J1227	J2126	J2233	J2417	- J2418	J2420	J2422	J2425	
000237	J2422									
000240	J1417									
000242	J1422									
000243	J1425									
000246	J1423									
000250	J1516									
000263	J1516									
000276	J2227	J2232	- J2233	J2244	J2247					
000316	J2233 - J2428	J2237 J2436	32418 J2439	J2420	- J2421	- J2422	- J2423	- J2424	J2427	
000317	J2244	J2423	J2427							
000320	J2126	J2421								
000321	J2125 - J2428	J2127 J2438	J2416	- J2417	- J2418	J2421	- J2422	- J2423	J2427	
000325	J1531 J2240 J2417 J2535 J2546	J1533 - J2241 J2420 - J2536	J1546 - J2242 J2423 - J2537	J2121 J2244 - J2424 - J2538	J2123 J2317 J2439 - J2539	J2125 J2340 - J2443 - J2540	J2227 - J2341 - J2444 J2542	J2232 J2402 J2532 - J2543	- J2233 J2407 J2534 J2545	- - -
000326	J2124	- J2125	J2416	- J2417	J2420	J2532				
000327	J1415	- J1416	- J1417	- J1418	J2121	J2123	J2126			
000330	J1546									
000331	J1544	J2230								
000333	J1325	J1417	J1421							
000334	J1545 - J2542	J2223 J2545	J2304 - J2546	J2401	J2406	J2423	J2535	J2537	J2541	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP										
000335	J1544	J1546	J2437							
000336	J2436									
000340	J2123 J2438	J2416 J2438	- J2417	- J2418	J2420	J2422	- J2423	J2427	- J2428	
000342	J1216 J2536	J2125	J2230	J2241	J2244	J2417	J2420	J2423	- J2424	
000343	J2417	J2420	J2532							
000345	J2241	J2244	J2417	J2420	J2423	J2536				
000346	J2416	- J2417	J420	J2532						
000347	J2120									
000350	J1151	J2416	- J2417	- J2418	J2426					
000351	J1340 J2417	J1544 J2419	- J1545 - J2420	- J1546 - J2421	- J1547 J2423	- J1548 J2440	- J1549 J2442	- J1550 J2447	- J2233 J2448	
000052	J1340	J2241	J2534	J2538	- J2539	J2542	- J2543	J2547		
000353	J2420	J2440								
000354	J1340	J1544	- J1545	- J1546	- J1547	J1549	- J1550			
000355	J1326 J2420 J2439	J1411 - J2421 J2535	- J1412 - J2422 J2537	- J1413 - J2423 J2540	J1419 - J2424 - J2541	J2312 J2426 J2547	J2416 - J2427 - J2548	- J2417 - J2428	- J2418 J2430	
000356	J1326	J1413								
000357	J1324	J1413	J2420	J2537	J2547	- J2548				
000360	J1324	J1413	J1419	J2535	J2537	J2543	J2548			
000361	J1413	J1416	J2416	- J2417	J2420	J2537	J2541	J2547	- J2548	
000362	J1413									
000363	J1412	- J1413	J2537	J2548						
000364	J1413									
000365	J2239 - J2444	J2241 J2535	J2417 J2544	- J2420 - J2545	J2423	J2430	J2439	J2442	- J2443	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		CONNECTORS					
	IOU OFF	IOU OFF	CPU OFF	CPU OFF						
STOP										
000367	J1144 J2227	J1408 J2341	J1528 J2343	J1531 - J2344	J1533 J2417	J1535 J2420	J1537 J2429	J2123 J2431	J2125 J2540	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2119	J2413								
000371	J2341	J2545								
000372	J1421 J2241 J2540	- J1422 J2415 J2544	- J1423 J2417	- J1424 J2419	J1519 - J2420	- J1520 J2435	- J1521 J2442	J1523 J2446	J2239 J2448	
000374	J2435									
000376	J1412 J2439 - J2548	J1414 - J2440	J1417 J2442	- J1418 J2536	- J1419 - J2537	J2420 J2540	J2423 - 32541	J2430 - J2542	J2437 J2547	
000377	J1412	J1414	J1416	J1418	- J1419	J2535	J2540	J2547	- J2548	
000400	J1413	J1417	J1419	J1425	J2109	J2111	J2117	J2332		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2335	- J2336								
000401	J1411	J1413	- J1414	J1529						
000402	J1412 J2547	J1418 - J2548	- J1419	J2417	J2420	J2534	- J2535	J2538	J2540	
000403	J1412	J1416	J1418	J2538	J2540	J2548				
000404	J1413	J2123	J2125							
000405	J1413									
00088406	J1136 J2224 J2242 J2417 J2437 J2546	J2104 J2226 - J2243 J2420 J2440	J2210 J2230 - J2244 - J2421 - J2441	J2121 J2232 - J2245 J2423 J2443	J2126 - J2233 J2341 J2425 - J2444	- J2127 - J2234 J2343 J2427 J2447	- J2128 J2238 - J2344 - J2428 - J2448	J2210 - J2239 J2346 J2431 32542	J2222 - J2240 J2416 J2435 J2545	- - - -
000407	J1330	J2241	J2420	J2443	J2536					
000410	J1211 J1349 J2539	J1231 - J1350	J1243 J2240	- J1244 J2243	- J1245 J2245	J1344 J2248	- J1345 J2416	- J1346 J2420	- J1347 J2536	
000411	J2417	32532								

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
000414	J1242 J2543	J1244 J2545	J1344	J2223	-	J2224	J2230	J2232	J2234	J2541	
000416	J2121	J2233	J2439								
000420	J1417 J2427	J2206 J2432	J2224 J2535	J2306 J2541	-	J2325 J2542	J2343 J2546	-	J2344	J2419 - J2420	
000422	J31532 J2212 J2428 J2545	- J1533 J2221 J2429	J1537 J2224 J2430	J2113 J2306 J2431	-	J2122 J2325 J2432	J2206 J2401 J2437	-	J2207 J2406 J2441	- J2208 J2409 J2444	J2210 J2423 J2541
000423	J2325	J2535									
000424	J2227	J2308	J2416	-	J2417	J2420	J2535				
000430	J2420										
000431	J2301	J2416									
000432	J1515	J1517									
000433	J2121 J2426	J2126	J2245	J2305	J2416	-	J2417	-	J2418	J2421 J2423	
000434	J2126	J2416	J2418	J2439							
000436	J2121	J2126	J2418	J2438							
000437	J2121	J2126	J2305	J2416	-	J2417	J2423				
000441	J2206 J2537	J2208	J2210	J2218	J2301	J2415	-	J2416	J2418	J2425	
000442	J1406	J1427	- J1428	-	J1429	J1431	J2431	J2537	J2539	J2541	
000444	J2325										
000445	J1516 J2439	J1519 J2440	J2220	J2311	J2404	J2415	-	J2416	J2423	J2427	
000447	J2325										
000450	J1543	J2121	J2440								
000451	J1549 J2423	J2123 J2424	J2202 J2525	J2307 J2526	J2314 J2527	-	J2315 J2529	-	J2316 J2530	J2415 J2531	- J2416

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000452	J2121	J2123	J2125	J2127	J2307	J2314	J2526	J2529	J2532	
000453	J2307	J2314	J2526	- J2527	J2532					
000454	J2307	J2311	J2526	J2529	J2532					
000463	J1112 J1145 J2227	J1114 J1146 J2234	J1116 J1150 J2312	J1122 - J1151 J2316	J1130 J1210 J2416	J1136 J1212 J2443	J1140 - J1213 J2542	- J1141 - J1214 J2547	- J1142 J1216	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1121	J1215	J1217	- J1218	- J1219	- J1220	- J1221			
000464	J1131 - J1147 J1229 J1348 J2236 J2341 J2439	- J1132 - J1148 J1245 - J1349 - J2237 J2418 J2441	J1136 - J1149 - J1246 - J1350 - J2238 J2421 J2442	J1140 - J1150 - J1247 - J2239 - J2422 J2444	- J1141 - J1151 - J1248 - J2229 - J2240 - J2424 J2447	- J1142 - J1211 - J1249 - J2232 - J2241 - J2425 J2539	- J1143 J1214 J1323 - J2233 J2244 - J2426	J3145 J1216 J1333 - J2234 - J2245 - J2427	- J1146 J1228 J1344 - J2235 - J2246 J2431	-
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1215	J1217	- J1218	- J1219	- J1220	- J1221	- J1222			
000465	J1131	J1136	J1214	J1216	J1338	J1547	J2348			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1215	J1220	- J1221	- J1222						
000466	J1214	J1216	J1227	J2311	- J2312	J2315	J2402			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1215	J1217	- J1218	- J1219	- J1220	- J1221				
000467	J1214	J1216	J1545							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1215	J1217	- J1218	- J1219	- J1220	- J1221				
000470	J1214	J1223	J1225	J1227	J1545					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1217	- J1218	- J1219	- J1220						
000471	J1111 - J1213 J1316 J2236 J2341 J2530	J1129 J1224 J1347 J2240 J2408 J2532	J1139 - J1225 J1350 - J2309 - J2409	- J1140 - J1226 J2132 - J2310 - J2411	- J1141 - J1227 - J2133 - J2313 - J2412	- J1142 J1238 J2204 - J2314 - J2525	- J1143 J1245 J2206 J2316 - J2526	J1149 - J1246 J2227 - J2317 - J2527	J1212 J1315 J2235 J2337 J2529	-

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP								CONNECTORS		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1221	- J1222	J2413							
000473	J1151	J1543	J2235							
000474	J2418									
000475	J2418									
000477	J2122	J2245	J2312	J2418	J2424					
000500	J1115	J1224	- J1225	J1238	J2132					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1221									
000501	J2424									
000502	J1227	J1341	J1451	J1519	J1528	J1532	J1542	- J1543	J2117	
	J2121	- J2122	J2129	J2131	J2132	- J2133	- J2134	J2202	J2204	-
	J2205	- J2206	J2208	J2216	- J2217	J2222	J2236	- J2237	J2241	
	J2308	- J2309	- J2310	- J2311	- J2312	J2314	J2326	J2329	- J2330	
	J2346	J2401	- J2402	J2405	J2408	J2410	- J2411	- J2412	J2415	-
	J2416	J2422	J2425	- J2426	J2428	J2430	J2435	J2437	- J2439	-
	J2439	J2442	J2444	J2446	J2448	J2524	- J2525	J2528	- J2529	
	J2531	J2534	- J2535	- J2536						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1221	J2130	J2214							
000503	J1520	J2122								
000504	J1140	- J1141	J1143	J1214	J1216	J1223	- J1224	J1227	J1538	
	J2132	- J2307	J2311	- J2312	- J2313	J2316	J2408	J2411	J2525	-
	J2526	- J2527	J2529	J2532						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1215	J1218	- J1219	- J1220	- J1221					
000505	J1227	J2416								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1215	J1218	- J1219	J1221						
000506	J2121	J2235	J2237	- J2238	J2422	J2428				
000510	J1210	J1226	J1231	J1323	J1333	J1337	J2227	J2229	- J2230	
	J2232	J2235	J2241	J2247	J2314	J2316	- J2317	J2418	J2422	
	J2424	J2428	J2535	- J2536	J2542					

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215									
000511	J2418	J2422	J2428	J2532						
000513	J1347	J2117	J2129	J2243	J2389	-	J2310	J2315	J2424	J2530
000514	J2248									
000515	J1112 J1216 J2237 J2529	- J1113 J1225 J2240	- J1114 J1227 J2241	J1116 J1231 J2245	- J1117 J1315 J2418		J1122 J1317 J2424	J1211 J2229 J2427	- J1212 J2233 J2447	- J1213 J2234 J2527
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1121 J1215 J1217 - J1218 - J1219 - J1220 - J1221									
000516	J1115	J2312								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221									
000517	J2416									
00520	J2422									
000522	J1112 - J2248	J1213 J2245	J1315 J2312	- J1316 J2428	- J1317 J2423	-	J1318 J2447	J2233 J2539	J2237 J2547	J2239
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1218									
000523	J1315	- J1316	- J1317	- J1318						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222									
000524	J1131 - J1150 J2245 J2527	J1136 - J1151 J2246 J2539	J1139 J1211 J2310	- J1148 - J1212 J2312	- J1141 - J1213 J2316	-	J1142 J1316 J2420	- J1143 J2132 J2423	- J1144 J2237 J2438	J1149 - J2238 J2526
000525	J1131	J1148	- J1141	J1211	J2422					
000526	J1112	J1115	J1151	J2235	J2239	J2245	J2424			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1217 - J1218									

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS				
DIAGNOSE STATUS		IOU OFF		CPU OFF						
STOP										
000527	J2237	J2312								
000531	J1227 J2424	J1231 J2536	J1323	J1333	J2229	J2242	J2317	J2418	J2422	
000532	J2243	J2418	J2422	J2532						
000534	J2237									
000536	J1141	J1338	J2441							
000537	J1149	J2420	J2424							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1218										
000540	J111	- J1112	- J1113	- J1114	- J1115	- J1116	J1129	- J1130	- J1131	
	J1140	- J1141	- J1142	J1144	- J1145	- J1146	J1210	- J1211	- J1212	-
	J1213	J1216	J2229	- J2230	J2232	J2234	J2236	J2238	J2246	-
	J2247	- J2248	J2308	J2416	J2435	J2438	- J2439			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J2136										
000541	J2229 J2448	J2234	J2240	- J2241	J2245	J2418	J2421	J2435	J2437	
000542	J2301	J2315	J2448							
000543	J2418	J2420								
000544	J1130 J2236	J1132 J2238	J1136 J2243	J1140 J2245	- J1141 - J2246	- J1142 J2435	J1144 J2438	- J1145 - J2439	J1211	
000545	J1235	J2126	J2416	J2438						
000546	J2121	J2124	J2126	J2385						
000547	J1235	J2126								
000550	J2416	J2418								
000551	J1111 - J1213	J1113 J2229	- J1114 - J2230	J1122 J2232	J1129 J2234	J1131 J2416	J1145 J2424	J1210 J2435	J1212	
000552	J2121	J2418								
000553	J2301									
000555	J1111	J1114	- J1115	J1129	J1213	J2229	J2238	J2435		

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000556	J2416									
000557	J2305									
000560	J2418									
008561	J2122	J2438								
000564	J1146	J1243	J1512	J2202	J2205	- J2206	J2208	J2223	- J2224	
	J2227	J2229	J2235	J2238	J2242	J2245	- J2246	J2344	J2406	
	J2410	J2431	J2435	J2438	- J2439	- J2440	- J2441	J2445	- J2446	-
	J2447	J2504	J2538							
000565	J2229	- J2230	J2406	J2444	J2538	J2540				
000566	J1139	J1151	J1212	J1223	- J1224	- J1225	J1228	- J1229	- J1230	
	J1315	- J1316	J1350	J2233	- J2234	J2239	J2307	J2311	J2313	
	- J2314	- J2315	- J2316	- J2317	J2408	J2424	J2523	J2525	- J2526	
	- J2527	J2529	- J2530	- J2531	- J2532					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1219	J1221	J1234							
000567	J1144	J1228	- J1229	- J1230	J2308	J2312	J2314	J2316	J2408	
	- J2409	J2523	J2525	- J2526	- J2527	J2529	- J2530			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1221									
000570	J1212	J1223	J1228	- J1229	- J1230	J2305	- J2306	J2312	- J2313	
	- J2314	J2526	J2532							
000571	J1139	J1150	J1212	- J1213	J1315	J2527				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1221									
000572	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1215									
00573	J2237									
080575	J1225									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1219	J1221								
000576	J1140	- J1141	- J1142	- J1143	J1211	J1245	J1350	J2239	- J2240	
	- J2241	J2244	- J2245	- J2246	J2305	- J2306	- J2307	J2317	J2418	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
J2422	J2424	J2526								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221										
000577	J1141 J2348	J1211 J2526	J1231	J1244	- J1245	J2240	J2243	J2245	J2310	
000600	J1244	J2527								
000601	J2244	J2422								
000602	J1141	J2436	- J2437							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215										
00604	J2123 - J2425	J2239 J2435	- J2240 J2535	J2307	J2313	J2317	J2348	J2422	J2424	
000606	J31144 J2312 J2448	J1225 - J2313 J2526	J1451 J2316	J1549 - J2317	- J1550 J2419	J2123 J2424	J2124 J2435	J2240 - J2436	J2242 J2445	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215 J1222										
000610	J1225	J2306	J2312	- J2313	J2435					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215 J1219 - J1220 J1222										
000614	J2121	J2418	J2422	J2541						
000624	J1111 J1231 J2233 J2242 J2313 J2441	J1113 J2104 - J2234 J2244 J2316 J2444	- J1114 J2209 - J2235 - J2245 - J2317 J2446	- J1115 J2226 - J2236 - J2246 - J2341 J2534	J1122 - J2227 - J2237 - J2247 - J2341 - J2535	J1124 J2229 - J2238 - J2248 J2418 J2540	J1131 - J2230 - J2239 J2305 J2422 J2544	- J1132 - J2231 - J2240 J2367 J2424	J1210 - J2232 - J2241 J2310 - J2425	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222 J2334										
000625	J1115 J2231 J2246	J1117 - J2232 J2307	- J1118 J2235 J2312	J1123 - J2236 J2418	J1210 J2238 J2420	J1231 - J2239 J2435	J1331 - J2240 J2437	J2213 J2244 J2439	J2223 - J2245 J2445	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1121										

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000626	J1113 - J1125 J1226 J1348 J2317	- J1114 - J1126 J1231 - J1349 J2442	- J1115 - J1127 J1246 - J1350 J2538	- J1116 - J1128 - J1247 J2232 J2540	- J1117 - J1129 - J1248 J2235 J2544	- J1118 - J1130 - J1249 J2238 - J2545	J1122 - J1131 J1321 - J2239	- J1123 - J1132 J1331 J2242	- J1124 J1213 J1344 J2313	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1121									
000627	J31136	J1244	J1331	J2229	J2232	J2417	J2435	- J2436	- J2437	
000630	J1114 J1231	J1117 J1321	- J1118 J1331	J1125 J2239	- J1126	- J1127	- J1128	- J1129	J1226	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215									
000631	J1113 - J1126 J2205	J1114 J1131 J2227	J1115 - J1132 J2238	- J1116 J1246 J2245	- J1117 - J1247 J2422	J1122 - J1248 - J1249	- J1123 - J1249	- J1124 J1331	- J1125 J1344	
000632	J1111 J1231 J2234 J2308 J2410 J2448	J1115 J1235 - J2235 J2310 J2424	J1122 J1245 J2237 - J2311 - J2425	J1129 - J1246 - J2238 J2313 J2435	J1151 J2207 - J2239 - J2314 J2439	J1212 - J2222 - J2240 J2316 - J2443	- J1213 J2226 - J2243 - J2317 - J2444	J1225 J2229 - J2244 J2340 - J2445	J1227 J2232 - J2245 - J2341 - J2447	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222									
000633	J1111 - J1246	J1115 J1316	J1129 J2232	J1144 - J2233	J1212 - J2234	J1225 J2244	J1227 J2313	J1235 J2317	J1245	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: 1221									
000634	J2312									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215									
000635	J1226	J1321	J1331							
000637	J1112									
000643	J1111 J1229 J1245	J1122 J1231 - J1246	J1124 J1235 - J1247	J1129 J1239 - J1248	- J1130 - J1240 - J1249	- J1131 - J1241 J1331	J1136 - J1242 J1344	J1211 - J1243 - J1345	J1227 - J1244 - J1346	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	J1347 - J1348 - J1349 - J1350	J1542	J1545	J1547	J2111	J2113				
	J2203 - J2204 - J2205	J2207	J2210	J2215	J2216	J2217				
	J2218 - J2219 - J2220	J2226	J2229	J2231	J2232	J2233				
	J2235 - J2237 - J2238	J2239	J2240	J2242	J2243	J2244				
	J2245 - J2247 - J2248	J2302	J2305	J2309	J2311	J2312	J2314			
	J2315 - J2324 - J2327	J2338	J2339	J2340	J2341	J2342	J2343			
	J2344 - J2346 - J2402	J2404	J2405	J2409	J2411	J2417	J2423			
	J2428 - J2429 - J2430	J2437	J2537	J2546						
000644	J1111 - J1113 - J1114 - J1115	J1118	J1122	J1129	J1130	J1131				
	J1132 - J1210 - J1211	J1227	J1228	J1231	J1239	J1240				
	J1241 - J1242 - J1243	J1244	J1245	J1246	J1247	J1248	J1249			
	J1344 - J1345 - J1346	J1347	J1348	J1349	J1350	J2235				
	J2236 - J2242 - J2248	J2527								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1217									
000645	J1113 - J1114	J1116	J1123	J1132	J1231	J1235	J1242	J2236		
	J2247									
000646	J1114 - J1115 - J1116	J1122	J1123	J1124	J1126	J1130	J1131			
	J1132 - J1136 - J1210	J1235	J1240	J1242	J1244	J1245	J1246			
	J1247 - J1248 - J1249	J1344	J1345	J1346	J1347	J1348	J1349			
	J2229 - J2232 - J2235	J2236	J2237	J2238	J2239	J2247				
000647	J1113 - J1115 - J1118	J1128	J1129	J1131	J1210	J1239	J1240			
	J1242 - J1244 - J1245	J1246	J1247	J1248	J1249	J1321	J1344			
	J1345 - J1346 - J1348	J1349	J1350	J2248	J2527	J2529				
000650	J1114 - J1118	J1211	J1243	J1247	J2526					
000651	J1231 - J1235 - J1244	J1244	J1547	J2205	J2233	J2238	J2242	J2244		
	J2341 - J2342 - J2416	J2416	J2421	J2444						
000652	J1115 - J1130 - J1131	J1231	J1242	J1244	J1543	J2229	J2232			
000653	J1115 - J1118 - J1122	J1123	J1124	J1126	J1129	J1131	J1132			
	J1140 - J1145 - J1210	J1227	J1229	J1244	J1247	J1546	J2232			
	J2238 - J2247 - J2446									
000654	J1245 - J1248	J2230								
000655	J1113 - J1115 - J1130	J1131	J1136	J1211	J1231	J1235	J1241			
	J1243 - J1244 - J1246	J1248	J1344	J1349	J2203	J2204	J2205			
	J2208 - J2209 - J2222	J2230	J2239	J2241	J2243	J2245	J2248			
	J2310 - J2341 - J2346	J2411	J2438	J2441	J2444	J2447				
000656	J1424 - J1543	J2122	J2204	J2205	J2211	J2216	J2219	J2222		

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	J2226 J2340 J2445	J2230 - J2341 - J2446	J2232 - J2342 J2537	- J2233 - J2406	- J2234 - J2438	J2238 - J2439	J2310 - J2440	J2312 - J2441	- J2313 - J2443	
000657	J1129	J1245	J1247	J1249	J1348	J2216	J2239	J2241		
000660	J1338 J2429	J1545	J1547	J2204	J2212	J2216	J2218	- J2219	- J2220	
000661	J1111 - J1124 J1136 J2217 J2237	J1113 - J1125 J1140 - J2218 J2239	- J1114 - J1126 J1229 - J2219 J2243	- J1115 - J1127 J1231 - J2220 J2247	- J1116 - J1128 J1321 J2222 J2327	- J1117 - J1129 J1331 J2229 J2441	- J1118 - J1130 J1547 J2231	J1122 - J1131 - J2215 J2233	- J1123 - J1132 - J2216 - J2234	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1218										
000662	J1114 - J1226 J2242 J2338 - J2444	J1118 - J1229 - J1246 J2229 - J2243 - J2339 - J2445	J1129 - J1230 - J1247 - J2230 - J2244 - J2340 - J2446	- J1130 - J1231 - J1248 - J2232 - J2245 - J2341 - J2447	- J1131 - J1235 - J1249 - J2233 - J2438 - J2448	- J1132 - J1239 - J1344 - J2234 - J2439 - J2526	J1136 J1242 J1348 J2239 - J2441 - J2527	J1211 - J1243 - J1349 - J2240	J1213 - J1244 - J1350 - J2241	-
000663	J1113 - J1128	- J1114 - J1129	- J1115 J1131	- J1116 - J1132	J1123 J1140	- J1124 - J1138	- J1125 - J2230	- J1126 - J2239	- J1127	
000664	J2529									
000665	J1451	J2443	- J2444	J2446						
000666	J1113 - J1126 - J1211 J2236 J2448	- J1114 - J1127 J1214 J2244 J2540	J1116 - J1128 J1451 J2342 J2544	- J1117 - J1129 J1547 J2417	- J1118 - J1131 J2216 J2437	J1122 - J1132 - J2217 J2444	- J1123 - J1140 - J2229 - J2445	- J1124 - J1145 - J2230 - J2446	- J1125 - J1210 - J2235 - J2447	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1217										
000670	J1117 J1210	J1123 J1216	- J1124 - J1321	- J1125 - J1331	- J1126 - J1545	- J1127 - J1547	- J1128 - J2219	- J1129 - J2239	J1131 J2411	
000672	J1116	J1123	J1132	J2229						
000674	J1113	J1115	J1117	- J1118	J1136	J1216				
000675	J2431									

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS												
STOP															
000676	J1111 J1131 J1413 J2402 J2529	J1113 J1146 J1419 J2415 J2530	J1123 J1223 J1543 J2421 J2531	-	J1124 J1225 J1549 J2436 J2543	-	J1125 J1226 J2123 J2443 J2544	-	31126 J1227 J2131 J2524 J2545	-	J1127 J1338 J2132 J2526 J2548	-	J1128 J1341 J2133 J2527	-	J1129 J1348 J2311 J2528
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1215	J1221	J2130												
000701	J1113 - J2239	J1122 J2241	J1130 J2243	-	J1131 J2244	J1136 J2248	J1227 J2442	J1235 J2444	J1244 J2446	J2238 J2546					
000702	J1113	J1132	J1216	J2126	J2239										
000703 000704	J1242 J1113	J1244 J1131	J2120 J1214	J2125											
000705	J1115 J2247	J1131	J1248	J1344	J1349	J2125	J2236	J2239	J2244						
000706	J1132	J1331	J2239	J2440	J2443	J2447									
000707	J1338	J1545	J1547												
000710	J1132	J2230	J2233	J2236	J2238	-	J2239	J2248	J2422	J2448					
086711	J1111	J1129													
000712	J1123	J2203	J2235												
000715	J1114	J1132													
000716	J1111	J1114	J1122 -	J1123	J1129	J1132	J2229	-	J2230						
000717	J1113	J1117	J1132												
000720	J1113	J1116	-	J1117	J1131	-	J1132	J1231	J2205	J2229	J2232				
880721	J1111	J1114	J1122	J1126	J1129	J2430									
000722	J1113	J1126	J1131												
000724	J1113 J2247	J1115 J2310	J1117 J2346	J1126	J1131	J1210	J2204	-	J2205	J2229					
000725	J2204	-	J2205	J2230	J2310	J2313	J2340	J2446	-	J2447					
008726	J2237	J2239													

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000727	J1230	- J1231	J2229							
000730	J1131									
000732	J1132	J1228	J2229	J2231	- J2232	J2234	J2236	- J2237	J2240	
	J2243	- J2244	- J2245	- J2246	- J2314	J2417	J2422	J2424	J2438	
	J2444	- J2445	J2447	- J2448						
000734	J1438	J1441	J1443	J1446	- J1447	J1450	- J1451			
000735	J1442	J1445	J2205	J2238	J2315					
000736	J1131	- J1132								
0066737	J1228	J1437	J1440	J2239						
000740	J1228	J1231	J2230							
000741	J2417	J2419	J2422	J2439	- J2440					
000742	J2230									
000745	J1226	- J1227	J1437	J1440	J2104	- J2105	J2108	J2111	J2205	
	J2226	J2229	- J2230	- J2231	- J2232	- J2233	- J2234	J2236	J2238	
	J2240	J2245	- J2246	- J2247	J2302	J2340	J2406	J2424	- J2425	
	J2438	- J2439	J2441	J2444	J2447	J2540	J2545			
000746	J1227	J1442	J1445	J1547	J2406					
000750	J1132	J2235	J2238	J2302						
000751	J2236	J2438	- J2439							
000753	J1111	J1129								
000755	J2229	J2231	J2233	J2239	J2241	- J2242	J2244	- J2245	- J2246	
	J2248	J2308	J2341	J2343	- J2344	J2416	J2419	- J2420	- J2421	
	J2437	J2439	J2442	- J2443	- J2444	- J2445	- J2446	J2534	J2536	
	J2538	- J2539	J2543	- J2544	- J2545	- J2546				
000760	J1111	J1113	J1115	- J1116	J1125	- J1126	- J1127	- J1128	- J1129	
	J1131	J1144	J1212	- J1213	J1230	- J1231	J1239	- J1240	- J1241	
	J1243	J1245	- J1246	- J1247	- J1248	- J1249	J1341	J1344	- J1345	
	- J1346	- J1347	- J1348	- J1349	- J1350	J1551	J2203	- J2204	J2207	
	J2210	- J2211	- J22r2	J2215	- J2216	- J2217	- J2218	- J2219	- J2220	
	J2229	J2233	J2237	J2239	J2241	J2243	J2245	J2247	- J2248	
	J2305	- J2306	- J2307	J2311	J2314	- J2315	- J2316	J2326	J2341	
	J2408	J2424	- J2425	J2435	J2437	- J2438	J2446	- J2447	J2525	
	- J2526	- J2527	J2530	J2542	J2544	J2547				

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1217	-	J1218	-	J1219		J2119			
000761	J1238		J1242		J1244		J1347	J1350		
000762	J1111		J1129		J1213	-	J1214	J1225	J1227	J2229
	J2240		J2243		J2421	-	J2422	J2438	-	J2439
								J2447	J2234	J2237
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1215		J1219	-	J1220					
000763	J1311		J1113	-	J1114	-	J1115	J1122	J1129	J1131
	-	J1212	-	J1213	-	J1214	J1223	J1226	-	J1227
		J1239	-	J1240	-	J1241	J1244	-	J1245	-
	-	J1346	-	J1347		J1350	J2104	J2108	J2115	J2131
		J2203	-	J2204	-	J2205	J2209	-	J2210	-
		J2232	-	J2233	-	J2234	-	J2235	-	J2236
	-	J2241		J2243	-	J2244	J2246	-	J2247	-
		J2315	-	J2316		J2340	-	J2341	J2402	J2405
		J2424	-	J2425		J2429	J2435	J2438	-	J2439
		J2447		J2504		J2525	-	J2526	-	J2527
		J2545								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1209		J1215		J1219		J1220	J1221	J2130	J2433
0088764	J1231									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1217									
000765	J1111		J1114	-	J1115		J1129	J1137	J1212	-
	J1231		J1243	-	J1244	-	J1245	-	J1246	-
	J2246		J2306		J2412		J2525		J1247	-
								J1249	J1226	J1228
								J1350	J2229	
000766	J1411		J2510							
000767	J1213		J1231		J1245		J1249	J2240	J2244	J2248
080770	J1526		J2231		J2233		J2248	J2435	J2444	
000771	J1111		J1113		J1129		J1213	J2110		
000772	J1136		J1143		J1146		J1150	-	J1151	J1227
	J1245		J1247		J1350		J1417	J1517	J1223	-
	J2127	-	J2128		J2219		J2230	J2236	-	J2237
	J2246		J2248		J2421	-	J2422	J2437	J2442	J2444
								J2444	J2444	J2447
000773	J1130	-	J1131	-	J1132		J1136	J1140	-	J1141
								J1143	-	J1144
									-	J1145

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	IOU OFF IOU OFF	CPU OFF CPU OFF	IOU OFF IOU OFF	CPU OFF CPU OFF	IOU OFF IOU OFF	CPU OFF CPU OFF	IOU OFF IOU OFF	CPU OFF CPU OFF
STOP										CONNECTORS
- J1146	J1150	- J1151	J1210	J1228	J1242	J1412	J1532	J1537		
J2122	J2203	- J2204	J2217	J2219	J2229	J2231	- J2232	- J2233		
J2234	- J2235	- J2236	- J2237	- J2238	- J2239	- J2240	J2242	- J2243		
J2244	- J2245	- J2246	- J2247	- J2248	J2312	J2315	J2340	- J2341		
J2348	J2405	J2417	J2419	- J2420	- J2421	- J2422	J2438	J2444		
J2534	- J2535	- J2536	J2539	J2544	- J2545	- J2546	J2548			
000774	J1132	J1141	J1143	J1145	- J1146	J1148	- J1149	J1246	J2216	
000775	J1512	J2120	J2122	- J2123	J2205	- J2206	- J2207	J2230	J2325	
	J2406	J2428	- J2429	- J2430	- J2431	- J2432	J2440	- J2441	J2444	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2214										
000776	J1118	J1425	J2106	J2113	J2122	J2202	J2205	- J2206	- J2207	
- J2208	J2223	J2230	J2242	J2325	J2406	J2428	- J2429	- J2430	-	
J2431	- J2432	J2438	J2441	J2446	J2540					
000777	J2123	J2224	J2429	J2432	J2441	J2446	- J2447			
001000	J1411	J2107	J2109	J2111	J2113	- J2114	- J2115	J2117	J2285	
	J2207	J2211	J2229	J2238	J2332	J2406	J2410	J2440	- J2441	
	J2444	J2504	J2530	J2538	J2541	J2544	- J2545	- J2546	- J2547	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318 J2335 - J2336										
001001	J2117	J2127	J2207	J2238	J2242	J2348	J2440	- J2441	J2444	
	J2446									
001002	J2122	J2206	J2315	J2410	J2419	J2425	J2438	J2441	- J2442	
	J2444									
001003	J1405	J1409	J1411	J1433	J1513	- J1514	- J1515	- J1516	- J1517	
- J1518	- J1519	J1523	J1528	- J1529	J1531	- J1536	- J2116	- J2211		
J2233	J2316	J2327	J2416	J2418	J2524	J2530	- J2531	- J2532		
J2534	- J2535	- J2536	J2538	J2545	- J2546	J2548				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1404										
001005	J1529	J1536	J2129	J2205	J2304	J2306	- J2307	J2328	J2338	
J2401	- J2402	J2406	- J2407	J2420	J2514	J2536				
001006	J1409	- J1410	J1413	J1419	J1433	J1511	J1515	- J1516	J1517	
J1519	J1529	- J1530	- J1531	- J1532	- J1533	J1535	- J1536	J1542		
J2120	J2208	J2233	J2316	J2340	J2344	J2408	J2416	J2418	-	
J2419	J2421	J2425	J2429	J2432	J2510	J2514	- J2515	- J2516		
J2528	- J2529	- J2530	- J2531	J2536	J2544	- J2545				

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
001026	J1548 J2240	J2239 J2244	J2244	J2246	J2412	J2443				
001030	J2133	J2134	J2135	J2321						
001031	J2133	J2135	J2321							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2320									
001032	J2133	J2135	J2321							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2320									
001033	J2133	J2135	J2321							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2320									
001034	J1422 J2306 J2416	J1424 - J2307 J2504	J1526 J2310 J2509	J1528 J2329 - J2510	J1530 J2401 - J2511	J2133 - J2402 J2513	J2227 J2407 J2515	J2301 J2409 - J2516	- J2302 J2412 J2518	
001035	J2120 - J2204 J2217 J2337 J2406 J2515	J2122 - J2205 J2223 - J2338 J2409 - J2516	J2124 - J2206 - J2224 - J2339 J2415 J2518	J2129 - J2207 - J2225 - J2342 J2418	J2131 - J2208 J2306 - J2343 - J2426	- J2132 - J2209 J2308 - J2344 - J2427	J2133 - J2210 J2310 - J2401 J2509	J2135 J2212 - J2314 - J2402 - J2510	J2203 - J2213 J2329 J2405 - J2511	-
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2119 J2130									
001037	J1420 - J1526 J1539 J2315 J2418 J2440 J2544	- J1421 J1528 J2104 J2329 J2421 J2534 - J2545	J1423 - J1529 J2106 - J2330 - J2425 - J2535 - J2546	J1514 - J1530 J2207 J2405 - J2426 - J2536 J2548	J1520 - J1531 J2232 J2410 J2429 - J2537	- J1521 - J1532 J2237 - J2411 J2435 - J2538	- J1522 J1534 J2302 - J2415 - J2437 - J2539	- J1523 J1536 J2306 - J2416 - J2438 - J2540	J1525 - J1537 J2308 - J2417 - J2439 - J2541	-
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1430									
001040	J1408 - J1535	J1509 - J1536	J1524 - J1537	J1526 J1539	J1529 J1542	J1531 J1551	- J1532 J2232	- J1533 J2308	- J1534 J2437	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS												
STOP															
	J1404	J1444													
001841	J2307	J2311	-	J2312	J2314	J2321									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318															
001042	J2121	J2129	J2131	-	J2132	J2224	-	J2225	J2302	J2308	J2311				
	J2314	J2327	J2408	-	J2409	J2412	J2502	-	J2503	-	J2504				
	J2508	J2510	J2517	J2524	-	J2525	J2531								
001043	J2327														
001044	J2327	J2524	J2529	-	J2530										
001045	J1420	-	J1421	-	J1422	-	J1423	J1516	J1520	-	J1521	-	J1522	-	J1523
	-	J1524	-	J1525	-	J1526	J1529	J1531	J1533	-	J1534	-	J1535	-	J1537
	J2327	J2512	J2524	J2529	-	J2530									
001046	J2328	J2524	J2529	-	J2530										
001047	J2328	J2342	J2524	J2527	J2529										
001050	J1405	J1420	-	J1421	-	J1422	-	J1423	-	J1424	J1520	-	J1521	-	J1522
	-	J1523	-	J1524	-	J1525	-	J1526	J1529	J1531	J1533	J1535	-	J1537	J1537
	J2213	J2301	-	J2302	J2304	J2307	-	J2308	J2328	J2341	J2504				
	J2512	J2515	-	J2516	J2525	J2530									
001051	J2224	J2328	J2401	J2407	J2513	J2515	J2523	J2542							
001052	J2328	J2514	-	J2515	-	J2516	J2544								
001053	J1419	J2328	J2512	-	J2513	-	J2514	J2516							
001054	J2204	J2206	J2224	J2337	-	J2338	J2342	J2346							
001055	J2308	J2328	J2401	-	J2402	J2406	-	J2407	J2421	J2505	J2587				
	-	J2508	J2513	-	J2514	-	J2515								
001056	J1425	-	J1426	-	J1427	J1429	J1432	J1513	J1518	J1525	-	J1526	J1526		
	J1528	-	J1529	J1532	J1534	-	J1535	-	J1536	-	J1537	J1538	J2108		
	J2122	J2435	J2440	J2515	J2535	-	J2536	-	J2537	J2546					
001057	J1421	J1525	J1526	J1528	J1530	J2542	J2546								
001868	J1113	J1227	J1543	J2230	J2542										
001061	J1214	J1224	J1227	J1451	J1512	J2122	J2411								

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	J1215	J1217								
001062	J1242	J1424	J1451	J1526	J2317	J2440				
001063	J2204	J2205	J2207	J2236	J2243	J2301	J2302	J2305	J2306	
	J2308	J2309	J2311	J2401	J2402	J2415	J2417	J2419	J2422	
	J2423	J2430	J2435	J2440	J2445	J2510	J2512	J2534	J2538	
	J2540	J2544	J2544	J2545						
001064	J1531	J2322	J2323	J2332	J2333	J2401	J2402	J2404	J2407	
	J2409	J2412	J2419	J2438	J2440	J2441	J2501	J2502	J2503	
	J2504	J2505	J2506	J2507	J2509	J2510	J2511	J2513	J2515	
	J2516	J2517	J2523	J2534	J2544	J2546				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2520										
001065	J1228	J1229	J2229	J2233	J2235	J2236	J2242	J2245	J2305	
	J2306	J2412	J2441	J2442	J2503	J2504	J2507	J2510	J2517	
	J2536	J2540								
001066	J2401	J2402	J2409	J2416						
001067	J1228	J1243	J1244	J2305	J2311	J2540	J2542	J2543	J2545	
001870	J2227	J2302	J2305	J2307	J2322	J2323	J2332	J2333	J2341	
	J2342	J2402	J2407	J2409	J2412	J2415	J2501	J2502	J2503	
	J2504	J2505	J2506	J2510	J2511	J2513	J2516	J2517	J2523	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2334										
001071	J2305	J2306	J2307	J2308	J2507	J2517	J2528	J2538	J2540	
001074	J2440									
001076	J2401									
001077	J1534	J2441								
081100	J2207	J2435	J2441							
001101	J2440	J2441	J2445	J2447	J2535	J2544	J2545			
001103	J1531	J1534	J1537	J2207	J2311	J2536				
001104	J1423	J1526	J1528	J1530	J1531	J1534	J2535	J2538		

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
001107	J1531 - J2205 J2216 J2306 J2511 J2548	J1537 - J2206 - J2217 J2310 J2516	J2122 - J2207 - J2218 J2326 - J2517	J2129 - J2288 - J2220 J2342 J2536	J2131 - J2209 - J2221 J2343 J2538	J2133 - J2210 - J2222 J2405 J2542	J2202 - J2211 - J2223 J2444 - J2543	- J2203 - J2212 - J2224 J2509 - J2544	- J2204 - J2213 - J2225 - J2510 - J2545	
081110	J2131 J2309 J2446	J2202 - J2310 J2524	J2204 - J2311	J2207 J2313	J2212 - J2314	J2223 J2331	J2225 J2402	J2306 J2405	- J2307 J2412	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J2130										
001111	J1435	J2310	J2348							
001112	J1420	J2308	J2401	J2406	J2511					
001113	J1532 - J2207 J2240 J2541	J1535 J2212 J2245 J2542	J1549 J2221 J2302 - J2543	J2104 J2223 J2308 - J2544	J2108 - J2224 J2406	J2203 - J2225 J2419	- J2204 J2234 J2534	- J2205 J2236 J2538	- J2206 J2238 J2540	-
001114	J2401	J2416	J2418	J2511						
001115	J2302 J2504	J2307 - J2505	J2330 J2518	- J2331 J2523	J2401	- 32402	J2406	- 32407	J2409	
001116	J1143 J2401 - J2507 J2540	J2302 - J2402 J2509 - J2541	J2305 J2406 - J2518 - J2542	- J2306 J2409 - J2511 - J2543	J2308 J2412 J2534 - J2544	J2315 J2421 - J2535 - J2545	J2322 J2504 J2537 - J2546	- J2323 - J2505 - J2538	J2330 - J2506 - J2539	-
001117	J1516 - J2223 J2306 J2415 J2587 J2542	J2202 - J2224 J2308 - J2416 - J2508 J2544	- J2203 - J2225 J2310 J2419 - J2509 J2546	- J2284 - J2230 J2315 J2501 - J2517	- J2205 - J2231 J2342 - J2502 - J2518	J2207 - J2236 J2401 - J2503 - J2523	J2210 J2238 J2405 - J2504 - J2534	J2213 J2242 J2410 - J2505 - J2540	J2222 J2302 - J2411 - J2506 - J2541	-
001120	J1419 J2505	J2213 J2507	J2223 J2509	J2308 - J2510	J2330 - J2511	J2401 J2516	- J2402 - J2517	J2406	J2499	
001121	J1144									
001122	J2209	J2212	- J2213	J2236						
001123	J2331									

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
	J1222											
001124	J2210 J2518	J2224 J2536	-	J2225 J2543	J2307	J2310	J2315	J2409	J2505	J2507		
001125	J2540	J2542										
001127	J2131	J2203	J2205	J2207	-	J2208	J2225	J2314	J2408	J2535		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2130											
001131	J2239 J2543	J2244	J2246	J2322	J2418	J2420	J2504	J2507	J2528			
001133	J1117 - J2235 J2536	J2104 - J2236 - J2537	J2107 J2240 - J2538	-	J2108 J2382 - J2539	J2207 J2388 - J2540	J2221 J2481 J2544	J2226 J2405	J2233 J2419	- J2234 J2504		
001134	J1532 J2233 J2536	J2107 J2305	-	J2108 J2307	J2131 - J2308	J2204 J2310	J2210 J2315	J2212 J2402	J2224 J2412	- J2225 J2501		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2130											
001135	J2203 J2418	-	J2204 J2510	-	J2205	-	J2206	J2308	J2310	J24J2	J2409	J2416
001136	J2306	-	J2307	J2330	-	J2331	J2409					
001148	J2401											
00881141	J1420 J2418	J1521	J1524	-	J1525	J1529	J2204	-	J2205	J2305	J2416	
001143	J2237	J2239	J2422									
001144	J2412	J2515										
001145	J2124	J2235	J2516	J2548								
001146	J2224	J2305	-	J2306	J2308	J2310	J2405					
001147	J2401											
001150	J1524	J2207										
001153	J2224	J2233	J2242	J2540								

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
001155	J1420	J1521	J1525	J2203	J2205	J2212	J2348			
001160	J2224	J2233	J2235							
001163	J1420	J1521	J1524	- J1525	32203	J2205	J2419			
001166	J2310	J2315	J2502	- J2503	J2505	J2507	- J2508	J2518		
001167	J1144 - J1411 J1428 J1517 J1539 J2537	J1210 J1413 J1429 J1519 J1540 J2539	J1212 J1416 J1431 J1521 J1542 - J2540	J1320 J1419 - J1432 - J1524 - J1543 J2544	J1322 - J1428 - J1433 - J1525 J2125 J2546	J1338 J1424 - J1434 - J1527 J2234 - J2547	J1340 - J1425 - J1435 - J1528 J2402	- J1341 - J1426 - J1436 J1530 J2409	J1410 - J1427 - J1512 J1538 J2417	- - - - -
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1430										
001171	J1525 J2326	J1529 J2408	J2129 J2411	J2131 J2508	- J2132 J2525	J2205 J2527	J2223	J2310	J2311	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130										
001175	J2504	J2566								
001176	J2205	J2207	J2235	J2238	J2245	- J2246	J2419			
001200	J1312 J2122 J2305 J2342 J2432	- J1313 J2129 J2311 J2344 J2435	- J1314 J2135 J2316 - J2415 - J2436	- J1315 J2231 - J2317 - J2416 J2447	J1316 J2234 J2321 J2418 J2507	J2108 - J2235 J2331 - J2419 J2534	J2112 - J2236 J2333 J2421	J2114 J2238 J2348 J2429	- J2115 J2244 - J2341 J2431	- - - -
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318 J2413										
001201	J1312 - J2342	- J1313 J2416	- J1314 J2418	- J1315 J2429	- J1316 J2432	J2317 J2435	J2321 J2437	J2333	J2341	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2119 J2334										
001202	J1312	- J1313	- J1314	- J1315	- J1316	J2125	J2317	J2436	- J2437	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209										
001203	J1312 J2333	- J1313 J2530	- J1314	- J1315	- J1316	J1319	J1321	J1325	J2115	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318									
001204	J1313 J2432	- J1314 J2435	J2238 - J2436	J2317	J2332	- J2333	J2416	J2421	J2429	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318									
001205	J2129 J2326 J2504 J2518	J2131 J2337 - J2505	J2135 J2340 - J2506	J2208 J2342 - J2507	- J2209 J2402 - J2508	J2224 J2409 J2510	- J2225 J2501 J2513,	J2311 - J2502 J2515	J2321 - J2503 J2516	-
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130 J2318									
001206	J2117 J2215	J2120 J2312	J2129 J2326	J2131 J2337	- J2132 J2341	- J2133 J2415	- J2134 J2504	J2206 J2507	J2212 - J2508	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130 J2318									
001207	J1421	J1526	J1531							
001210	J1144	J1524	- J1525	J1545	J2307	J2314	- J2315	J2510		
001211	J1420 J2217	J2129 J2225	J2131 J2308	- J2132 J2416	J2203 J2418	- J2204 - J2419	J2206 J2507	- J2207 J2536	- J2208	
001212	J2205	J2236	J2307	J2416						
801213	J1211	J1314	J2203	J2206	- J2207					
001214	J1525 - J2407 J2515	J2129 J2409 - J2516	J2131 - J2410 J2523	J2134 J2418 J2530	- J2135 J2505 - J2531	J2306 J2508	- J2326 - J2509	J2402 J2511	J2406 J2514	-
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130									
001215	J1522 J2401	J1531 J2409	J2302 J2506	J2305 J2512	- J2306 J2514	- J2307 - J2515	J2310 - J2516	J2328 J2519	J2337 J2523	
001216	J1420	J1521	J2132	J2203	- J2204					
001217	J1518 J2402 J2509	J1525 J2404 J2511	J1535 J2407 - J2512	J1537 J2415 J2514	J2131 J2421 - J2515	- J2132 J2504 - J2516	J2224 - J2505 - J2517	- J2225 J2507 - J2518	J2301 - J2508 J2542	-

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS										
STOP													
	J2547												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2119												
001228	J2328	J2342	J2401	-	J2402	J2406	-	J2407	J2420	J2513			
001221	J1525	J1529	J2129		J2402	J2409	-	J2410	J2504				
001222	J1525 J2516	J2244	J2305	-	J2306	J2311	J2341	-	J2342	J2407 J2514			
001224	J2129 J2508	J2131 J2525	-	J2132	J2224	J2308	J2311	J2401	J2408	J2412			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2130												
001225	J2332												
001226	J2307	J2329											
001227	J1535 J2313 J2440 - J2529	J2206 - J2314 - J2441 - J2531	-	J2207 - J2315 - J2442	J2218 - J2316 - J2505	J2221 J2329 J2507	J2307 - J2408 - J2517	-	J2308 - J2409 - J2524	J2310 - J2411 - J2525	-	J2311 - J2412 - J2528	
001230	J1420 J2427	J2213 J2431	J2307 - J2508	-	J2308 - J2512	J2401 - J2513	-	J2402 - J2514	J2404 - J2516	J2407 - J2536	J2416		
001231	J1531	J2407	J2410	J2412	J2513								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2413												
001233	J1532	J2329	J2427	J2505	J2507	J2509	J2511	J2517	-	J2518			
001235	J2410												
001236	J1526	J2129	J2304	J2306	J2441								
001237	J1341 J2404	J1419 J2406	J1428 - J2407	-	J1429 - J2504	J1433 - J2512	-	J1434 - J2513	-	J1435 - J2514	J2304 - J2516	J2328 - J2537	
001241	J1425	-	J1426	-	J1427	J1542	J2402	J2537	J2539	-	J2540	-	J2541
001242	J2508												
001243	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1215	J1217	J1220										

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP										
001244	J2304	J2508	J2512	J2516						
001245	J2508									
001247	J1435	J1526	J1528	J2205	J2217	-	J2218	J2540		
001250	J2401	J2505	J2508	J2513						
001252	J2514	J2516								
001253	J1521 J2330	J1525 J2428	J1528 J2501	- J1529 J2504	J1531 - J2505	J1538 J2507	- J1539 J2517	J2310 J2527	J2328	
001254	J1419									
001255	J1216 J2421	- J2134 J2422	J2216 J2426	J2341 J2441	- J2342 J2527	- J2343 J2529	- J2344 J2530	J2346	J2418	
001256	J1531	J2208								
001257	J1314 - J2123 J2224 J2427 J2512	J1341 - J2124 J2323 J2501 - J2513	J1420 J2129 J2326 - J2502 J2516	J1522 J2131 J2337 - J2503 - J2517	J1524 - J2132 - J2338 - J2504 - J2518	J1538 - J2133 J2342 - J2505 J2530	J2106 - J2134 J2346 - J2506	J2117 J2209 J2401 J2508	J2122 J2215 J2404 - J2509	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J2136	J2136	J2520							
001260	J2133									
001261	J1314									
001262	J2501	- J2502	- J2503	- J2504	J2507	- J2508	J2517	- J2518		
001264	J2121	J2124	J2126	- J2127	- J2128					
001265	J1417 - J2506 J2508	J2124 J2517	J2126	J2323	J2501	- J2502	- J2503	- J2504	- J2505	
001266	J2129	J2212	J2244	J2311	J2441					
001267	J1421 J2308	- J1422 J2310	- J1423 J2331	J1514 J2504	J1526 J2507	J2204	J2210	J2230	J2306	
001272	J2230	J2501	J2503	- J2504	J2506					

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS				
STOP							
001273	J2322 - J2323	J2410	J2583				
001275	J2510						
001276	J2501	J2503					
001277	J2322 - J2323	J2501	J2503				
001302	J2501	J2503					
001303	J2322 - J2323	J2506					
001306	J2503	J2505 - J2586					
001307	J2322 - J2323	J2404	J2501 - J2582 - J2583				
001312	J2584						
001313	J2322 - J2323	J2501					
001316	J2501	J2503 - J2504					
001317	J2322 - J2323	J2501 - J2502 - J2503 - J2504					
001322	J2501	J2506					
001323	J2322 - J2323	J2502					
001327	J2322 - J2323	J2404	J2501 - J2502 - J2503 - J2504				
001332	J2504						
001333	J2322 - J2323	J2501	J2505				
001337	J2502	J2504					
001366	J2310						
001367	J2302	J2305 - J2306	J2308	J2310	J2315	J2405	
001372	J2310	J2315					
001407	J1531						
001410	J1144						
001445	J1536						
001466	J2310						

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
001467	J2302	J2305 - J2306	J2308	J2310	J2315	J2405	J2511			
001472	J2310	J2315								
001541	J1531									
001665	J2122									
001666	J1131 J2129 J2341	J1338 J2131 - J2342	J1420 J2133 J2422	- J1421 - J2134 J2438	J1451 J2317 J2535	J1525 J2326 J2540	- J1526 J2331	J1528 J2333	J1535 J2338	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1220	J1221	J2130	J2318						
001667	J1214 J2342	J1537 J2401	J1543 J2509	J2301 J2515	J2304 J2525	J2317	J2326	J2338	- J2339	
001670	J1211 J1436 J1532 - J2126 J2241 -J2315 J2341 J2441	J1229 J31514 J1538 J2135 J2245 - J2316 - J2342 J2501	J1239 J1518 - J1539 J2209 J2302 J2319 J2402 - J2582	J1313 - J1519 - J1540 J2213 J2305 J2323 J2405 - J2503	- J1314 J1524 J1542 J2217 J2308 J2326 - J2406 J2505	J1316 J1528 - J1543 J2221 J2310 - J2331 J2331 - J2415 J2512	J1339 - J1529 J2111 J2224 - J2311 - J2332 J2422	J1346 - J1530 J2113 J2227 - J2312 - J2333 J2425	J1431 - J1531 J2125 J2235 J2314 J2338 J2432	
001702	J1543	J2125								
001703	J1138	J2348								
001704	J1425									
001707	J1340 - J1539	J1425 32107	J1431 J2109	J1433 J2111	- J1434 J2113	- J1435 J2331	J1514 J2429	J1517 J2446	- J1538 J2447	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1215									
001710	J1426									
001711	J1426									
001713	J1235	J1340	J1535							
001714	J1410 J2310 J2506	J1431 J2325 J2508	J1433 J2328 - J2509	J1436 - J2329 - J2510	J1538 J2348 - J2511	- J1539 - J2401 - J2512	- J1540 - J2402 - J2513	J1542 J2406 - J2514	J2386 J2489 - J2515	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP									
	- J2516	J2519	J2523	J2526	J2528	J2530	- J2531	J2546	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1430								
001716	J1340	J1429	J1436	J1539	J1542	J2509	J2511		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1430								
001717	J2109	J2111							
001720	J1410	J1542	J2509	J2511					
001721	J1513								
001722	J1426	J1433	J1538	- J1539					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1430								
001724	J1410	J1542	J1545	J2509	J2511				
001725	J1540								
001727	J1540								
001731	J1426	- J1427	J1513	- J1514					
001732	J1410	J1432	J1539						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1430								
001733	J1427								
001734	J1410	J1433	J1542	J2511	J2514				
001735	J1426	J1540							
001737	J1540								
001740	J2120								
001741	J1514	J1540							

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
001743	J1540											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1215											
001744	J1532	J1542										
001745	J1514											
001746	J1542	J1551										
001747	J1539											
001750	J2410	J2526	-	J2527	J2529							
001751	J2440	J2538										
001752	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1215	J1219	-	J1220								
001755	J2538	J2546										
001756	J1224	J1433	J1514	J1530	-	J1531	-	J1532	J1535	-	J1536	J1538
	-	J1539	J1542	J2134	J2202	J2306	J2310	-	J2311	-	J2312	J2314
	-	J2315	J2317	J2402	J2411	J2428	J2430	J2506	J2510	-	J2511	
	-	J2512	J2514	-	J2515	-	J2516	J2519	J2526	-	J2527	J2529
	-	J2531										J2530
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1289											
001757	J1431	J1435	J1518	J1521	J1530	J1535	J1539	J2106	J2108			
	J2122	J2208	J2311									
	001760	J1542	J2515									
001762	J1539	J1542	J2208	J2510	J2538							
001763	J1433	J2207	J2509	J2515	-	J2516						
001764	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1219											
001765	J1451	J1529	J1531	J2548								
001767	J1141	-	J1142	J2245	J2247	J2436	J2443	J2448				

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS		
STOP					
001777	J2189				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J2130				
002000	J2109	J2114	J2116	J2123	J2333
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J2335	- 32336			
002377	J2123				
003776	J2109				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J2130				
003777	J2109				
004000	J2112	J2115	- 32116	J2333	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J2335	- J2336			
004041	J1532	31545			
004105	J1516				
004107	J1516				
006752	J2419				
081800	J2112	J2115	J2117	J2333	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J2335	- J2336			
010173	J1517				
011146	J1516				
012000	J1529	J1542			
012030	J1151	J1419			
017770	J2421	J2542			
020000	J2112	J2114	J2117	J2333	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J2335	-	J2336
020200	J2342 028487		J1517
021620	J2103		
021720	J2111		
021750	J2111		
021770	J2115		
022000	J2111		
022020	J2113		
022030	J2114		
022087	J2107		
022100	J2107		
022120	J2108		
024041	J1532		
026055	J1412	J1418 - J1419	J1537
030880	J1533		
030081	J1513	J1517	
030020	J2531		
033000	J1225		
033041	J1524		
033105	J2122		
034100	J1326		
035102	J2123		
037770	J1412		
040000	J2112	J2115 - J2116	J2333

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2335 - J2336		
040003	J1517		
041554	J1407		
042002	J2123		
042004	J1228 - J1229 - J1230	J1428	
042036	J2123		
042300	J2123		
042377	J2123		
042530	J2103		
043100	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1404		
050001	J1513	J1517	
050006	J2125		
051002	J1512	J1517	
5100884	J1533		
053000	J1427		
053037	J1435		
053043	J1433		
054367	J1515		
057374	J1519		
060000	J2125 - J2126		
061000	J2544		
061001	J1535		
061002	J1512	J1516 - J1517	
061542	J1515	J1519	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS		
STOP					
061633	J1515				
061664	J2431				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1404				
064040	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1218				
064041	J1111				
064724	J1406				
065537	J1406				
070000	J2125	- J2126	J2323	J2501	J2506
87880013	J2116				
0710B3	J1513	J1516			
071004	J1532	- J1533	J2530		
072001	J1512	- J1513	J1515	J1517	
072002	J1516				
073000	J1433	J2505	J2507	J2517	
073045	J1339	J1427	J1543	J2415	
073046	J2244				
073057	J1526				
074000	J1338	J1529			
074003	J2332				
074031	J2107				
074040	J1535				
074041	J1111	J1530			
074102	J2122				

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS										
STOP													
075135	J2418												
100000	J1138	J1338	-	J1339	-	J1340	J1410	J1417	J1425	-	J1426	-	J1427
	- J1428	- J1429		J1431		J1433	J1436	J1514	J1517		J1519		J1525
	J1528	J1531	-	J1532	-	J1533	J1535	J1538	-	J1539	-	J1540	J1542
	J1551	J2185		J2108		J2112	-	J2113	-	J2114	-	J2116	J2117
	J2125	J2202		J2204	-	J2205	-	J2206		J2215		J2217	J2333
	J2440	J2446		J2505		J2507		J2517		J2545			J2406
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1444	J2214		J2335	-	J2336							
100010	J1533	J2224		J2440	-	J2441	J2446						
100002	J1530												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1219												
100050	J1542												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1215												
100120	J1526												
100140	J1410	J1436		J1539	-	J1540	J1542						
100150	J1410	J1436		J1514		J1539	J1542						
100160	J1410	J1426	-	J1427		J1512	J1531	J1538	J1542				
100170	J1339	J1426		J1543									
100400	J2438												
103037	J1515												
103734	J1515												
105051	J2183												
110000	J1340	J1410		J1426		J1428	J1432	J1436	J1506		J1510		J1519
	J1532	J1535		J1538		J1542	J2112	J2114	J2117		J2333		
110010	J2430												
110170	J1410	J1433		J1514		J1540	J1542						

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS		
STOP					
111111	J2111	J2114	J2116	J2329	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1234	J1311	J1584		
120600	J1425	J1428	J1432	J1538	J2229
126328	J2183				
130010	J1144				
141231	J2442				
142016	J2123				
142077	J2123				
143072	J2544				
143231	J2407				
154003	J2188				
174845	J2111				
175100	J2121	J2123	J2262 2		
175102	J2128				
177100	J2419				
177137	J2419				
200000	J2112	J2115	J2117	J2125	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J2335	-	J2336		
200120	J1151				
200140	J1436				
200160	J1531				
220500	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J2345				
264550	J2125				
300150	J1514				

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
310170	J1514					
315326	J1536 - J1537					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1439					
347801	J2117					
364104	J2112					
374000	J2113					
374045	J2111	J2113 - J2114	J2230	J2333	J2348	
374182	J2122					
374104	J2112					
374134	J2418					
375153	J2108					
377110	J2103	J2430				
377112	J2227					
400000	J1511	J2112	J2114	J2117	J2333	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2335 - J2336					
401201	J2115					
421001	J2117					
421003	J2117					
431001	J2117					
431011	J2116					
581780	J1539	J2244				
502603	J2109	- J2110	- J2111	- J2112		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130					

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	CONNECTORS
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	
STOP					
510000	J2117				
510033	J2114				
535000	J2116				
535605	J2116				
537803	J2117				
688000	J2116				
631287	J2116				
635081	J2116				
635007	J2116				
635017	J2116				
641554	J1412				
660025	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1343	J2336			
700000	J1111	J1113	J1115	J1116	J1118
	J1132	J1138	J1144	J1148	J1149
	J1231	J1237	J1238	J1243	J1244
	J1338	J1341	J1344	J1347	J1350
	J1412	J1428	J1429	J1448	J1449
	J1513	J1514	J1528	J1531	J1533
	J1551	J2105	J2107	J2109	J2110
	J2116	J2117	J2120	J2121	J2122
	J2133	J2135	J2205	J2207	J2210
	J2224	J2230	J2234	J2237	J2241
	J2314	J2315	J2316	J2317	J2319
	J2338	J2340	J2342	J2344	J2348
	J2423	J2424	J2429	J2430	J2431
	J2503	J2507	J2509	J2510	J2512
	J2519	J2523	J2524	J2527	J2531
	J1122	J1123	J1129	J1130	J1129
	J1211	J1212	J1214	J1225	J1214
	J1312	J1313	J1316	J1325	J1312
	J1406	J1407	J1409	J1410	J1406
	J1506	J1507	J1510	J1512	J1506
	J1534	J1535	J1537	J1546	J1534
	J2111	J2112	J2114	J2115	J2111
	J2123	J2124	J2125	J2126	J2123
	J2212	J2213	J2215	J2220	J2212
	J2242	J2247	J2303	J2305	J2242
	J2321	J2323	J2329	J2332	J2321
	J2404	J2406	J2407	J2419	J2404
	J2435	J2443	J2445	J2446	J2435
	J2513	J2514	J2515	J2517	J2513
	J2534	J2539	J2540		J2534
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1121	J1289	J1215	J1218	J1219
	J1404	J1430	J2119	J2136	J2318
	J2520				
	J1234	J1310	J1311	J1343	J1234
	J2334	J2336	J2345	J2433	J2334
700001	J1212	J1226	J1326	J1330	J1411
	J1428	J1429	J1432	J1514	J1521
	J1528	J1538	J2108	J2126	J2127
	J2224	J2227	J2229	J2233	J2306
	J1418	J1420	J1425	J1427	J1418
	J1523	J1524	J1525	J1526	J1523
	J2131	J2132	J2205	J2211	J2131
	J2308	J2310	J2319	J2340	J2308

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS															
STOP																		
	J2402	J2405	J2415	J2419	-	J2420	-	J2421	J2425	J2437	-	J2438						
	J2440	-	J2441	J2444	-	J2445	-	J2446	-	J2447	-	J2448						
	J2534	-	J2535	J2537	-	J2540	-	J2541		J2510		J2518						
700002	J1114	J1122	J1125	J1129	-	J1130		J1136	J1142	J1147		J1151						
	J1210	J1214	J1225	J1237	-	J1320	-	J1321	J1326	J1330		J1336						
	J1339	-	J1340	J1407		J1411	J1417	-	J1418	-	J1419	-	J1428					
	J1507	J1509	J1512	J1515	-	J1516	-	J1517	-	J1518	-	J1519	J1528					
	-	J1529	-	J1530	-	J1531	-	J1532	-	J1533	-	J1534	-	J1535				
	J1539	J1543	J1549	-	J1550	-	J1551	-	J2104	-	J2105	-	J2107	-	J2108			
	J2111	J2113	J2116	-	J2117	-	J2120	-	J2121	-	J2123	-	J2124	-	J2125			
	-	J2126	-	J2127	-	J2128	-	J2132	-	J2133	-	J2134	-	J2135	-	J2202		
	-	J2204	-	J2205	-	J2206	-	J2210	-	J2213	-	J2215	-	J2216	-	J2217		
	-	J2219	-	J2220	-	J2221	-	J2222	-	J2223	-	J2224	-	J2225	-	J2226		
	J2229	-	J2230	-	J2231	-	J2236	-	J2240	-	J2241	-	J2242	-	J2244	-	J2245	
	J2301	-	J2302	J2305	-	J2306	-	J2307	-	J2308	-	J2309	-	J2310	-	J2311		
	J2314	-	J2315	J2317		J2319	J2325	-	J2326	J2330	-	J2331		J2337				
	-	J2338	-	J2339	-	J2340	-	J2341	J2343	-	J2344	J2346	J2348	J2401				
	-	J2402	-	J2404	J2406	-	J2407	-	J2408	-	J2409	-	J2410	J2415	-	J2416		
	-	J2417	-	J2418	-	J2419	-	J2420	-	J2421	-	J2422	-	J2423	-	J2424		
	-	J2426	-	J2427	J2429	-	J2430	-	J2431	-	J2432	-	J2433	J2435	J2437	-	J2438	
	-	J2439	-	J2440	-	J2441	-	J2442	-	J2443	-	J2444	-	J2445	-	J2446	-	J2447
	-	J2448	J2501	-	J2502	J2504	J2509	J2511	J2515	-	J2516	-	J2518	J2518				
	J2523	J2526	J2530	-	J2531	J2534	J2539	J2541	J2545	-	J2536	-	J2537	-	J2538			
	-	J2539	-	J2540	-	J2541	-	J2542	-	J2543	-	J2544	-	J2545	-	J2546	-	J2547
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J1215	J1217	-	J1218	-	J1219	-	J1220	J1221	J1404	J1444	J2136						
	J2214	J2336		J2433														
700003	J1111	J1138	J1314	J1330	-	J1331	J1338	J1341	J1405	-	J1406							
	J1409	-	J1410	-	J1411	-	J1412	J1416	J1422	-	J1423	J1425	-	J1426				
	J1427	-	J1428	-	J1429	-	J1431	-	J1432	-	J1433	J1435	-	J1436				
	J1508	J1514	J1517	-	J1518	-	J1519	J1524	-	J1525	J1527	-	J1528					
	-	J1529	-	J1530	-	J1531	-	J1532	-	J1533	-	J1534	-	J1535				
	-	J1538	-	J1539	-	J1540	J1542	-	J1543	J2106	J2108	J2113	J2115					
	-	J2116	J2121	-	J2122	J2124	J2126	J2129	J2131	-	J2132	-	J2133					
	-	J2134	-	J2135	J2202	-	J2203	-	J2204	-	J2205	J2209	-	J2210				
	-	J2212	J2218	J2221	J2223	-	J2224	-	J2225	J2232	J2234	J2236						
	J2242	J2301	-	J2302	J2304	-	J2305	-	J2306	-	J2307	-	J2308					
	J2312	-	J2313	J2315	J2317	J2328	-	J2329	-	J2330	J2333	J2337						
	J2340	J2343	J2401	-	J2402	J2405	-	J2406	-	J2407	J2409	J2412						
	J2416	J2419	J2430	-	J2431	-	J2432	J2436	J2501	J2505	J2507							
	-	J2506	J2510	-	J2511	-	J2512	-	J2513	-	J2514	-	J2515					
	J2530	J2534	-	J2535	-	J2536	-	J2537	-	J2538	-	J2539						
	-	J2543	-	J2544	-	J2545	-	J2546	-	J2547	-	J2548						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J1218	J1221	J1310	-	J1311	J1404	J1430	J1439	J2119	J2130								
	J2136	J2318	J2335	-	J2336													

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP									
700004	J1421 J2438	J1526 J2523	J2208	J2311	- 32312	32314	J2317	J2402	J2407
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318									
700685	J1330 J2124	J1419 J2442	- J1420 J2539	J1517 J2544	J31520	- J1521	J1524	J1531	J2122
700006	J1136	J1419	J2121	J2124	J2125	J2502			
706807	J1516	J2505	J2507	J2518					
708018	J2523								
700011	J1115	J1138	J1136	J31139	J1213	J1420	J1431	J2236	J2510
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2433									
700012	J1136								
700013	J1420 J2501	- J1421	J1427	J2210	- J2211	J2224	- J2225	J2346	J2421
700014	J2421								
700015	J1516	J2412	J2503	J2505	J2507	J2510	J2518	J2541	
700016	J2505	J2513							
700017	J2223	J2308	J2410	- J2411	J2415	J2419	J2430	J2515	J2523
700020	J1226 J232E J2537	- J1227 J2329	J2117 J2409	J2209 J2412	J2212 J2509	J2223 - J2510	J2225 J2513	J2302 J2516	J2305 J2523
700021	J1411	J1419	- J1420	J1531	J2223	J2236	J2238	J2242	
700022	J2538								
700024	J1405	J2337	J2421						
700025	J1516	J2425	J2505	J2507	J2511	J2518			
700027	J2440	J2443	J2448						
700030	J2425								
700031	J1235	J2120	J2123	J2125					

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP										
700033	J1213	J2210	J2425	J2546						
700035	J2437									
700037	J1115	J1213	J1235	J2306	J2308	J2503	J2509	J2517		
700040	J1115 J2213 - J2332 J2517	J1507 J2217 J2407 - J2518	J1512 J2223 J2419	J1517 J2242 J2430	J2204 J2302 J2503	J2206 J2305 J2505	- J2207 J2329 J2507	J2209 - J2330 J2509	- J2210 - J2331 - J2510	
700041	J1140	J2120	J2236							
700043	J1425	J1436	J1535	J2310						
700045	J1517	J2425	J2505	J2507	J2518					
700051	J2230									
700053	J2210									
700054	J1410	J2111	J2430	J2435	J2437	J2440	J2442	J2447		
700057	J2223	J2306	J2308	J2323	J2343	- J2344	J2507	J2509	- J2510	
700060	J1507 J2337 J2517	J1512 J2407 - J2518	J1516 J2415	J2302 J2503	- J2305 - J2504	J2329 - J2505	- J2330 J2507	- J2331 J2510	- J2332 - J2511	
700061	J1427 J2204 J2502	J1429 J1210 - J2503	J1432 J2238 - J2504	J1436 J2322 - J2505	J1527 - J2323 - J2506	J1538 J2402 J2510	J2120 J2404 J2516	J2122 J2409 J2539	J2202 J2441	
700062	J1331 - J2504	J2121 J2506	J2123	J2126	J2322	- J2323	J2501	- J2502	- J2503	
780063	J2322	J2489	J2412							
780064	J2322	- J2323	J2416	J2501	- J2582	- J2503	J 32504	J2506		
700065	J2322	J2513								
700066	J2322	- J2323	J2501	- J2502	J2506	J2544				
SUBSTITUTE THE FOLLOWING CPRD ASSEMBLIES:										
	J2334									
700067	J2322									

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
70007 0	J1412	J1507	J1512	J1516	J2322	- J2323	J2329	- J2330	- J2331		
	J2333	J2421	J2501	- J2502	- J2503	J2505	- J2506	- J2507	- J2509		
	- J2510	J2517	- J2518								
700071	J1338	J2120	J2322								
7660072	J2125	J2126	J2322	- J2323	J2501	J2503	- J2504	J2506			
760073	J2306	J2322	J2501	J2503	- J2504						
780074	J1413	J158	J1512	J1516	J2322	- J2323	J2329	- J2330	- J2331		
	J2333	J2421	J2501	- J2502	- J2503	- J2504	- J2505	- J2506	- J2507		
	J2510	- J2511	J2517	- J2518							
780075	J1517	J2322	J2418								
700076	J1508	J1513	J1516	J2322	- J2323	J2329	- J2330	- J2331	J2333		
	J2404	J2417	J2422	- J2423	J2438	J2445	- J2446	J2501	- J2502		
	J2503	- J2504	- J25065	- J2506	- J2507	J2511	J2517	- J2518			
700077	J1525	J1533	J2306	J2322	J2501	- J2502	- J2503	- J2504	J2510		
	J2517										
700100	J1326	J1340	- J1341	J1411	- J1412	- J1413	J31416	J1419	J1421		
	- J1422	- J1423	- J1424	- J1425	- J1428	J1431	J1432	- J1433	- J1434		
	- J1435	J1507	J1512	J1516	- J1517	- J1518	- J1519	J1521	J1526		
	J1528	- J1529	- J1530	- J1531	- J1532	J1534	- J1535	- J1536	- J1537		
	- J1538	- J1539	J1542	J2106	J2120	- J2121	J2123	J2127	J2202		
	J2215	J2217	- J2218	- J2219	J2223	J2301	J2315	J2415	J2418		
	- J2419	J2429	J2430	J2437	J2442	J2444	- J2445	J2511	J2512		
	J2514	J2516	J2534	- J2535	- J2536	- J2537	J2539	J2541	- J2542		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1430										
700110	J1515										
700114	J1529	J1535	- J1536	J2223							
760400	J2117										
7600525	J2125										
704203	J1123										
720000	J2117										
731203	J2116										
735005	J2116										

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS	
STOP					
735015	J2116				
736077	J1536				
737000	J2116				
737003	J2117				
737004	J2116				
740502	J2127				
77008802	J2122				
771014	J2116				
774045	J2111	J2113	J2333	J2348	
774501	J2114				
774525	J2123				
775213	J2116				
777003	J2114	- J2115	J2117		
777010	J2116				
777012	J2116				
777014	J2116				
777200	J2116				
777777	J2110	- J2111	J2114	J2116	J2329

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
000000	J2111	J2116	J2329	J2331						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2335									
000003	J1130 J2338	J1235 J2340	J1413 J2421	J1534 J2504	J1548 J2540	J2104	J2124	J2208	J2240	
000084	J2317	J2421								
000005	J2317	J2530								
008007	J1314									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221									
000010	J1314	J2231	J2435	J2537	- J2538	J2541				
000011	J1313	- J1314	J2105	J2114	J2333	J2432				
000012	J2317	J2530								
800020	J1341									
000033	J2530									
000050	J1519									
000057	J2110									
000070	J2220									
000077	J2114	- J2115								
008111	J2115									
000203	J2317									
000350	J1432	J2326	J2542							
000352	J1431									
000442	J1406	J1515	J1519							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1464									
000771	J1214 J2112	J1229 JJ2115	J1235 J2127	J1527 JJ2129	- J1528 J2134	- J1529 J2208	J1532 J2219	J1537 J2231	J2110 J2316	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP									
	J2321 J2518	J2341 - J2519	J2406 J2524	J2418	J2429	J2430	J2432	J2446	J2505
000772	J1349 J2240	J1530 - J2241	J1543 J2310	J1545 J2324	J2103 J2337	J2111 J2412	J2127 J2514	J2134	J2231
008773	J2517								
000774	J1518								
080775	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2413								
000776	J1144	J2410							
008777	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2336								
001000	J2306	J2428	J2545						
081002	J1139 J2115	J1419 J2241	J1423 J2305	J1514 J2315	- J1515 J2321	J1527 J2402	J1533 J2523	J2108 J2531	J2112
001003	J1143	J1548	J2126	J2305	J2415				
001005	J2111	J2331							
0B1006	J2135								
001010	J2429								
001011	J2306	J2517							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234								
001670	J1539	J1542	J2126						
001702	J1543	J2305	J2342	J2415	J2432				
001703	J1425	J1436	J1538	J2105					
001707	J1425	J2106	- J2107	J2113	J2122	- J2223			
001713	J1410	J1540							
001715	J1436								
001721	J1539								

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
001753	J2106	J2122								
001754	J2106									
001755	J1425									
001764	J1339	J1538								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215										
001767	J1425 - J2306	J1539 J2404	J2108 J2440	J2122 - J2441	J2208 J2535	J2301 J2542	J2302 - J2543	J2304 - J2544	- J2305 J2547	
001770	J2106									
002420	J2438	J2546								
004420	J1117 J1240 J1524 J2131 J2233 J2402 J2529	J31130 J1316 J1526 J2207 J2301 J2416 J2534	J1132 J1319 J1529 J2215 J2310 J2430 - J2535	J1137 J1434 J1532 J2217 J2323 J2501 - J2536	- J1138 J1445 J1551 J2220 - J2324 - J2502 J2539	J1141 - J1449 J2113 - J2221 J2330 - J2503	- J1142 J1450 J2115 J2224 - J2333 J2506	J1146 J1514 J2126 - J2225 J2337 J2513	J1210 J1517 J2127 J2230 J2348 J2519	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1217										
010050	J2547									
018111	J2117									
011011	J2115									
011111	J2112	J2116	J2333							
020033	J2317	J2435	- J2436	- J2437	J2524					
074004	J1533									
074020	J1524									
074040	J1345	- J1346	- J1347	J2205	J2317	J2412				
101111	J2112	J2115								
101133	J31130	J2223	J2304	J2340						
103001	J1216	J1227								

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS					
STOP									
110033	J2114								
110111	J2109	J2114	J2117	J2332					
111611	J2109	J2113	- J2114	J2116					
111161	J2116								
111111	J2503								
111113	J2108	J2169	J2111	J2116					
111115	J2107	J2109	J2116						
111131	J2109	J2111							
111151	J2109	J2113	J2117						
111311	J2109	J2113	J2116						
111511	J2109	J2111							
113111	J2109	J2114	J2116						
115111	J2112	J2115	- 2116						
131111	J2117								
151111	J2112	J2115	- J2116						
17400664	J1411	J1531							
174030	J1525								
268500	J1129								
311111	J2112	J2115	J2117						
320243	J1341								
377777	J2112	J2114	J2117	J2333					
406000	J1116 J2323	J1240 J2344	J1336 J2419	J1446 J2429	J1551 J2438	J2115 J2535	J2233	J2246	J2305
400400	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2433								
400433	J2424								

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF		CONNECTORS				
STOP										
404500	J1243									
500450	J2333									
510000	J1528	J2316	J2327	J2428						
510004	J2317	J2333	J2421	J2432	J2513					
510885	J2317	J2530								
510618	J1314	J2231	J2435	J2537	J2541					
510012	J2317	J2530								
510021	J31114	J1116	J1117	J1118	J1122	J1124	J1125	J1128	J1130	
	- J1131	- J1132	J1136	- J1137	- J1138	- J1139	- J1140	J1142	- J1143	
	J1147	- J1148	J1150	J1210	- J1211	- J1212	- J1213	- J1214	J1216	
	J1223	- J1224	- J1225	- J1226	J1228	- J1229	- J1230	J1235	- J1236	
	- J1237	J1239	J1243	- J1244	- J1245	- J1246	J1312	- J1313	J1315	
	- J1316	J1321	J1325	J1335	- J1336	- J1337	- J1338	- J1339	J1348	
	- J1349	J1410	J1413	J1419	- J1420	- J1421	- J1422	J1425	- J1426	
	- J1427	- J1428	J1433	J1435	- J1436	J1445	J1447	- J1448	J1450	
	J1511	- J1512	J1514	- J1515	- J1516	- J1517	- J1518	J1521	J1525	
	- J1526	- J1527	- J1528	- J1529	- J1530	- J1531	- J1532	- J1533	- J1534	
	- J1535	- J1536	- J1537	J1539	- J1540	J1543	J1548	- J1549	J1551	
	J2106	J2108	- J2109	- J2110	- J2111	- J2112	- J2113	- J2114	- J2115	
	J2120	J2123	J2126	J2128	- J2129	J2131	- J2132	- J2133	- J2134	
	- J2135	J2202	- J2203	J2206	- J2207	J2209	- J2210	J2212	- J2213	
	J2215	- J2216	J2219	J2221	J2226	- J2227	J2229	- J2230	- J2231	
	- J2232	- J2233	- J2234	- J2235	- J2236	J2239	J2242	J2244	J2246	
	J2248	J2301	- J2302	J2304	- J2305	J2309	- J2310	- J2311	J2313	
	- J2314	- J2315	- J2316	- J2317	- J2319	J2321	J2324	J2327	- J2328	
	- J2329	- J2330	- J2331	- J2332	- J2333	J2338	- J2339	- J2340	- J2341	
	- J2342	- J2443	- J2344	J2346	J2348	J2402	J2404	J2406	- J2407	
	- J2408	- J2409	- J2410	- J2411	J2422	- J2423	- J2424	- J2425	- J2426	
	J2430	- J2431	- J2432	J2435	J2437	- J2438	J2440	J2443	J2445	
	J2447	J2501	- J2502	- J2503	- J2504	- J2505	J2507	- J2508	- J2509	
	J2513	- J2514	- J2515	- J2516	- J2517	- J2518	- J2519	J2523	- J2524	
	- J2525	- J2526	- J2527	J2529	- J2530	- J2531	- J2532	J2534	- J2535	
	- J2536	J2538	J2541	J2544	- J2545	- J2546	J2548			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1217	J2130								
510023	J2344									
510033	J1114	J1118	J1122	J1126	J1136	J1141	J1150	J1210	- J1211	
	- J1212	J1224	J1228	J1235	J1240	J1242	J1319	J1321	- J1424	
	- J1425	J1428	J1438	J1511	J1512	J1515	- J1516	J1518	- J1519	
	J1523	- J1524	J1527	- J1528	J1532	- J1533	J1536	J1540	J1543	

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS											
STOP														
	J1548	J1549	J1551	J2109	-	J2110	-	J2111	J2113	J2115	J2120			
	J2122	-	J2123	J2127	-	J2128	J2131	J2133	J2202	J2204	J2206			
	J2208	J2219	J2224	J2231	J2240	J2246	J2301	J2305	J2307	J2307	J2307			
	J2309	-	J2310	-	J2311	-	J2312	J2316	-	J2317	J2319	J2321	-	J2322
	J2324	J2326	-	J2327	-	J2328	J2330	J2332	-	J2333	J2337	-	J2338	
	-	J2339	-	J2340	-	J2341	J2343	J2348	J2404	-	J2405	J2410	J2412	
	J2415	J2417	J2419	-	J2420	J2424	J2426	J2429	J2435	J2437	J2437	J2437		
	J2443	J2445	J2502	-	J2503	-	J2504	J2508	J2511	-	J2512	-	J2513	
	-	J2514	J2516	-	J2517	J2519	J2523	J2525	J2528	-	J2529	-	J2530	
	J2532	J2538	J2545	-	J2546	J2548	J2548							

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1217																		
510037	J2107	J2109																	
510044	J2125	J2547																	
518050	J1116	J1229	J1319	J1340	J1410	J1517	J1534	J2231	J2234										
	J2238	J2309	J2326	J2348	J2406	J2415	J2510	J2538	J2543										
511001	J2406	J2440																	
511111	J2112	J2114	J2117																
514021	J2115																		
514033	J2112																		
534537	J1122	J1229	-	J1230	J1410	J1421	J2338												
577777	J2112	J2115	J2117	J2333															
600000	J2114																		
677777	J1516	J2112	J2114	J2116	J2333	J2344													
700000	J1113	-	J1114	-	J1115	-	J1116	-	J1117	-	J1118	J1122	-	J1123	-	J1124			
	-	J1125	-	J1126	J1128	-	J1129	-	J1130	-	J1131	-	J1132	J1136	-	J1137			
	-	J1138	-	J1139	-	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147		
	-	J1148	-	J1149	-	J1150	J1210	-	J1211	-	J1212	-	J1213	-	J1214	J1216			
	-	J1223	-	J1224	-	J1225	-	J1226	-	J1227	-	J1228	-	J1229	-	J1230	J1235		
	-	J1236	-	J1237	-	J1238	-	J1239	-	J1240	-	J1241	-	J1242	-	J1243	-	J1244	
	-	J1245	-	J1246	J1249	J1312	-	J1313	-	J1314	-	J1315	-	J1316	J1321	J1321			
	-	J1322	-	J1323	J1335	-	J1336	-	J1337	-	J1338	-	J1339	J1341	-	J1342			
	-	J1343	-	J1344	-	J1345	-	J1346	-	J1347	-	J1348	-	J1349	-	J1350	J1410	-	J1411
	-	J1413	-	J1419	-	J1420	-	J1421	-	J1422	-	J1423	-	J1424	-	J1425	J1426	-	J1427
	-	J1428	-	J1429	J1431	-	J1432	-	J1433	-	J1434	J1436	-	J1437	J1441	J1441			
	-	J1443	J1446	-	J1447	-	J1448	-	J1449	-	J1450	J1511	-	J1512	-	J1513			
	-	J1514	-	J1515	-	J1516	-	J1517	-	J1518	-	J1519	J1524	-	J1525	-	J1526		

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
- J1527	- J1528	- J1529	- J1530	- J1531	- J1532	J1534	- J1535	- J1536		
- J1537	- J1538	J1540	J1542	- J1543	- J1544	J1547	J1549	- J1550		
- J1551	J2104	- J2105	- J2106	- J2107	- J2108	- J2109	- J2110	- J2111		
- J2112	- J2113	- J2114	- J2115	J2117	J2120	- J2121	- J2122	- J2123		
- J2124	- J2125	- J2126	J2128	- J2129	J2131	- J2132	- J2133	- J2134		
- J2135	J2203	- J2204	- J2205	- J2206	- J2207	- J2208	- J2209	J2211		
- J2212	- J2213	J2215	- J2216	- J2217	J2219	- J2220	- J2221	- J2222		
J2225	- J2226	- J2227	J2229	- J2230	- J2231	- J2232	- J2233	- J2234		
- J2235	- J2236	J2238	- J2239	- J2240	- J2241	- J2242	- J2243	- J2244		
- J2245	- J2246	- J2247	J2301	- J2302	J2304	- J2305	- J2306	- J2307		
- J2308	- J2309	- J2310	- J2311	- J2312	- J2313	- J2314	- J2315	- J2316		
- J2317	J2319	J2321	- J2322	- J2323	- J2324	- J2325	- J2326	- J2327		
- J2328	- J2329	- J2330	- J2331	- J2332	- J2333	J2337	- J2338	- J2339		
- J2340	- J2341	- J2342	- J2343	- J2344	J2346	J2348	J2401	- J2402		
J2404	- J2405	- J2406	- J2407	- J2408	- J2409	- J2410	- J2411	- J2412		
J2415	- J2418	- J2419	- J2420	- J2421	- J2422	- J2423	J2425	- J2426		
J2428	- J2429	- J2430	- J2431	- J2432	J2435	- J2436	- J2437	- J2438		
J2441	- J2442	- J2443	- J2444	- J2445	- J2446	- J2447	- J2448	J2501		
- J2502	- J2503	- J2504	- J2505	- J2506	- J2507	- J2508	- J2509	- J2510		
- J2511	- J2512	- J2513	- J2514	- J2515	- J2517	- J2518	- J2519	- J2520		
- J2525	- J2526	- J2527	- J2528	- J2529	- J2530	- J2531	- J2532	J2534		
- J2535	- J2536	- J2537	- J2538	- J2539	- J2540	- J2541	- J2542	- J2543		
J2545	- J2546	- J2547	- J2548							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				"						
	J1135	J1209	J1215	J1217	J1439					
700001	J1421	J1423	J2227	J2313	J2323					
700002	J1115	- J1116	J1124	J1127	J1129	- J1130	J1136	J1138	- J1139	
	J1150	J1211	- J1212	J1214	J1216	J1230	- J1231	J1235	- J1236	
	J1335	J1345	J1350	J1410	J1421	J1441	- J1442	- J1443	J1448	
	J1519	J1530	J1532	- J1533	J1542	- J1543	J2105	J2107	- J2108	
	J2110	- J2111	- J2112	- J2113	J2120	J2128	J2135	J2202	- J2208	
	J2215	J2224	J2234	J2236	J2238	- J2239	J2242	J2308	J2312	
- J2313	J2315	J2317	J2321	J2324	J2327	J2331	- J2332	- J2333		
J2340	J2348	J2406	- J2407	J2410	J2415	- J2416	J2430	J2437		
J2447	J2501	J2503	- J2504	J2510	J2510	J2524	J2526	J2537	- J2538	
- J2539	J2545	J2548								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1121	J1135	J1221							
700003	J1115	- J1116	- J1117	- J1118	J1122	- J1123	- J1124	- J1125	J1127	
	J1129	- J1130	- J1131	- J1132	J1136	- J1137	- J1138	- J1139	- J1148	
- J1141	J1147	- J1148	- J1149	- J1150	J1210	- J1211	- J1212	- J1213		
- J1214	J1216	J1223	J1225	- J1226	- J1227	- J1228	- J1229	- J1230		
- J1231	- J1232	- J1233	- J1234	- J1235	- J1236	J1238	J1242	J1244		
J1313	- J1314	- J1315	- J1316	J1322	J1325	J'335	- J1336	J1338		
- J1339	J1347	J1410	- J1411	J1413	J1423	J1425	J1428	- J1429		

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
	J1438	J1440	J1442	J1445	J1449	J1512	J1513	J1514	J1517			
	J1527	J1528	J1529	J1531	J1532	J1533	J1534	J1535	J1536			
	J1537	J1539	J1543	J1547	J1549	J1550	J2106	J2108	J2112			
	J2113	J2114	J2115	J2120	J2122	J2123	J2134	J2135	J2205			
	J2207	J2209	J2211	J2213	J2216	J2217	J2218	J2219	J2222			
	J2225	J2227	J2230	J2236	J2241	J2301	J2302	J2304	J2305			
	J2306	J2387	J2308	J2310	J2311	J2312	J2313	J2314	J2315			
	J2316	J2317	J2319	J2322	J2323	J2326	J2329	J2330	J2332			
	J2333	J2337	J2338	J2339	J2341	J2342	J2343	J2344	J2346			
	J2348	J2401	J2404	J2408	J2410	J2411	J2415	J2421	J2426			
	J2429	J2431	J2435	J2436	J2438	J2441	J2443	J2501	J2502			
	J2503	J2504	J2505	J2506	J2507	J2508	J2509	J2510	J2512			
	J2513	J2517	J2518	J2524	J2525	J2529	J2532	J2536	J2537			
	J2538	J2539	J2540									

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1135	J1289							
700004	J2107	J2109							
700007	J1127	J1143	J2225	J2343	J2432				
700015	J2510								
700020	J2111								
700021	J1410	J1424	J2129	J2235	J2240	J2417	J2517		
700023	J2328								
700026	J2510								
700041	J1340	J2410							
700100	J2109	J2111							
700206	J2113								
700433	J2341	J2502							
701006	J2189								
718000	J2115	J2225	J2541						
710003	J2112								
710017	J1117	J2304							
710021	J1543	J2115							

TABLE 2-2. CPU FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	IOU OFF	CPU OFF	CPU OFF			
DIAGNOSE STATUS	IOU OFF	IOU OFF	CPU OFF	CPU OFF			
STOP					CONNECTORS		
716033	J2317						
717070	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1430						
737777	J2112	J2115	-	J2116	J2333		
757777	J2112	J2114		J2117	J2333		
767777	J2112	J2115		J2117	J2333		
773777	J2112	J2115	-	J2116	J2333		
774512	J2526						
775777	J2109	J2114		J2116	J2333		
776067	J2331	-	J2332				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2334						
776777	J2109	J2114		J2117	J2332		
777000	J2107	J2111		J2113	J2115		
777377	J2109	J2111		J2113	-	J2114	J2117 J2332
777577	J2109	J2113	-	J2114	J2116	J2332	
777677	J2109	J2111		J2113	-	J2114	J2116 J2332
777737	J2109	J2111		J2113	J2117	J2331	
777757	J2109	J2111		J2113	J2117	J2331	
777767	J2109	J2111		J2113	J2116	J2331	
777773	J2107	J2109		J2111	J2113	J2116	J2331
777775	J2108	-	J2109	J2111	J2116	J2330	
777776	J2111	J2116		J2330			

TABLE 2-2. CPU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU ON	CPU OFF CPU OFF	CONNECTORS						
STOP									
000000	J2116	J2331 - J2332							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2335								
000044	J2115								
001003	J1530	J2436							
001007	J1451	J2436	J2441	J2443	J2447	J2546			
001016	J2444								
001017	J1315	- J1316	J2241	- J2242	J2538				
001024	J2438								
111111	J2110								
700000	J1315 J2546	- J1316	J1425	J1451	J2242	J2436	J2441	J2443	- J2447
700033	J2221								
777777	J2110								

Change 4 2-109

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU ON	CPU OFF CPU ON	CONNECTORS							
STOP										
000001	J1547		SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234							
000817	J2309									
000474	J1533									
001666	J2443	J2448								
001670	J1316									
005101	J1547									
005203	J1547									
015022	J2343									
034203	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234 J2320									
035203	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215 J1217 - J1218 - J1219 - J1220 - J1221 J1234									
100017	J2311 - J2530	J2312	J2314	J2316	- J2317	J2321	J2408	J2525	J2529	
101017	J1246 J2435	J1428 J2440	J1432 J2534	J2205 - J2535	J2207 J2540	J2242 J2542	J2301 J2547	- J2302	J2404	
111011	J2116									
111111	J1408	J2116								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1121 J1310 J2214 J2345									
220500	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215									
505022	J2341	J2343	- J2344							
510033	J1118									
700000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1444									
700003	J1551									

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU ON	CPU OFF CPU ON	CONNECTORS				
STOP							
700603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215 J1217 - J1218 - J1219 - J1220 - J1221 - J1234						
740603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215 J1217 - J1218 - J1219 - J1220 - J1221 - J1234						
760603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215 J1217 - J1218 - J1219 - J1220 - J1221						
7780603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234						
777003	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2320						
777201	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2320						
777777	J1210	J1514	J2236	J2238	J2420	J2422	J2436

Change 4 2-111

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU ON		CPU OFF		CONNECTORS	
DIAGNOSE STATUS		IOU OFF		CPU OFF					
STOP									
000000	J2107 J2332	J2109	J2111	J2114	- J2115	- J2116	- J2117	J2122	J2330
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318									
800001	J1113	J1115	J1131	J1136	J1140	- J1141	- J1142	J1148	- J1149
	- J1150	- J1151	J1211	- J1212	- J1213	J1226	- J1227	J1229	J1235
	- J1236	- J1237	- J1238	J1241	- J1242	- J1243	- J1244	- J1245	J1325
	- J1326	J1330	J1338	- J1339	- J1340	- J1341	J1347	J1350	J1406
	J1412	- J1413	- J1414	- J1415	- J1416	- J1417	- J1418	- J1419	- J1420
	J1425	J1505	J1509	J1513	J1515	- J1516	J1518	- J1519	J1536
	- J1537	- J1538	J1543	- J1544	- J1545	- J1546	- J1547	- J1548	- J1549
	- J1550	J2104	J2109	- J2110	- J2111	- J2115	J2120	- J-2121	- J2122
	- J2123	- J2124	- J2125	- J2126	- J2127	J2129	J2131	J2206	- J2207
	J2210	J2217	J2221	J2227	J2229	- J2230	- J2231	- J2232	- J2233
	- J2234	- J2235	- J2236	- J2237	- J2238	- J2239	- J2240	- J2241	- J2242
	- J2243	- J2244	- J2245	- J2246	- J2247	J2301	- J2302	J2304	J2306
	- J2307	J2309	- J2310	- J2311	J2314	- J2315	J2325	- J2326	J2329
	J2333	J2337	J2401	- J2402	J2404	J2406	- J2407	J2415	- J2416
	- J2417	- J2418	J2420	- J2421	- J2422	- J2423	- J2424	- J2425	- J2426
	- J2427	- J2428	- J2429	- J2430	- J2431	- J2432	J2435	- J2436	- J2437
	- J2438	J2440	- J2441	- J2442	- J2443	J2445	- J2446	- J2447	- J2448
	- J2510	- J2511	J2515	J2527	J2532	J2535	- J2536	- J2537	- J2538
	- J2539	- J2540	- J2541	- J2542	- J2543	- J2544	- J2545	J2547	- J2548
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1234	J1404	J2119	2130	J2136	J2413			
000002	J2122								
000003	J1330	J1411	J1413	J1425	J2122	J2125	J2129	J2326	
000006	J2122								
000011	J1411	J1535	- J1536						
000013	J2122								
000016	J2122								
000032	J2122								
000037	J2223								
000053	J2122								
000054	J2122								
000055	J2112	J2122	J2133	J2430	J2432				

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
000181	J1531 J2540	J1535 J2543	J2106 - J2544	J2230	J2244	J2302	J2306	J2308	J2415	
000105	J1323									
000107	J1323	J2122								
000203	J1317 J1410 - J1422 - J1511	J1323 J1414 - J1423 - J1512	J1325 - J1415 - J1424 J1535	J1327 - J1416 - J1505 - J1536	J1336 - J1417 - J1506 J2106	- J1337 - J1418 - J1507 J2209	J1406 - J1419 - J1508 J2213	- J1407 - J1420 - J1509 J2346	- J1408 - J1421 - J1510	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1310	J1343								
000405	J1326									
000477	J2122									
000501	J1419 J2120 J2243 J2337 - J2512 J2122	J1509 J2122 J2301 J2340 - J2513	J1533 J2202 - J2302 J2401 - J2514	J1538 J2205 J2304 J2406 - J2515	- J1539 J2211 - J2305 - J2407 - J2516	J1542 - J2212 - J2306 J2410 J2523	J2106 J2221 - J2307 J2508 J2527	- J2107 J2226 J2312 - J2509 J2530	- J2108 J2234 J2314 J2511 J2537	
000502	J2122									
000561	J2122									
0000603	J1111 J1408 - J1424 - J1434 - J1511 J1521 J1538 - J2113 J2411 - J2548	J1129 J1410 - J1425 - J1435 - J1512 J1524 - J1539 J2115 - J2412	J1322 - J1411 - J1426 - J1436 - J1513 - J1525 - J1540 J2210 - J2428	J1324 - J1412 - J1427 J1505 - J1514 - J1526 J1542 - J2211 - J2429	J1326 1413 - J1428 - J1506 - J1515 - J1527 J2104 J2213 - J2430	J1338 J1417 - J1429 - J1507 - J1516 - J1528 - J2105 J2243 J2511	- J1339 J1421 J1431 - J1508 - J1517 - 31529 J2107 J2309 J2514	- J1340 - J1422 - J1432 - J1509 - J1518 - J1531 - J2108 J2326 J2534	- J1341 - J1423 - J1433 - J1510 - J1519 - J1532 J2112 - J2327 J2547	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1310	J1343	J1404	J1438	J1504					
000763	J1425	J1533								
000765	J1518									
000771	J2419	J2425								

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS													
STOP																
000775	J2122															
001002	J2122															
001061	J2122															
001101	J2104	J2106	J2221	J2226	J2233	J2241	J2243	-	J2244	J2301						
-	J2302	J2304	-	J2305	-	J2306	-	J2307	J2309	J2313	-	J2314	J2340			
	J2343	-	J2344	J2401	-	J2402	J2404	J2406	-	J2407	J2415	-	J2416			
-	J2417	J2419	-	J2420	-	J2421	J2423	-	J2424	-	J2425	-	J2426			
	J2436	-	J2437	J2440	J2442	J2532	J2535	-	J2536	-	J2537	-	J2538			
-	J2539	-	J2540	-	J2541	-	J2542	-	J2543	-	J2544	-	J2545			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J2433															
001203	J1314	-	J1315	-	J1316	-	J1317	J1323	-	J1324	-	J1325	-	J1326	-	J1327
	J1336	-	J1337	J1410	-	J1411	-	J1412	-	J1413	-	J1414	-	J1415	-	J1416
-	J1417	-	J1418	-	J1419	-	J1420	-	J1421	-	J1422	-	J1423	-	J1424	J1433
	J1515	-	J1516	-	J1517	-	J1518	-	J1519	-	J1520	-	J1521	J1523	J1531	
-	J1532	-	J1533	-	J1534	-	J1535	-	J1536	-	J1537	J2105	-	J2106	-	J2107
-	J2108	J2111	J2113	-	J2114	-	J2115	-	J2116	J2205	J2213	J2220				
-	J2221	-	J2222	-	J2223	-	J2224	J2238	J2242	J2245	-	J2246	J2304			
	J2308	J2346	J2408	J2431	-	J2432	J2505	J2508	J2523	J2528	J2528					
	J2530	J2532	J2534	-	J2535	-	J2536	-	J2537	-	J2538	-	J2539	-	J2540	
-	J2541	-	J2542	-	J2543	-	J2544	-	J2545	-	J2546	-	J2547	-	J2548	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1310	J1343	J1404	J1444	J2413	J2520	J2522									
001257	J2122															
003017	J1516															
003203	J2209															
003603	J2213															
004101	J1130	J1136	J1231	J1338	-	J1339	J1341	J1415	J1543	J1546						
-	J1547	J2103	J2107	J2229	-	J2230	J2233	-	J2234	J2243	-	J2244				
	J2306	-	J2307	-	J2308	J2312	J2315	J2341	-	J2342	J2346	J2415				
	J2419	J2425	J243,6	J2444	-	J2445	-	J2446	J2535	J2543						
004105	J1516															
004107	J1516															

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
000423	J1318 J1440 - J1537 J2103 - - J2344	J1327 - J1441 - J1543 - J2104 - J2440 -	J1328 - J1442 - J1544 - J2123 - J2441 -	J1338 - J1443 - J1545 - J2202 - J2442 -	J1339 - J1445 - J1546 - J2204 - J2444 -	J1340 - J1446 - J1547 - J2223 - J2445 -	J1341 - J1447 - J1548 - J2341 - J2446 -	J1437 - J1448 - J1549 - J2342 - J2447 -	J1438 - J1451 - J1551 - J2343 -	J1438 J1451 J1551 J2343
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1439									
004501	J1415	J1418	J2122							
005101	J1325 J2106 J2312 J2435 J2540 -	J1338 J2122 J2314 J2437 - J2541 -	J1438 J2221 J2339 - J2438 - J2542 -	J1440 J2226 J2340 - J2440 J2544 -	J1544 J2229 - J2341 - J2444 - J2545	J1545 - J2230 - J2417 - J2445	J1548 J2240 - J2419 J2447	J2103 - J2241 - J2424 - J2534	J2104 - J2243 - J2425 - J2538	J2104 J2243 J2425 J2538
005203	J1318 - J1441 - J1544 - J2104 - J2209 - J2224 - J2341 - J2436 - J2447	J1327 - J1442 - J1545 - J2105 - J2211 - J2225 - J2342 - J2438 - J2448 -	J1328 - J1443 - J1546 - J2106 - J2212 - J2244 - J2343 - J2439 - J2538 -	J1338 - J1445 - J1547 - J2107 - J2213 - J2246 - J2344 - J2440 - J2539 -	J1339 - J1446 - J1548 - J2108 - J2215 - J2323 - J2346 - J2441 - J2543	J1341 J1451 - J1549 - J2113 - J2220 - J2333 - J2410 - J2442 - J2545	J1437 J1536 - J1550 - J2122 - J2221 - J2338 - J2431 - J2443 J2548	J1438 - J1537 - J1551 - J2123 - J2222 - J2339 - J2432 - J2445	J1440 J1543 J2103 J2205 - J2223 - J2340 - J2435 - J2446	J1440 J1543 J2103 J2205 - J2223 - J2340 - J2435 - J2446
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1439 J1444 J2344 J2433 J2520									
007203	J2107									
010101	J2221									
014101	J2110 J2435	J2223 J2437	J2305 J2447	J2312	J2317	J2416	J2418	- J2419	J2426	J2426
014203	J1122 - J1142 - J1151 J2216 - J2441	J1130 - J1143 J1211 J2223 J2546	J1132 - J1144 J1319 J2246	J1136 - J1145 J1329 J2342	J1137 - J1146 J2104 J2344	J1138 - J1147 - J2105 J2346	J1139 - J1148 J2110 J2435	J1140 - J1149 J2123 J2437	J1141 - J1150 J2207 J2440	J1141 J1150 J2207 J2440
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1135									
014303	J2106	J2108	J2111	J2114						
015101	J1136 J2231 -	J2104 - J2232 -	J2107 - J2233 -	J2110 J2236 -	J2131 - J2237 -	J2205 - J2238 -	J2221 - J2239 -	J2227 - J2240 -	J2229 - J2241 -	J2229 J2241

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
	- J2242	J2244	- J2245	J2305	- J2306	J2314	J2317	J2337	J2339	
	- J2340	J2342	J2415	- J2416	- J2417	J2419	J2422	J2424	- J2425	
	- J2426	J2430	J2435	J2442	J2447	J2504	J2534	J2537	J2544	
015203	J1122	J1130	- J1131	- J1132	J1136	- J1137	- J1138	- J1139	- J1140	
	- J1141	- J1142	- J1143	- J1144	- J1145	- J1146	- J1147	- J1148	- J1149	
	- J1150	- J1151	J1210	- J1211	J1213	J1226	- J1227	- J1228	J1231	
	J1235	J1315	J1317	J1319	J1329	J1425	J1528	J1535	J1539	
	J2104	- J2105	J2107	- J2108	J2110	J2204	- J2205	J2207	J2209	
	J2211	J2213	J2220	- J2221	- J2222	- J2223	- J2224	- J2225	J2229	
	- J2230	- J2231	- J2232	- J2233	- J2234	- J2235	- J2236	- J2237	- J2238	
	- J2239	- J2240	- J2241	- J2242	- J2243	- J2244	- J2245	- J2246	- J2247	
	- J2248	J2308	J2333	J2341	J2343	- J2344	J2401	- J2402	J2435	
	J2442	- J2443	J2445	J2448	J2504	J2527	J2536	J2539	J2543	
	J2545	- J2546								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1121	J1135	J1222	J2136	J2334	J2522				
016203	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2345									
017203	J2206	J2211	- J2212	- J2213	J2412					
021203	J2223									
024203	J2112									
034101	J1317	J1323	J1326	J2103	J2206	J2208	J2210	J2216	J2221	
	J2226	- J2227	J2229	J2240	- J2241	J2244	- J2245	J2302	J2306	
	J2308	J2325	J2329	- J2330	- J2331	J2340	J2342	J2404	- J2405'	
	J2411	J2415	J2419	J2421	- J2422	- J2423	J2425	J2428	- J2429	
	- J2429	- J2430	J2436	- J2437	- J2438	J2440	J2442	J2444	- J2445	
	- J2446	J2528	J2541	- J2542	- J2543	- J2544	- J2545			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2433									
034203	J1210	- J1211	J1225	- J1226	- J1227	- J1228	- J1229	- J1230	- J1231	
	J1235	- J1236	- J1237	- J1238	- J1239	- J1240	- J1241	- J1242	- J1243	
	- J1244	- J1245	- J1246	- J1247	- J1248	- J1249	J1312	- J1313	J1315	
	- J1316	- J1317	- J1318	- J1319	- J1320	- J1321	- J1322	- J1323	- J1324	
	- J1325	- J1326	- J1327	- J1328	- J1329	- J1330	- J1331	- J1332	- J1333	
	- J1334	- J1335	- J1336	- J1337	- J1338	- J1339	- J1340	- J1341	J1344	
	- J1345	- J1346	- J1347	- J1348	- J1349	- J1350	J1410	- J1411	- J1412	
	- J1413	J1416	J1419	J1421	- J1422	- J1423	- J1424	- J1425	J1433	
	- J1434	- J1435	J1549	- J1550	- J1551	J2103	- J2104	- J2105	- J2106	
	- J2107	- J2108	J2112	- J2113	- J2114	- J2115	J2120	J2122	- J2123	
	J2129	J2131	- J2132	- J2133	- J2202	J2204'	J2207	J2210	- J2211	
	- J2212	- J2213	J2215	- J2216	- J2217	- J2218	- J2219	- J2220	J2222	

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
- J2223	- J2224	J2226	- J2227	J2229	- J2230	- J2231	- J2232	- J2233		
- J2234	- J2235	- J2236	J2239	J2241	- J2242	- J2243	J2246	- J2247		
- J2248	J2302	J2305	- J2306	- J2307	- J2308	- J2309	- J2310	- J2311		
- J2312	J2314	J2316	J2319	J2321	- J2322	- J2323	- J2324	- J2325		
- J2326	- J2327	- J2328	- J2329	- J2330	- J2331	- J2332	- J2333	J2341		
J2343	J2401	J2404	- J2405	- J2406	- J2407	- J2408	- J2409	- J2410		
- J2411	- J2412	J2415	- J2416	J2426	- J2427	- J2428	- J2429	- J2430		
J2432	J2435	- J2436	J2439	J2442	- J2443	J2445	- J2446	J2504		
- J2505	J2507	- J2508	J2510	- J2511	- J2512	J2514	- J2515	J2523		
J2526	- J2527	- J2528	- J2529	- J2530	- J2531	- J2532	J2536	J2543		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1222	J1234	J1310	J1342	- J1343	J2119	J2130	J2136	J2214		
J2318	J2320	J2334	J2413	J2433	J2520	J2522				
034303	J2107									
035101	J1213	J2103	- J2104	J2107	J2203	J2205	J2217	J2221	J2223	
	J2226	- J2227	J2229	- J2230	- J2231	- J2232	- J2233	J2235	J2237	
	J2239	J2241	J2243	J2244	J2301	J2304	- J2305	J2309	- J2310	
	J2312	- J2313	- J2314	J2316	J2339	- J2340	- J2341	- J2342	- J2343	
- J2344	J2407	J2410	J2416	- J2417	J2419	J2421	J2423	J2426		
- J2427	J2430	J2435	- J2436	J2440	- J2441	J2535	- J2536	J2541		
- J2542	J2547									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J2136										
035203	J1113	J1123	- J1124	- J1125	- J1126	- J1127	- J1128	- J1129	J1132	
	J1140	- J1141	J1143	J1145	- J1146	J1148	- J1149	- J1150	- J1151	
	J1210	- J1211	J1213	- J1214	J1216	J1223	- J1224	J1226	- J1227	
- J1228	J1230	- J1231	J1235	- J1236	- J1237	- J1238	- J1239	- J1240		
- J1241	- J1242	- J1243	- J1244	- J1245	- J1246	- J1247	- J1248	- J1249		
J1324	J1334	- J1335	J1337	J1344	- J1345	- J1346	- J1347	- J1348		
- J1349	- J1350	J1529	J1532	- J1533	J2103	- J2104	- J2105	- J2106		
J2107	- J2108	J2110	- J2111	J2113	- J2114	J2117	J2123	J2126		
J2132	- J2133	J2284	- J2205	J2207	- J2209	- J2210	J22'12	- J2213		
J2215	- J2216	- J2217	- J2218	- J2219	- J2220	- J2221	- J2222	- J2223		
- J2224	- J2225	J2229	- J2230	- J2231	- J2232	- J2233	J2241	- J2242		
- J2243	- J2244	J2246	- J2247	- J2248	J2302	J2306	J2311	- J2312		
J2314	J2315	J2317	J2327	J2341	J2343	- J2344	J2405	J2407		
- J2408	J2410	J2412	J2447	J2525	J2527	- J2528	J2536	J2538		
J2542	- J2543	- J2544	- J2545	- J2546	J2548					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1209	J1215	J1217	- J1218	- J1219	- J1220	- J1221	J1234	J2119		
J2136	J2334	J2433								
035303	J2544									

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
036101	J2229 J2306 J2424	J2232 J2309 J2425	- J2233 J2312 J2446	J2237 32313 J2543	J2239 J2314	- J2241 J2315	J2244 J2317	- J2245 J2340	J2304 J2419	
036203	J2104 J2316	J2132 J2408	- J2133 J2411	J2212 J2412	J2215 J2525	- J2216 J2528	- J2217	J2222	J2314	
037203	J1411 J2131 J2219 J2309 J2410	J2103 J2207 J2220 J2310 J2411	- J2104 J2210 J2221 J2312 J2412	- J2105 J2212 J2222 J2314 J2431	- J2106 J2213 J2223 J2344 J2432	- J2107 J2215 J2224 J2401 J2524	- J2108 J2216 J2225 J2405	- J2115 J2217 J2226 J2406	J2129 J2218 J2230 J2408	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2130	J2214	J2318	J2335	J2413					
040001	J1517	J1529	J1535	J1536	J1540					
054101	J2210									
054203	J2210									
060203	J2213									
064101	J2210									
064203	J2210									
070101	J2209									
070203	J2209									
070501	J1321									
074101	J2111	J2218	J2221							
074203	J2108 J2310	J2111 J2406	J2205 J2409	J2211 J2410	J2215 J2439	J2217 J2440	J2220 J2530	2223	J2225	
075101	J2103 J2210 - J2236 - J2245 - J2312 - J2340 J2416 - J2426 - J2438	J2105 J2212 - J2237 J2301 - J2313 J2342 - J2417 - J2427 J2439	- J2106 J2226 - J2238 J2304 - J2314 - J2343 - J2418 - J2428 J2440	- J2107 J2229 - J2239 - J2305 - J2315 - J2344 - J2419 - J2429 J2442	- J2108 - J2230 - J2240 - J2306 - J2316 J2401 - J2420 - J2430 - J2443	- J2133 - J2231 - J2241 - J2307 - J2317 - J2402 - J2421 - J2431 - J2444	J2202 - J2232 - J2242 J2309 - J2317 J2404 J2423 - J2435 - J2445	J2204 - J2233 - J2243 - J2310 - J2337 - J2338 J2407 - J2424 - J2436 - J2446	- J2205 J2235 - J2244 - J2311 - J2339 J2415 - J2425 - J2437 - J3447	

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
	J2515 - J2547	J2524	J2535	- J2536	J2539	- J2540	J2542	J2544	J2546	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2136	J2433	J2520	J2522						
075201	J2105 J2212	- J2106 J2215	J2117	J2133	- J2134	- J2135	J2202	J2205	- J2206	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2136									
075203	J1212 J1543 - J2107 - J2205 J2215 J2231 - J2306 - J2315 - J2331 - J2405 - J2432 - J2443 J2506 - J2516 - J2529 J2548	J1411 - J1544 - J2108 - J2206 - J2216 J2236 - J2307 - J2316 - J2332 - J2406 - J2435 - J2444 - J2507 J2518 - J2530	J1511 J1549 - J2109 - J2207 - J2217 J2240 - J2308 J2321 - J2333 - J2407 - J2436 - J2445 - J2508 - J2519 - J2531	J1532 - J1550 J2120 - J2208 - J2220 J2242 - J2309 - J2322 J2337 J2409 - J2437 - J2446 - J2509 - J2523 - J2532	- J1533 - J1551 J2123 - J2209 - J2221 - J2243 - J2310 - J2325 J2342 - J2410 - J2438 - J2447 - J2510 - J2524 J2534	- J1534 - J2103 J2132 - J2210 - J2222 J2246 - J2311 J2327 - J2411 - J2439 - J2448 - J2511 - J2525 J2536	- J1535 - J2104 - J2133 - J2211 - J2223 J2381 - J2312 - J2328 J2401 - J2412 - J2448 J2501 - J2513 - J2526 52538	- J1536 - J2105 - J2203 - J2212 - J2224 - J2302 - J2313 - J2329 - J2402 J2415 - J2441 - J2502 - J2514 - J2 527 J2540	- J1537 - J2106 - J2204 - J2213 - J2225 J2305 - J2314 - J2330 J2404 J2429 - J2442 J2504 - J2515 - J2528 J2546	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1311	J1439	J2119	J2130	J2413	J2433	J2528	J2522		
076101	J2235 J2439	J2307 J2443	J2404	J2421	J2423	J2425	- J2426	- J2427	J2431	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2433									
076203	J2217	J2411								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2318									
077101	J2103	- J2104	J2107	- J2108	J2110	J2205	J2221	J2227	J2236	
077203	J2104 - J2222	- J2105 - J2223	J2107 - J2224	J2208 J2327	J2212 J2411	- J2213 - J2412	J2218 J2540	J2220 J2546	- J2221	
115283	J2222									

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU ON		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
117203	J2210	J2213									
137003	J2216										
137203	J2204										
147203	J2210	J2213									
163203	J2209	J2213									
167203	J2112										
173203	J2209	J2213									
174101	J2209	J2221	J2337								
174203	J2209	- J2210	- J2211	J2409	- J2418	- J2411	- J2412	J2432	J2504		
175101	J2103	- J2104	J2108	J2113	J2123	J2128	J2202	- J2203	- J2204		
	J2211	J2221	J2226	J2229	J2232	- J2233	J2237	J2239	J2241		
	J2245	J2304	- J2305	- J2306	J2311	J2313	- J2314	- J2315	J2339		
	J2342	J2404	J2406	- J2407	J2415	- J2416	- J2417	J2419	J2421		
	- J2422	J2424	- J2425	- J2426	J2448	J2442	J2536				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J2413											
175203	J1320	- J1321	- J1322	- J1323	- J1324	J1326	J1338	- J1339	J1405		
	- J1406	- J1487	- J1408	- J1409	- J1418	- J1411	- J1412	- J1413	J1417		
	J1419	J1421	- J1422	- J1423	- J1424	- J1425	- J1426	J1428	- J1429		
	J1431	- J1432	- J1433	- J1434	- J1435	- J1436	J1505	- J1506	- J1507		
	- J1508	- J1509	- J1510	- J1511	- J1512	- J1513	- J1514	- J1515	- J1516		
	- J1517	- J1518	- J1519	J1521	J1523	J1527	- J1528	- J1529	J1531		
	- J1532	- J1533	- J1534	- J1535	- J1536	- J1537	- J1538	- J1539	- J1540		
	J1542	J1551	J2104	- J2105	J2108	J2111	J2113	J2120	J2122		
	J2202	- J2203	- J2204	J2206	- J2207	- J2208	J2210	- J2211	J2213		
	J2215	- J2216	- J2217	J2220	- J2221	- J2222	- J2223	- J2224	- J2225		
	J2306	J2308	- J2309	J2311	- J2312	J2315	J2326	- J2327	J2338		
	- J2339	J2404	- J2405	- J2406	J2411	- J2412	J2428	- J2429	J2437		
	- J2438	J2445	J2530	J2534	- J2535	J2537	- J2538	J2540	- J2541		
	- J2542	- J2542	- J2543	- J2544	- J2545	- J2546	- J2547	- J2548			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1310	J1343	J1404	J1430	J1444	J1504	J2119	J2413	J2433		
	J2522										
175501	J2209										
176203	J2211	J2408	J2411	- J2412							

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP	J2433									
177003	J2231	J2234	J2311	J2317	J2333	J2342	J2344			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2334									
177101	J2104	J2106	J2108	J2202	J2204	J2206	J2210	J2221	J2226	
-	J2227	J2230	- J2231	- J2232	- J2233	- J2234	J2236	- J2237	- J2238	
-	J2239	- J2240	J2244	- J2245	J2361	J2304	- J2305	- J2306	- J2307	
-	J2388	- J2309	J2312	- J2313	- J2314	- J2315	- J2316	- J2317	J2337	
-	J2338	- J2339	- J2340	J2404	J2406	- J2407	J2415	- J2416	J2418	
-	J2419	- J2420	- J2421	J2423	- J2424	- J2425	- J2426	- J2427	J2430	
-	J2431	J2436	- J2437	J2439	J2442	- J2443	J2535	J2540	- J2541	
-	J2542	J2544	J2547							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2433									
177103	J2410									
177203	J1312	- J1313	J1315	J1319	J1321	J1325	J1529	J2103	- J2104	
-	J2105	- J2106	- J2187	- J2108	J2110	J2112	- J2113	- J2114	- J2115	
-	J2117	J2121	J2123	- J2124	J2133	- J2134	J2202	J2205	- J2206	
-	J2207	J2209	J2211	- J2212	- J2213	J2215	- J2216	- J2217	J2220	
-	J2221	- J2222	- J2223	- J2224	- J2225	- J2226	- J2227	J2230	J2306	
-	J2308	- J2309	- J2310	J2314	- J2315	J2317	J2319	J2321	J2323	
-	J2324	J2327	J2329	J2333	J2338	J2340	- J2341	- J2342	- J2343	
-	J2344	J2346	J2401	J2404	- J2405	- J2406	J2408	J2410	- J2411	
-	J2412	J2415	J2429	J2431	- J2432	J2435	- J2436	- J2437	J2442	
-	J2444	J2446	- J2447	J2501	J2504	J2517	- J2518	J2527	- J2528	
-	J2529	- J2530	- J2531	- J2532	J2534	J2538	- J2539	- J2548	J2542	
-	J2543	- J2544	- J2545	- J2546	- J2547	- J2548				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2119 J2138 J2136 J2214 J2334 J2433 J2520 J2522									
177303	J2106	- J2107	- J2108	J2111	J2114	J2544				
215203	J2211									
234203	J2213									
275203	J2288	- J2209	- J2210	- J2211	J2330					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2214									
277101	J2210									

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU ON													
DIAGNOSE STATUS		IOU OFF		CPU OFF													
STOP						CONNECTORS											
317203	J2213	J2221															
337101	J2210																
344203	J2222																
347203	J2213																
363203	J2213																
364101	J2112																
364203	J2213	J2221															
367003	J2115																
373203	J2213																
374101	J2107	-	J2108	J2112													
374103	J2432																
374203	J2206	J2220	-	J2221	-	J2222	J2327										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
J2214																	
375101	J2432																
375203	J2103	-	J2104	-	J2105	-	J2106	-	J2107	-	J2108	-	J2110	-	J2209	-	J2210
-	J2211	-	J2212	-	J2213	-	J2215	-	J2220	-	J2221	-	J2222	-	J2223	-	J2225
	J2248	J2340															
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
J2214																	
376203	J2103	-	J2104	-	J2105	-	J2106	-	J2107	-	J2108	-	J2109	-	J2110	J2113	
	J2131	-	J2132	-	J2133	-	J2134	-	J2135	J2213		J2215		J2220		J2222	
-	J2223	-	J2224	J2309		J2313		J2346		J2404		J2530		J2543		J2546	
-	J2547	-	J2548														
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
J2119																	
J2130																	
377003	J2305	J2333		J2344													
377101	J2103	-	J2104	-	J2105	J2107		J2114		J2221		-	J2222	J2226		-	J2227
	J2232	J2308		J2337		-	J2338	J2341		-	J2342	-	J2343	J2346		J2401	
	J2415	-	J2416	J2418		J2421		-	J2422	J2425		-	J2426	-	J2427	-	J2428

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS								
STOP											
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2136	J2136	J2433	J2522							
377203	J1226	J1537	J2103	- J2104	- J2105	- J2106	- J2107	- J2108	J2110		
	J2112	J2132	J2202	- J2203	- J2204	- J2205	- J2206	- J2207	- J2208		
-	J2209	- J2210	- J2211	- J2212	- J2213	J2215	J2217	J2220	- J2221		
-	J2222	- J2223	- J2224	J2246	J2307	J2327	J2546				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2214										
400501	J2340	J2424	- J2425	J2543							
400603	J1317	J1326	J2113	J2215	J2411	J2537	J2541				
401603	J2211										
403603	J2212	- J2213	J2215								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2214										
485101	J2539										
437203	J2213										
560603	J2108	J2115	J2211								
577003	J2167										
680203	J2108	J2111	J2211	J2213	J2221						
680501	J2105	- J2106	J2108	J2204	- J2205	J2221	J2226	J2229	J2301		
	J2304	- J2305	J2314	J2341	J2415	J2421	J2423	J2430	J2435		
-	J2436	J2440	J2442	J2445	J2535	J2539	J2542	- J2543	- J2544		
	J2546										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2522										
600603	J1537	J1544	- J1545	- J1546	J1548	- J1549	- J1550	- J1551	J2103		
-	J2104	- J2185	- J2106	J2108	J2117	J2120	- J2121	- J2122	- J2123		
-	J2124	- J2125	- J2126	- J2127	- J2128	- J2129	J2131	J2135	J2202		
	J2216	J2220	J2222	J2227	J2308	J2313	J2326	- J2327	- J2328		
	J2330	J2343	J2346	J2401	J2404	J2411	- J2412	J2431	J2435		
	J2437	- J2438	- J2439	- J2440	- J2441	J2445	J2447	- J2448	J2504		
	J2508	J2510	- J2511	J2513	- J2514	- J2515	- J2516	J2529	- J2530		
-	J2531										

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1311	J1439	J2130	J2520						
603603	J2104	- J2105	J2107	J2111						
620501	J2206	J2208								
637203	J2206									
637603	J2202	- J2203	- J2204	J2207	J2219					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J2214									
660663	J2108	J2114	J2222	J2243	J2309	J2312				
676203	J2286	J2386								
700000	J2117									
700001	J1323	J1326	J1338	J1411	- J1412	- J1413	J1415	- J1416	- J1417	
	J1419	J1421	- J1422	J1424	- J1425	- J1426	- J1427	J1432	- J1433	
	- J1434	- J1435	- J1436	J1508	J1510	- J1511	J1514	- J1515	- J1516	
	- J1517	J1526	- J1527	- J1528	- J1529	- J1530	- J1531	- J1532	J1536	
	J1538	- J1539	- J1540	J1542	J2105	- J2106	J2114	J2122	J2132	
	J2202	J2205	J2267	J2213	J2215	J2217	J2220	J2223	- J2224	
	- J2225	J2227	J2230	- J2231	J2236	J2238	J2242	J2302	J2384	
	J2307	J2314	J2317	J2339	J2402	J2406	- J2407	J2409	J2420	
	- J2421	J2423	J2426	- J2427	J2429	- J2430	- J2431	J2435	- J2436	
	J2509	- J2510	J2513	J2515	- J2516	J2536	J2534	- J2535	- J2536	
	- J2537	- J2538	- J2539	- J2540	- J2541	- J2542	J2544	- J2545	- J2546	
	- J2547	- J2548								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1404	J1444	J2214	J2318						
700003	J1411	J1516	J2105	- J2186	J2111	J2131	- J2132	J2134	J2205	
	- J2206	J2211	- J2212	J2215	J2220	J2401	- J2402	J2409	J2416	
	J2419	J2586	J2516	J2513	J2515	J2534	- J2535	- J2536	- J2537	
	J2541	J2547								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1404	J2130	J2136	J2433						
700007	J2203									
700011	J1235	J2581								
700015	J1419	J1516	J1529	J1531						

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU ON CPU OFF								
STOP		CONNECTORS									
700021	J2547										
700027	J1410										
700033	J1115	J1235									
700037	J1235										
700057	J1517										
700061	J2515	- J2516									
700073	J2501										
700077	J1508 J2507	J1513 - J2508	J1516 J2511	J2329 J2517	- J2330 - J2518	- J2331	J2333	J2502	J2505		
700501	J2103 - J2233 - J2341	- J2104 - J2234 J2444	J2107 J2236 - J2445	J2110 J2239 J2543	J2211 J2243	- J2221 - J2244	J2226 J2314	- J2229 - J2315	J2232 J2340		
700603	J1111 - - J1139 - J1225 - J1316 J2224 - J2239 J2309	J1112 - J1210 - J1226 - J1319 J2229 - J2240 J2312	- J1113 - - J1211 - J1227 - J1320 - J2230 - J2242 J2314	- J1114 - J1212 - J1231 J1330 - J2231 - J2243	- J1115 - J1213 - J1243 J2103 - J2232 - J2244	- J1116 - J1214 J1245 - J2104 - J2233 - J2245	J1129 J1216 J1315 J2108 - J2234 - J2246	J1137 J1223 - J1316 J2110 J2236 - J2247	- J1138 - J1224 - J1317 J2222 J2238 - J2248		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1121 J1234	J1209 J2136	J1215	J1217	- J1218	- J1219	- J1220	- J1221	- J1222		
701501	J2104	J2221	J2226	J2240							
701683	J2104	- J2105	J2220	J2222	- J2223						
737603	J2108 - J2243	J2115	J2222	J2235	J2237	J2239	J2241	- J2242			
740501	J1216	J2103									
740603	J1210 J1320	J1214 J1330	J1216 J2103	J1223 J2108	- J1224 J2222	- J1225 J2229	J1227 J2247	- J1228 - J2248	J1231 J2327		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1215	J1217	- J1219	- J1219	- J1220	- J1221	J1234				
743501	J2221										

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU ON CPU OFF		CONNECTORS				
STOP										
743603	J2220									
757201	J2108	J2114	J2223	J2230	J2233	J2243				
760501	J1433 J2302	J2103 J2308	- J2104 J2346	J2110 J2419	J2205 J2537	J2207 - J2538	J2221	J2226	J2245	
760601	J2109									
760603	J1111 - J1137 J1214 J1316 J2205 - J2241 J2527	- J1112 - J1138 J1216 J1318 J2207 - J2242	- J1113 - J1139 J1228 J1320 J2222 - J2243	J1115 - J1140 J1231 J1332 J2230 - J2244	- J1116 - J1143 J1235 J2103 J2233 - J2245	- J1117 - J1147 J1241 - J2105 J2235 - J2248	J1122 J1210 - J1242 J2107 - J2237 J2340	J1129 - J1211 J1244 - J2108 J2239 - J2342	J1136 - J1212 - J1245 J2110 - J2240 J2447	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1121	J1215	J1217	- J1218	- J1219	- J1220	- J1221			
770001	J1415	- J1416	J2122							
776501	J1321	J1415	J1419	J1514	J2107	J2540				
770603	J1210 - J1245 J2104 - J2242 J2528	- J1211 - 31246 - J2105 J2244	J1213 - J1247 J2107 - J2245	J1227 - J1248 J2110 - J2246	J1231 - J1249 J2235 J2248	J1235 J1344 - J2236 J2306	J1242 J1348 J2238 J2308	- J1243 - J1349 J2240 J2404	- J1244 - J1350 - J2241 J2411	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1222	J1234	J2119	J2136						
774101	J1321	J1419	J2205							
774203	J2105 J2216 J2405	J2204 - J2217 J2509	- J2205 - J2218	- J2206 - J2219	J2208 - J2220	- J2209 - J2223	- J2210 - J2225	J2213 J2309	J2215 J2337	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J2214									
7745010	J1321 J1419 J1519 J2125 J2240 J2445 J2543	J1323 J1423 J1531 - J2126 J2302 - J2446 J2544	J1407 J1425 J2103 - J2127 J2306 J2529 J2546	J1409 J1433 - J2104 - J2128 J2309 - J2530 J2547	- J1410 - J1435 - J2105 J2210 J2411 J2535	- J1411 - J1436 J2107 - J2221 J2419 J2537	J1413 J1505 - J2108 - J2221 J2430 J2539	J1416 J1509 J2110 J2226 J2432 - J2540	- J1417 J1514 - J2111 J22:30 J2443 - J2541	

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU ON													
DIAGNOSE STATUS		IOU OFF		CPU OFF													
STOP						CONNECTORS											
	J1310	-	J1311		J1404												
775003	J2121																
775203	J1226		J1228		J1319	-	J1320	-	J1321		J1323		J1326		J1329	-	J1330
	J1411		J1423		J1550		J2121		J2208		J2211		J2213		J2215	-	J2216
	J2217	-	J2218	-	J2219		J2221		J2224	-	J2225		J2231	-	J2232		J2248
	J2305		J2328	-	J2329		J2331		J2337		J2402		J2405		J2415	-	J2416
	J2439	-	J2440		J2511		J2530		J2541								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J2214		J2320														
776001	J2431	-	J2432														
776003	J2107	-	J2108														
776203	J2104		J2110		J2112	-	J2113		J2202		J2204	-	J2205	-	J2206	-	J2207
	J2209	-	J2210		J2212	-	J2213		J2215	-	J2216	-	J2217	-	J2218	-	J2219
	J2220	-	J2221	-	J2222	-	J2224	-	J2225		2310		J2327		J2543		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J2130		J2214														
777001	J2431																
777003	J1112		J1138		J1141		J1210		J1226	-	J1227	-	J1228		J1231		J1242
	J1246		J1319	-	J1320	-	J1321	-	J1322	-	J1323	-	J1324	-	J1325	-	J1326
	J1327	-	J1328	-	J1329	-	J1330	-	J1331	-	J1332	-	J1333	-	J1334	-	J1335
	J1336	-	J1337	-	J1338	-	J1339	-	J1340		J1348		J1410	-	J1411	-	J1412
	J1413	-	J1414		J1416	-	J1417		J1419		J1421	-	J1422	-	J1423	-	J1424
	J1425	-	J1426		J1433	-	J1434	-	J1435		J1450	-	J1451		J1526		J1528
	J1529	-	J1530	-	J1531	-	J1532	-	J1533	-	J1534	-	J1535		J1537		J1542
	J1549	-	J1550	-	J1551		J2103	-	J2104	-	J2105	-	J2106	-	J2107	-	J2108
	J2110	-	J2111	-	J2112	-	J2113	-	J2114	-	J2115	-	J2116	-	J2117		J2120
	J2121	-	J2122	-	J2123	-	J2124		J2127		J2129		J2131	-	J2132	-	J2133
	J2134	-	J2135		J2202	-	J2203	-	J2204	-	J2205	-	J2206	-	J2207	-	J2208
	J2209	-	J2210	-	J2211	-	J2212	-	J2213		J2215	-	J2216	-	J2217	-	J2218
	J2219	-	J2220	-	J2221	-	J2222	-	J2223	-	J2224	-	J2225	-	J2226	-	J2227
	J2229	-	J2230	-	J2231	-	J2232	-	J2233	-	J2234	-	J2235	-	J2236		J2238
	J2240		J2242	-	J2243		J2245	-	J2246	-	J2247	-	J2248		J2302		J2304
	J2305	-	J2306	-	J2307	-	J2308	-	J2309	-	J2310	-	J2311	-	J2312	-	J2313
	J2314	-	J2315		J2317		J2319		J2321	-	J2322	-	J2323	-	J2324	-	J2325
	J2326	-	J2327	-	J2328	-	J2329	-	J2330	-	J2331	-	J2332	-	J2333		J2337
	J2338	-	J2339	-	J2340	-	J2341	-	J2342	-	J2343	-	J2344		J2346		J2348
	J2401	-	J2404	-	J2405	-	J2406	-	J2407	-	J2408	-	J2409	-	J2410	-	J2411
	J2412		J2415	-	J2416		J2428	-	J2429	-	J2430	-	J2431	-	J2432		J2435
	J2436	-	J2437	-	J2439	-	J2439	-	J2440	-	J2441	-	J2442	-	J2443		J2444
	J2445	-	J2446	-	J2447	-	J2448		J2504	-	J2505		J2507	-	J2508		J2510

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS																	
STOP	J2511 - J2512	J2514 - J2515	J2516 - J2517	J2518 - J2519	J2520 - J2521	J2522 - J2523	J2524 - J2525	J2526 - J2527	J2528 - J2529	J2530 - J2531	J2532 - J2533	J2534 - J2535	J2536 - J2537	J2538 - J2539	J2540 - J2541	J2542 - J2543	J2544 - J2545	J2546 - J2547		
	J2524 - J2527	J2528 - J2529	J2530 - J2531	J2532 - J2533	J2534 - J2535	J2536 - J2537	J2538 - J2539	J2540 - J2541	J2542 - J2543	J2544 - J2545	J2546 - J2547	J2548 - J2549	J2550 - J2551	J2552 - J2553	J2554 - J2555	J2556 - J2557	J2558 - J2559	J2560 - J2561		
	J2538 - J2539	J2540 - J2541	J2542 - J2543	J2544 - J2545	J2546 - J2547	J2548 - J2549	J2550 - J2551	J2552 - J2553	J2554 - J2555	J2556 - J2557	J2558 - J2559	J2560 - J2561	J2562 - J2563	J2564 - J2565	J2566 - J2567	J2568 - J2569	J2570 - J2571	J2572 - J2573		
	J2547 - J2548	J2549 - J2550	J2551 - J2552	J2553 - J2554	J2555 - J2556	J2557 - J2558	J2559 - J2560	J2561 - J2562	J2563 - J2564	J2565 - J2566	J2567 - J2568	J2569 - J2570	J2571 - J2572	J2573 - J2574	J2575 - J2576	J2577 - J2578	J2579 - J2580	J2581 - J2582		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1222	J1310	J1342	J1343	J1404	J1439	J1444	J2119	J2130	J2136	J2214	J2318	J2320	J2334	J2335	J2345	J2413	J2433	J2520	J2522
777007	J2111	J2113	J2116																	
777013	J2111	J2113	J2116																	
777017	J2110	J2112	J2113	J2115																
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J2130																			
777023	J2111	J2113	J2117																	
777043	J2111	J2113	J2117																	
777063	J2106	J2113	J2114																	
777101	J2208	J2218	J2221	J2223	J2224	J2344	J2411	J2428	J2429	J2430	J2431	J2432								
777103	J2113	J2114	J2116																	
777201	J1323	J1326	J1340	J1405	J1406	J1407	J1409	J1410	J1411	J1412	J1413	J1418	J1419	J1420	J1424	J1425	J1426	J1427	J1428	J1429
	J1428	J1429	J1431	J1432	J1433	J1435	J1436	J1438	J1439	J1442	J1443	J1448	J1449	J1450	J1454	J1455	J1456	J1457	J1458	J1459
	J1512	J1513	J1514	J1515	J1516	J1517	J1518	J1519	J1520	J1523	J1526	J1528	J1529	J1530	J1531	J1532	J1533	J1534	J1535	J1536
	J1535	J1536	J1537	J1538	J1539	J1542	J1551	J2103	J2104	J2185	J2107	J2188	J2109	J2110	J2111	J2113	J2120	J2121	J2122	J2123
	J2122	J2123	J2124	J2126	J2127	J2129	J2129	J2131	J2132	J2133	J2134	J2135	J2202	J2203	J2204	J2205	J2206	J2207	J2208	J2209
	J2133	J2134	J2135	J2202	J2203	J2204	J2205	J2206	J2207	J2218	J2219	J2220	J2221	J2222	J2223	J2224	J2225	J2226	J2227	J2228
	J2208	J2209	J2210	J2211	J2212	J2213	J2215	J2216	J2217	J2243	J2244	J2306	J2307	J2309	J2310	J2311	J2314	J2315	J2316	J2317
	J2218	J2219	J2220	J2221	J2222	J2223	J2224	J2225	J2226	J2316	J2323	J2324	J2325	J2326	J2327	J2328	J2329	J2330	J2331	J2332
	J2344	J2346	J2348	J2402	J2404	J2405	J2406	J2408	J2409	J2331	J2332	J2333	J2337	J2338	J2339	J2340	J2342	J2343	J2344	J2345
	J2410	J2411	J2412	J2415	J2416	J2418	J2419	J2420	J2421	J2422	J2424	J2425	J2426	J2427	J2428	J2429	J2430	J2431	J2432	J2433
	J2422	J2424	J2425	J2426	J2427	J2428	J2429	J2430	J2431	J2435	J2436	J2438	J2439	J2440	J2441	J2444	J2445	J2447	J2448	J2449
	J2435	J2436	J2438	J2439	J2440	J2441	J2444	J2445	J2447	J2501	J2504	J2505	J2507	J2508	J2509	J2518	J2511	J2512	J2513	J2514
	J2501	J2504	J2505	J2507	J2508	J2509	J2518	J2511	J2512	J2513	J2514	J2515	J2516	J2517	J2518	J2523	J2524	J2525	J2526	J2527
	J2513	J2514	J2515	J2516	J2517	J2518	J2523	J2524	J2525											

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS							
STOP										
- J2526	- J2527	- J2528	- J2529	- J2530	- J2531	- J2532	- J2533	- J2534	- J2535	
- J2536	- J2537	- J2538	- J2539	- J2540	- J2541	- J2542	- J2543	- J2544	- J2545	
- J2546	- J2547	- J2548								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1310	- J1311	J1404	J1430	J1439	J1444	J2119	J2130	J2136		
J2214	J2320	J2334	J2345	J2433	J2520	J2522				
777203	J1228	J1231	J1319	- J1320	J1328	J1335	J1338	J1340	J1410	
	J1413	J1434	J1451	- J1551	J2103	J2105	- J2106	- J2107	- J2108	
	J2111	J2113	- J2114	J2116	- J2117	J2123	- J2124	J2129	J2131	
	- J2132	- J2133	- J2134	J2202	- J2203	- J2204	- J2205	- J2206	- J2207	
	- J2208	- J2209	- J2210	- J2211	- J2212	- J2213	J2215	- J2216	- J2217	
	- J2218	- J2219	- J2220	- J2221	- J2222	- J2223	- J2224	- J2225	- J2226	-
	- J2227	J2231	- J2232	- J2233	- J2234	- J2235	- J2236	J2246	J2305	
	- J2306	J2308	J2311	- J2312	- J2313	- J2314	J2317	J2321	J2324	
	J2326	- J2327	- J2328	- J2329	- J2330	- J2331	- J2332	- J2333	J2337	-
	- J2338	- J2339	- J2340	- J2341	- J2342	- J2343	- J2344	J2346	J2348	
	J2401	- J2402	J2404	- J2405	- J2406	J2408	- J2409	- J2410	- J2411	
	J2430	- J2431	- J2432	J2445	J2447	J2536	J2538	- J2539	- J2540	
	J2543	- J2544	J2546	- J2547	- J2548					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1342	J1404	J2130	J2136	J2214	J2318	J2334	J2413	J2433		
J2520										
777403	J2113	- J2114	J2117							
777501	J2215									
777601	J2213									
777603	J1521	J1538	J2184	J2106	- J2107	- J2108	- J2109	J2120	- J2121	-
	- J2122	- J2123	- J2124	- J2125	- J2126	- J2127	- J2128	- J2129	J2134	
	J2203	J2209	J2212	- J2213	J2215	J2222	J2239	J2241	J2309	
	J2311	- J2312	J2317	J2321	- J2322	- J2323	J2326	- J2327	- J2328	-
	J2329	- J2330	- J2331	- J2332	- J2333	J2401	- J2402	J2405	- J2406	
	- J2407	J2411	J2429	J2504	J2506	- J2507	- J2508	- J2509	- J2510	-
	J2511	- J2512	- J2513	- J2514	- J2515	- J2516	- J2517	- J2518	- J2519	
	J2523	- J2524	- J2525	J2530	J2532					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J2130	J2334	J2520	J2522							

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU ON			CONNECTORS
STOP						
001001	J2189					
001010	J2114					
007033	J2126					
100111	J2116					
111110	J2107	J2109	J2115	-	J2116	
111111	J2111	J2114	-	J2115	J2117	
377101	J2110					
510032	J2330					
700001	J2111					
700002	J2115					
700003	J2134	J2215				
777777	J2122					

Change 4 2-130

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OON		CPU ON CPU OFF		CONNECTORS		
STOP								
000007	J2333							
075201	J2106	J2115	-	J2116	J2122		J2126	
177203	J2106	J2115	-	J2116	J2122		J2126	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130							
767201	J2112							
773007	J2333	J2337						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2334							
774501	J2430							
777201	J2112	J2133	J2236	J2238	J2244	J2430	J2432	J2446

Change 4 2-131

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU ON IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
000000	J2114 - J2115	J2117 J2331	J2442 J2531
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318 J2335		
000464	J2442		
001003	J2531		
001066	J2531		
001214	J2531		
700062	J2442		
700100	J2442		

Change 4 2-132

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS		IOU ON	CPU OFF	
DIAGNOSE STATUS		IOU OFF	CPU ON	
STOP				CONNECTORS
111111	J2114 - J2115	J2117		
700000	J2114 - J2115	J2117		

Change 4 2-133

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU ON IOU OFF		CPU ON CPU OFF		CONNECTORS				
STOP										
017207	J2132									
036277	J2317	J2321	J2342	J2435						
037207	J2131	- J2132	J2212							
075203	J2531									
177207	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130									
775207	J2131									
777007	J1344	J1350	J1529	J1532	J1535	J2311	J2405	J2439		
777017	J1406	J1409	- J1410	- J1411	- J1412	- J1413	J1433	J1436	J1511	
	J1513	- J1514	J1519	J1530	- J1531	J1533	- J1534	- J1535	- J1536	
	J2111	J2125	J2127	J2209	- J2210	- J2211	- J2212	- J2213	J2220	-
	J2221	J2223	- J2224	- J2225	J2310	J2331	J2346	J2348	J2481	
	J2438	J2446	J2536	J2539	J2542	- J2543	J2545	- J2546	- J2547	-
	J2548									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1310 J1404 J1430 J2522									
777201	J2531									
777207	J2131									
777703	J2114	- J2115								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130									
777777	J1312	- J1313	- J1314	J1529	J1535	J1545	J2116	- J2117	J2132	
	J2205	- J2206	J2217	J2331	J2333	J2429	J2431	- J2432	J2435	
-	J2436	- J2437	J2539							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2318 J2520									

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU ON IOU OFF	CPU ON CPU OFF	CONNECTORS
STOP			
037207	J2120		
775207	J2120		

Change 4 2-135

TABLE 2-2. CPU FAULT LOCATION-CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU ON IOU ON	CPU ON CPU ON	CONNECTORS
STOP			
000000	J2114		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209		
777777			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209		

Change 4 2-136

TABLE 2-3. IOU FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
000000	J3101 - J1102 - J1103 - J1104 - J1105 - J1106 - J1107 - J1108 - J1109 - J1110	J111 - J1112 - J1113 - J1115 - J1116 - J1117 - J1124 - J1125 - J1128 - J1130	J1136 - J1137 - J1138 - J1139 - J1140 - J1144 - J1145 - J1146 - J1201 - J1202	J1203 - J1204 - J1205 - J1206 - J1207 - J1208 - J1212 - J1214 - J1216 - J1222	J1239 - J1244 - J1245 - J1246 - J1247 - J1301 - J1302 - J1303 - J1304 - J1305	J1306 - J1307 - J1308 - J1309 - J1310 - J1311 - J1312 - J1313 - J1318 - J1319	J1320 - J1322 - J1323 - J1325 - J1327 - J1328 - J1331 - J1335 - J1339 - J1342	J1343 - J1347 - J1348 - J1406 - J1407 - J1408 - J1409 - J1410 - J1411 - J1412	J1414 - J1417 - J1418 - J1419 - J1420 - J1421 - J1424 - J1425 - J1426 - J1436	J1437 - J1443 - J1446		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1133 - J1134 - J1316 - J1321 - J1334 - J1422 - J1423 - J1441 - J1442 - J1444											
000002	J1208 - J1215 - J1217 - J1218 - J1221 - J1222 - J1324 - J1429											
000003	J1101 - J1184 - J1106 - J1111 - J1113 - J1114 - J1118 - J1120 - J1143 - J1201	J1204 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1215 - J1217 - J1218	J1219 - J1221 - J1222 - J1224 - J1225 - J1227 - J1228 - J1230 - J1231 - J1232	J1233 - J1236 - J1246 - J1302 - J1310 - J1323 - J1324 - J1325 - J1326 - J1327	J1328 - J1329 - J1333 - J1337 - J1338 - J1344 - J1426 - J1427 - J1429 - J1432							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1423											
000004	J1212 - J1217 - J1226 - J1228 - J1229 - J1230 - J1318 - J1430											
000005	J1215 - J1217 - J1237 - J1246											
000006	J1208 - J1212 - J1218 - J1429											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1423											
000007	J1114											
000010	J1215											
000011	J1302											
080012	J1210 - J1233 - J1236											
000014	J1208											
000016	J1114 - J1212 - J1221 - J1222 - J1230											
000017	J1212 - J1217 - J1231											
000822	J1106 - J1307											

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS			IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP												
000023	J1226	J1229	J1312	J1432								
000024	J1226	J1430										
000025	J1109 J1233	J1210 J1430	- J1211	- J1212	- J1213	J1215	J1226	J1228	- J1229	J1231		
000627	J1212	J1217	J1230	J1430								
000032	J1212	J1224	J1429									
000035	J1205	J1208	J1212	- J1213	J1225	J1428						
000037	J1245	J1344										
000040	J1127	J1208	- J1209	J1212	- J1213	J1224	J1427					
000042	J1224	J1332										
000043	J1225											
000044	J1109	J1209	J1212	- J1213	J1223	- J1224						
000045	J1212	J1215	J1218	J1222	- J1223	J1229	J1233	J1235	J1237	J1317		
000047	J1101 J1128 J1305 J1329	- J1102 J1136 - J1306 J1337	- J1103 J1145 - J1307 J1342	J1107 J1201 - J1308 J1426	J1113 - J1202 - J1309 J1433	- J1114 J1205 - J1311 J1312	J1116 - J1206 - J1318 J1318	- J1117 - J1207 J1318	- J1118 J1301 - J1326 J1326	- J1119 - J1302 - J1327 J1327		
000050	J1112 - J1209 - J1306	- J1113 J1212 - J1307	J1117 - J1213 - J1308	- J1118 J1218 J1310	- J1119 J1222 J1318	J1127 J1227 J1327	J1136 J1233 J1339	- J1137 J1301 J1426	J1262 J1304	J1208 - J1305		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1423												
008051	J1138	J1215	J1217	- J1218	J1221	J1233	J1235	J1305	J1309			
000052	J1210	J1427										
000053	J1222	J1324										
000054	J1215	J1222	J1333	J1343								
000061	J1317											
000062	J1215											
000063	J1434											

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS														
STOP																	
000103	J1114	J1434															
000107	J1215	J1229	J1318														
000112	J1337																
000132	J1104	J1118	J1111	-	J1112	J1113	-	J1114	-	J1115	J1130	J1219	J1222				
	J1224	-	J1225	J1228	-	J1233	-	J1234	J1236	J1239	J1246	J1307	J1310				
	J1312	J1318	-	J1319	-	J1320	J1322	-	J1323	-	J1324	-	J1325	-	J1326	-	J1327
	-	J1328	-	J1329	J1331	-	J1332	-	J1333	J1336	-	J1337	-	J1338	J1342	J1344	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
J1334																	
000133	J1141	-	J1142	-	J1143	-	J1144	J1146	J1221	J1227	-	J1228	J1233	J1243			
	J1246		J1327														
000141	J1223																
000150	J1434																
000167	J1120	J1344															
000172	J1344																
000173	J1120																
000203	J1109																
000216	1229																
000223	J1213																
000227	J1119																
000254	J1145																
000326	J1119	-	J1120	J1209													
000342	J1329																
000343	J1327																
000365	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
J1423																	
000372	J1142	J1144	J1221	J1223	J1226	-	J1227	-	J1228	-	J1229	J1232	-	J1233			
	J1235																
000404	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
J1423																	

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
000406	J1337					
000414	J1327					
000441	J1218					
000447	J1212					
00470	J1212					
006474	J1329					
000574	J1434					
000635	J1239	J1333				
000644	J1202	J1310	J1313	-	J1314	
000655	J1234					
000674	J1309					
000701	J1120					
000766	J1108	J1312	J1325	-	J1326	J1328
000770	J1114	- J1115	J1324	-	J1325	J1344
000772	J1344					
000775	J1222					
001001	J1140					
001003	J1140	J1436	J1445			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1441					
001005	J1339					
001066	J1105	J1121				
001007	J1231					
001021	J1232	J1247				
001022	J1304					
001035	J1119	J1125	J1139	-	J1140	J1239 J1306 J1309
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248					

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS			IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
001037	J1141	- J1142	J1221	J1243								
001045	J1141	- J1142	J1221	J1223	J1228	J1243						
001050	J1137	J1141 - J1142	J1143	J1144	J1146	J1221	J1223	J1227	J1228			
-	J1229	J1233	J1235	J1243	J1246	J1348	J1435					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1423												
001051	J1145	J1239	J1337	J1348								
001057	J1116	- J1117	J1118	J1121	J1136	J1303	J1305	J1309	J1310	J1331		
-	J1332	- J1333	J1339	31410	J1413	J1421						
001060	J1309											
901061	J1103	J1106	J1115	J1206	J1233	J1238	J1306	J1324	J1325	J1326		
	J1328	J1331	- J1332	- J1333	J1338	J1343						
001062	J1110	J1128	J1130	J1144	J1146	J1246	J1307	J1348	J1406	J1407		
	J1410	J1412	- J1413	J1416	- J1417	J1421	J1445	J1447				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1422												
001113	J1309											
001127	J1328											
001200	J1101	J1103	J1106	J1107	J1108	J1110	J1111	J1112	J1114	J1116		
-	J1117	J1119	J1125	- J1126	- J1127	- J1128	- J1129	- J1130	J1136	- J1137		
-	J1138	J1140	J1143	- J1144	- J1145	- J1146	- J1201	- J1203	- J1204	- J1206		
-	J1207	- J1208	- J1209	J1216	J1218	- J1219	- J1220	J1227	J1235	J1237		
-	J1239	- J1240	J1243	- J1244	- J1245	- J1246	- J1247	J1301	- J1302	- J1303		
-	J1304	J1306	- J1307	- J1308	- J1309	- J1310	- J1311	- J1312	J1317	J1333		
-	J1339	J1343	J1345	- J1346	- J1347	- J1348	J1405	- J1406	J1410	- J1411		
-	J1412	- J1413	- J1414	J1416	- J1417	- J1418	- J1419	J1424	- J1425	- J1437		
	J1439	J1445										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248 J1315 J1321 J1442 J1444												
001201	J1103	J1107	- J1108	J1111	- J1112	J1118	J1125	- J1126	- J1127	- J1128		
-	J1129	J1136	- J1137	J1139	- J1140	J1203	- J1204	J1206	J1218	- J1219		
-	J1224	- J1225	- J1226	- J1227	J1235	J1240	J1241	- J1242	J1245	- J1301		
-	J1302	J1304	J1306	J1308	J1311	- J1312	J1317	J1333	J1345	- J1346		
	J1348	J1406	J1410	J1412	- J1413	- J1414	J1416	J1418	J1424	- J1425		
	J1438	J1443										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248 J1315 J1321 J1441 J1442												

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS																																																																																																																																																																																																																																																																																															
001202	J1108	J1111 - J1112	J1114	J1118	J1125	J1126	J1127	J1128	J1129	J1218	J1219	J1220	J1222	J1223	J1224	J1225	J1226	J1227	J1228	J1230	J1231	J1232	J1233	J1234	J1235	J1236	J1237	J1238	J1239	J1240	J1241	J1242	J1243	J1244	J1245	J1246	J1247	J1248	J1249	J1250	J1251	J1252	J1253	J1254	J1255	J1256	J1257	J1258	J1259	J1260	J1261	J1262	J1263	J1264	J1265	J1266	J1267	J1268	J1269	J1270	J1271	J1272	J1273	J1274	J1275	J1276	J1277	J1278	J1279	J1280	J1281	J1282	J1283	J1284	J1285	J1286	J1287	J1288	J1289	J1290	J1291	J1292	J1293	J1294	J1295	J1296	J1297	J1298	J1299	J1300	J1301	J1302	J1303	J1304	J1305	J1306	J1307	J1308	J1309	J1310	J1311	J1312	J1313	J1314	J1315	J1316	J1317	J1318	J1319	J1320	J1321	J1322	J1323	J1324	J1325	J1326	J1327	J1328	J1329	J1330	J1331	J1332	J1333	J1334	J1335	J1336	J1337	J1338	J1339	J1340	J1341	J1342	J1343	J1344	J1345	J1346	J1347	J1348	J1349	J1350	J1351	J1352	J1353	J1354	J1355	J1356	J1357	J1358	J1359	J1360	J1361	J1362	J1363	J1364	J1365	J1366	J1367	J1368	J1369	J1370	J1371	J1372	J1373	J1374	J1375	J1376	J1377	J1378	J1379	J1380	J1381	J1382	J1383	J1384	J1385	J1386	J1387	J1388	J1389	J1390	J1391	J1392	J1393	J1394	J1395	J1396	J1397	J1398	J1399	J1400	J1401	J1402	J1403	J1404	J1405	J1406	J1407	J1408	J1409	J1410	J1411	J1412	J1413	J1414	J1415	J1416	J1417	J1418	J1419	J1420	J1421	J1422	J1423	J1424	J1425	J1426	J1427	J1428	J1429	J1430	J1431	J1432	J1433	J1434	J1435	J1436	J1437	J1438	J1439	J1440	J1441	J1442	J1443	J1444	J1445	J1446	J1447	J1448	J1449	J1450	J1451	J1452	J1453	J1454	J1455	J1456	J1457	J1458	J1459	J1460	J1461	J1462	J1463	J1464	J1465	J1466	J1467	J1468	J1469	J1470	J1471	J1472	J1473	J1474	J1475	J1476	J1477	J1478	J1479	J1480	J1481	J1482	J1483	J1484	J1485	J1486	J1487	J1488	J1489	J1490	J1491	J1492	J1493	J1494	J1495	J1496	J1497	J1498	J1499	J1500
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			J1133	J1134	J1321	J1334	J1442																																																																																																																																																																																																																																																																																											
001203	J1117	J1118	J1119	J1125	J1126	J1127	J1128	J1129	J1130	J1136	J1137	J1143	J1144	J1146	J1201	J1203	J1204	J1205	J1207	J1218	J1219	J1220	J1222	J1225	J1226	J1227	J1228	J1229	J1233	J1236	J1237	J1239	J1240	J1241	J1242	J1243	J1244	J1245	J1246	J1247	J1301	J1304	J1306	J1317	J1320	J1342	J1343	J1344	J1345	J1346	J1407	J1419	J1424	J1425	J1436	J1438	J1439	J1443																																																																																																																																																																																																																																								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			J1133	J1135	J1248	J1315	J1321	J1334	J1441	J1442																																																																																																																																																																																																																																																																																								
001204	J1101	J1102	J1103	J1104	J1107	J1108	J1109	J1110	J1111	J1112	J1113	J1115	J1116	J1118	J1127	J1129	J1130	J1137	J1138	J1146	J1202	J1204	J1206	J1207	J1237	J1246	J1247	J1301	J1305	J1306	J1307	J1308	J1309	J1311	J1318	J1324	J1326	J1333	J1344	J1348	J1405	J1406	J1407	J1409	J1410	J1411	J1413	J1418	J1424	J1438	J1443	J1445																																																																																																																																																																																																																																														
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			J1316	J1321	J1441	J1444																																																																																																																																																																																																																																																																																												
001205	J1101	J1106	J1115	J1201	J1202	J1234	J1247	J1301	J1304	J1305	J1306	J1307	J1309	J1320	J1331	J1333																																																																																																																																																																																																																																																																																		
001206	J1113	J1115	J1203	J1237	J1303	J1304	J1305	J1307	J1312	J1327	J1347	J1436																																																																																																																																																																																																																																																																																						
001207	J1161	J1163	J1104	J1106	J1108	J1109	J1112	J1113	J1125	J1130	J1137	J1201	J1202	J1207	J1208	J1237	J1247	J1301	J1302	J1303	J1304	J1305	J1306	J1307	J1308	J1309	J310	J1311	J1320	J1322	J1333	J1346	J1347	J1348	J1446																																																																																																																																																																																																																																																															
001210	J1103	J1106	J1113	J1130	J1224	J1225	J1233	J1238	J1242	J1302	J1303	J1308	J1309	J1324	J1325	J1326	J1328	J1331	J1332	J1333	J1338	J1406	J1407	J1410	J1416	J1445	J1446																																																																																																																																																																																																																																																																							
001211	J1445																																																																																																																																																																																																																																																																																																	
001212	J1109	J1126	J1343																																																																																																																																																																																																																																																																																															

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
001213	J1126 - J1127	J1129	J1246	J1301	J1445						
001215	J1141										
001225	J1445										
001253	J1114										
001256	J1161 - J1201 - J1305 - J1327	J1104 - J1202 - J1306 - J1333	J1108 - J1204 - J1307 - J1337	J1110 - J1205 - J1308 - J1409	J1112 - J1206 - J1309 - J1410	J1116 - J1212 - J1310 - J1418	J1120 - J1222 - J1313 - J1446	J1121 - J1233 - J1314	J1123 - J1302 - J1317	J1136 - J1304 - J1322	
001257	J1101 - J1120 - J1143 - J1244 - J1317 - J1408 - J1418 - J1445	J1102 - J1121 - J1145 - J1245 - J1318 - J1409 - J1421 - J1446	J1103 - J1123 - J1204 - J1303 - J1320 - J1410 - J1426 - J1447	J1106 - J1125 - J1229 - J1304 - J1322 - J1411 - J1427	J1109 - J1127 - J1232 - J1305 - J1327 - J1412 - J1438	J1112 - J1128 - J1233 - J1307 - J1329 - J1413 - J1434	J1116 - J1129 - J1235 - J1368 - J1333 - J1414 - J1435	J1117 - J1136 - J1236 - J1309 - J1346 - J1415 - J1436	J1118 - J1137 - J1237 - J1311 - J1406 - J1416 - J1437	J1119 - J1141 - J1239 - J1314 - J1487 - J1417 - J1439	
001260	J1144	J1308	J1311								
001261	J1127 - J1446	J1129 - J1447	J1233	J1348	J1406 - J1407	J1409 - J1410	J1436	J1445			
001262	J1114 - J1320	J1117	J1119	J1121	J1123	J1138	J1143	J1265	J1302	J1318	
001263	J1137	J1413	J1418								
001264	J1325	J1406 - J1407	J1409	J1445 - J1446	J1447						
001265	J1117 - J1118	J1120 - J1121	J1123	J1233	J1320	J1325	J1333				
001666	J1101 - J1112 - J1123 - J1144 - J1213 - J1233 - J1247 - J1310 - J1324 - J1347 - J1416 - J1434	J1102 - J1113 - J1124 - J1145 - J1214 - J1235 - J1301 - J1325 - J1348	J1103 - J1114 - J1127 - J1146 - J1215 - J1236 - J1302 - J1312 - J1326 - J1407 - J1418 - J1436	J1104 - J1115 - J1128 - J1201 - J1216 - J1237 - J1303 - J1313 - J1327 - J1408 - J1419 - J1437	J1106 - J1116 - J1130 - J1202 - J1217 - J1238 - J1384 - J1314 - J1328 - J1410 - J1420 - J1439	J1107 - J1117 - J1136 - J1204 - J1222 - J1239 - J1305 - J1317 - J1329 - J1411 - J1421 - J1443	J1108 - J1118 - J1137 - J1205 - J1223 - J1242 - J1386 - J1318 - J1331 - J1412 - J1425	J1109 - J1119 - J1138 - J1286 - J1226 - J1244 - J1307 - J1318 - J1332 - J1413 - J1429	J1110 - J1128 - J1139 - J1207 - J1229 - J1245 - J1308 - J1322 - J1333 - J1414 - J1432	J1111 - J1121 - J1143 - J1208 - J1232 - J1246 - J1309 - J1323 - J1343 - J1415 - J1433	

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1422 J1441 - J1442

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS																																		
001667	J1102 - J1113	J1109	J1113 - J1114	J1117 - J1118	J1119 - J1120	J1123	J1124 - J1128	J1130	J1137 - J1138	J1143 - J1144	J1202 - J1206	J1207	J1208 - J1228	J1229 - J1230	J1231 - J1232	J1233 - J1236	J1237 - J1239	J1247 - J1301	J1302 - J1303	J1304 - J1305	J1306 - J1307	J1308 - J1309	J1311 - J1312	J1318	J1320 - J1326	J1327 - J1329	J1331 - J1337	J1338	J1342 - J1343	J1439							
001670	J1104	J1106 - J1107	J1108	J111	J1112 - 1113	J1114 - J1115	J1119	J1124 - J1126	J1127 - J1129	J1130 - J1138	J1144 - J1146	J1202	J1203 - J1204	J1206 - J1207	J1212 - J1213	J1216 - J1222	J1241 - J1244	J1301 - J1302	J1303 - J1305	J1307 - J1308	J1309 - J1318	J1311 - J1312	J1317 - J1318	J1319 - J1320	J1323 - J1324	J1325 - J1326	J1327 - J1328	J1332 - J1336	J1339 - J1340	J1341 - J1342	J1343 - J1348	J1405 - J1406	J1409	J1413	J1418	J1424 - J1425	J1443

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1315

001702	J1336
002003	J1113
002420	J1204
003000	J1312 J1317
005750	J1227
010716	J1217
010770	J1228
012010	J1344
012030	J1318
040003	J1210
040030	J1302
040177	J1108
040203	J1421
041554	J1130
042072	J1426
053271	J1209

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
054734	J1209										
061461	J1213										
061542	J1209	J1222									
061572	J1218										
061664	J1209										
061747	J1233										
063677	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1423										
070714	J1222										
072003	J1332										
075000	J1424										
077760	J1209										
077770	J1426										
110060	J1301	J1424									
111111	J1102 J1213 - J1323 J1421	J1106 J1227 J1325 J1424	- J1107 J1233 J1327 J1431	J1109 J1245 J1336 J1439	J1116 J1301 J1343 J1443	J1124 J1303 - J1344 J1446	J1130 J1310 J1407 J1447	J1143 J1313 - J1408	J1201 J1320 J1415	J1203 J1322 - J1416	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1442										
114035	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1321										
120800	J1222	J1234	J1236								
165508	J1347										
177200	J1410	J1415	J1445								
200150	J1317										
200630	J1244										
220500	J1421	J1439									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315 J1334										

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
241780	J1247										
264720	J1431										
400000 31420	J1112	J1116	J1211	J1220	J1239	J1332	J1336	J1338	J1342	J1344	
400100	J1114										
410000	J1413										
641554	J1424										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1134										
660025	J1104 J1445	J1107	J1137	J1214	J1220	J1242	J1304	J1323	J1346	J1438	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1321										
666230	J1384										
670374	J1320										
700000	J1103 - J1115 - J1137 - J1207 - J1223 - J1244 - J1309 - J1324 - J1337 - J1347 - J1413 - J1436 -	J1104 - J1118 - J1138 - J1208 - J1228 - J1245 - J1310 - J1325 - J1338 - J1348 - J1414 - J1437 -	J1105 - J1119 - J1139 - J1209 - J1232 - J1246 - J1311 - J1326 - J1339 - J1405 - J1415 - J1438 -	J1106 - J1121 - J1140 - J1210 - J1233 - J1257 - J1314 - J1328 - J1340 - J14086 - J1418 - J1439 -	J1107 - J1123 - J1143 - J1211 - J1235 - J1301 - J1317 - J1329 - J1341 - J1407 - J1419 - J1443 -	J1188 - J1124 - J1145 - J1213 - J1236 - J1304 - J1318 - J1330 - J1342 - J1408 - J1420 - J1445 -	J1109 - J1125 - J1201 - J1217 - J1237 - J1305 - J1319 - J1332 - J1343 - J1409 - J1421 - J1446 -	J1111 J1129 - J1202 - J1218 - J1239 - J1306 - J1320 - J1333 - J1344 - J1418 - J1424 - J1447 -	J1113 J1130 - J1203 - J1219 - J1241 - J1307 - J1322 - J1335 - J1345 - J1411 - J1425 -	J1114 J1136 J1207 J1222 J1243 J1308 J1323 J1336 J1346 J1412 J1426	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1135 J1248 J1315 J1321 J1334 J1442										
700001	J1112	J1238	J1307	J1309	J1333						
700002	J1103 - J1129 - J1208 J1234 J1319 J1342 -	J1104 - J1130 J1210 J1302 - J1324 J1343 -	J1107, J1136 - J1214 J1303 - J1327 J1344 -	J1108 - J1137 J1218 - J1304 - J1330 - J1345 -	J1109 - J1139 - J1219 - J1305 - J1331 - J1346 -	J1113 J1140 J1220 J1306 - J1332 - J1347 -	J1120 J1144 - J1222 J1307 J1333 - J1348 -	J1121 J1145 J1225 J1318 J1335 J1405 -	J1125 J1201 J1228 J1312 - J1338 J1486 -	J1128 J1204 J1231 J1313 J1340 J1407	

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP	J1409 - J1410 - J1411 - J1412 - J1413 - J1414 - J1415 - J1416	J1420 - J1421 J1424 - J1425 J1428	J1415	J1416	J1418	J1418	J1418	J1418	J1418	J1418	J1418
	J1420 - J1421	J1424 - J1425	J1443	J1439	J1447						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1134 - J1135	J1422	J1444								
700003	J1101 - J1102 - J1103 - J1104	J3106	J1108	J1110 - J1111	J1113 - J1114	J1115 - J1116	J1117 - J1118	J1119	J1123	J1126 - J1127	J1128 - J1129
-	J1130 - J1136 - J1137 - J1138	J1140	J1143	J1144 - J1145	J1146	J1202 - J1203 - J1204	J1205	J1207	J1213	J1215 - J1216	J1217
-	J1223 - J1224	J1226	J1229	J1232 - J1233	J1235 - J1236	J1242	J1244 - J1245	J1246	J1301 - J1302	J1303 - J1304	J1306 - J1307
-	J1308 - J1309	J1311	J1312 - J1313	J1314	J1317 - J1318	J1322 - J1323	J1324 - J1325	J1326	J1327 - J1328	J1329 - J1330	J1331
-	J1332 - J1333	J1336	J1337	J1339 - J1340	J1341 - J1342	J1347 - J1348	J1405 - J1406	J1407	J1408 - J1409	J1410 - J1411	J1412
-	J1413 - J1414	J1415	J1416 - J1417	J1418	J1419 - J1428	J1426 - J1427	J1428 - J1429	J1431	J1435 - J1436	J1437 - J1438	J1439
	J1443	J1445 - J1446	J1447								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1133	J1248	J1315 - J1316	J1334	J1422						
700005	J1227										
700006	J1344										
700010	J1238	J1342									
700011	J1346	J1348									
700020	J1208	J1238	J1331 - J1332	J1336							
700022	J1237 - J1238										
700023	J1337										
700026	J1238										
700027	J1332										
700030	J1234	J1331									
700032	J1308										
700640	J1119	J1238	J1332	J1336							
700044	J1344										
700047	J1332	J1337	J1342								

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP											
706058	J1344										
708660	J1331 - J1332										
708061	J1103 J1238										
700064	J1119										
700065	J1336										
700066	J1119										
700071	J1332										
700072	J1344										
700075	J1233 J1332 J1342										
700076	J1212 J1317 J1331 - J1332 J1336										
706100	J1113 J1208 J1218 J1221										
704100	J2228										
710001	J1238										
710020	J1233										
740100	J1210 - J1211 J1213 - J1214 J1219 J1228										
774544	J1208										
774554	J1209										
774564	J1218										
775200	J1111 J113 - J1104 - J1105 - J1106 - J1107 - J1168 - J1189 - J1110 - J1111										
-	J1112 - J1113 J1115 - J1116 - J1117 J1124 - J1125 J1128 J1130 J1136										
-	J1137 - J1138 - J1139 - J1140 J1143 - J1144 - J1145 - J1146 J1201 - J1202										
-	J1203 - J1264 - J1205 J1208 J1214 J1242 - J1244 - J1245 - J1246 - J1247										
-	J1381 - J1302 - J1303 - J1384 - J1305 - J1306 - J1307 - J1308 - J1309 - J1310										
-	J1311 - J1312 - J1313 - J1314 J1319 J1322 - J1323 J1333 J1335 J1342										
-	J1347 - J1348 J1485 - J1406 - J1407 - J1408 - J1409 - J1410 - J1411 J1418										
	J1437 J1446										

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1133 J1316 J1441 J1444

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS				
DIAGNOSE STATUS		IOU OFF		CPU OFF						
STOP										
808800	J1107	J1204	J1302							
8880004	J1106	J1110	J1112	J1130	J1146	J1206	J1245	J1246	J1301	J1302
000805	J1314	J1407	J1419	J1425	J1443					
	J1125									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1248									
000006	J1244	J1317	J1333	J1348	J1406	J1407	J1413	J1416	J1425	J1443
	J1445									
0000807	J1103	J1112	J1113	J1129						
000010	J1108	J1118	J1129	J1418						
000011	J1105	J1107	J1118	J1111	J1112	J1113	J1124	J1125	J1126	J1127
	J1129	J1130	J1145	J1146	J1202	J1203	J1204	J1205	J1209	J1216
	J1227	J1228	J1244	J1247	J1301	J1313	J1322	J1339	J1347	J1348
	J1406	J1407	J1409	J1413	J1418	J1425	J1439	J1443	J1445	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1133	J1441	J1444							
000012	J1125									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1248									
060014	J3106	J1244	J1247	J1407						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1441									
000017	J1318									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1444									
000020	J1114									
000031	J1237									
000033	1213	J1244	J1311	J1339	J1406	J1409	J1413			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1441									
000037	J1215									

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS				
DIAGNOSE STATUS		IOU OFF	IOU OFF	CPU OFF	CPU OFF					
STOP										
000050	J1201	J1204	J1213	J1219	J1426					
000054	J1237									
000132	J1348									
000203	J1239									
000350	J1209	J1227	J1311							
000352	J1336									
000442	J1219	J1222	J1227							
000735	J1303									
000775	J1102	J1140								
001001	J1144 J1439	J1202	J1237	J1303	J1305	J1307	J1310	J1322	J1333	J1343
001002	J1425									
001006	J1203									
001702	J1322									
002180	J1105	J1247	J1309	J1416	J1417	J1437				
002420	J1103 J1413	J1109 J1418	J1116	J1146	J1234	J1238	J1303	J1307	J1322	J1406
004000	J1418									
004100	J1145	J1303	J1307							
004420	J1116 J1407	J1148 J1445	J1228	J1237	J1238	J1324	J1329	J1335	J1336	J1343
012040	J1117 J1339	J1129 J1340	J1202 J1341	J1207 J1342	J1222 J1343	J1227	J1328	J1331	J1332	J1336
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1315									
012100	J1143	J1230	J1306							
012120	J1306	J1322								
020033	J1130	J1348	J1406	J1407						

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
032180	J1414									
040772	J1228									
041500	J1418									
041554	J1439									
060033	J1406	J1487	J1413	J1418						
065732	J1201									
065750	J1213									
066777	J1201									
074040	J1234	J1320	J1329	J1331	J1332	J1338	J1409	J1414		
074100	J1136	J1216	J1244	J1348	J1407	J1425				
105000	J1124									
11111	J31112	J1125	J1130							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248										
111101	J1125									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248										
165500	J1417									
174038	J1235	J1329	J1435							
174040	J1129 J1343	J1227 J1418	J1325	J1328	J1332	J1336	J1339	J1340	J1341	J1342
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315										
200020	J1104									
220500	J1314	J1324	J1333	J1339	J1341	J1406	J1419	J1420		
221000	J1326									
264560	J1408									

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
274040	J1108 J1325	J1110 J1328	J1112 J1332	J1201 J1336	J1202 J1339	J1203 J1340	J1208 J1341	J1222 J1411	J1227	J1382
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315									
374040	J1332	J1339	J1340	J1341						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315									
400000	J1339	J1412	J1419							
402004	J1388									
410000	J1430									
474040	J1207	J1332	J1337	J1338	J1339	J1340	J1341			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315									
581700	J1332									
510008	J1343									
510004	J1106	J1111	J1114	J1130	J1146	J1206	J1246	J1301	J1302	J1419
510005	J1125									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248									
510006	J1244	J1317	J1333	J1407	J1416	J1425	J1443	J1445		
518007	J1129									
510010	J1188	J1118	J1123	J1129						
510011	J1126 J1418	J1205 J1425	J1227 J1443	J1244 J1445	J1303	J1327	J1406	J1412	J1413	J1416
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1444									
510812	J1125									
	SUBSTITUTE THE FOLLOWIJING CARD ASSEMBLIES: J1248									

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
510017	J1228	- J1229	J1308	J1405						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315									
510020	J1324									
510021	J1112 J1417	- J1125 - J1418	J1140 J1436	J1143 - J1437	J1146	J1209	J1227	J1328	J1343	J1410
510033	J1130 J1424	- J1244 - J1425	J1311	J1339	J1348	J1406	- J1407	J1411	J1413	J1418
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1441 - J1442									
510050	J1209	J1227	J1311							
511000	J1320									
602214	J1201	J1204								
602310	J1219									
602314	J1204	J1213	J1219							
640000	J1320	J1348								
641554	J1245	J1346								
666233	J1115									
700800	J1104 J1145 J1229 - J1247 J1317 - J1333 J1347 - J1414 - J1437	J1108 J1202 - J1230 J1301 J1320 J1336 - J1348 J1416 - J1443	J1111 J1204 J1233 - J1303 J1323 - J1337 J1405 - J1417 J1445	J1115 J1207 - J1234 J1325 - J1338 J1406 - J1418 J1447	J1126 - J1208 J1235 - J1306 J1327 - J1339 J1408 - J1419 J1420	- J1127 - J1212 - J1239 - J1307 J1328 - J1340 - J1489 - J1420	- J1128 - J1216 J1242 - J1309 - J1329 - J1410 - J1421	- J1129 - J1220 J1244 - J1312 - J1330 - J1411 J1425	J1139 J1222 - J1245 - J1313 - J1331 - J1342 - J1412 - J1426	J1143 J1227 - J1246 - J1314 - J1332 - J1344 - J1413 J1436
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1441 J1442 J1444									
700002	J1104 J1234 J1335 - J1412 J1445	J1109 - J1235 J1339 - J1413 J1447	J1112 J1239 J1341 J1415	J1125 J1304 J1343 - J1418	J1139 J1311 J1346 - J1419	J1144 J1317 J1405 - J1420	J1146 J1320 - J1406 - J1421	J1201 J1328 J1409 J1425	J1222 J1331 - J1410 J1436	J1231 - J1332 - J1411 J1443

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF								
DIAGNOSE STATUS	IOU OFF	CPU OFF								
STOP			CONNECTORS							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1441									
766003	J1108	J1115	J1121	J1125	J1136	J1146	J1202	J1213	J1239	J1246
	J1303	J1317	J1327	J1330	J1341	- J1342	- J1343	J1409	J1413	J1415
	J1417	J1421	J1424	J1431	J1438	- J1439	J1445	- J1446		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1316 J1441									
700011	J1413									
700024	J1204									
737510	J1228									
740228	J1342									
772048	J1411 J1424 - J1425									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1442									
777377	J1110	J115	J1125	J1130						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1248									
777577	J1125									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1248									
777677	J1112	J1115	J1125	J1130						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1248									
777737	J1125									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1248									
777757	J1125									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1248									
777767	J1111	J1125	J1127	- J1128						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1248									

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
000003	31245										
000407	J1317										
001001	J1108	J1318	J1333								
001003	J1107	J1238	- J1239	J1329	J1333	J1335	- J1336				
001007	J1107	J1317	J1328	J1331	J1333						
001017	J1107	J1112	J1114	- J1115	J1118	J1127	- J1128	J31144	J1146	J1205	
	- J1206	- J1207	J1209	J1212	J1215	J1217	- J1218	J1221	- J1222	J1227	
	J1230	- J1231	J1234	J1239	J1302	- J1303	J1317	J1325	J1329	J1333	
	J1335	- J1336	- J1337	- J1338	J1425						
700000	J1107	- J1108	J1112	J1114	J1118	J1120	J1127	- J1128	J1146	J1205	
	- J1206	- J1207	- J1208	- J1209	J1216	J1221	- J1222	J1227	J1234	J1238	
	- J1239	J1244	J1302	J1317	J1325	J1329	J1331	J1333	J1335	- J1336	
	J1338	J1405	J1425								

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP												
000052	J1209											
000770	J1319											
001001	J1237											
001003	J1203											
001017	J1406											
020017	J1111	J1418										
030017	J1146	J1418										
040017	J1418											
050017	J1418											
053777	J1222											
061461	J1218											
188817	J1125	J1244	J1406	J1410	J1413	J1418						
100117	J1343											
101082	J1143											
181017	J1104 J1436	J1140 - J1437	J1143	J1209	J1212	J1227	J1303	J1319	J1348	J1417		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1133											
181022	J1108	J1112										
181023	J1410	- J1411	- J1412	- J1413	J1416							
111111	J1102 J1229 J1310 J1414	J1107 J1240 J1314 J1417	J1129 J1244 J1320 J1419	J1137 - J1245 J1328 J1421	J1139 - J1246 - J1329 J1425	- J1140 J1301 - J1330 J1436	J1202 - J1302 J1339 J1438	J1209 J1304 J1341 J1445	J1217 - J1307 - J1342 J1447	J1224 - J1308 J1407		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1321											
220500	J1331											
700080	J1124	J1216	J1224	J1237	J1348	J1410	- J1411	- J1412	J1416	- J1417		

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS							
DIAGNOSE STATUS	IOU OFF	CPU OFF								
STOP										
70002	J3114	J1405	J1411							
77777	J1211	J1218	- J1219	- J1220	J1239	J1246	- J1247	J1306	J1339	J1348
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1315									

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
000001	J1210 - J1211 J1236 J1241	J1212 - J1213 J1322 J1327	J1215 J1337	J1217 J1344	J1218 J1428	J1221 J1429	J1226	J1229			
000175	J1244										
000633	J1205	J1306 - J1307									
000735	J1434										
000775	J1218										
800777	J1218										
001205	J1312										
001211	J1322										
005203	J1125										
040001	J1432										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1423										
072001	J1332										
177203	J1436										
700001	J1113 J1119 - J1210 J1317 J1337 J1344	J1212 J1215 J1428 J1435	J1217	J1222 - J1223	J1237	J1306					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315 J1423										
708003	J1112 - J1113	J1210 - J1211	J1213	J1219	J1228	J1324 - J1325 - J1326					
700011	J1337	J1342	J1344								
700013	J1233										
700021	J1336										
700041	J1332	J1338									
700043	J1119										
700045	J1119										
700051	J1238										

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS												
DIAGNOSE STATUS		IOU OFF		CPU OFF														
STOP																		
700057	J1332	J1336	J1342															
748001	J1212	J1338																
770501	J1236	J1317																
774501	J1125	J1140	J1208	J1213	J1215	J1221	J1314											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248																	
777003	J1123	J1125	J1139	-	J1140	J1203	J1344	J1406	-	J1407	J1409	-	J1410					
	J1413	-	J1414		J1416	J1419	J1424	J1436		J1443	-	J1445						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1133 J1248																	
777013	J1107	-	J31108	J1111	J1125	J1127	-	J1128	-	J1310	J1313	-	J1314	J1347				
777023	J1107	-	J1108	J1115	J1125													
777033	J1101	1103	J1113	J1246	J1309													
777043	J1103	J1110	J1114	-	J1115	J1117	-	J111B	-	J1119	-	J1120	-	J1121	J1125			
	J1212	J1214	-	J1215	J1217	-	J1218	J1223	-	J1224	-	J1225	-	J1226	J1230			
-	J1231	J1233	-	J1234	J1235	-	J1236	-	J1237	J1310	J1312	J1318	J1318	J1327	J1329			
	J1338	J1344		J1408														
777103	J1112	J1115	J31125															
777143	J1102	J1113	J31115	J1118	J1121	J1130												
777201	J1101	-	J1102	-	J1103	J1106	-	J1107	-	J1108	-	J1109	J1111	-	J1112	-	J1113	
	J1116		J1118	-	J1119	-	J1120	J1125		J1130	J1137	J1140	J1144	J1144	J1201			
-	J1202	-	J1203	-	J1204	-	J1205	J1207	-	J1208	-	J1209	-	J1210	-	J1211	-	J1212
-	J1213	-	J1214	-	J1215	J1217	-	J1218	-	J1219	J1221	-	J1222	J1224	-	J1225		
-	J1226	-	J1227	-	J1228	J1231	-	J1232	-	J1233	-	J1234	J1237	-	J1238	-	J1239	
	J1245	J1301	-	J1302	-	J1303	J1305	-	J1306	-	J1307	-	J1308	-	J1309	J1311		
-	J1312	-	J1313	-	J1314	J1318	J1320	-	J1324	-	J1325	-	J1326	-	J1327	-	J1328	
-	J1329	J1331	-	J1332	-	J1333	J1336	-	J1337	-	J1338	J1342	-	J1343	-	J1344		
	J1405	J1407		J1416	J1426	-	J1427	-	J1428	J1430	J1432	-	J1433	-	J1434			
-	J1435																	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248 J1423																	
777203	J1110	J1117	-	J1118	J1125	J1139	-	J1140	J1203	J1207								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1248																	

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS				
DIAGNOSE STATUS		IOU OFF		CPU OFF						
STOP										
777343	J1102	J1106	J1108	J1113	J1115	- J1116	- J1117	- J1118	- J1119	- J1120
	J1123	J1125	- J1126	J1128	J1204	J1206	J1212	J1214	- J1215	J1217
	- J1218	J1221	- J1222	- J1223	- J1224	- J1225	J1227	- J1228	- J1229	- J1230
	- J1231	- J1232	- J1233	- J1234	- J1235	- J1236	- J1237	- J1238	- J1239	J1241
	J1310	J1312	J1319	- J1320	J1322	- J1323	- J1324	- J1325	- J1326	J1328
	- J1329	- J1330	- J1331	- J1332	- J1333	J1335	- J1336	- J1337	- J1338	J1342
	- J1343	J1405	J1426	J1428	- J1429	- J1430	J1432	J1434	J1445	
777363	J1310									
777403	J1110	J1115	J1125	J1312						
777503	J1106	J1112	J1115	J1130						
777603	J1102	J1113	J1115	J1118	J1130					
777773	J1107	J1112	J1301	J1305	- J1306	13067	- J1308	- J1309	J1314	

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF	CPU OFF	
DIAGNOSE STATUS		IOU OFF	CPU OFF	
STOP				CONNECTORS
000021	J1221			
777201	J1343			

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU OFF
CPU OFF

CONNECTORS

STOP

777201

J1331

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS	
DIAGNOSE STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS	
STOP											
775277	J1108	J1130	J1145	J1146	J1245	J1335	J1418	J1437			
777003	J1139										
777007	J1181	- J1102	- J1103	- J1104	- J1105	- J1106	- J1107	- J1108	- J1109	- J1110	
	- J1111	- J1112	- J1113	- J1114	- J1115	- J1116	- J1117	- J1118	- J1119	- J1120	
	- J1121	J1123	- J1124	- J1125	- J1126	- J1127	- J1128	J1130	J1136	- J1137	
	- J1138	- J1139	- J1140	J1143	- J1144	- J1145	- J1146	J1201	- J1202	- J1203	
	- J1204	- J1205	- J1206	- J1207	- J1208	- J1209	- J1210	- J1211	- J1212	- J1213	
	- J1214	- J1215	- J1216	- J1217	- J1218	- J1219	- J1220	- J1221	- J1222	- J1223	
	- J1224	- J1225	- J1226	- J1227	- J1228	- J1229	- J1230	- J1231	- J1232	- J1233	
	- J1234	- J1235	- J1236	- J1237	- J1238	- J1239	J1241	- J1242	J1244	- J1245	
	- J1246	- J1247	J1301	- J1302	- J1303	- J1304	- J1305	- J1306	- J1307	- J1308	
	- J1309	- J1310	- J1311	- J1312	- J1313	- J1314	J1317	- J1318	- J1319	- J1320	
	J1322	- J1323	- J1324	- J1325	- J1326	- J1327	- J1328	- J1329	J1331	- J1332	
	- J1333	J1335	- J1336	- J1337	- J1338	J1342	- J1343	- J1344	J1346	- J1347	
	- J1348	J1405	- J1406	- J1407	- J1408	- J1409	- J1410	J1412	- J1413	J1416	
	J1418	- J1419	- J1420	- J1421	J1426	- J1427	- J1428	- J1429	- J1430	- J1431	
	- J1432	- J1433	- J1434	- J1435	J1437	- J1438	- J1439	J1443	J1445	- J1446	
	- J1447										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1133	J1315	J1334	J1423							
777017	J1181	- J1102	- J1103	- J1104	- J1105	- J1106	- J1107	- J1108	- J1109	- J1110	
	- J1111	- J1112	- J1113	- J1114	- J1115	- J1116	- J1117	- J1118	J1120	- J1121	
	J1124	- J1127	- J1128	- J1130	J1136	- J1137	- J1138	J1144	- J1145	- J1146	
	J1201	- J1202	- J1203	- J1204	- J1205	- J1206	- J1207	- J1208	J1213	- J1214	
	- J1215	J1222	- J1223	- J1224	J1226	- J1228	- J1229	J1235	J1239	J1241	
	- J1242	- J1243	J1245	- J1246	- J1247	J1301	- J1302	- J1303	- J1304	- J1305	
	- J1306	- J1307	- J1308	- J1309	- J1310	- J1311	- J1312	- J1313	- J1314	J1317	
	- J1318	- J1319	- J1320	J1322	- J1323	- J1324	- J1325	- J1326	- J1327	- J1328	
	- J1329	J1333	J1335	J1337	J1347	- J1348	J1405	- J1406	J1408	J1413	
	J1418	J1420	- J1421	J1426	- J1427	- J1428	- J1429	- J1430	- J1431	- J1432	
	- J1433	- J1434	- J1435	J1439	J1446						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1315	J1423	J1431	J1444							
777037	J1181	- J1102	- J1103	- J1104	J1186	- J1107	J1109	J1113	J1115	- J1116	
	J1136	- J1137	J1202	J1204	J1206	- J1207	- J1208	J1213	J1247	J1305	
	J1308	- J1309	- J1310	- J1311	- J1312	- J1313	- J1314	J1319	- J1320	J1325	
	J1327	J1348	J1413	J1421							
777047	J1108	J1110	- J1111	- J1112	- J1113	- J1114	- J1115	- J1116	- J1117	- J1118	
	- J1119	- J1120	- J1121	J1123	J1125	- J1126	J1128	- J1129	J1137	J1143	
	- J1144	J1204	J1207	J1212	J1215	- J1216	- J1217	- J1218	J1221	- J1222	
	- J1223	- J1224	- J1225	- J1226	- J1227	- J1228	- J1229	- J1230	- J1231	- J1232	
	- J1233	- J1234	- J1235	- J1236	- J1237	- J1238	- J1239	J1244	J1381	- J1382	
	J1307	J1309	- J1310	J1318	J1320	J1323	- J1324	- J1325	- J1326	- J1327	

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
- J1328 - J1329 - J1330 - J1331 - J1332 - J1333	J1335	J1336	J1337	J1338	J1342 - J1343 - J1344	J1348	J1405	J1408	J1411	J1426	J1427	J1428
- J1429 - J1430	J1432	J1433	J1434	J1435	J1445							
777057	J1110 - J1111 - J1112	J1116 - J1117 - J1118	J1120 - J1121	J1123	J1128	J1129 - J1212 - J1229 - J1230	J1215	J1218	J1222 - J1223 - J1224	J1225	J1226	J1228
- J1328 - J1329	J1333	J1428 - J1429 - J1430	J1322	J1324	J1325	J1326	J1317	J1317	J1322	J1324	J1325	J1326
777077	J1130	J1319										
777137	J1117	J1118										
777147	J1102 - J1103	J1107	J1110	J1113	J1116	J1117	J1121	J1222	J1223			
	J1229	J1328	J1333									
777177	J1101 - J1102 - J1103	J1106 - J1107	J1114	J1115	J1116	J1117	J1118	J1119	J1120	J1121	J1122	J1123
J1143 - J1144 - J1145 - J1146	J1203	J1205	J1206	J1207	J1208	J1209	J1210	J1211	J1212	J1213	J1214	J1215
J1212 - J1213 - J1214 - J1215 - J1216	J1217	J1218	J1219	J1220	J1221	J1222	J1223	J1224	J1225	J1226	J1227	J1228
J1244 - J1246 - J1247	J1301	J1302	J1303	J1304	J1305	J1306	J1307	J1308	J1309	J1310	J1311	J1312
- J1312 - J1313 - J1314	J1317	J1319	J1326	J1327	J1328	J1329	J1330	J1331	J1332	J1333	J1334	J1335
J1414 - J1415 - J1416 - J1417	J1436	J1437	J1438	J1439	J1440	J1441	J1442	J1443	J1444	J1445	J1446	J1447
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1315	J1316										
777207	J1206											
777227	J1125	J1310										
777257	J1118	J1302 - J1303 - J1304	J1310	J1313	J1314							
777275	J1145	J1245	J1342									
777347	J1102 - J1103	J1106 - J1107 - J1108	J1116 - J1117 - J1118	J1119 - J1120 - J1121	J1122 - J1123 - J1124	J1125 - J1126 - J1127	J1128 - J1129 - J1130	J1131 - J1132 - J1133	J1134 - J1135 - J1136	J1137 - J1138 - J1139	J1140 - J1141 - J1142	J1143 - J1144 - J1145
- J1115 - J1116 - J1117 - J1118 - J1119	J1120	J1121	J1122	J1123	J1124	J1125	J1126	J1127	J1128	J1129	J1130	J1131
- J1126 - J1127 - J1128 - J1129 - J1130	J1131	J1132	J1133	J1134	J1135	J1136	J1137	J1138	J1139	J1140	J1141	J1142
- J1204 - J1205 - J1206 - J1207 - J1208	J1209	J1210	J1211	J1212	J1213	J1214	J1215	J1216	J1217	J1218	J1219	J1220
- J1221 - J1222 - J1223 - J1224 - J1225	J1226	J1227	J1228	J1229	J1230	J1231	J1232	J1233	J1234	J1235	J1236	J1237
- J1231 - J1232 - J1233 - J1234 - J1235	J1236	J1237	J1238	J1239	J1240	J1241	J1242	J1243	J1244	J1245	J1246	J1247
- J1242 - J1244 - J1246	J1301	J1302	J1303	J1304	J1305	J1306	J1307	J1308	J1309	J1310	J1311	J1312
- J1317 - J1318 - J1319 - J1320	J1322	J1323	J1324	J1325	J1326	J1327	J1328	J1329	J1330	J1331	J1332	J1333
- J1328 - J1329 - J1330 - J1331 - J1332	J1333	J1334	J1335	J1336	J1337	J1338	J1339	J1340	J1341	J1342	J1343	J1344
- J1342 - J1343 - J1344	J1405	J1426	J1427	J1428	J1429	J1430	J1431	J1432	J1433	J1434	J1435	J1436
- J1433 - J1434 - J1435	J1438	J1445										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1133											

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
777357	J1101 - J1102 - J1103	J1105 - J1106 - J1107	J1110 - J1111 - J1112	J1113 - J1114 - J1115	J1116 - J1117 - J1118	J1119 - J1120 - J1121	J1122 - J1123 - J1124	J1125 - J1126 - J1127	J1128 - J1129 - J1130	J1131 - J1132 - J1133	J1134 - J1135 - J1136
	J1115 - J1116 - J1117	J1118 - J1119 - J1120	J1121 - J1122 - J1123	J1124 - J1125 - J1126	J1127 - J1128 - J1129	J1130 - J1131 - J1132	J1133 - J1134 - J1135	J1136 - J1137 - J1138	J1139 - J1140 - J1141	J1142 - J1143 - J1144	J1145 - J1146 - J1147
	J1127 - J1128 - J1129	J1130 - J1131 - J1132	J1133 - J1134 - J1135	J1136 - J1137 - J1138	J1139 - J1140 - J1141	J1142 - J1143 - J1144	J1145 - J1146 - J1147	J1148 - J1149 - J1150	J1151 - J1152 - J1153	J1154 - J1155 - J1156	J1157 - J1158 - J1159
	J1212 - J1215 - J1217	J1221 - J1222 - J1223	J1224 - J1225 - J1226	J1227 - J1228 - J1229	J1230 - J1231 - J1232	J1233 - J1234 - J1235	J1236 - J1237 - J1238	J1239 - J1240 - J1241	J1242 - J1243 - J1244	J1245 - J1246 - J1247	J1248 - J1249 - J1250
	J1229 - J1230 - J1231	J1232 - J1233 - J1234	J1235 - J1236 - J1237	J1238 - J1239 - J1240	J1241 - J1242 - J1243	J1244 - J1245 - J1246	J1247 - J1248 - J1249	J1250 - J1251 - J1252	J1253 - J1254 - J1255	J1256 - J1257 - J1258	J1259 - J1260 - J1261
	J1317 - J1318 - J1322	J1322 - J1323 - J1324	J1324 - J1326 - J1327	J1327 - J1328 - J1333	J1333 - J1334 - J1335	J1336 - J1337 - J1338	J1339 - J1340 - J1341	J1342 - J1343 - J1344	J1345 - J1346 - J1347	J1348 - J1349 - J1350	J1351 - J1352 - J1353
	J1406 - J1408 - J1420	J1420 - J1426 - J1427	J1427 - J1428 - J1429								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1133										
777367	J1115	J1125	J1130	J1137	J1301	J1310					
777377	J1102	J1106 - J1107	J1128	J1130	J1136	J1145	J1202	J1205	J1207		
	J1215	J1217 - J1218	J1222	J1302	J1311	J1313	J1314	J1318			
777607	J1214										
777637	J1101 - J1102	J1113	J1439								
777737	J1118										
777717	J1115										
777737	J1110	J1118									
777747	J1101 - J1102	J1104	J1106 - J1107	J1110 - J1111	J1113	J1115 - J1116					
	J1325										
777757	J1101	J1107 - J1107	J1108	J1115 - J1116	J1214	J1311	J1313				
777767	J1137	J1313 - J1314									
777777	J1101 - J1102 - J1103 - J1104 - J1105 - J1106 - J1107 - J1108 - J1109 - J1110	J1111 - J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120	J1121 - J1122 - J1123 - J1124 - J1125 - J1126 - J1127 - J1128 - J1129 - J1130	J1131 - J1132 - J1133 - J1134 - J1135 - J1136 - J1137 - J1138 - J1139 - J1140	J1141 - J1142 - J1143 - J1144 - J1145 - J1146 - J1147 - J1148 - J1149 - J1150	J1151 - J1152 - J1153 - J1154 - J1155 - J1156 - J1157 - J1158 - J1159 - J1160	J1161 - J1162 - J1163 - J1164 - J1165 - J1166 - J1167 - J1168 - J1169 - J1170	J1171 - J1172 - J1173 - J1174 - J1175 - J1176 - J1177 - J1178 - J1179 - J1180	J1181 - J1182 - J1183 - J1184 - J1185 - J1186 - J1187 - J1188 - J1189 - J1190	J1191 - J1192 - J1193 - J1194 - J1195 - J1196 - J1197 - J1198 - J1199 - J1200	J1201 - J1202 - J1203 - J1204 - J1205 - J1206 - J1207 - J1208 - J1209 - J1210
	J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217 - J1218 - J1219 - J1220	J1221 - J1222 - J1223 - J1224 - J1225 - J1226 - J1227 - J1228 - J1229 - J1230	J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239 - J1240	J1241 - J1242 - J1243 - J1244 - J1245 - J1246 - J1247 - J1248 - J1249 - J1250	J1251 - J1252 - J1253 - J1254 - J1255 - J1256 - J1257 - J1258 - J1259 - J1260	J1261 - J1262 - J1263 - J1264 - J1265 - J1266 - J1267 - J1268 - J1269 - J1270	J1271 - J1272 - J1273 - J1274 - J1275 - J1276 - J1277 - J1278 - J1279 - J1280	J1281 - J1282 - J1283 - J1284 - J1285 - J1286 - J1287 - J1288 - J1289 - J1290	J1291 - J1292 - J1293 - J1294 - J1295 - J1296 - J1297 - J1298 - J1299 - J1300	J1301 - J1302 - J1303 - J1304 - J1305 - J1306 - J1307 - J1308 - J1309 - J1310	J1311 - J1312 - J1313 - J1314 - J1315 - J1316 - J1317 - J1318 - J1319 - J1320
	J1321 - J1322 - J1323 - J1324 - J1325 - J1326 - J1327 - J1328 - J1329 - J1330	J1331 - J1332 - J1333 - J1334 - J1335 - J1336 - J1337 - J1338 - J1339 - J1340	J1341 - J1342 - J1343 - J1344 - J1345 - J1346 - J1347 - J1348 - J1349 - J1350	J1351 - J1352 - J1353 - J1354 - J1355 - J1356 - J1357 - J1358 - J1359 - J1360	J1361 - J1362 - J1363 - J1364 - J1365 - J1366 - J1367 - J1368 - J1369 - J1370	J1371 - J1372 - J1373 - J1374 - J1375 - J1376 - J1377 - J1378 - J1379 - J1380	J1381 - J1382 - J1383 - J1384 - J1385 - J1386 - J1387 - J1388 - J1389 - J1390	J1391 - J1392 - J1393 - J1394 - J1395 - J1396 - J1397 - J1398 - J1399 - J1400	J1401 - J1402 - J1403 - J1404 - J1405 - J1406 - J1407 - J1408 - J1409 - J1410	J1411 - J1412 - J1413 - J1414 - J1415 - J1416 - J1417 - J1418 - J1419 - J1420	J1421 - J1422 - J1423 - J1424 - J1425 - J1426 - J1427 - J1428 - J1429 - J1430
	J1431 - J1432 - J1433 - J1434 - J1435 - J1436 - J1437 - J1438 - J1439 - J1440	J1441 - J1442 - J1443 - J1444 - J1445 - J1446 - J1447 - J1448 - J1449 - J1450									
	J1446 - J1447										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1133	J1248	J1315 - J1316	J1321	J1334	J1422 - J1423	J1441 - J1442				
	J1444										

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU OFF
CPU OFF

STOP

CONNECTORS

77777 J1443

TABLE 2-3. IOU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
000000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1134		
777777	J1331	J1437	

TABLE 2-4. BUFFER UNIT FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF													
DIAGNOSE STATUS	IOU OFF	CPU OFF													
STOP			CONNECTORS												
0808800	J1115 - J1116 - J1117	J1202 - J1203 - J1204	J1211	J1216	J1217	J1218 - J1219 - J1220	J1221 - J1222 - J1223	J1224 - J1225 - J1230	J1237 - J1238 - J1302	J1303 - J1327 - J1328	J1329 - J1330 - J1331	J1332 - J1334 - J1339	J1345 - J1429 - J1430	J1434	J1532
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1335														
000771	J1329														
080776	J1226														
000777	J1221														
001000	J1216	J1322													
001083	J1123	J1125	J1422	J1435	J1534										
001005	J1406														
001006	J1123	J1138	J1212	J1324	J1408	J1414									
001012	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1238														
001057	J1204	J1206	J1214	J1223	J1240	J1316	J1414	J1430							
001062	J1112 - J1113 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1122	J1123 - J1124 - J1125 - J1126 - J1127 - J1129 - J1131 - J1132 - J1134	J1135 - J1136 - J1137 - J1138 - J1140 - J1202 - J1203 - J1205 - J1206	J1214 - J1223 - J1224 - J1315 - J1316 - J1318 - J1321 - J1322 - J1323	J1327 - J1328 - J1329 - J1330 - J1330 - J1331 - J1334 - J1335 - J1336	J1337 - J1338 - J1408 - J1409 - J1413 - J1415 - J1416 - J1420 - J1422	J1423 - J1428 - J1429 - J1430 - J1432 - J1434 - J1436 - J1437 - J1438								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1128 J1332 J1431 J1432														
001200	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1548														
001201	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1548														
001203	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1547 - J1548														
001666	J1112 - J1113 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1122	J1123 - J1124 - J1125 - J1126 - J1127 - J1129 - J1130 - J1131 - J1132	J1134 - J1135 - J1136 - J1137 - J1138 - J1139 - J1140 - J1313 - J1314												

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	- J1315	- J1316	- J1317	- J1318	J1321	- J1322	- J1323	- J1324	J1327	
	- J1328	- J1329	- J1330	J1332	J1334	J1336	- J1337	- J1338	J1406	-
	J1407	- J1408	- J1409	- J1410	- J1411	J1413	- J1414	- J1415	- J1416	
	J1418	J1420	- J1421	- J1422	- J1423	J1425	J1427	- J1428	- J1429	
	- J1430	- J1431	- J1432	J1434	J1436	J1444	J1511			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1128	J1201	J1325	J1335	J1417	J1431	J1435	J1548		
001667	J1112	- J1113	J1115	- J1116	- J1117	- J1118	- J1119	- J1120	J1122	
	J1131	- J1132	J1134	- J1135	- J1136	- J1137	- J1138	- J1139	- J1140	
	J1444									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1128									
001670	J1117	- J1118	J1123	J1132	J1135	J1428	J1431	J1444		
001704	J1124									
002003	J1210	J1229	J1320	- J1321	J1330	- J1331	J1334	J1346	J1486	
	J1446	J1547								
002420	J1126	J1221								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1216									
014002	J1323									
041800	J1227									
041554	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1146									
100010	J1115	- J1116								
100020	J1117									
1080050	J1115	- J1116	J1429	- J1430						
101776	J1220									
111111	J1112	J1118	J1120	J1124	J1126	J1135	J1137	J1202	J1204	
	- J1205	J1208	J1219	J1221	J1223	- J1224	J1226	J1228	J1245	
	J1301	- J1302	- J1303	J1310	- J1311	J1313	- J1314	J1320	J1322	
	- J1323	J1327	J1331	J1334	- J1335	J1338	- J1339	J1406	- J1407	
	J1409	J1413	J1416	J1420	- J1421	J1424	J1428	J1430	J1434	
	J1527	- J1528	- J1529	J1531	J1534	J1537				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1332	J1425	J1446	J1511	J1518					

Change 4 2-142.27

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
114035	J1221	J1225	J1301	J1534							
228560	J1115	J1123	J1202	J1207	J1220	-	J1221	J1302	J1308	J1310	
	J1320	J1343	J1421	J1530	J1534						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1238										
221000	J1137	J1423	J1527								
264550	J1309	J1337									
330030	J1320										
480066	J1120	J1135	J1440								
4160800	J1117	J1218	J1307								
441554	J1320	J1322									
510000	J1117	J1138	J1206	J1210	J1212	J1218	-	J1219	J1224	J1236	
	J1302	-	J1303	J1311	J1342						
681554	J1310										
641554	J1219	J1225	-	J1226	J1535	J1540					
660025	J1113	J1118	J1120	J1131	J1203	-	J1204	-	J1205	J1208	J1215
	J1218	J1222	-	J1223	J1225	-	J1226	J1309	J1313	J1315	J1323
	J1328	-	J1329	-	J1330	J1334	J1466	J1415	J1420	-	31421
	J1430	J1436	J1529								J1422
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1238 J1246										
666230	J1229	J1413	J1424								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1546										
666233	J1415	J1541									
675000	J1230	J1314									
7080666	J1112	-	J1113	J1115	-	J1116	J1118	-	J1119	-	J1120
	-	J1124	-	J1125	-	J1126	-	J1127	J1129	-	J1130
	-	J1136	-	J1137	-	J1138	-	J1139	-	J1140	J1202
	-	J1206	-	J1207	-	J1208	-	J1209	-	J1210	-
	-	J1215	-	J1217	-	J1218	-	J1219	-	J1220	-
	-	J1225	-	J1226	-	J1227	-	J1228	-	J1229	-
											J1211
											J1212
											J1213
											J1214
											J1215
											J1216
											J1217
											J1218
											J1219
											J1220
											J1221
											J1222
											J1223
											J1224
											J1225
											J1226
											J1227
											J1228
											J1229
											J1230
											J1231
											J1232
											J1233

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP									
- J1234	- J1235	- J1236	- J1237	J1239	- J1240	- J1241	- J1242	- J1243	
- J1244	J1301	- J1302	- J1303	J1306	- J1307	- J1308	- J1309	- J1310	
- J1311	J1313	- J1314	- J1315	- J1316	- J1317	J1320	- J1321	- J1322	
- J1323	- J1324	J1327	- J1328	- J1329	- J1330	- J1331	J1334	- J1335	
- J1336	- J1337	- J1338	- J1339	- J1340	- J1341	- J1342	J1344	- J1345	
J1406	- J1407	- J1408	- J1409	- J1410	- J1411	- J1412	- J1413	- J1414	- J1415
- J1417	J1420	- J1421	- J1422	- J1423	- J1424	J1427	- J1428	- J1429	
- J1430	J1434	- J1435	- J1436	J1438	- J1439	- J1440	J1442	J1444	
- J1527	- J1528	- J1529	- J1530	- J1531	J1534	- J1535	J1537	- J1538	
- J1539	- J1540	J1543	J1545						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
J1128	J1143	- J1144	J1216	J1238	J1246	J1318	J1332	J1346	
J1411	J1418	J1425	J1432	J1446	J1511	J1518	J1525	J1532	
J1546	- J1547	- J1548							
700001	J1406								
700002	J1112	- J1113	J1115	- J1116	- J1117	- J1118	- J1119	J1122	J1124
- J1125	- J1126	J1131	- J1135	- J1136	- J1137	- J1138	- J1139	- J1140	J1202
- J1203	- J1204	- J1205	- J1206	- J1207	- J1208	- J1209	- J1210	- J1211	
- J1212	- J1213	- J1214	- J1215	J1217	- J1218	J1220	- J1221	- J1222	
- J1223	- J1224	- J1225	- J1226	- J1227	- J1228	- J1229	- J1230	- J1231	
- J1232	- J1233	- J1234	- J1235	- J1236	J1241	J1244	- J1245	J1301	
- J1302	- J1303	J1306	- J1307	- J1308	- J1309	- J1310	- J1311	J1313	
- J1314	J1316	- J1317	J1320	- J1321	- J1322	- J1323	- J1324	J1327	
J1329	J1331	J1334	J1339	J1342	- J1343	- J1344	J1406	- J1407	
- J1408	- J1409	- J1410	J1413	- J1414	- J1415	J1417	J1420	- J1421	
- J1423	- J1424	J1428	- J1429	- J1430	J1435	J1444	J1528	- J1529	
- J1530	- J1531	J1535	- J1536	- J1537	- J1538	- J1539	J1541	J1545	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
J1145	J1201	J1216	J1238	J1246	J1318	J1332	J1446	J1511	
J1546	- J1547								
700003	J1112	J1115	- J1116	J1118	- J1119	- J1120	J1122	- J1123	J1125
- J1126	- J1127	J1129	- J1130	- J1131	- J1132	J1135	- J1136	- J1137	J1139
- J1140	J1202	- J1203	- J1204	J1206	- J1207	- J1208	- J1209	- J1211	
- J1212	- J1213	- J1214	J1218	- J1219	- J1220	- J1221	- J1222	- J1224	
J1227	- J1228	J1230	J1232	J1235	- J1236	- J1237	J1243	J1301	
- J1302	- J1303	J1306	J1309	- J1310	- J1311	J1313	- J1314	- J1315	
- J1316	- J1317	J1321	J1323	- J1324	J1327	- J1328	J1330	- J1334	
J1406	- J1407	- J1408	- J1409	J1413	- J1414	- J1415	- J1416	- J1417	
J1420	- J1421	- J1422	J1424	J1427	- J1428	- J1429	- J1430	- J1431	
J1432	J1434	- J1435	J1439	J1445	J1527	J1529	J1531	J1534	
J1537	J1539	- J1540							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
J1145	J1216	J1246	J1318	J1325	J1346	J1411	J1418	J1431	
- J1432	J1446	J1511	J1518	J1525	J1546				

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF	CPU OFF	
DIAGNOSE STATUS		IOU OFF	CPU OFF	
STOP				CONNECTORS
700433	J1423			
775208	J1334	J1434	J1534	

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS									
DIAGNOSE STATUS	IOU OFF	CPU OFF										
STOP												
000000	J1112	J1116										
080003	J1210											
000004	J1112 - J1113	J1115 - J1116	J1117 - J1118	J1119 - J1120	J1122 - J1123	J1124 - J1125	J1126 - J1127	J1128 - J1129	J1130 - J1131	J1132 - J1133	J1134 - J1135	J1136 - J1137
	- J1124 - J31125	- J1126 - J1129	- J1130 - J1131	- J1132 - J1133	- J1134 - J1135	- J1136 - J1137	- J1138 - J1139	- J1140 - J1427	- J1140 - J1427	- J1140 - J1427	- J1140 - J1427	- J1140 - J1427
	- J1137 - J1138	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140	- J1139 - J1140
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J31128	J1201	J1431									
000005	J1123	J1131	J1137									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1548											
000006	J1113	J1118 - J1119	J1120	J1123	J1129	J1131	J1135 - J1136	J1137				
	- J1138 - J1139	- J1140 - J1140	- J1142	- J1427	- J1430	- J1432						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1143	J1144	J1431									
000007	J1129	J1131	J1134									
i000010	J1117	J1123 - J1124	J1125	J1127	J1130 - J1131	J1132	J1134	J1136				
	- J1137											
000011	J1112 - J1113	J1117 - J1118	J1119 - J1120	J1122 - J1123	J1124 - J1125	J1126 - J1127	J1128 - J1129	J1130 - J1131	J1132 - J1133	J1134 - J1135	J1136 - J1137	J1138 - J1139
	- J1126 - J1127	- J1129 - J1130	- J1131 - J1132	- J1134 - J1135	- J1136 - J1137	- J1138 - J1139	- J1140 - J1140	- J1240 - J1313	- J1320 - J1323	- J1327 - J1330	- J1406 - J1406	- J1413 - J1413
	- J1138 - J1139	- J1140 - J1140	- J1240 - J1240	- J1313 - J1313	- J1320 - J1320	- J1327 - J1327	- J1330 - J1330	- J1406 - J1406	- J1413 - J1413	- J1413 - J1413	- J1413 - J1413	- J1413 - J1413
	J1413	J1420	J1427	J1430	J1511							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1128	J1145	J1431									
000012	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1548											
000014	J1130	J1132	J1134	J1406								
000016	J1120											
000033	J1313	J1280	J1327 - J1328	J1330 - J1331	J1342	J1345	J1406	J1413				
	J1420	J1427	J1511									
00152	J1137											
080350	J1331											
000754	J1229											

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS							
DIAGNOSE STATUS	IOU OFF	CPU OFF								
STOP										
000775	J1410									
001000	J1209									
001500	J1117									
002100	J1327	J1328 - J1329 - J1330 - J1331 - J1332	J1334	J1348	J1342					
002420	J1202	J1301	J1315	J1328 - J1329 - J1330 - J1331 - J1332	J1334					
	J1341	J1342 - J1343 - J1344								
004420	J1112	J1113	J1119 - J1120	J1124	J1125	J1127	J1129	J1138		
	J1131	J1136	J1139 - J1140	J1203	J1432					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1144	J1431								
010033	J1327	J1331								
012100	J1329	J1330 - J1331	J1334	J1345						
022100	J1332									
032100	J1332									
040033	J1330	J1331	J1343							
041000	J1320									
041500	J1140									
042100	J1332									
052100	J1332									
060633	J1330	J1331	J1344							
062100	J1332									
070033	J1330	J1331	J1344							
072100	J1332									
074100	J1115	J1117	J1124 - J1125 - J1126	J1129	J1131	J1132	J1138	J1328		
	J1413	J1420	J1511							
111011	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1548									
111101	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1548									

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
111111	J1112		SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:							
	J1446	J1546								
111573	J1204									
165500	J1126	J1135	J1309							
220580	J1117	- J1118	J1126	J1132	J1204	- J1205	- J1206	J1212	J1217	
	J1221	J1224	J1227	J1308	J1311	J1314	J1324	J1413	J1421	
	J1527									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1318	J1532								
220501	J1125									
221000	J1115									
264550	J1221									
314000	J1135									
400000	J1117	J1135	J1138	- J1139	J1205	J1327				
501700	J1113	J1227								
5108800	J1118	- J1119	- J1120	J1129	J1138	J1203	J1207	J1209	J1212	
	- J1213	J1217	- J1218	J1221	J1223	- J1224	- J1225	J1233	J1307	
510004	J1112	- J1113	J1115	- J1116	- J1117	- J1318	- J1119	- J1120	J1122	
	- J1123	- J1124	- J1125	- J1126	J1129	- J1130	- J1131	J1134	- J1135	
	- J1136	- J1137	- J1138	- J1139	- J1140					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1128	J1201	J1216							
510005	J1123	J1131	J1137							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1548									
510006	J1113	J1118	- J1119	- J1120	J1123	J1129	- J1130	- J1131	J1135	
	- J1136	- J1137	- J1138	- J1139	- J1140	J1427	J1430	- J1431		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1142	- J1143	- J1144							

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS							
DIAGNOSE STATUS	IOU OFF	CPU OFF								
STOP										
516807	J1129 - J1138	J1131	J1134							
51008818	J1117 - J1135	J1123 - J1137	J1124 - J1125	J1127	J1130	J1131	J1132	J1134	J1135	J1136
51008811	J1113 - J1126 - J1137	J1117 - J1127 - J1138	J1118 - J1129 - J1139	J1119 - J1130 - J1140	J1120 - J1131 - J1427	J1122 - J1132 - J1431	J1123 - J1134	J1124 - J1135	J1125 - J1136	J1137
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1128	J1145								
51008812	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1548									
510013	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1144									
510014	J1134									
510026	J1125	J1444								
518021	J1120 - J1220 - J1229 - J1239 - J1383 - J1329 - J1344	J1202 - J1221 - J1230 - J1240 - J1306 - J1338 - J1345	J1203 - J1212 - J1222 - J1231 - J1241 - J1307 - J1331	J1204 - J1213 - J1223 - J1232 - J1242 - J1388 - J1334	J1205 - J1214 - J1224 - J1233 - J1243 - J1309 - J1335	J1206 - J1215 - J1225 - J1234 - J1244 - J1310 - J1340	J1207 - J1217 - J1226 - J1235 - J1245 - J1311 - J1341	J1208 - J1218 - J1227 - J1236 - J1245 - J1301 - J1327 - J1342	J1209 - J1219 - J1228 - J1237 - J1382 - J1328 - J1343	J1289 - J1219 - J1228 - J1237 - J1382 - J1328 - J1343
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1128	J1281	J1216	J1238	J1246	J1318	J1325	J1332	J1346	
510033	J1313 - J1344	J1326 - J1406	J1323 - J1413	J1327 - J1428	J1328 - J1427	J1330 - J1436	J1331	J1342	J1343	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1216	J1511								
510050	J1331									
640068	J1116	J1119	J1136	J1210	J1220					
641554	J1118	J1242								
660025	J1116	J1283								
666236	J1434									

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF										
DIAGNOSE STATUS	IOU OFF	CPU OFF										
STOP												CONNECTORS
675800	J1310											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1525											
700000	J1115	- J1116	- J1117	- J1118	- J1119	- J1120	J1122	- J1123	- J1124			
	- J1125	- J1126	- J1127	J1129	- J1130	- J1131	- J1132	J1134	- J1135			
	- J1136	- J1137	- J1138	- J1139	- J31140	J1202	- J1203	- J1204	- J1205			
	- J1206	- J1207	J1289	- J1210	J1213	- J1214	- J1215	J1218	J1221			
	- J1222	- J1223	- J1224	- J1225	- J1226	- J1227	- J1228	J1232	J1237			
	J1245	J1301	- J1302	J1306	J1308	J1311	J1313	J1315	- J1316			
	- J1317	J1320	J1322	J1327	- J1328	- J1329	- J1330	J1334	J1338			
	J1340	J1343	J1345	J1406	J1408	- J1409	- J1410	J1414	- J1415			
	- J1416	J1428	J1422	- J1423	J1428	- J1429	- J143-	J1527	- J1528			
	- J1529	- J1530	- J1531	J1534	J1543							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1128	J1144	J1246	J1332	J1346	J1425	J1446	J1525				
700002	J1113	J1116	- J1117	- J1118	- J1119	- J1120	J1122	- J1123	- J31124			
	- J1125	- J1126	- J1127	J1129	- J1130	- J1131	- J1132	J1136	- J1137			
	- J1138	- J1139	- J1140	J1202	- J1203	- J1204	- J1205	- J1206	J1208			
	- J1209	- J1218	- J1211	J1214	- J1215	J1217	- J1218	- J1219	- J1220			
	- J1221	- J1222	- J1223	- J1224	- J1225	- J1226	- J1227	J1229	J1232			
	J1237	J1303	J1308	J1310	J1313	J1322	J1330	J1429	J1538			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1346	J1418	J1446	J1532								
700003	J1113	J1116	- J1117	J1125	- J1126	- J1127	J1130	J1132	J1138			
	- J1139	- J1140	J1204	- J1205	J1208	- J1209	- J1210	J1214	J1218			
	J1229	J1235	J1303	J1306	J1341	J1409	J1416	- J1417	J1422			
	J1531											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1281											
700011	J1117	J1127										
740220	J1203	J1205										
770503	J1205											
772040	J1216	J1323	J1430									
7745880	J1140											
777377	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1548											

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
777577	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1548		
777677	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1548		
777737	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1548		
777757	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1548		
777767	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1548		

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF					
DIAGNOSE STATUS	IOU OFF	CPU OFF					
STOP							CONNECTORS
001017	J1130	J1135 - J1136	J1138	-	J1139	J1444	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1431						
700000	J1135	- J1136	J1138	-	J1139	J1542	

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS			IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP													
000017	J1223	J1225											
010017	J1210	J1212	J1332										
011022	J1331												
100117	J1206	J1226											
100322	J1327												
100601	J1236												
100617	J1232												
100717	J1309												
101001	J1207 - J1236	J1208 - J1237	J1209 - J1310	J1210 - J1211	J1212 - J1213	J1217 - J1218	J1221	J1232	J1311	J1221			
101002	J1206 - J1234	J1207 - J1235	J1208 - J1310	J1210 - J1211	J1212 - J1213	J1217 - J1218	J1221	J1232	J1311	J1221			
101004	J1207	J1209 - J1210	J1211 - J1212	J1217	J1221	J1232	J1311						
101007	J1213												
101010	J1206 - J1231	J1207 - J1311	J1208 - J1209	J1210 - J1211	J1212 - J1213	J1217 - J1218	J1230						
101016	J1210	J1213 - J1214											
101017	J1120 - J1211 - J1221 - J1231 - J1241 - J1308 - J1334	J1202 - J1212 - J1222 - J1232 - J1242 - J1309	J1203 - J1213 - J1223 - J1233 - J1243 - J1310	J1204 - J1214 - J1224 - J1234 - J1244 - J1311	J1205 - J1215 - J1225 - J1235 - J1245 - J1318	J1206 - J1216 - J1226 - J1236 - J1237 - J1327	J1207 - J1217 - J1227 - J1237 - J1302 - J1328	J1208 - J1218 - J1228 - J1238 - J1303 - J1329	J1209 - J1219 - J1229 - J1239 - J1306 - J1330	J1210 - J1220 - J1230 - J1240 - J1307 - J1331			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1128	J1201	J1325	J1335									
101022	J1330	J1331	J1341										
111111	J1115 - J1202 - J1243 - J1322	J1116 - J1207 - J1301 - J1323	J1119 - J1208 - J1302 - J1324	J1122 - J1210 - J1307 - J1330	J1123 - J1214 - J1307 - J1407	J1127 - J1220 - J1309 - J1408	J1130 - J1221 - J1313 - J1410	J1137 - J1224 - J1316 - J1413	J1140 - J1226 - J1317 - J1415				

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP			J1421 - J1422 - J1423	J1430	J1528 - J1529	J1530 - J1531	J1535		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1246	J1325	J1546						
113224	J1211								
147777	J1116								
2000800	J1124								
220500	J1203	J1212							
480000	J1329								
510000	J1205 J1334	J1208 - J1209	J1215	J1218	J1220	J1223	J1233	J1239	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1201								
510021	J1239								
510550	J1202								
511224	J1213	J1219	J1238	J1382 - J1303					
511225	J1227								
788000	J1122 J1308	J1124 J1327	J1202 J1330	J1206 - J1331	J1209 J1341	J1213 J1416	J1223	J1233	J1381
700002	J1284 - J1205	J1343							

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
005203	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1548		
777003	J1323	J1417	
777201	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1548		

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF	CPU OFF	
DIAGNOSE STATUS		IOU OFF	CPU OFF	
STOP				CONNECTORS
000000	J1409			
001062	J1409			
001666	J1489			

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
77777	J1409		

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF								
DIAGNOSE STATUS	IOU OFF	CPU OFF								
STOP			CONNECTORS							
777007	J1122 - J1123 - J1124	J1126 - J1127	J1129	J1221	J1313	J1320				
	J1327 J1334 J1406	J1413 J1420	J1427	J1428	J1435	J1441				
	J1444 - J1445 - J1446	J1511								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1128	J1431	J1446							
777017	J1112	J1115	J1119	J1122	J1126	J1129	J1131	J1137	J1140	
	J1316	J1408	J1429 - J1430	J1434						
777037	J1429	J1431	J1434	J1445						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1431									
777177	J1316	J1323	J1330	J1409	J1416	J1423	J1427	J1428	J1429	J1430
-	J1431	J1434 - J1435	J1441 - J1442	J1442	J1511	J1530				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1431	J1511								
777777	J1112 - J1113	J1115	J1116 - J1117	J1118 - J1119	J1120	J1122				
-	J1123 - J1124	J1125 - J1126	J1127	J1129 - J1130	J1131 - J1132					
	J1134 - J1135	J1136 - J1137	J1138 - J1139	J1140	J1313 - J1314					
-	J1315 - J1316	J1317 - J1318	J1320 - J1321	J1322 - J1323	J1324					
	J1327 - J1328	J1329 - J1330	J1331 - J1332	J1334	J1336 - J1337					
-	J1338	J1406 - J1407	J1408 - J1409	J1410 - J1411	J1413 - J1414					
-	J1415 - J1416	J1417 - J1418	J1420 - J1421	J1422 - J1423	J1424					
-	J1425	J1427 - J1428	J1429 - J1430	J1331 - J1432	J1434 - J1435					
-	J1436 - J1437	J1438 - J1439	J1440 - J1441	J1442 - J1443	J1444					
-	J1445 - J1446	J1511	J1525	J1527 - J1528	J1529 - J1530	J1531				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1128	J1318	J1325	J1332	J1335	J1411	J1417	J1418	J1425	
	J1431	J1432	J1435	J1511	J1532	J1548				

TABLE 2-4. BUFFER UNIT FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
777777	J1308		

TABLE 2-5. MEMORY 0 FAULT LOCATION

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU OFF
CPU OFF

STOP

CONNECTORS

* CAUTION *

CMOS MEMORIES CONTAIN ELECTROSTATIC SENSITIVE DEVICES REQUIRING SPECIAL HANDLING TO AVOID ELECTROSTATIC DISCHARGE DAMAGE. WHEN REMOVING AND REPLACING MEMORY CARDS J1229 THROUGH J1239 OBSERVE THE FOLLOWING PRECAUTIONS:

- A. IMMEDIATELY PRIOR TO HANDLING WITHIN THE SHELTER, MAKE PHYSICAL CONTACT WITH A GROUNDED SURFACE TO DISCHARGE ANY POSSIBLE BUILD-UP OF STATIC ELECTRICITY.
- B. PACKAGE THE MEMORY STORAGE CARDS TN ELECTROSTATIC BAGS PRIOR TO REMOVING FROM THE SHELTER.

NOTE:

PRIOR TO IN-SYSTEM MTS CARD TESTING, SET ADP PANEL SWITCHES AS FOLLOWS:

- UPPER CPU POWER OFF
- LOWER CPU POWER OFF
- IOU POWER OFF
- ADP POWER OFF
- SUSPECT MEMORY SELECT..... OFF LINE

TABLE 2-5. MEMORY 0 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS

CAUTION:

A LIST OF NON-TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES".

CONNECTOR	TYPE	PART NUMBER
J1103	AC INTERFACE	149503
J1104	AC INTERFACE	149503
J1185	DC INTERFACE	149504
J118G	DC INTERFACE	149504
J1187	DC INTERFACE	149504
J1108	DC INTERFACE	149504
J1109	DC INTERFACE	149504
J1126	1 K OHM RESISTOR	587118
J1127	BACKUP CONTROL	13143913
J1204	DC INTERFACE	149504
J1205	DC INTERFACE	149504
J1206	DC INTERFACE	149584
J1207	DC INTERFACE	149504
J1208	DC INTERFACE	149504
J1212	240 OHM RESISTOR	587119
J1228	TIMING AND CONTROL	13143778
J1229	CMOS STORAGE	13143777
J1230	CMOS STORAGE	13143777
J1231	CMOS STORAGE	13143777
J1232	CMOS STORAGE	13143777
J1233	CMOS STORAGE	13143777
J1234	CMOS STORAGE	13143777
J1235	CMOS STORAGE	13143777
J1236	CMOS STORAGE	13143777
J1237	CMOS STORAGE	13143777
J1238	CMOS STORAGE	13143777
J1239	CMOS STORAGE	13143777

NOTE:

IF THE UPPER CPU IS PRIME AND THE FAULT IS NOT ISOLATED BY TESTING OR SUBSTITUTING THE CARD ASSEMBLIES ASSOCIATED WITH THE ERROR CODES LISTED BELOW, THEN:

- A. TEST J1112
- B. SUBSTITUTE J1107 - J11BE - J1109

TABLE 2-5. MEMORY 0 FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF							
DIAGNOSE STATUS	IOU OFF	CPU OFF							
STOP									CONNECTORS
000000	A, TEST THE DIGITAL CARDS LISTED BELOW								
	J1121	J1217	-	J1218	-	J1219	-	J1220	- J1221 - J1222
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1232								
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1107	J1206		J1212					
000001	A. TEST THE DIGITAL CARDS LISTED BELOW								
	J1210								
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1229	-	J1230		J1233		J1238		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1205								
000002	A. TEST THE DIGITAL CARDS LISTED BELOW								
	J1210		J1216						
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1233								
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1205								
000003	A. TEST THE DIGITAL CARDS LISTED BELOW								
	J1110	J1112		J1209		J1211		J1215	
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1229	-	J1230		J1233	-	J1234	-	J1235 - J1236 - J1237 - J1238
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1105	-	J1106		J1109		J1204	-	J1205 J1208 J1212
000004	A. TEST THE DIGITAL CARDS LISTED BELOW								
	J1110		J1209						
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1233		J1235						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1105	-	J1106		J1108	-	J1109	J1204	- J1205 J1207 - J1208

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
000005	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230 - J1231		
41106	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW		
000006	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1238		
000010	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
000015	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239		
000016	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236 B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1205 J1208		
000017	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236 B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1205 J1208		
000023	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234 C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1205		
000024	J1110 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
000025	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1114		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234		
	C. SUBSTITUTE THE CARD ASSEMBLIES-LISTED BELOW J1105 J1108 J1204 J1207		
000027	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1114		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1233		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 J1207		
000031	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204		
000032	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1113 J1210		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1232		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207		
000035	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1113		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J31231		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 J1207		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
000040	A. TEST THE DIGITAL CARDS LISTED BELOW J1110		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 J1207		
000044	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229		
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1204		
000045	A. TEST THE DIGITAL CARDS LISTED BELOW J1210		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230 - J1231 J1236 - J1237 - J1238		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1204 - J1205 J1208		
000051	A. TEST THE DIGITAL CARDS LISTED BELOW J1121		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234		
000053	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204		
000055	J1222 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1232		
000061	J1222		
000100	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
000105	J1115		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
000106	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236					
000113	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228					
000132	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 J1230 - J1231 - J1232					
000133	J1117	J1119	J1121	J1209	- J1210	J1214 - J1215 - 31216 J1218
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204 - J1205 - J1206					
000134	J1114	J1209	- J1210	J1214	J1216	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204 - J1205					
000135	J1218					
000143	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1238					
000176	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236					
000325	J1120					
000367	J1210					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206					
000407	J1209					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205					
000565	J1219					
000665	J1311					
000772	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229					
001003	J1117	J1119	- J1120	- J1121	J1214	J1218 - J1219 - J1220 - J1221
	- J1222					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1107 J1206					

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
001006	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206		
001040	A. TEST THE DIGITAL CARDS LISTED BELOW J1111 - J1112 J1210 - J1211 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239 C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1206 J1212		
001050	J1111 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107		
001051	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1237		
001054	J1222		
001111	J1120		
001113	J1117		
001164	J1115		
001200	J1117		
001205	J1116 J1216 - J1217 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1104		
001206	J1214		
001207	J1110 J1216 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1126		
001210	J1113 - J1114 J1119 J1210 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1105		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF				
STOP	CONNECTORS					
001212	A. TEST THE DIGITAL CARDS-LISTED BELOW					
	J1118	- J1119	J1210			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1228					
001214	J1121	J1217				
001215	J1117	J1119				
001256	J1118	- J1119	J1209	J1217	J1219	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1104	- J1105	J1126			
001257	J1111	J1116	J1119	J1209	- J1210	J1216
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1106					
001262	J1221					
001272	J1111					
001666	J1110	- J1111	J1113	J1119	J1221	
001667	A. TEST THE DIGITAL CARDS LISTED BELOW					
	J1111	J1116				
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1236					
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW					
	J1106					
001670	A. TEST THE DIGITAL CARDS LISTED BELOW					
	J1110	- J1111	J1114	J1117	J1209	J1215 J1218
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1229	- J1230	J1234	J1237	- J1238	- J1239
001707	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1229					
003000	A. TEST THE DIGITAL CARDS LISTED BELOW					
	J1117	- J1119	J1120	- J1121	J1214	J1218 J1220 - J1221
	B. SUBSTITUTE THE FOLLOWING ASSEMBLIES:					
	J1127					
	BACKUP CONTROL BT1					

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF		
DIAGNOSE STATUS	IOU OFF	CPU OFF		
STOP			CONNECTORS	
003010	A. TEST THE DIGITAL CARDS LISTED BELOW			
	J1111	- J1112 - J1113	J1120	- J1121 J1210 J1222
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1127			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW			
	J1103	- J1104 J1107	J1126	
003020	J1117	J1120		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1126			
003046	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1230			
011146	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1205			
012030	J1114	J1215		
041500	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1206			
041554	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1230			
046171	J1110			
046362	J1112	J1209		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1212			
061542	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1204			
061664	J1211			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1105			
074763	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1105			
076750	J1110			

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
100000	J1222					
100010	A. TEST THE DIGITAL CARDS LISTED BELOW J1222					
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239					
100020	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 J1238					
100030	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1237					
100040	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236					
100050	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 J1234 - J1235 - J1236 - J1237 - J1238 - J1239					
100060	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234					
100070	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 J1233					
10000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1232					
100110	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1231					
100120	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230					
100130	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 - J1232 - J1233					
100150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239					
110000	J1110	J1115 - J1116	J1118	J1216	J1219	
111111	J1114	J1117	J1120 - J1121	J1210	J1217	J1219 - J1220 - J1221
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1103 J1107 J1126					

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF					CONNECTORS											
STOP																		
120000	J1116	J1118	J1211	J1215	-	J1216												
220500	J1121																	
400150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239																	
600100	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1235																	
601554	J1214																	
603020	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228																	
641554	J1214																	
660025	J1112	J1217																
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108																	
700000	J1110	-	J1111	-	J1112	-	J1113	-	J1114	-	J1115	-	J1116	-	J1117	-	J1118	
	-	J1119	-	J1120	-	J1121	-	J1210	-	J1211	-	J1214	-	J1217	-	J1218	-	J1219
	-	J1220	-	J1221	-	J1222												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIESS																	
	J1103	-	J1104	-	J1107	-	J1108	-	J1109	-	J1126	-	J1206	-	J1207	-	J1208	
	J1212																	
700001	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1231 J1239																	
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1204																	
700002	A. TEST THE DIGITAL CARDS LISTED BELOW																	
	J1112	-	J1113	-	J1115	-	J1116	-	J1117	-	J1118	-	J1121	-	J1210	-	J1214	
	J1216	-	J1218	-	J1219	-	J1220	-	J1221	-	J1222							
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229																	
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW																	
	J1103	-	J1108	-	J1126	-	J1208											

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
STOP	CONNECTORS		
700003	A. TEST THE DIGITAL CARDS LISTED BELOW		
	J1110 - J1111 - J1112 - J1113 - J1114 - J1115	J1116 - J1119	
	- J1120 - J1209 - J1210 - J1211 - J1214 - J1215	- J1216 - J1217 - J1218	
	- J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1228 - J1229 - J1230 - J1231 - J1232 - J1233	- J1234 - J1235 - J1236	
	- J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW		
	J1104 - J1105 - J1106 - J1107 - J1108 - J1109	J1126 - J1206 - J1208	
700004	J1113 - J1119		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1126		
700021	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1234 - J1235		
700040	J1209		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1205		
700046	J1222		
700060	J1209		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1205		
700070	J1209		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1205		
700074	J1209		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1205		
700076	J1210		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1205		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
700100	A. TEST THE DIGITAL CARDS LISTED BELOW J1210 J1218 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1233 J1238 C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1205		
700110	J1111 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106		
774502	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1232		
777007	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236		

Change 3 2-157

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU ON	CONNECTORS			
STOP						
000775	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1109					
001003	J1217					
003046	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
J1230						
125500	J1119					
165500	J1112	J1121	J1211	J1217	J1222	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1108					
220500	J1119	J1216				
241700	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206					
400000	J1111	J1113	J1115	J1220		
510000	J1110	J1117	J1211	J1215	J1221	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208					
510004	J1220					
510010	J1111					
510020	J1219					
510021	J1110	J1114	J1116	- J1117	- J1118	J1210 - J1211 J1214 - J1215
	- J1216	- J1217	- J1218	J1221		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1103	- J1104	J1206	- J1207	- J1208	
640000	J1114					
641554	J1118					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1108					
666230	J1216					

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF							
DIAGNOSE STATUS	IOU OFF	CPU ON							
STOP								CONNECTORS	
675000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1107	J1208							
700000	J1111	- J1112	J1114	- J1115	- J1116	- J1117	J1119	- J1120	- J1121
	J1209	- J1210	- J1211	J1214	- J1215	- J1216	- J1217	- J1218	- J1219
	- J1220	- J1221	- J1222						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1103	- J1104	J1109	J1207	- J1208				
700002	J1111	- J1112	- J1113	- J1114	- J1115	- J1116	J1119	- J1120	- J1121
	J1210	- J1211	J1214	- J1215	- J1216	- J1217	- J1218	J1220	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1103	- J1104	J1107	- J1108	- J1109	J1126	J1206	- J1207	
700003	J1112	J1119	J1121	J1210	J1214	J1216	- J1217	J1221	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1107	- J1108	- J109	J1206	- J1207				
774500	J1119	J1121							
774573	J1211								

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF	CPU OFF	CONNECTORS
	IOU ON	CPU OFF	
STOP			
003046	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230		
700000	J1114 - J1115		
700002	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1104		

Change 3 2-160

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS		
STOP					
111111	J1112	J1210	J1215	J1216	J1220
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1108	J1126	J1206	J1208	
220500	J1116				
510000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1207				
511224	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1104				
700000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1218				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208				
700003	J1113				

Change 3 2-161

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS
STOP			
000001	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1113 J1121 J1210 J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 J1233 - J1234 - J1235 - J1236 - J1237 - J1238		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 - J1106 J1108 - J1109 J1204 - J1205 J1207 - J1208		
000003	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239		
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1204		
000005	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
000011	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239		
000103	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1238		
000105	J1209 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
000603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204 - J1205		
000765	J1209 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
000775	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1237		
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1205		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS
STOP			
002051	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236		
100771	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
175203 600041	J1116	J1118 J1215 - J1216	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1235		
700001	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 J1209 - J1210 - J1211 J1216 J1220		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1231 J1234 J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1204 - J1205 J1208 J1212		
700002	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234		
700021	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1234 J1235		
700077	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1210		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
701100	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1237		
740001	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1235		
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1205		
774501	A. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 J1232 - J1233 J1236		
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1204		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU ON	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
774502	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1232		
774513	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1232		
777003	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$		
	J1109		
777201	A. TEST THE DIGITAL CARDS LISTED BELOW		
	J1110 - J1111 - J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118		
	- J1119 - J1120 - J1121 - J1209 - J1210 - J1211 - J1214 - J1215 - J1216		
	- J1217 - J1218 - J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1229 - J1230 - J1231 - J1233 - J1235 - J1236 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW		
	J1103 - J1104 - J1105 - J1106 - J1107 - J1108 - J1126 - J1204 - J1205		
	- J1206 - J1207 - J1212		

Change 3 2-164

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS
STOP			
000044	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229		
000055	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1232		
000132	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228		
777007	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 - J1113 J1115 - J1116 J1117 - J1118 - J1119 - J1120 - J1121 J1209 - J1210 - J1211 J1214 J1216 - J1217 - J1218 - J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 - J1105 - J1106 - J1107 - J1108 - J1109 J1126 J1204 - J1205 - J1206 - J1207 - J1208 J1212		
777017	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1113 - J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1121 J1210 - J1211 J1214 - J1215 - J1216 - J1217 - J1218 - J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 - J1105 J1107 J1126 J1206 J1212		
777201	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		

TABLE 2-5. MEMORY 0 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU ON
IOU ON

CPU ON
CPU ON

STOP

CONNECTORS

777777 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1127 - J1228

Change 3 2-166

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS

CAUTION

CMOS MEMORIES CONTAIN ELECTROSTATIC SENSITIVE DEVICES REQUIRING SPECIAL HANDLING TO AVOID ELECTROSTATIC DISCHARGE DAMAGE. WHEN REMOVING AND REPLACING MEMORY CARRS J1229 THROUGH J1239 OBSERVE THE FOLLOWING PRECAUTIONS:

- A. IMMEDIATELY PRIOR TO HANDLING WITHIN THE SHELTER, MAKE PHYSICAL CONTACT WITH A GROUNDED SURFACE TO DISCHARGE ANY POSSIBLE BUILD-UP OF STATIC ELECTRICITY.**
- B. PACKAGE THE MEMORY STORAGE CARDS IN ELECTROSTATIC BAGS PRIOR TO REMOVING FROM THE SHELTER.**

NOTE

PRIOR TO IN-SYSTEM MTS CARD TESTING, SET ADP PANEL SWITCHES AS FOLLOWS:

UPPER CPU POWER	OFF
LOWER CPU POWER	OFF
IOU POWER	OFF
ADP POWER	OFF
SUSPECT MEMORY SELECT	OFF LINE

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS

CAUTION:

A LIST OF NON-TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES".

CONNECTOR	TYPE	PART NUMBER
J1103	AC INTERFACE	149583
J1104	AC INTERFACE	149503
J1105	DC INTERFACE	149584
J1106	DC INTERFACE	149584
J1107	DC INTERFACE	149584
J1108	DC INTERFACE	149504
J1189	DC INTERFACE	149584
J1126	1 K OHM RESISTOR	587118
J1127	BACKUP CONTROL	13143913
J1204	DC INTERFACE	149504
J1205	DC INTERFACE	149584
J1206	DC INTERFACE	14950A
J1207	DC INTERFACE	149534
J1288	DC INTERFACE	149564
J1212	240 OHM RESISTOR	587119
J1228	TIMING AND CONTROL	13143778
J1229	CMOS STORAGE	13143777
J1230	CMOS STORAGE	13143777
J1231	CMOS STORAGE	13143777
J1232	CMOS STORAGE	13143777
J1233	CMOS STORAGE	13143777
J1234	CMOS STORAGE	13143777
J1235	CMOS STORAGE	13143777
J1236	CMOS STORAGE	13143777
J1237	CMOS STORAGE	13143777
J1238	CMOS STORAGE	13143777
J1239	CMOS STORAGE	13143777

NOTE:

IF THE UPPER CPU IS PRIME AND THE FAULT IS NOT ISOLATED BY TESTING OR SUBSTITUTING THE CARD ASSEMBLIES ASSOCIATED WITH THE, ERROR CODES LISTED BELOW, THEN:

- A. TEST J1112
- B. SUBSTITUTE J1107 - J1188 - J1169

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
STOP		CONNECTORS
000000	J1121 J1217 - J1218 - J1219 - J1220 - J1221 - J1222	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1107 J1109 J1206 J1212	
000003	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1105	
000021	J1214	
000044	J1214	
000045	J1219	
000053	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1204	
000100	J1217	
000114	J1114	
000130	J1219	
000132	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1105	
000133	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1206	
000176	J1215	
001006	J1111	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1205 - J1206	
001040	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1206	
001050	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1107	
001057	J1216	
001235	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:	
	J1231	

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF							
DIAGNOSE STATUS	IOU OFF	CPU OFF							
STOP								CONNECTORS	
001666	J1115								
001667	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1107								
001670	A. TEST THE DIGITAL CARDS LISTED BELOW								
	J1116	J1120	J1215	-	J1216	J1221	-	J1222	
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES								
	J1228								
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1204	-	J1205						
001702	J1114								
001756	J1116	J1214	-	J1215					
004420	J1113								
012000	A. TEST THE DIGITAL CARDS LISTED BELOW								
	J1111	-	J1112	J1114	J1117	J1119	-	J1120	-
	J1121	J1214	J1218	-	J1219	-	J1220	-	J1221
	J1209	-	J1210						
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
	J1228	-	J1229	-	J1230	-	J1231	-	J1232
	J1233	-	J1234	-	J1235	-	J1236		
	J1237	-	J1238	-	J1239				
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1204	-	J1205	J1212					
012010	A. TEST THE DIGITAL CARDS LISTED BELOW								
	J1110	-	J1111	J1114	J1117	J1119	J1121	J1209	-
	J1210	J1216	J1217	J1219	-	J1220	-	J1221	-
	J1222								
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$								
	J1228	-	J1229	-	J1230	-	J1231	-	J1232
	J1233	-	J1234	-	J1235	-	J1236		
	J1237	-	J1238	-	J1239				
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW								
	J1205	J1212							
012020	J1114	J1117	J1119	J1121	J1209	J1214	-	J1215	J1217
	J1219	J1220	J1222						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES								
	J1205	-	J1206						

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
STOP			CONNECTORS
012030	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1111 J1114 J1209 - J1210	J1219 - J1220 - J1221	
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - 41230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237		
	- J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1204 - J1205 41212		
012060	A. TEST THE DIGITAL CARDS LISTED BELOW J1111 J1116 J1120 J1215		
	B. SUBSTITUTE THE FOLLOWING ASSEMBLIES8 J1127 BACKUP CONTROL BT1		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1126		
012070	A. TEST THE DIGITAL CARDS LISTED BELOW J1111 - J1112 - J1113 J1121 J1210 - J1211 J1220 - J1221		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1127 J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236		
	- J1237 - J1238 - 41239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1107 J1126 J1204 - J1205 J1212		
012100	A. TEST THE DIGITAL CARDS LISTED BELOW J1117 J1120		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1228		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1126		
012150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228		

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
012160	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES		
	J1228		
012230	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES		
	J1103		
017770	A. TEST THE DIGITAL CARDS LISTED BELOW		
	J1112	- J1113 - J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120	
	- J1121	J1209 - J1210 - J1211 J1214 - J1215 - J1216 - J1217 - J1218	
	- J1219	- J1220 - J1221 - J1222	
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES		
	J1228	- J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236	
	- J1237	- J1238 - J1239	
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW		
	J1107	J1126 J1204 J1206 J1212	
020020	J1116	J1118 - J1119 - J1120 - J1121	J1210 J1216 - J1217 - J1218
	J1220		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES;		
	J1126	J1205	
020030	J1116	- J1117 - 31118 - J1119	J1210 J1216 - J1217 - J1218 J1220
020040	J1117	J1120	
020050	J1116	- J1117 J1120	
020060	J1217		
020110	J1217		
027770	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1205		
030060	J1216		
061542	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1204		
100010	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1229	- J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237	
	- J1238	- J1239	

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF												
DIAGNOSE STATUS	IOU OFF	CPU OFF												
STOP								CONNECTORS						
110000	A. TEST THE DIGITAL CARDS LISTED BELOW													
	J1110	-	J1111	-	J1112	J1116	-	J1117	-	J1119	J1121	J1209	-	J1210
	-	J1211	J1214	-	J1215	-	J1216	-	J1217	-	J1218	-	J1219	-
	-	J1222												
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW													
	J1228	-	J1229											
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW													
	J1105	-	41106	J1126	J1212									
110010	A. TEST THE DIGITAL CARDS LISTED BELOW													
	J1111	-	J1112	J1116	-	J1117	J1209	-	J1210	-	J1211	J1216	J1218	
	-	J1219	-	J1220	-	J1221	-	J1222						
	B. SUBSTITUTE J1239													
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1228	-	J1229	-	J1230	-	J1231	-	J1232	-	J1233	-	J1234	-
	-	41237	-	J1239										
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW													
	J1106	J1109	J1204	-	J1205	J1209	J1212							
110020	A. TEST THE DIGITAL CARDS LISTED BELOW													
	J1121	J1210												
	B. SUBSTITUTE							J1238						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW													
	J1106	J1109	J1205	J1208										
110030	A. TEST THE DIGITAL CARDS LISTED BELOW													
	J1210													
	B. SUBSTITUTE							J1237						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW													
	J1106	J1109	J1205	J1208										
110040	A. TEST THE DIGITAL CARDS LISTED BELOW													
	J1219													
	B. SUBSTITUTE							J1236						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW													
	J1106	J1109	J1205	J1208										

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
110050	A. TEST THE DIGITAL CARDS LISTED BELOW - J1209 J1220 J1222		
	B. SUBSTITUTE 01235		
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 - J1232 - J1233 - J1234 J1236 - J1237 - J1238 - J1239		
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1205 J1208		
110060	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 J1117 J1209 - J1210 J1220 - J1221 - J1222		
	B. SUBSTITUTE J1234		
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 J1235 - J1236 - J1237 - J1238 - J1239		
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 - J1106 J1108 - J1109 J1204 - J1205 J1207 - J1208 J1212		
110070	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 J1209 - J1210 - J1211 J1214 J1220		
	8. SUBSTITUTE J1233		
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212		
110100	A. TEST THE DIGITAL CARDS LISTED BELOW J 1110 - J1111 - J1112 J1209 - J1210 - J1211 J1214 J1222		
	B. SUBSTITUTE J1232		
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212		

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF					CONNECTORS
STOP							
110110	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112	J1209	-	J1210	-	J1211	J1214
	B. SUBSTITUTE	J1231					
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230	J1232	-	J1233	-	J1234	- J1235 - J1236 - J1237 - J1238
	- J1239						
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW						
41105	J1108	J1204	J1207	J1212			
110120	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112	J1209	-	J1210	-	J1211	
	B. SUBSTITUTE	J1230					
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229	J1231	-	J1232	-	J1233	- J1234 - J1235 - J1236 - J1237 - J1238
	- J1239						
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105	J1108	J1204	-	J1205	J1207	J1212
110130	A. TEST THE DIGITAL CARDS LISTED BELOW J110 - J1111 - J1112	J1209	-	J1210	-	J1211	J1220 J1222
	B. SUBSTITUTE	J1229					
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228	J1230	-	J1231	-	J1232	- J1233 - J1234 - J1235
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105	J1108	J1204	-	J1205	J1207	J1212
110150	A. TEST THE DIGITAL CARDS LISTED BELOW J1210						
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1239						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1107	J1206					

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	CONNECTORS
DIAGNOSE STATUS					
STOP					
111111	J1112 J1220	J1114 - J1115	J1117 - J1118 - J1119	J1215 - J1216 - J1217	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1103	J1107 - J1108	J1207		
210000	J1114	J1117			
220500	J1211				
400000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
410150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1239				
430000	J1221				
510000	J1214				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1103				
660025	J1116	J1216 - J1217	J1221		
700000	J1110 - J1111 - J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118	J1119 - J1120 - J1121 - J1210 - J1211 - J1214 - J1215 - J1216 - J1217	J1218 - J1219 - J1220 - J1221 - J1222		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1103 - J1104 - J1105 - J1106 - JO1107 - J110 - J1109	J1206 - J1207			
	- J1208				
700002	J1110 - J1111 - J1113 - J1114 - J1115 - J1116 - J1117	J1119 - J1120	J1121 - J1211 - J1214 - J1215 - J31216 - J1217 - J1218	J1220 - J1221	
	- J1122				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1104 - J1105 - J1106 - J1107 - J1108 - J1109	J1126	J1206 - J1207		
	- J1206				

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF							
DIAGNOSE STATUS	IOU OFF	CPU OFF							
STOP								CONNECTORS	
700003	J1110	- J1111	J1113	- J1114	- J111S	- J1116	- J1117	J1119	- J1120
	- J1119	- J1120	- J1121	J1209	- J1210	- J1211	J1214	- J1215	J1217
	J1219	- J1220	- J1221						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1103	- J1104	- J1105	- J1106	- J1107	- J1108	- J1109	J1126	J1204
	- J1205	- J1206	- J1207	J1212					

Change 3 2-177

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF			
DIAGNOSE STATUS	IOU OFF	CPU ON			
STOP	CONNECTORS				
000000	J1120	J1215 - J1216			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
000003	J111	J1114 - J1115			
000010	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1108				
000132	J1111				
000775	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
000777	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1104				
001702	J1113	- J1114	J1117	J1119	J1218
002420	J1113	J1115	J1220		
003000	J1215				
012000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1205				
110000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1212				
165500	J1121				
220500	J1114	- 41115	- J1116	J1121	J1214 J1218
220501	J1115				
220710	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1108				
221000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
400000	J1114				

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF							
DIAGNOSE STATUS	IOU OFF	CPU ON							
STOP	CONNECTORS								
410000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107 - J1108								
510000	J1110	J1120	J1211						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 J1126 J1208								
510002	J1114								
510017	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106								
510021	J1111	J1113	- J1114	- J1115	- J1116	- J1117	- J1118	- J1119	J1209
	- J1210	- J1211	J1214	- J1215	- J1216	- J1217	- J1218	- J1219	J1221
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1103 - J1104 J1206 - J1207 - J1208								
640000	J1110	J1114							
641554	J1110	J1116							
660025	J1217								
675000	J1210								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208								
700000	J 1110	- J1111	J1113	- J1114	- J1115	- J1116	- J1117	- J1118	- J1119
	- J1120	- J1121	J1209	- J1210	- J1211	J1214	- J1215	- J1216	- J1217
	- J1218	- J1219	- J1220	- J1221	- J1222				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1103 - J1104 - J105 - J1106 - J1107 - J1108 - J4109 J1206 J1208								
700002	J1110	- J1111	- J1112	- J1113	- J1114	J1116	- J1117	- J1118	J1120
	- J1121	J1210	J1215	- J1216	- J1217	- J1218	J1220	- J1221	- J1222
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1105 - J1106 - J1107 - J1108 - J1109 J1206 - J1207 - J1208								
700003	J1110	J1113	J S1115	- J1116	- J1117	J1215	- J1216	- J1217	J1219
	- J1220								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1103 J1105 - J1106 J1108 - J1109 J1206								

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF				
DIAGNOSE STATUS	IOU OFF	CPU ON				
STOP						CONNECTORS
700000	J1110	J1113	J1119	J1209	- J1210	J1218
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1105 - J1106					
700003	J1114					

Change 3 2-180

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU ON	CPU OFF CPU ON	CONNECTORS
STOP			
111111	J 1110 - J1111 - J1112	J1115 - J1116 - J1117 - J1118 - J1119 - J1120	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1103 - J1104 J1109		
220500	J1121		
510000	J1210		
640000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES		
	J1108		
700000	J1217		
700003	J1116		

Change 3 2-181

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU ON CPU OFF	CONNECTORS
STOP			
000001	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204		
000603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204 - J1205		
175203	J1116	J1118	J1215 - J1216
774501	J1114		
777201	J1116		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 J1204 J1206		

Change 3 2-182

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU ON			
STOP				CONNECTORS	
777007	J1115 - J1116	J1118	J1216		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1105 - J1106 - J1107				
777017	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1105	J1107	J1206		

Change 3 2-183

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS	IOU ON	CPU ON	
DIAGNOSE STATUS	IOU OFF	CPU ON	
STOP			CONNECTORS
777777			J1121

Change 3 2-184

TABLE 2-6. MEMORY 1 FAULT LOCATION

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU ON
IOU ON

CPU ON
CPU ON

STOP

CONNECTORS

777777 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1228

Change 3 2-185

TABLE 2-7. MEMORY 2 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
STOP		CONNECTORS

CAUTION

CMOS MEMORIES CONTAIN ELECTROSTATIC SENSITIVE DEVICES REQUIRING SPECIAL HANDLING TO AVOID ELECTROSTATIC DISCHARGE DAMAGE. WHEN REMOVING AND REPLACING MEMORY CARDS J1229 THROUGH J1239 OBSERVE THE FOLLOWING PRECAUTIONS:

- A. IMMEDIATELY PRIOR TO HANDLING WITHIN THE SHELTER, MAKE PHYSICAL CONTACT WITH A GROUNDED SURFACE TO DISCHARGE ANY POSSIBLE BUILD-UP OF STATIC ELECTRICITY.
- B. PACKAGE THE MEMORY STORAGE CARDS IN ELECTROSTATIC BAGS PRIOR TO REMOVING FROM THE SHELTER.

NOTE:

PRIOR TO IN-SYSTEM MTS CARD TESTING. SET ADP PANEL SWITCHES AS FOLLOWS:

- UPPER CPU POWER OFF
- LOWER CPU POWER OFF
- IOU POWER OFF
- ADP POWER OFF
- SUSPECT MEMORY SELECT OFF LINE

TABLE 2-7. MEMORY 2 FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

CAUTION:

A LIST OF NON-TESTABLE CARDS WITH CONNECTOR NUMBER. CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES".

CONNECTOR	TYPE	PART NUMBER
J1103	AC INTERFACE	149503
J1104	AC INTERFACE	149503
J1105	DC INTERFACE	149504
J1106	DC INTERFACE	149504
J1107	DC INTERFACE	149504
J1108	DC INTERFACE	149504
J1109	DC INTERFACE	149504
J1126	1 K OHM RESISTOR	587118
J1127	BACKUP CONTROL	13143913
J1204	DC INTERFACE	149504
J1265	DC INTERFACE	149584
J1206	DC INTERFACE	149504
J1207	DC INTERFACE	149584
J1208	DC INTERFACE	149504
J1212	240 OHM RESISTOR	587119
J1228	TIMING AND CONTROL	13143778
J1229	CMOS STORAGE	13143777
J1230	CMOS STORAGE	13143777
J1231	CMOS STORAGE	13143777
J1232	CMOS STORAGE	13143777
J1233	CIMOS STORAGE	13143777
J1234	CMOS STORAGE	13143777
J1235	CMOS STORAGE	13143777
J1236	CMOS STORAGE	13143777
J1237	CMOS STORAGE	13143777
J1238	CMOS STORAGE	13143777
J1239	CMOS STORAGE	13143777

NOTE:

IF THE UPPER CPU IS PRIME AND THE FAULT IS NOT ISCLATED BY TESTING OR SUBSTITUTING THE CARD ASSEMBLIES ASSOCIATED WITH THE ERROR CODES LISTED BELOW, THEN:

- A. TEST J1112
- B. SUBSTITUTE J116w - J110S - J1169

TABLE 2-7, MEMORY 2 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP				
000000	J1121 - J1217 - J1218 - J1219 - J1220 - J1221 - J122			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107 J1206 J1212			
000003	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1105			
000023	J1114			
000025	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207			
000036	J1219			
000051	J1114			
000053	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204			
000102	J1219			
000133	J1214			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206			
000137	J1214			
001003	J1219			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1109			
001006	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205 - J1206			
001007	1118t			
001013	J1209			
001026	J1112			
001040	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206			

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP				
001050	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107			
001667	J1115			
001670	A. TEST THE DIGITAL CARDS LISTED BELOW			
	J1114	J1116	J1120 - J1121	J1209 J1215 - J1216 J1222
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1228			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW			
	J1204 - J1205			
001707	J1112			
001711	J1210			
006000	J1120			
012000	A. TEST THE DIGITAL CARDS LISTED BELOW			
	J1211			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1228			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW			
	J1205			
012010	J1116 - J1117 - J1118 - J1119 - J1120 - J1121			J1209 - J1210 J1216
	- J1217 - J1218 - J1220 - J1221 - J1222			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1126			
012020	J111	J1116	- J1117 - J1118 - J1119 - J1120 - J1121	
012030	J1116	- J1117	- J1118 - J1119 - J1120	J1210 J1217
012040	J1116	J1118	J1120	
012050	J1116	J1220		
012060	J1210			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1205			

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
012070	J1119 - J1120		
012110	J1117 J1217		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1126		
012150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228		
012210	J1217		
017770	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228		
020000	A. TEST THE DIGITAL CARDS LISTED BELOW J1111 - J1112 J1116 - J1117 - J1118 - J1119 - J1120 - J1121 J1210 J1214 - J1215 - J1216 - J1217 J1220 - J1221		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1126 J1205 - J1206 J1212		
020010	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J111 J1114 J1117 J1121 J1209 - J1210 J1218 - J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1205 J1212		
020020	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 J1114 J1119 J1121 J1209 - J1210 J1217 J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1204 - J1205 J1212		
020040	J1217 J1220		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

STOP	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
020050	J1114 J1209			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204			
020100	A. TEST THE DIGITAL CARDS LISTED BELOW J1120			
	B. SUBSTITUTE THE FOLLOWING ASSEMBLIES: J1127 BACKUP CONTROL BTI			
020110	A. TEST THE DIGITAL CARDS LISTED BELOW J111 - J1112 - J1113 J1121 J1210 - J1211 J1218 J1220			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1127 J1229 - J1230 - J1231 - J1232 - J1233 - 41234 - J1235 - J1236 - J1237 - J1239 - J1239			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1107 J1126 J1212			
020120	A. TEST THE DIGITAL CARDS LISTED BELOW J1117 J1120			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1126 J1204			
020130	J1220			
020150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1103			
027770	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1121 J1209 - J1210 - J1211 J1214 - J1215 - J1216 - J1217 - J1218 - J1219 - J1220 - J1221 - J1222			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1107 J1126 J1204 J1206 J1212			

Change 3 2-191

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS		IOU OFF	CPU OFF						
DIAGNOSE STATUS	IOU OFF	CPU OFF	CPU OFF	CONNECTORS					
STOP									
041554	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207								
046171	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$ J1105								
061542	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIESS J1204								
101770	J1219								
110060	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209								
111111	J1114	-	J1115	J1117	J1119	J1121	J1210	J1214	J1217
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107 J1109								
120000	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1116 - J1117 J1121 J1209 - J1210 - J1211 J1214 - J1215 J1217 - J1219 - J1219 J1221								
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229								
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 - J1106 J1205 J1207 J1212								
120010	A. TEST THE DIGITAL CARDS LISTED BELOW J1111 - J1112 J1116 - J1117 J1121 J1209 - J1210 - J1211 J1216 J1218 - J1219 - J1220 - J1221 - J1222								
	B. SUBSTITUTE J1239								
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIESS J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238								
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1204 - J1205 J1208 J1212								

Change 3 2-192

TABLE 2-7, MEMORY 2 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
STOP				CONNECTORS
120020	A. TEST THE DIGITAL CARDS LISTED BELOW J1210			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1238			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1205 J1208			
120030	A. TEST THE DIGITAL CARDS LISTED BELOW J1210			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1237			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J11109 J1205 J1208			
120040	A. TEST THE DIGITAL CARDS LISTED BELOW J1219			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1236			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1205 J1208			
120050	A. TEST THE DIGITAL CARDS LISTED BELOW J1209 J1220 J1222			
	B. SUBSTITUTE J1235			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1229 - J1230 - J1231 - J1232 - J1233 - J1234 J1236 - J1237 - J1238 - J1239			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1205 J1208			

Change 3 2-193

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP							
120060	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 J1209 - J1210		J1220	J1222			
	B. SUBSTITUTE J1234						
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1238 - J1239			J1235	J1236	- J1237	
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 - J1106 J1108 - J1109		J1204 - J1205	J1208	J1212		
120070	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 J1117		J1209 - J1210 - J1211	J1214	J1220		
	- J1221 - 01222						
	B. SUBSTITUTE J1233						
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1228 - J1229 - J1230 - J1231 - J1232 - J1238 - J1239			J1234 - J1235 - J1236 - J1237			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205		J1207	J1212			
120100	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 J1209		J1210 - J1211	J1214			
	B. SUBSTITUTE J1232						
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 J1233 - J1234 - J1239		J1235 - J1236 - J1237 - J1238				
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205		J1207	J1212			
120110	A, TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 J1209		J1210 - J1211	J1214			
	B. SUBSTITUTE J1231						
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1229 - J1230 J1232 - J1233 - J1234 - J1239		J1235 - J1236	J 41237 - J1238			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205		J1207	J1212			

TABLE 2-7, MEMORY 2 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
120120	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112	J1209 - J1210 - J1211	
	B. SUBSTITUTE J1230		
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212		
120130	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112	J1209 - J1210 - J1211	J1220 J1222
	B. SUBSTITUTE J1229		
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 J1230 - J1231 - J1232 - J1233 - J1234 - J1235		
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212		
120150	A. TEST THE DIGITAL CARDS LISTED BELOW J1210		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1107 J1206		
200150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228		
220100	J1209		
400000	J1220		

Change 3 2-195

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
410000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107		
420150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1239		
510000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208		
660025	J1111 - J1112 J1119		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108 J1207		
666230	J1218		
666233	J1114		
700000	J1110 - J1111 - J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1121 J1210 - J1211 J1214 J1216 - J1217 - J1219 - J1219 J1221 - J1222		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1103 - J1104 - J1105 - J1106 - J1107 - J1108 - J1109 J1126 J1206 - J1207 - J1208		
700002	J1110 J1112 - J1113 - J1114 - J1115 - J1116 J1118 - J1119 - J1120 J1210 - J1211 J1214 - J1215 J1217 J1219 J1221 - J1222		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1103 J1105 J1108 - J1109 J1126 J1206 J1208		
700003	J1110 - J1111 J1113 - J1114 - J1115 - J1116 - J1117 J1119 - J1120 - J1121 J1209 J1211 J1214 - J1215 J1217 J1219 - J1220 - J1221 - J1222		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1105 - J1106 J1108 J1204 - J1205 - J1206 - J1207 - J1208		
700044	J1209		
700046	J1219		
700100	J1215		
774500	J1220		

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

STOP	PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS		
	DIAGNOSE STATUS	IOU OFF	CPU ON			
000000	J1111					
000132	J1120					
000775	J1211					
001000	J1115					
001670	SUBSTITUTE THE FOLLOWING CARD ASSEMBLISS J1103					
001705	J1118					
001711	J1111 - J1112	J1114	J1210 - J1211			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 J1212					
002420	J1111	J1115	J1120			
012000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205					
017770	J1115					
020000	J1209	J1220				
041500	J1110	J113				
120000	SUBSTITUTE THE FOLLOWING CARD ASSEMNBILIES: J1105					
165500	J1110					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208					
220500	J1110	J1112	J1120	J1211	J1215	J1218
260500	J1110	J1215				
320427	J1115					
400000	J1115	J1218				
410000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1109					

Change 3-197

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

STOP	PROGRAM LOAD STATUS			IOU OFF		CPU OFF		CONNECTORS		
	DIAGNOSE STATUS			IOU OFF	IOU OFF	CPU ON	CPU ON			
501700	J1114									
510000	J1110	J1112	J1218							
510020	J1115									
510021	J1111	J1113	J1114	J1115	J1116	J1117	J1118	J1119	J1209	J1209
	- J1210	- J1211	J1214	- J1215	- J1216	- J1217	- J1218	- J1219	J1221	J1221
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1103	J1104	J1206	J1207	J1208					
511604	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1105									
640000	J1112	J1114								
641554	J1111	J1119	J1219							
666233	J1211	J1220								
700000	J1110	J1111	J1112	J1113	J1114	J1115	J1116	J1117	J1118	J1118
	- J1119	- J1120	- J1121	J1209	- J1210	- J1211	J1214	- J1215	- J1216	J1216
	- J1217	- J1218	- J1219	- J1220	- J1221	- J1222				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1103	J1104	J1105	J1106	J1107	J1108	J1126	J1206	J1207	J1207
700002	J1110	J1112	J1114	J1115	J1116	J1117	J1118	J1119	J1120	J1120
	- J1121	J1211	J1215	- J1216	- J1217	- J1218	- J1219	- J1220		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1104	J1105	J1106	J1107	J1108	J1109	J1206	J1207	J1208	J1208
700003	J1110	J1111	J1113	J1114	J1117	J1120	J1210	J1216	J1219	J1219
	- J1220									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1103	J1108	J1206	J1207	J1208					
740220	J1110									

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP	J1110 - J1111	J1113	J1119	J1209 - J1210 J1218

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES!
 J1105 - J1106

Change 3 2-199

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

STOP	PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS			
	DIAGNOSE STATUS		IOU ON		CPU ON					
020050	J1220									
111111	J1110	- J1111	- J1112	J1114	- J115	- J1116	J1120	J1209	- J1210	
	J1214	J1218	- J1219							

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1107 - J1108

666233 J1221

700000 J1114

Change 3 2-200

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

STOP	PROGRAM LOAD STATUS	IOU OFF	CPU ON	CONNECTORS
	DIAGNOSE STATUS	IOU OFF	CPU OFF	
000001	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204			
000603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204 - J1205			
175203	J1116	J1118	J1215 - J1216	
777003	J1116			
777201	J1114	J1217		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 J1204 J1206			

Change 3 2-201

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS		IOU ON CPU ON	
	DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP				CONNECTORS
777007	J1115 - J1116		J1216	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1105 - J1106 - J1107			
777017	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1105	J1107	J1206	

Change 3 2-202

TABLE 2-7. MEMORY 2 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU ON IOU ON	CPU ON CPU ON	CONNECTORS
STOP			
777777	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1228		

Change 3 2-203

TABLE 2-8. MEMORY 3 FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF

STOP

CONNECTORS

CAUTION

CMOS MEMORIES CONTAIN ELECTROSTATIC SENSITIVE DEVICES REQUIRING SPECIAL HANDLING TO AVOID ELECTROSTATIC DISCHARGE DAMAGE. WHEN REMOVING AND REPLACING MEMORY CARDS J1229 THROUGH J1239 OBSERVE THE FOLLOWING PRECAUTIONS:

- A. IMMEDIATELY PRIOR TO HANDLING WITHIN THE SHELTER, MAKE PHYSICAL CONTACT WITH A GROUNDED SURFACE TO DISCHARGE ANY POSSIBLE BUILD-UP OF STATIC ELECTRICITY.**
- B. PACKAGE THE MEMORY STORAGE CARDS IN ELECTROSTATIC BAGS PRIOR TO REMOVING FROM THE SHELTER.**

NOTE:

PRIOR TO IN-SYSTEM MTS CARD TESTING, SET ADP PANEL SWITCHES AS FOLLOWS:

UPPER CPU POWER OFF
 LOWER CPU POWER OFF
 IOU POWER OFF
 ADP POWER OFF
 SUSPECT MEMORY SELECT OFF LINE

TABLE 2-8. MEMORY 3 FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

CAUTION:

A LIST OF NON-TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES".

CONNECTOR	TYPE	PART NUMBER
J1103	AC INTERFACE	1495083
J1104	AC INTERFACE	149503
J1105	DC INTERFACE	149584
J1106	DC INTERFACE	149504
J1107	DC INTERFACE	149504
J1108	DC INTERFACE	149504
J1109	DC INTERFACE	149584
J1126	1 K OHM RESISTOR	557118
J1127	BACKUP CONTROL	13143913
J1204	DC INTERFACE	149504
J1205	DC INTERFACE	149504
J1206	DC INTERFACE	14S504
J1207	DC INTERFACE	149504
J1208	DC INTERFACE	1495.04
J1212	240 OHM RESISTOR	587119
J1228	TIMING AND CONTROL	13143778
J1229	CMOS STORAGE	13143777
J1230	CMOS STORAGE	13143777
J1231	CMOS STORPGE	13147777
J1232	CMOS STORAGE	131437f7
J1233	CMOS STORAGE	13143777
J1234	CMOS STORAGE	13143777
J1235	CMOS STORAGE	13143777
J1236	CMOS STORAGE	13tA3777
J1237	CMOS STORAGE	1314'-777
J1238	CMOS STORAGE	1314.3..777
J1239	CMOS STORAGE	13143777

NOTE:

IF THE UPPER CPU IS PRIME AND THE FAULT IS NOT ISOLATED BY TESTING OR SUBSTITUTING THE CARD HASSEMBLIES ASSOCIATED WITH THE ERROR CODES LISTED BELOW, THEN:

- A. TEST J1112
- B. SUBSTITUTE J31107 - J1108 - J1109

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
STOP				CONNECTORS
000000	J1121	J1217 - J1218	- J1219	- J1220 - J1221 - J1222
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107 J1206 J1212			
000003	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1105			
000053	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$ J1204			
000132	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107			
000133	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206			
000772	J1120			
001000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108			
001003	J1113			
001005	J1220			
001006	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205 - J1206 J1208			
001012	J1117	J1210		
001040	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206			
001050	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107			
001117	J1215			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206			

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
001670	A. TEST THE DIGITAL CARDS LISTED BELOW J1114 J1116 J1120 - J1121	J1214	J1216 J1219 J1221 - J1222
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1204 - J1205 - J1206		
001712	J1222		
012000	A. TEST THE DIGITAL CARDS LISTED BELOW J1220		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
012010	A. TEST THE DIGITAL CARDS LISTED BELOW J1121 J1221		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
012020	J1116 - J1117 - J1118 - J1119 - J1120	J1217	J1218 J1220 - J1221 - J1222
012030	A. TEST THE DIGITAL CARDS LISTED BELOW J1112 J1116 - J1117 J1119 - J1120		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1205		
012040	J1116 J1118 - J119 - J1120	J1217	
012050	J1216		
012060	SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1238		
012100	J1121		

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF				
DIAGNOSE STATUS	IOU OFF	CPU OFF				
STOP	CONNECTORS					
012110	J1210	J1217				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205					
012150	SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1228					
017770	SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239					
020000	J1215					
020020	J1116	- J1117	- J1118	J1121	J1216	J1220
020030	J1116	- J1117	J1120	J1217		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1126 J1205					
020040	J1118	- J1119	J1209	- J1210		
020050	J1210					
020060	A. TEST THE DIGITAL CARDS LISTED BELOW J1117 J1210 - J1211 J1220					
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239					
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1212					
020070	A. TEST THE DIGITAL CARDS LISTED BELOW J1220					
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239					
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1205					
020100	J1116	J1118	J1217			
020120	J1220					

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
020130	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1126		
030000	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J111 J1114 J1116 - J1117 - J1118 - J1119 - J1120 - J1121 J1209 - J1210 J1214 J1216 - J1217 - J1218 - J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1126 J1205 J1212		
030010	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 J1114 J1119 J1121 J1209 - J1210 J1215 J1217 J1219 - J1220 - J1221 - J1222		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1126 J1204 - J1205 J1212		
030020	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 J1114 J1209 - J1210 J1217 J1219 - J1220		
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239		
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1212		
030030	J1114 J1120 J1214 - J1215 J1219		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205		
030040	J1114 J1209		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204 - J1205		
030060	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204		

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP							
030070	A. TEST THE DIGITAL CARDS LISTED BELOW J1120						
	B. SUBSTITUTE THE ASSEMBLIES LISTED BELOW J1127 BACKUP CONTROL BT1						
030100	A. TEST THE DIGITAL CARDS LISTED BELOW J1111 - J1112 - J1113 J1121 J1210 - J1211 J1218 J1220						
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1127 - J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1107 J1126 J1212						
030110	A. TEST THE DIGITAL CARDS LISTED BELOW J1117 J1120						
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1126						
030150	SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1228						
037770	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1121 J1209 - J1210 - J1211 J1214 - J1215 - J1216 - J1217 - J1218 - J1219 - J1220 - J1221 - J1222						
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239						
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1103 - J1104 J1107 J1126 J1204 J1206 J1212						
111111	J1112 - J1113 - J1114 J1117 J1119 J1211 J1217 J1220 - J1221						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107						

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF								
STOP								CONNECTORS		
130000	A. TEST THE DIGITAL CARDS LISTED BELOW									
	J1110	J1112	J1114	J1116	- J1117	J1119	J1121	J1209	- J1210	
	- J1211	J1214	- J1215	J1217	- J1219	- J1219	- J1220	- J1221	- J1222	
	B, SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1228	- J1229	J1239							
	C, SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW									
	J1105	- J1106	J1126	J1204	- J1205	- J1206	J1208	J1212		
130010	A. TEST THE DIGITAL CARDS LISTED BELOW									
	J1111	- J1112	J1116	- J1117	J1209	- J1210	- J1211	J1216	J1219	
	- J1219	- J1220	- J1221	- J1222						
	B. SUBSTITUTE J1239									
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1228	- J1229	- J1230	- J1231	- J1232	- J1233	- J1234	- J1235	- J1236	
	- J1237	- J1238								
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW									
	J1106	J1109	J1204	- J1205	J1208	J1212				
130020	A. TEST THE DIGITAL CARDS LISTED BELOW									
	J1210									
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1238									
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW									
	J1106	J1109	J1205	J1208						
130030	A. TEST THE DIGITAL CARDS LISTED BELOW									
	J1210	J1222								
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1237									
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW									
	J1106	J1109	J1205	J1208						
130040	A, SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1236									
	B. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW									
	J1106	J1109	J1205	J1208						

Change 3 2-211

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
STOP				CONNECTORS
130050	A. TEST THE DIGITAL CARDS LISTED BELOW J1209 J1220 J1222			
	B. SUBSTITUTE J1235			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$ J1229 - J1230 - J1231 - J1232 - J1233 - J1234 J1236 - J1237 - J1239 - J1239			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1109 J1205 J1208			
130060	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 J1117 J1121 J1209 - J1210 J1220 - J1221 - J1222			
	B. SUBSTITUTE J1234			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 - J1233 J1235 - J1236 - J1237 - J1238 - J1239			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1106 J1108 - J1109 J1204 - J1205 J1207 - J1208 J1212			
130070	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 J1209 - J1210 - J1211 J1214 J1220			
	B. SUBSTITUTE J1233			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 - J1229 - J1230 - J1231 - J1232 J1234 - J1235 - J1236 - J1237 - J1238 - J1239			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212			
130100	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112 J1209 - J1210 - J1211 J1214			
	B. SUBSTITUTE J1232			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1231 J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212			

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

	PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP				
130110	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112	J1209	J1210 - J1211	J1214
	B. SUBSTITUTE J1231			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 - J1230 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212			
130120	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112	J1209	J1210 - J1211	
	B. SUBSTITUTE J1230			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1229 J1231 - J1232 - J1233 - J1234 - J1235 - J1236 J1237 - J1238 - J1239			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212			
130130	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 - J1111 - J1112	J1209	J1210 - J1211	J1220 J1222
	B. SUBSTITUTE J1229			
	C. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 J1230 - J1231 - J1232 - J1233 - J1234 - J1235			
	D. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 J1108 J1204 - J1205 J1207 J1212			
130150	A. TEST THE DIGITAL CARDS LISTED BELOW J1210			
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239			
	C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1107 J1206			
230000	J1114			
410000	J1117			
430150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1239			

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

STOP	PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS			
	DIAGNOSE STATUS		IOU OFF		CPU OFF					
501706	J1220									
660025	J1112	J1114	J1209	J1222						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1105	J1107								
700000	J1110	- J1111	- J1112	- J1113	- J1114	- J1115	- J1116	- J1117	- J1118	
	- J1119	- J1120	- J1121	J1209	- J1210	- J1211	J1214	- J1215	- J1216	
	- J1217	- J1218	- J1219	- J1220	J1222					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1103	- J1104	- J1105	- J1106	- J1107	- J1108	- J1109	J1206	- J1207	
700002	J1110	- J1111	- J1112	- J1113	- J1114	J1117	J1119	- J1120	- J1121	
	J1209	J1211	J1214	J1216	- J1217	- J1218	- J1219	J1221	- J1222	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1104	- J1105	- J1106	- J1107	- J1019	- J1109	J1206	- J1207	- J1209	
700003	J1110	- J1111	J1112	J1114	- J1115	- J1116	- J1117	J1119	J1121	
	J1209	- J1210	- J1211	J1214	J1217	- J1218	J1220	- J1221		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1103	- J1104	J1106	- J1107	- J1108	- J1109	J1126	J1206	- J1207	
	- J1208									
700004	J1219									
700013	J1220									

Change 3 2-214

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS
DIAGNOSE STATUS	IOU OFF	CPU ON	
STOP			
000000	J1120		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIEST		
	J1109	J1206	
000010	J1110	J1119	
000775	J1211	J1217	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1109		
001001	J1218		
001712	J1111	J1117	J1210 - J1211
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1206	J1212	
002000	J1210		
012100	J1217		
013221	J1211		
020040	J1210		
030030	J1217		
125500	J1110		
130000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIESI		
	J1208		
165500	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$		
	J1106		
220500	J1111	J1119	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1108		
510000	J1216		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1105	J1109	J1208
510020	J1120		

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF														
DIAGNOSE STATUS	IOU OFF	CPU ON														
STOP								CONNECTORS								
510021	J1110	J1111	J1113	-	J1114	-	J1115	-	J1116	-	J1117	-	J1118	-	J1119	
	J1209	-	J1210	-	J1211		J1214	-	J1215	-	J1216	-	J1217	-	J1218	
	J1221															
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$															
J1103	-	J1104	J1206	-	J1207	-	J1208									
511224	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES\$															
	J1208															
666230	J1111															
666233	J1116															
700000	J01110	-	J1111	-	J1112	-	J1113	-	J1114	-	J1115	-	J1116	-	J1117	
	-	J1119	-	J1120	-	J1121		J1209	-	J1210	-	J1211	J1216	-	J1217	
	-	J1219	-	J1220	-	J1221	-	J1222								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES#															
	J1103	-	J1104	-	J051105	-	J1106	-	J1107	-	J1108	-	J1109	J1126	J1206	
	J1208															
700002	J1110	-	J1111	-	J1112	-	J1113		J1115	-	J1116		J1118	-	J1119	
	J1210	-	J1211		J1214		J1216	-	J1217		J1219					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1103	-	J1104	-	J01105	-	J1106	J1109		J1126	J1206		J1208			
700003	J1112	J1114	-	J1115		J1121		J1209	-	J1210	J1215	-	J1216	-	J1217	
	-	J1218	-	J1219		J1221										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1106	J1108	J1212													

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF			
DIAGNOSE STATUS	IOU OFF	CPU ON			
STOP				CONNECTORS	
000775	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1126				
700000	J1110	- J1111	J1113	J1119	J1218
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1105 - J1106				
700003	J1110				

Change 3 2-217

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF				
DIAGNOSE STATUS	IOU OFF	CPU ON	CONNECTORS			
STOP						
111111	J1113	J1115 - J1116 - J1117	J1215	-	J1216	J1220
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108					
130000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1105					
510000	J1110					
700000	J1110	J1113	J1115			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207					
700002	J1116					

Change 3 2-218

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF		
DIAGNOSE STATUS	IOU OFF	CPU ON		
STOP				CONNECTORS
000001	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1204			
000603	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1204 - J1205			
175203	J1116	J1118	J1215	- J1216
777003	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1104			
777201	J1116			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 J1204 J1206			

Change 3 2-219

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU ON	CONNECTORS
STOP			
777007	A. TEST THE DIGITAL CARDS LISTED BELOW J1115 - J1116 J1118 J1216 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228 C. SUBSTITUTE THE CARD ASSEMBLIES LISTED BELOW J1105 - J1106 - J1107		
777017	A. TEST THE DIGITAL CARDS LISTED BELOW J1110 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1105 J1107 J1206		

Change 3 2-220

TABLE 2-8. MEMORY 3 FAULT LOCATION -CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU OFF
CPU ON

STOP

CONNECTORS

777777 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1228

All data on pages 2-223 thru
2-252, including tables 2-9
thru 2-12, deleted

Change 3 2-221/(2-222 blank)

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP FI) FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTE:

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:"

CONNECTOR	TYPE	PART NUMBER
J1125	1K OHM RESISTOR	587118
J1211	240 OHM RESISTOR	507119
J1222	240 OHM RESISTOR	587119
J1303	TYPE 1 CATAGORY SELECT	10281673
THRU		
J1307	TYPE 1 CATAGORY SELECT	10281673
J1300	240 OHM RESISTOR	587119
J1312	ARITH LOGIC UNIT CONT.	10281675
J1313	ARITHMETIC LOGIC	10284731
THRU		
J1316	ARITHMETIC LOGIC	10284731
J1320	BIPOLAR READ/WRITE MEM.	10201607
J1323	DIPOLAR READW.JRITE MEM.	10201607
J1324	DISPLAY MEMORY NO.5	10203635
J1325	FILE ADDRESS CONTROL	10201777
J1326	DISPLAY MEMORY NO.3	10283633
J1329	DISPLAY MEMORY NO.1	10203631
J1330	DISPLAY MEMORY NO.4	10203634
J1333	DISPLAY MEMORY NO.2	10203700
J1334	SENSE SWIITCH LOGIC	10201793
J1335	BIPOLAR RED/WRITE MEM.	10281607

000000 J1104 J1115 J1118 - J1119 J1207 - J1208 J1224 J1227 J1336

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1322 J1330

001035 J1106 J1110 - J1111 J1117 J1119 J1122 J1128 J1209 J1212 J1213
 J1216 J1220 J1225 J1227 - J1228 - J1229 J1233 J1327 - J1328 J1336
 J1341

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1222 J1312 J1314 J1334

001057 J1104 J1115 J1131 J1206 - J1207 J1209 - J1210 J1212 - J1213 - J1214
 - J1215 - J1216 J1219 - J1220 J1224 J1228 - J1229 - J1230 - J1231 J1233
 - J1234 J1338 - J1339

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1222	J1313	J1316	J1325	J1330	J1334						
001062	J1104 J1129	J1107 J1205	J1109 - J1206	J1110 - J1212	J1111 - J1214	J1112 - J1225	J1115 J1229	J1119 J1232	J1120 - J1310	J1122 J8133		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1211	J1334										
001107	J1207	- J1208	J1228									
001113	J1200											
001117	J1208											
001127	J1208											
001133	J1208											
001134	J1208											
001135	J1208											
001141	J1208											
001150	J1228											
001155	J1208	J1228										
001167	J1208											
001205	J1208	J1220										
0881216	J1208											
001221	J1208											
001237	J1208											
001250	J1208											
001254	J1228											
001256	J1228											
001264	J1228											
001326	J1228											
001366	J1227											

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS						
DIAGNOSE STATUS		IOU OFF		CPU OFF								
STOP												
001426	J1204											
001666	J1104 J1209	J1106 J1234	J1108	-	J1109	J1111	J1115	J1117	-	J1118	J1122	J1135
070000	J1227											

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
008087	J1234										
000033	J1104	J1106	- J1107	J1109	- J1110	- J1111	- J1112	J1115	J1117	- J1118	
	- J1119	- J1120	J1122	- J1123	- J1124	J1126	- J1127	J1129	- J1130	- J1131	
	J1133	- J1134	- J1135	J1137	J1139	- J1140	- J1141	- J1142	J1209	J1218	
	- J1219	J1223	- J1224	J1226	J1229	- J1230	J1232	J1235	J1311	J1317	
	- J1318	- J1319	J1332	J1336	J1338	J1341	- J1342				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1125	J1211	J1222	J1308							
000050	J1117	J1118	J1119	J1120	J1122	J1129	J1130	J1131	J1135	J1138	
	J1140	J1223	J1224	J1336	J1330	J1340	J1341	J1342			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1308										
002100	J1105	- J1106	- J1107	- J1108	- J1109	- J1110	- J1111	J1115	J1117	- J1118	
	- J1119	- J1120	J1122	- J1123	- J1124	J1126	- J1127	J1129	- J1130	- J1131	
	J1133	- J1134	- J1135	J1137	- J1138	J1140	- J1141	- J1142	J1204	- J1205	
	- J1206	- J1207	- J1208	- J1209	J1216	- J1217	J1220	J1223	- J1224	J1226	
	- J1227	- J1228	- J1229	J1234	- J1235	J1327	- J1326	J1336	J1340	- J1341	
	- J1342										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1125	J1222	J1300								
002420	J1111	J1115	J1117	- J1118	- J1119	J1122	- J1123	- J1124	J1128	J1130	
	- J1131	J1133	- J1134	J1308	- J1139	- J1140	- J1141	- J1142	J1205	J1342	
010033	J1107	J1109	J111	J1115	J1118	- J1119	- J1120	J1122	J1124	J1126	
	J1130	- J1131	J133	J1135	J1223	J1234					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1308										
012209	J1234										
020033	J1122	- J1123	J1135	J1141	- J1142	J1235					
030033	J11109	J1115	J1118	J1140	J11142	J1235					
040033	J1123	J1126	J1129	J1135	J1140	J1205	J1228	J1233	J1332		
050033	J1111	J1111	J1122	J1130	- J1131	J1224	J1233	J1235			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J11222										
060033	J11110	J1123	J11126	J1129	J1135	J1139	J1233	J1336			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CONNECTORS	
DIAGNOSE STATUS	IOU OFF	IOU OFF	CPU OFF	CPU OFF		
STOP						
	J1222					
070033	J1123	J1126	J1129	J1130	J1226	J1229
102040	J1108	J1228				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1324	J1330				

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS											
000001	J1117 J1341	J1120	J1122 -	J1123	J1126	J1128	-	J1129	J1133	-	J1134	J1205		
000002	J1117	J1120	J1126	J1128	J1205									
000003	J1104 J1341	J1117 - J1342	- J1118	J1120	J1126	-	J1127	-	J1128	-	J1129	J1205	J1221	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222 J1330														
00004	J1117	J1120	J1126	J1120 -	J1129									
000005	J1119 J1231	J1122 - J1232	J1124 - J1233	J1126 J1317	-	J1127 - J1310	-	J1128 J1331	-	J1129 J1341	J1210	J1215	J1228	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1211 J1315 J1321 J1335														
000007	J1117	J1126	- J1127	-	J1120	-	J1129	J1135	J1331					
000010	J11117	J1120	J1126	J1128	-	J1129								
000012	J1110 - J1231	J1124 - J1232	J1127 - J123S	-	J1128 J1319	-	J1129 J1331	J1207	J11210	J1215	J1228	J1239		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1211 J1313 - J1431 J1320 - J1321 - J1322 J1335														
000014	1126													
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1321 J1330														
000016	J1205													
000017	J1105 - J1127 J1210 - J1220 J1336	J1108 - J1128 J1212 J1230 J1338	J1115 - J1129 - J1213 - J1231 - J1339	J1117 - J1130 - J1214 - J1232 - J1340	-	J1118 - J1131 - J1215 - J1233 - J1341	-	J1119 J1133 - J1216 - J1234 - J1342	-	J1120 - J1134 J1220 - J1235 J1327	J1123 - J1135 J1224 - J1328	J1124 J1205 J1226 - J1328	J1126 - J1206 - J1227 J1331	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1211 J1222 J1312 - J1313 - J1314 - J1315 - J1316 J1321 - J1322 J1325 J1330 J1334 - J1335														
000322	J1142													
000522	J1120													
001022	J1104 - J1119	- J1105 - J1120	- J1106 J1122	-	J1107 - J1123	-	J1108 J112 9	-	J1109 J1135I	-	J1110 J1140	J1115 - J1141	J1117	- J1118

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP FI) FRULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS																
DIAGNOSE STATUS	IOU ON	CPU ON																	
STOP																			
001823	J1115	J1110	-	J1119	-	J1120	J1126	J1128	J1228										
010322	J1122																		
010722	J1134																		
011017	J1104	-	J1105	-	J1106	-	J1107	-	J1100	-	J1109	-	J1110	-	J1111	-	J1112	J1115	
	J1117	-	J1118	-	J1119	-	J1120	J1122	-	J1123	-	J1124	J1126	-	J1127	-	J1129		
	-	J1130	-	J1131	J1133	-	J1134	-	J1135	J1137	-	J1138	-	J1139	-	J1140	-	J1141	
	-	J1142	J1205	-	J1206	-	J1207	-	J1200	-	J1209	-	J1210	J1213	-	J1214	J1217		
	J1221	J1223	-	J1224	J1231	J1233	-	J1234	J1336	J1330	-	J1339	-	J1340					
	-	J1341	-	J1342															
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1125	J1211	J1222	J1308															
011022	J1106	J1131	J1223																
100017	J1131																		
100117	J1110	J1119	-	J1120	J1124	J1127	J1129	J1135	J1206	-	J1207	J1210							
	J1212	J1214	-	J1215	-	J1216	-	J1217	J1220	-	J1221	J1225	-	J1226	-	J1227			
	J1229	-	J1230	J1232	-	J1233	-	J1234	-	J1235	J1317	J1332	J1336	J1338					
	-	J1339	-	J1340															
SUBSTITUTE THE FOLLOI.IIMG CAR ASSEMBLIES:																			
	J1211	J1222	J1312	-	J1313	-	J1314	-	J1315	-	J1316	J1324	-	J1325	J1334				
	-	J1335																	
100217	J1339																		
100317	J1339																		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1310																		
100417	J1235	J1339																	
100517	J1229																		
100617	J1339																		
100717	J1339																		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1330																		
101017	J1104	-	J1105	-	J1106	-	J1107	-	J1108	-	J1109	-	J1110	-	J1111	-	J1112	J1115	
	J1117	-	J1118	-	J1119	-	J1120	J1122	-	J1123	-	J1124	J1126	-	J1127	-	J1129		
	-	J1129	-	J1130	J1133	-	J1134	-	J1135	-	J1136	J1139	J1204	-	J1205	-	J1206		
	-	J1207	-	J1208	-	J1209	-	J1210	J1212	-	J1213	-	J1214	-	J1215	-	J1216	-	J1217

TABLE 2-13. DISPLAY CONSOLE - 0 LHS (W/ADP F1) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF									
DIAGNOSE STATUS	IOU ON	CPU ON									
STOP			CONNECTORS								
	J1219	J1220	J1221	J1223	J1224	J31225	J1226	J1227	J1228	J1229	
-	J1230	J1231	J1232	J1233	J1234	J1235	J1311	J1317	J1318	J1319	
	J1327	J1328	J1331	J1332	J1336	J1338	J1339	J1340	J1341	J1342	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1125	J1211	J1222	J1308	J1312	J1313	J1314	J1315	J1316	J1320	
-	J1321	J1322	1323	J1324	J1325	J1326	J1329	J1330	J1333	J1334	
-	J1335										
101022	J1106	J1107	J1109	J1111	J1112	J1115	J1116	J1120	J1122	J1130	
	J1223	J1336									

TABLE 2-13. DISPLAY CONSOLE - 0 LH3 (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF											
DIAGNOSE STATUS	IOU ON	CPU ON											
STOP									CONNECTORS				
777777	J1106	J1100	-	J1109	-	J1110	-	J1111	J1119	-	J1128	J1206	J1209

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1211 J1307 J1314

TABLE 2-14. DISPLAY CONSOLE - 0 CS (J/ADP FI) FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU ON	CPU ON

STOP

CONNECTORS

NOTE:

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: "

CONNECTOR	TYPE	PART NUMBER
J1102	AC COUPLED I/O	10203630
THRU		
J1107	AC COUPLED I/O	10283630

TABLE 2-14. DISPLAY CONSOLE - 0 CS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU OFF
CPU ON

STOP

CONNECTORS

TABLE 2-14. DISPLAY CONSOLE - 0 CS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU ON	CPU ON	
STOP			CONNECTORS
000005	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1105		
000010	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1103		
0000817	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1103	- J1104	J1106
100417	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1102		
101017	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1102	- J1103	- J1104 - J1105 - J1106 - J1107

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU ON CPU ON

STOP

CONNECTORS

NOTE:

A LIST OF NON TESTABLE CARDS WITH CONNE: CTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: "

CONNECTOR	TYPE	PART NUMBER
J1125	1K OHM RESISTOR	587118
J1211	240 OHM RESISTOR	587119
J1222	2480 OHM RESISTOR	587119
J1303	TYPE 1 CATAGORY SELECT	10281673
THRU		
J1307	TYPE 1 CATAGORY SELECT	10201673
J1308	240 OHM RESISTOR	587119
J1312	ARITH LOGIC UNIT CONT.	18201675
J1313	ARITHMETIC LOGIC	10284731
THRU		
J1316	ARITHMETIC LOGIC	10284731
J1320	BIPOLAR READ/WRITE MEM.	10281607
THRLI		
J1323	BIPOLAR READ/WRITE MEM.	10281607
J1324	DISPLAY MEMORY NO.5	10283635
J1325	FILE ADDRESS CONTROL	10281777
J1326	DISPLAY MEMORY NO.3	10283633
J1329	DISPLAY MEMORY NO.1	10283631
J1330	DISPLAY MEMORY NO.4	18283634
J1333	DISPLAY MEMORY NO.2	10283700
J1334	SENSE SWITCH LOGIC	10281798
J1335	BIPOLAR READ/WRITE MEM.	10281607

000000 J1108 J1111 J1115 - J1116 - J1117 - J1118 J1139 J1142 J1207 J1210
 J1212 - J1213 J1215 - J1216 - J1217 - J1218 - J1219 J1223 J1225 - J1226
 - J1227 - J1228 J1233 J1318 J1327 - J1328 J1342

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1308 J1312 - J1313 - J1314 - J1315 - J1316 J1320 - J1321 - J1322 J1324
 - J1325 J1330

001035 J1106 J1110 - J1111 J1117 J1119 J1122 J1209 J1212 J1216 J1218
 J1220 J1224 - J1225 J1227 - J1220 - J1229 - J1230 J1318 J1327 - J1328
 J1341

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1222 J1312 J1314 J1326 J1334

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) ,AULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS STOP	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
001057	J1206 - J1207 - J1219 - J1220	J1209 - J1210 J1226 J1228 - J1229	J1212 - J1213 - J1231 - J1232	J1214 - J1215 - J1216	J1218							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
J1222 J1313 J1334												
001062	J1104 J1109 J1206 J1209	J1111 - J1112 J1214 J1224 - J1225	J1115 - J1116 J1229	J1119 - J1120 J1336 J1330	J1131 - J1132							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
J1211 J1316 J1325 - J1326 J1334												
001666	J1104 J1106 - J1107 - J1108 - J1109 - J1120 J1133 J1206 J1226 J1232	J1110 - J1111	J1117 J1118	J1119								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
J1211												
814041	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1316											

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF									
DIAGNOSE STATUS	IOU ON	CPU ON									
STOP	CONNECTORS										
000007	J1219	J1234									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1323	J1326	J1329								
000033	J1104	J1106	- J1107	J1109	- J1110	- J1111	J1115	- J1116	J1110	- J1119	
-	J1120	J1122	J1124	J1126	J1130	- J1131	- J1132	- J1133	- J1134	- J1135	
	J1223	J1336									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1222	J1308	J1326								
002100	J1131										
002200	J1234	- J1235	J1332								
002420	J1115	J1118									
010033	J1104	J1106	- J1107	J1109	- J1113	- J1111	- J1112	J1115	J1117	- J1118	
-	J1119	- J1120	J1122	- J1123	- J1124	J1126	J1129	- J1130	- J1131	- J1132	
-	J1133	- J1134	- J1135	J1139	- J1140	- J1141	J1218	- J1219	J1223	J1226	
	J1233	- J1234	- J1235	J1311	J1317	- J1318	- J1319	J1327	J1332	J1336	
	J1341	- J1342									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1125	J1211	J1222	J1308							
010050	J1117	- J1118	- J1119	- J1120	J1122	- J1123	J1126	J1129	- J1130	- J1131	
-	J1132	J1135	J1138	J1140	J1223	- J1224	J1336	J1330	J1340	- J1341	
-	J1342										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1300										
012100	J1104	- J1105	- J1106	J1107	- J1108	- J1109	- J1110	- J1111	- J1112	J1115	
-	J1116	- J1117	- J1118	- J1119	- J1120	- J1122	- J1123	- J1124	J1126	- J1127	
	J1130	- J1131	- J1132	- J1133	- J1134	- J1135	J1137	- J1138	- J1139	- J1140	
-	J1141	- J1142	J1204	- J1205	- J1206	- J1207	- J1208	- J1209	J1214	J1216	
-	J1217	J1220	J1223	- J1224	J1227	J1234	- J1235	J1336	J1340	- J1341	
-	J1342										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1125	J1222	J1308								
012200	J1109										
020033	J1116	J1118	J1130	J1135	J1205	J1338					
030033	J1115	J1122	J1226	J1228	J1230						
040033	J1120	J1122	J1141								

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF				
DIAGNOSE STATUS	IOU OFF	CPU ON				
STOP						CONNECTORS

050033	J1111	J1123	J1234			
060033	J1122	J1209				
070033	J1115 -	J1116	J1141	J1229	J1233 -	J1234
112040	J1228	J1233	J1318	J1338		

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1324 J1330

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS								
DIAGNOSE STATUS	IOU ON	CPU ON									
STOP											
000803	J1135	J1141									
000017	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1326										
001017	J1104	J1105	J1106	J1107	J1108	J1109	J1110	J1111	J1112	J1115	
	- J1116	- J1117	- J1118	- J1119	- J1120	J1122	- J1123	- J1124	J1126	- J1127	
	J1129	- J1130	- J1131	- J1132	- J1133	- J1134	- J1135	J1137	- J1138	- J1139	
	- J1140	- J1141	- J1142	J1205	- J1206	- J1207	- J1208	- J1209	- J1210	J1213	
	- J1214	J1217	J1221	J1223	J1231	- J1232	- J1233	J1336	J1338	J1340	
	- J1341	- J1342									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1125 J1211 J1222 J1308										
001022	J1106	J1111	J1315	- J1116	J1131						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1211										
010001	J1111	J1117	- J1118	J1120	J1122	- J1123	J1126	J1128	- J1129	J1132	
	J1134	J1205	J1341								
010002	J1117	J1120	J1126	J1128	J1205	J1230	J1233				
010003	J1104	J1116	- J1117	- J1118	- J1119	- J1120	J1126	- J1127	- J1120	- J1129	
	J1205	J1207	J1215	J1220	- J1221	J1225	J1235	J1332	J1341	- J1342	
	SLIBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222 J1330										
010004	J1117	J1120	J1126	J1128	- J1129	J1132					
010005	J1119	J1122	J1124	J1126	- J1127	- J1123	- J1129	J1210	J1215	J1228	
	J1231	- J1232	- J1233	J1317	- J1318	J1331	- J1336	J1341			
	SUBSTITUTE THE FOLLOING CARD ASSEMBLIES: J1211 J1315 - J1316 J1321 J1335										
010007	J1117	J1126	- J1127	- J3112	- J1129	J1132	J1135	J1331			
010010	J1117	J1120	J1126	J1128	- J1129	J1132	J1338				
010012	J1110	J1124	J1127	- J1128	- J1129	J1210	J1215	J1228	J1230	- J1231	
	- J1232	- J1233	J1319	J1331							
	SUBSTITUTE TIE FOLLOWING CARD ASSEMBLIES: J1211 J1313 - J1314 J1320 - J1321 - J1322 J1335										
010013	J1120										
018014	J1116	J1126	J1221	J1224	J1233						

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU ON	CPU OFF CPU ON	CONNECTORS								
STOP											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1321	J1330									
010817	J1104 - J1105 - J1106 - J1107 - J1108 - J1109 - J1110 - J1111	J1115 - J1116									
	- J1117 - J1110 - J1119 - J1120	J1122 - J1123 - J1124	J1126 - J1127 - J1128								
	- J1129 - J1130 - J1131 - J1132 - J1133 - J1134 - J1135	J1130 - J1139	J1140								
	- J1141 - J1142	J1285 - J1206 - J1207	J1209 - J1210	J3212 - J1213 - J1214							
	- J1215 - J1216 - J1217 - J1212 - J1219 - J1220 - J1221	J1223 - J1224 - J1225									
	- J1226 - J1227 - J1228 - J1229 - J1230 - J1231 - J1232	- J1233 - J1234 - J1235									
	J1311 J1317 - J1318 - J1319	J1327 - J1328	J1331 - J1332	J133G	J1330						
	- J1339 - J1340 - J1341 - J1342										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1125	J1211	J1222	J1308	J1312	- J1133 - J1314 - J1315 - J1316	J1320				
	- J1321 - J1322 - J1323 - J1324 - J1325 - J1326	J1330	J1333	- J1334 - J1335							
011022	J1109	J1115	J1117 - J1118	J1120	J1122						
011023	J1115 - J1116	J1118 - J1119 - J1120	J1126	J1223							
100017	J1131										
100107	J1129										
100117	J1118	J1120 - J1129	J1207	J1212	J1216	J1210 - J1219	J1221	J1226			
	- J1227 - J1220	J1232 - J1233	J1317	J1319	J1332	J1336	J1338	J1340			
	- J1341										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1222	J1312 - J1313 - J1314 - J1315 - J1316	J1324	J1330	J1335						
100217	J1215	J1317	J1342								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1222	J1313	J1322	J1324 - J1325	J1330						
100417	J1338										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1222										
100517	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1222										
100617	J1338 - J1339										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1222										
100717	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1222										

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF																
DIAGNOSE STATUS		IOU ON		CPU ON																
STOP												CONNECTORS								
181817	J1104	-	J1105	-	J1106	-	J1107	-	J1138	-	J1109	-	J1110	-	J1111	-	J1112	-	J1115	
	-	J1116	-	J1117	-	J1118	-	J1119	-	J1120	-	J1122	-	J1123	-	J1124	-	J1126	-	J1127
	-	J1128	-	J1129	-	J1130	-	J1132	-	J1133	-	J1134	-	J1135	-	J1136	-	J1137	-	J1139
		J1141	-	J1142	-	J1204	-	J1205	-	J1206	-	J1207	-	J1208	-	J1210	-	J1212	-	J1213
	-	J1214	-	J1215	-	J1216	-	J1217	-	J1218	-	J1219	-	J1220	-	J1221	-	J1223	-	J1224
	-	J1225	-	J1226	-	J1227	-	J1228	-	J1229	-	J1230	-	J1231	-	J1232	-	J1233	-	1234
	-	J1235	-	J1311	-	J1317	-	J1310	-	J1319	-	J1327	-	J1328	-	J1331	-	J1332	-	J1336
		J1338	-	J1339	-	J1340	-	J1341	-	J1342	-		-		-		-		-	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																				
	J1125		J1211		J1222		J1308		J1312	-	J1313	-	J1314	-	J1313	-	J1316	-	J1320	
	-	J1321	-	J1322	-	J1323	-	J1324	-	J1325	-	J1326	-	J1329	-	J1330	-	J1333	-	J1334
	-	J1335	-		-		-		-		-		-		-		-		-	
181022	J1111		J1115		J1120		J1130		J1132		J1223		J1235							

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		CONNECTORS						
	IOU ON		CPU ON								
STOP											
777777	J1106 J1209	J1108 - J1109 J1327 - J1328	J1111	J1115	J1120	J1122	J1135	J1205	-	J1206	

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU ON
IOU ON

CPU ON
CPU ON

STOP

CONNECTORS

777777 J1341

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (WLADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU ON
CPU ON

STOP

CONNECTORS

366053 J1210

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU ON	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
543725	J1218		
740344	J1218		
751743	J1218		
761304	J1218		

TABLE 2-15. DISPLAY CONSOLE - I LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU ON
IOU ON

CPU OFF
CPU OFF

STOP

CONNECTORS

004202 J1218

TABLE 2-15 DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

**PROGRAM LOAD STATUS
DIAGNOSE STATUS**

**IOU ON
IOU OFF**

**CPU ON
CPU OFF**

STOP

CONNECTORS

600004 J1218

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS						
DIAGNOSE STATUS		IOU OFF		CPU OFF								
STOP												
740000	J1218											
777777	J1106 J1209	J1108 J1327	- -	J1109 J1328	J1111	J1115	J1120	J1122	J1135	J1205	-	J1206

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU ON	CPU ON	
DIAGNOSE STATUS	IOU ON	CPU OFF	
STOP			CONNECTORS
743700	J1218		
775400	J1218		

TABLE 2-15. DISPLAY CONSOLE - 1 LHS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU ON
IOU ON

CPU ON
CPU ON

STOP

CONNECTORS

777777 J1341

TABLE 2-16. DISPLAY CONSOLE - 1 CS (W/ADP FI) FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF

STOP

CONNECTORS

NOTE:

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: "

CONNECTOR	TYPE	PART NUMBER
J1102 THRU J1107	AC COUPLED I/O	10283630
	AC COUPLED I/O	10283630

TABLE 2-16. DISPLAY CONSOLE - 1 CS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS

TABLE 2-16. DISPLAY CONSOLE - 1 CS (W/ADP FI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU ON	CPU ON

STOP

CONNECTORS

010007 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1103

010010 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1103

010017 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1102 - J1103 - J1104 - J1105 - J1106

101017 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1103

TABLE 2-17. MTU (GENISCO) FAULT LOCATION

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU OFF
CPU OFF

STOP

CONNECTORS

CAUTION

REMOVE TAPE CARTRIDGE FROM TAPE TRANSPORT BEFORE USING MODULE TEST SET TO TEST DIGITAL CARDS IN THE MTU.

NOTE

THE FOLLOWING CARDS ARE LOCATED IN THE TAPE TRANSPORT SECTION

OF THE MTU: A1 R/J LOGIC 464
A2 R/W LOGIC 464
A3 R/W LOGIC 464
A4 CONTROL LOGIC 467
A5 SERVO AMP 465

- 000000 1. SUBSTITUTE:
 - A. A4 CONTROL LOGIC 467
 - B. A5 SERVO AMP 465
- 2. TEST DIGITAL CARDS.

000000 J1107 J1112 - J1113 J1115 - J1116 - J1117 J1119 J1126 - J1127 J1129
- J1130 - J1131 - J1132 - J1133 - J1134 J1202 - J1203 - J1204 - J1205 - J1286
- J1207 - J1288 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216
- J1217 - J1218 J1220 - J1221 - J1222 - J1223 - J1224 - J1225 - J1226 - J1227
- J1228 - J1229 - J1230 - J1231 - J1232 - J1233

- 540001 1. SUBSTITUTE:
 - A. A5 SERVO AMP 465
 - B. A4 CONTROL LOGIC 467
- 2. TEST DIGITAL CARDS.

540001 J1113 J1116 - J1117 - J1118 J1121 - J1122 - J1123 - J1124 - J1125 J1128
J1130 J1132 - J1133 - J1134 J1202 - J1203 - J1204 - J1205 J1207 - J1208
- J1209 J1211 J1214 - J1215 - J1216 J1218 J1222 - J1223 J1227 - J1228
- J1229 J1231

- 540002 1. SUBSTITUTE: A4 CONTROL LOGIC 467
- 2. TEST DIGITAL CARDS.

540002 J1105 J1113 J1115 - J1116 J1121 - J1122 - J1123 - J1124 - J1125 J1128
J1133 J1226 J1231

- 540003 1. SUBSTITUTE:
 - A. A5 SERVO AMP 465
 - B. J1120 OSC CARD 587100
- 2. TEST DIGITAL CARDS.

540003 J1106 - J1187 - J1108 - J1109 - J1110 - J1111 - J1112 - J1113 - J1114 - J1115
- J1116 - J1117 - J1118 - J1119 - J1121 - J1122 - J1123 - J1125 - J1126 - J1127
- J1128 - J1129 J1202 - J1203 - J1204 - J1285 - J1206 - J1207 - J1208 - J1209
- J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217 - J1218 J1220
- J1221 - J1222 J1224 - J1225 - J1226 - J1227 - J1228 - J1229 - J1230 J1232

TABLE 2-17. MTU (GENISCO) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	CONNECTORS
DIAGNOSE STATUS					
STOP					
540004	J1108 - J1109 - J1110 - J1111 - J1112	J1118	J1121 - J1122 - J1123	J1125	J1125
	- J1126 - J1127 - J1128 - J1129 - J1130	- J1131 - J1132	- J1282 - J1203	- J1204	
	- J1205 - J1206 - J1207 - J1208	J1213 - J1214	J1216	J1218	
540005	J1113	J1115 - J1116 - J1117	J1121 - J1122 - J1123	J1125	J1126 - J1127
	- J1128	J1207 - J1208	J1213		
540006	1. SUBSTITUTE: J1120 OSC CARD 587100 2. TEST DIGITAL CARDS.				
540006	J1106	J1116 - J1117 - 1118 - J1119	J1121 - J1122 - J1123	J1125	J1127
	- J1128 - J1129	J1132 - J1134	J1204 - J1205 - J1206 - J1207	- J1208 - J1209	- J1233
	J1213 - J1214	- J1215 - J1216	J1218 - J1220	- J1229 - J1230	- J1232
540007	J1109 - J1110 - J1111	J1113	J1116 - J1117 - J1118 - J1119	J1121	J1122
	- J1123 - J1124 - J1125 - J1126 - J1127	- J1128 - J1129 - J1130 - J1131	- J1132 - J1133 - J1134	- J1135	- J1136
	- J1133 - J1134	J1202 - J1207 - J1208 - J1209 - J1210	- J1211 - J1212 - J1213	- J1214 - J1215	- J1216 - J1217
	- J1214 - J1215 - J1216 - J1217 - J1218	31220 - J1221 - J1222 - J1223	- J1224 - J1225	- J1226 - J1227	- J1228 - J1229
	- J1226	J1228 - J1229 - J1230 - J1231 - J1232	- J1233		
540010	J1125	J1128	J1130 - J1131 - J1132		
540011	1. SUBSTITUTE: A. A1 R/W LOGIC 464 B. A3 R/W LOGIC 464 C. A4 CONTROL LOGIC 467 2. TEST DIGITAL CARDS.				
540011	J1125	J1128	J1130 - J1131 - J1132 - J1133	J1233	
540012	1. SUBSTITUTE: A. A3 R/W LOGIC 464 B. A2 R/W LOGIC 464 2. TEST DIGITAL CARDS.				
540012	J1125	J1128	J1130 - J1131 - J1132 - J1133	J1233	
540013	1. SUBSTITUTE: A. A1 R/W LOGIC 464 B. A2 R/W LOGIC 464 2. TEST DIGITAL CARDS.				
540013	J1125	J1128	J1130 - J1131 - J1132 - J1133	J1233	
540014	1. SUBSTITUTE: A. A3 R/J LOGIC 464 B. A2 R/W LOGIC 464 2. TEST DIGITAL CARDS.				
540014	J1125	J1128	J1130 - J1131 - J1132 - J1133	J1233	
540015	1. SUBSTITUTE:				

TABLE 2-17. MTU (GENISCO) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS														
STOP																	
	A. A2	R/I LOGIC 464															
	B. A1	R/W LOGIC 464															
	2. TEST DIGITAL CARDS.																
540015	J1117	J1125	J1120	J1138	-	J1131	-	J1132	-	J1133	J1233						
540016	1. SUBSTITUTE:																
	A. A2	R/W LOGIC 464															
	B. A1	R/W LOGIC 464															
	2. TEST DIGITAL CARDS.																
540016	J1125	J1128	J1130	-	J1131	-	J1132	-	J1133	J1207	J1220	J1222	-	J1223			
	J1227	-	J1220	J1233													
540017	1. SUBSTITUTE:																
	A. A1	R/W LOGIC 464															
	B. A3	R/W LOGIC 464															
	C. A5	SERVO AMP 465															
	2. TEST DIGITAL CARDS.																
540017	J1124	-	J1125	J1127	-	J1128	J1130	-	J1131	-	J1132	-	J1133	-	J1134	J1203	
	-	J1204	-	J1205	J1222	J1230	-	J1231	-	J1232	-	J1233					
540020	1. SUBSTITUTE: A4 CONTROL LOGIC 467																
	2. TEST DIGITAL CARDS.																
540020	J1116	J1216	-	J1217	J1221	J1226	-	J1227									
540021	1. SUBSTITUTE:																
	A. A4	CONTROL LOGIC 467															
	B. A1	R/W LOGIC 464															
	2. TEST DIGITAL CARDS.																
540021	J1115	-	J1116	-	J1117	-	J1118	-	J1119	J1125	-	J1126	J1209	-	J1218	J1214	
	-	J1215	J1217	J1220	-	J1221	-	J1222	-	J1223	J1225	-	J1226	-	J1227	-	J1228
	-	J1229	J1231														
540022	1. SUBSTITUTE:																
	A. A4	CONTROL LOGIC 467															
	B. A2	R/W LOGIC 464															
	2. TEST DIGITAL CARDS.																
540022	J1122	-	J1123	J1127	-	J1128	J1131	J1288	J1214	-	J1215	-	J1216	J1210			
	J1220	J1222	J1224	J1233													
540024	1. SUBSTITUTE:																
	A. A5	SERVO AMP 465															
	B. A4	CONTROI LOGIC 467															
	2. TEST DIGITAL CARDS.																
540024	J1115	-	J1116	J1119	J1125	-	J1126	-	J1127	J1133	J1202	J1204	J1208				
	J1218	J1213	-	J1214	J1217	-	J1218	J1220	-	J1221	-	J1222	-	J1223	-	J1224	

TABLE 2-17. MTU (GENISCO) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	J1226	- J1227	- J1228	- J1229	- J1238					
540025	1. SUBSTITUTE: A. A4 CONTROL LOGIC 467 B. A5 SERVO AMP 465 2. TEST DIGITAL CARDS.									
540025	J1126	- J1127	J1204	- J1205	J1208	J1210	J1212	- J1213	J1217	J1227
540027	1. SUBSTITUTE: A. A4 CONTROL LOGIC 467 B. J1120 OSC CARD 587110 2. TEST DIGITAL CARDS.									
540027	J1121	- J1122	- J1123	- J1124	J1133	J1222	J1227	- J1228	J1230	- J1231
540030	J1116	J1121	- J1122	- J1123	- J1124					
540031	1. SUBSTITUTE: A. A4 CONTROL LOGIC 467 B. A5 SERVO AMP 465 2. TEST DIGITAL CARDS.									
540031	J1113	J1121	- J1122	- J1123	- J1124	J1133	J1220	J1226		
540032	1. SUBSTITUTE: J1120 OSC CARD 587100 2. TEST DIGITAL CARDS.									
540032	J1116	- J1117	- J1118	J1121	- J1122	- J1123	- J1124	J1127	J1207	- J1208
	J1214	J1217	- J1218	J1220	J1224	- J1225	- J1226	J1230		
540033	1. SUBSTITUTE: A. A2 R/W LOGIC 464 B. A3 R/W LOGIC 464 2. TEST DIGITAL CARDS.									
540033	J1113	J1115	- J1116	- J1117	- J1118	- J1119	J1125	- J1126	- J1127	J1129
	- J1130	- J1131	J1202	- J1203	- J1204	- J1205	- J1206	- J1207	- J1208	J1210
	- J1211	J1213	- J1214	- J1215	- J1216	- J1217	J1220	- J1221	- J1222	- J1223
	- J1224	- J1225	- J1226	- J1227	- J1228	- J1229	- J1230	- J1231	- J1232	- J1233
540037	1. SUBSTITUTE: A. A5 SERVO AMP 465 B. A4 CONTROL LOGIC 467 2. TEST DIGITAL CARDS.									
540037	J1107	J1112	- J1113	J1115	- J1116	- J1117	J1119	J1123	J1125	- J1126
	- J1127	J1129	J1131	- J1132	- J1133	J1202	J1206	J1208	- J1209	1210
	- J1211	- J1212	- J1213	- J1214	- J1215	- J1216	- J1217	- J1218	J1220	- J1221
	- J1222	- J1223	- J1224	- J1225	- J1226	- J1227	- J1228	- J1229	- J1230	- J1231
	- J1232	- J1233	- J1234							

TABLE 2-17. MTU (GENISCO) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS								
DIAGNOSE STATUS	IOU OFF	CPU OFF									
STOP											
540040	1. SUBSTITUTE: A. A2 R/W LOGIC 464 B. A1 R/W LOGIC 464 C. A3 R/W LOGIC 464 D. A4 CONTROL LOGIC 467 2. TEST DIGITAL CARDS.										
540040	J1113 J1282	J1124 - J1203	J1125 - J1207	J1126 - J1208	J1127 J1214	J1130 J1217	J1131 - J1226	J1132 - J1230	J1133 - J1233	J1134	
540041	1. SUBSTITUTE: A. A3 R/W LOGIC 464 B. A1 R/W LOGIC 464 C. A2 R/W LOGIC 464 D. A4 CONTROL LOGIC 467 E. A5 SERVO AMP 465 2. TEST DIGITAL CARDS.										
540041	J1113 - J1124 - J1134 - J1211 - J1222 - J1232	- J1114 - J1125 J1282 - - J1212 - J1223 - J1233	- J1115 - J1126 - J1283 - J1213 - J1224	- J1116 - J1127 - J1204 - J1214 - J1225	- J1117 - J1128 - J1205 - J1215 - J1226	- J1118 - J1129 - J1206 - J1216 - J1227	- J1119 - J1130 - J1207 - J1217 - J1228	J1121 - J1131 - J1208 - J1218 - J1229	- J1122 - J1132 - J1209 J1220 - J1230	- J1123 - J1133 - J1210 - J1221 - J1231'	
540042	1. SUBSTITUTE: A. A4 CONTROL LOGIC 467 B. A5 SERVO AMP 465 2. TEST DIGITAL CARDS.										
540042	J1115 - J1127 J1217 - J1228	- J1116 J1130 - J1218 J1230	- J1117 J1205 - J1220 - J1231	- J1118 J1208 - J1221 - J1232	- J1119 - J1209 - J1222 - J1223	J1121 - J1210 - J1223 - J1224	- J1122 - J1211 - J1224 - J1225	J1124 - J1213 - J1225 - J1226	- J1125 - J1214 - J1226 - J1227	- J1126 - J1215 - J1227	
540043	J1115 - J1130 - J1211 - J1224	- J1116 J1132 - J1212 - J1225	- J1117 J1134 - J1213 - J1226	- J1118 J1202 - J1215 - J1227	- J1119 - J1203 - J1216 - J1228	J1124 - J1204 - J1217 - J1229	- J1125 - J1205 - J1217 J1231	- J1126 - J1206 - J1220 - J1232	- J1127 J1208 - J1222 - J1233	J1129 J1210 - J1223	
540044	J1124	- J1125	- J1126	- J1127	J1207						
540045	J1124	J1207	J1231								
540046	J1117 - J1203 - J1228	J1124 - - J1204 - J1229	- J1125 - J1205 - J1230	- J1126 - J1206 - J1231	J1128 - J1207 - J1232	J1130 - J1208 - J1233	- J1131 - J1209	- J1132 J1216	J1134 J1218	J1202 J1227	
540047	J1121	- J1122	- J1123	- J1124	J1129	J1207	- J1208	J1232	- J1233		
702600	J1122	J1127	J1223								

TABLE 2-17. MTU (GENISCO) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF											
DIAGNOSE STATUS	IOU OFF	CPU OFF											
STOP	CONNECTORS												
777771	J1114	J1122	J1125	J1127	J1138	J1134	J1212	-	J1213	-	J1214	-	J1215
	- J1216	- J1217	- J1218	J1220	- J1221	- J1222	- J1223	-	J1224	-	J1225	-	J1229
	- J1230	- J1231	- J1232	- J1233									

TABLE 2-17. MTU (GENISCO) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
777777	J1227		

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	OFF	CPU OFF
DEVICE EROR TIME OUT	OFF	OFF
000003	J31132	J1209
000006	J1129	
000010	J1128	
000052	J1129	
000065	J1129	
000133	J1132	
000246	J1128	
000676	J1129	
001062	BOT	OFF
	J1123	J1207
	BOT	OFF
	J1207	J1228
		MTU
		FAULT
		OFF
		ON
		J1230
		J1231
001660	J1224	

Change 3 2-290.1

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	OFF	CPU OFF
DEVICE ERROR TIME OUT	OFF	OFF
001666		
BOT OFF	MTU	FAULT OFF
J1115 J1119	J1130	J1134 J1202
J1210 J1213	J1214	J1218 J1225
J1226 J1227	J1228	J1229 J1231
RUN AWAY TAPE		
J1128 J1203	J1204	J1208 J1211
J1217 J1220	J1224	
BOT ON	MTU	FAULT OFF
J1215		
BOT OFF	MTU	FAULT ON
J1229		
RUN AWAY TAPE		
J1208 J1210	J1226	
002005		
J1129		
700002		
J1130		
700230		
J1115		
RUN AWAY TAPE		
J1118		
700770		
J1111		
702600		
J1115		

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	OFF	OFF
DEVICE EROR TIME OUT	OFF	OFF
770020		
J1222		
RUN AWAY TAPE		
J1213 J1217	J1223	J1227
772404		
J1118		
777004		
J1124		
777770		
J1221		
777777		
BOT OFF	MTU	FAULT OFF
J1116 J1126		
BOT ON	MTU	FAULT OFF
J1284 J1229		
BOT OFF	MTU	FAULT ON
J1117 J1226		
RUN AWAY TAPE		
J1225		

Change 3 2-290.3

TABLE 2-17A

MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	OFF	
DEVICE ERROR TIME OUT	ON	

001666

J1115

Change 3 2-290.4

TABLE 2-17A

MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	ON	
DEVICE ERROR TIME OUT	OFF	

000016

J1214

001666

J1222

777777

J1108

Change 3 2-290.5

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
IOU FAULT	ON	ON	ON	ON	ON	ON
DEVICE ERROR TIME OUT	ON	ON	ON	ON	ON	ON
001166						
	J1116					
001666						
	J1111	J1115	J1116	J1117	J1118	
	J1119	J1124	J1207	J1208	J1209	
	J1211	J1212	J1213			
	J1214	J1215	J1216	J1217	J1222	
	J1223	J1224	J1225	J1226	J1228	
	J1231					
	BOT	ON	MTU	FAULT	OFF	
	J1214	J1215				
	BOT	OFF	MTU	FAULT	ON	
	J1220	J1221				
016660						
	J1212					
074000						
	BOT	OFF	MTU	FAULT	OFF	
	J1221					
	BOT	ON	MTU	FAULT	OFF	
	J1221	J1223				
074001						
	J1224					
074041						
	BOT	OFF	MTU	FAULT	OFF	
	J1222					
	BOT	ON	MTU	FAULT	OFF	
	J1213	J1214	J1222	J1223	J1231	

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	ON	
DEVICE EROR TIME OUT	ON	

700003

J1122 J1213

777777

J1231

Change 3 2-290.7

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF
IOU FAULT	OFF	OFF	OFF	OFF
DEVICE ERROR TIME OUT	OFF	OFF	OFF	OFF
000000				
	J1127			
000001				
	J1218			
777003				
BOT	OFF	MTU	FAULT	OFF
J1115	1116	J1203	31228	J1222
J1226				
BOT	OFF	MTU	FAULT	ON
J1132				
RUN AWAY TAPE				
J1223	31227			
777037				
	J1124			
777177				
	J1129			
777201				
	J1121			
777777				
BOT	ON	MTU	FAULT	OFF
J1221	J1222	J1229		
BOT	OFF	MTU	FAULT	ON
J1129				
BOT	ON	MTU	FAULT	ON
J1129				

Change 3 2-290.8

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU ON
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	ON	
DEVICE ERROR TIME OUT	ON	

074071

J1215

Change 3 2-290.9

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU ON	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	OFF	
DEVICE ERROR TIME OUT	OFF	

777777

BOT OFF	MTU FAULT	OFF
---------	-----------	-----

J1128

BOT ON	MTU FAULT	OFF
--------	-----------	-----

J1228

BOT OFF	MTU FAULT	ON
---------	-----------	----

J1225

Change 3 2-290.10

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS IOU FAULT DEVICE ERROR TIME OUT	IOU ON IOU OFF OFF OFF	CPU ON CPU OFF		
777003				
BOT OFF	MTU FAULT	OFF		
J1204				
BOT ON	MTU FAULT	OFF		
J1203				
777007				
BOT OFF	MTU FAULT	OFF		
J1118 J1216	J1119 J1230	J1129 J1233	J1206	J1209
BOT ON	MTU FAULT	OFF		
J1215				
BOT OFF	MTU FAULT	ON		
J1116 J1122 J1128 J1209 J1233	J1117 J1124 J1129 J1211	J1118 J1125 J1130 J1212	J1119 J1126 J1131 J1230	J1121 J1127 J1132 J1231
RUN AWAY TAPE				
J1207				
777017				
BOT OFF	MTU FAULT	OFF		
J1233				
BOT OFF	MTU FAULT	ON		
J31132				

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU ON	CPUON		
DIAGNOSE STATUS	IOU OFF	CPU OFF		
IOU FAULT	OFF			
DEVICE ERROR TIME OUT	OFF			
777037				
BOT OFF	MTU FAULT	OFF		
J1203	J1205			
BOT OFF	MTU FAULT	ON		
J1112	J1118	J1119	J1121	J1122
J1124	J1125	J1126	J1127	J1132
J1133	J1134	J1207		
777117				
J1130				
777177				
BOT OFF	MTU FAULT	OFF		
J1123	J1127	J1132	J1203	J1204
J1205	J1211	J1231		
BOT OFF	MTU FAULT	ON		
J1108	J1109	J1116	J1117	J1118
J1119	J1121	J1122	J1123	J1124
J1125	J1126	J1127	J1128	J1129
J1130	J1131	J1132	J1133	J1134
J1203	J1204	J1205	J1206	J1211
J1212	J1214	J1215	J1229	J1231
J1233				
RUN AWAY TAPE				
J1129	J1202			
BOT ON	MTU FAULT	ON		
J1133				

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS IOU FAULT DEVICE ERROR TIME OUT	IOU ON IOU OFF OFF OFF	CPU ON CPU OFF			
777703					
BOT OFF	MTU FAULT	ON			
J1126					
BOT OFF	MTU FAULT	OFF			
J1228					
BOT ON	MTU FAULT	OFF			
J1221 J1230	J1222	J1225	J1227	J1228	
BOT OFF	MTU FAULT	ON			
J1230					
BOT ON	MTU FAULT	ON			
J1221					
777777					
BOT OFF	MTU FAULT	OFF			
J1115 J1125 J1216 J1227 J1232	J1117 J1128 J1218 J1228 J1233	J1119 J1209 J1222 J1229	J1122 J1212 J1224 J1230	J1123 J1214 J1226 J1231	
RUN AWAY TAPE					
J1116 J1130 J1203 J1210 J1220	J1124 J1131 J1204 J1211 J1221	J1126 J1132 J1205 J1213 J1223	J1127 J1134 J1206 J1215 J1225	J1129 J1202 J1208 J1217	
BOT ON	MTU FAULT	OFF			
J1107 J1112 J1119 J1125 J1131 J1204 J1209 J1215 J1221 J1226	J1108 J1115 J1121 J1126 J1132 J1205 J1210 J1216 J1222 J1227	J1109 J1116 J1122 J1128 J1133 J1206 J1211 J1217 J1223 J1228	J1110 J1117 J1123 J1129 J1202 J1207 J1212 J1218 J1224 J1229	J1111 J1118 J1124 J1130 J1203 J1208 J1213 J1220 J1225 J1230	

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU ON	CPU ON		
DIAGNOSE STATUS	IOU OFF	CPU OFF		
IOU FAULT	OFF			
DEVICE ERROR TIME OUT	OFF			
RUN AWAY TAPE				
J31127	J1214			
BOT OFF	MTU FAULT	ON		
J1106	J1107	J1109	J1110	J1111
J1115	J1116	J1117	J1118	J1119
J1121	J1122	J1123	J1124	J1125
J1127	J1128	J1129	J1130	J1131
J1132	J1133	J1134	J1202	J1203
J1204	J1205	J1206	J1207	J1208
J1209	J1210	J1211	J1213	J1214
J1215	J1216	J1217	J1220	J1222
J1223	J1224	J1225	J1226	J1227
J1228	J1229	J1230	J1231	J1232
J1233				
RUN AWAY TAPE				
J1126	J1218			
BOT ON	MTU FAULT	ON		
J1115	J1117	J1118	J1122	J1127
J1129	J1130	J1132	J1206	J1207
J1208	J1209	J1212	J1214	J1215
J1216	J1217	J1218	J1220	J1221
J1223	J1224	J1225	J1229	J1230
J1232	J1233			
RUN AWAY TAPE				
J1212	J1218			

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU ON	CPU ON
DIAGNOSE STATUS	IOU OFF	CPU OFF
IOU FAULT	OFF	
DEVICE ERROR TIME OUT	ON	

777777

J1230

Change 3 2-290.15

TABLE 2-17R MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS IOU FAULT DEVICE ERROR TIME OUT	IOU OFF IOU OFF OFF OFF	CPU OFF CPU ON			
000001					
J1209	J1213	J1215	J1231		
000044					
J1128					
001064					
J1215					
702600					
BOT OFF	MTU FAULT	OFF			
J1115	J1116	J1117	J1118	J1119	
BOT OFF	MTU FAULT	ON			
J1116					
777770					
J1224					
777777					
BOT OFF	MTU FAULT	OFF			
J1108	J1109	31115	J1116	J1117	
J118	J1119	J1122	J1127	J1202	
J1205	J1207	J1209	J1210	J1211	
J1213	J1214	J1220	31221	J1224	
J1226	J1227	J1228	31229	J1230	
J1231	J1233				
RUN AWAY TAPE					
J1124	J1206	J1208	J1215	J1217	
J1222	J1223	J1225			
BOT ON	MTU FAULT	OFF			
J1215					
BOT OFF	MTU FAULT	ON			
J1117	J1214	J1222	J1229		
RUN AWAY TAPE					
J1127	J1133	J1202	J1208	J1210	
J1211	J1212	J1220	J1221	J1223	
J1224	J1225	J1226	J1227	J1228	

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU ON
IOU FAULT	ON	
DEVICE ERROR TIME OUT	OFF	

777777

BOT OFF	MTU FAULT	OFF		
J1227	J1228	J1229	J1230	J1232
BOT OFF	MTU FAULT	ON		
J1227				

Change 3 2-290.17

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU ON
IOU FAULT	ON	
DEVICE ERROR TIME OUT	ON	

777777

BOT OFF MTU FAULT OFF

J1207

BOT OFF MTU FAULT ON

J1122

Change 3 2-290.18

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU ON	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU ON
IOU FAULT	OFF	
DEVICE ERROR TIME OUT	OFF	

777777

BOT OFF	MTU FAULT	OFF
J1232		
BOT ON	MTU FAULT	OFF
J1123	J1129	
BOT OFF	MTU FAULT	ON
J1132		
BOT ON	MTU FAULT	ON
J1127		

Change 3 2-290.19

TABLE 2-17A MTU (W/ADPFI) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF		
DIAGNOSE STATUS	IOU ON	CPU ON		
IOU FAULT	ON			
DEVICE ERROR TIME OUT	OFF			
101017				
BOT OFF	MTU FAULT	OFF		
J1116	1 117	J1209	J1214	
RUN AWAY TAPE				
J1225	J1227			
BOT OFF	MTU FAULT	ON		
J1119	J1225	J1226		
RUN AWAY TAPE				
J1223	J1227			

2-290.20 Change 3

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS

NOTE

THE DISPLAY CONSOLE FAULT CATALOG CONTAINS THREE (3) SECTIONS:

LEFT HAND SIDE (LHS) CARD RACK, CENTER SECTION (CS) CARD RACK, AND A RIGHT HAND SIDE (RHS) CARD RACK. UTILIZE THE FOLLOWING ERROR STOP NUMBER LOCATION MATRIX TO DETERMINE THE FAULT ISOLATION SEQUENCE.

- A. IF AN ERROR STOP IS LISTED IN MORE THAN ONE SECTION A "1" INDICATES TO PERFORM ACTIONS LISTED UNDER THE ERROR STOP NUMBER FOR THAT PORTION OF THE CONSOLE FIRST, IF FAULT IS NOT FOUND, A "2" INDICATES TO PERFORM ACTIONS LISTED UNDER THE SAME ERROR STOP NUMBER FOR THAT SECTION AND IF THE FAULT IS NOT FOUND A "3" INDICATES TO PERFORM ACTIONS INDICATED FOR THAT PORTION OF THE CONSOLE.
- B. IF AN ERROR STOP IS ONLY LISTED IN ONE SECTION A "1" INDICATES THE SECTION THAT IT IS LISTED IN.
- C. A DASH "-" INDICATES THAT THE ERROR STOP NUMBER IS NOT LISTED IN THAT SECTION OF THE DISPLAY FAULT CATALOG.
- D. IF ONLY ONE "1" MTS TESTABLE CARD IS LISTED UNDER AN ERROR STOP NUMBER USE THE SUBSTITUTION METHOD TO DETERMINE IF IT IS FAULTY

020022	-	-	1
200001	1	-	2
200002	1	3	2
280003	1	-	-
200004	1	-	-
200005	1	-	2
200006	1	-	-
200007	1	-	-
200010	1	-	-
200011	1	-	-
200013	1	-	-
200017	1	-	-
200020	1	-	-
200021	1	-	-
200022	1	-	-
200023	1	-	-
200024	1	-	-
200025	1	-	-
200027	1	-	2
200030	1	-	-
200032	1	-	-
200036	1	-	-
200837	1	-	-
200041	1	-	-
200042	1	-	-
200044	1	-	-
200045	1	-	-

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS
200047	1	-	-
200050	1	-	-
200055	1	-	-
200056	1	-	-
200068	1	-	-
200061	1	-	-
200066	1	-	-
200067	1	-	-
200070	1	-	-
200072	1	-	-
200073	1	-	-
200074	1	-	-
200075	1	-	-
200105	1	-	-
200107	1	-	-
200121	1	-	-
200135	1	-	-
200142	1	-	-
200144	1	-	-
200146	1	-	-
200152	1	-	-
200153	1	-	-
200160	1	-	-
200167	1	-	-
200170	1	-	-
200210	1	-	-
200211	1	-	-
200212	1	-	-
200213	1	-	-
200214	1	-	-
200215	1	-	-
200220	1	-	-
200236	1	-	-
200254	1	-	-
200302	1	-	-
200324	1	-	-
200325	1	-	-
200326	1	-	-
200330	1	-	-
200333	1	-	-
200360	1	-	-
200364	1	-	-
200374	1	-	-
200416	1	-	-
200426	1	-	-
200427	1	-	-
200430	1	-	-
200431	1	-	-
200432	1	-	-
200433	1	-	-
200436	1	-	-
200444	1	-	-

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS
200455	1	-	-
200460	1	-	-
200461	1	-	-
200471	1	-	-
200472	1	-	-
200473	1	-	-
200474	1	-	-
200475	1	-	-
200601	1	-	-
200603	1	-	-
200620	1	-	-
200621	1	-	-
200623	1	-	-
200626	1	-	-
200627	1	-	-
200631	1	-	-
200632	1	-	-
200633	1	-	-
200635	1	-	-
200637	1	-	-
200641	1	-	-
200643	1	-	-
200644	1	-	-
200647	1	-	-
200650	1	-	-
200651	1	-	-
200653	1	-	-
200655	1	-	-
200657	1	-	-
200661	1	-	-
200663	1	-	-
200665	1	-	-
200667	1	-	-
200671	1	-	-
200674	1	-	-
200702	1	-	-
200705	1	-	-
200706	1	-	-
200710	1	-	-
200713	1	-	-
200723	1	-	-
200724	1	-	-
200726	1	-	-
200727	1	-	-
200731	1	-	-
200735	1	-	2
200736	1	-	2
200737	1	-	2
200740	1	-	2
200741	1	-	-
200742	1	-	-
200743	1	-	-

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS
200745	2	-	1
200746	2	-	1
200751	1	-	-
200755	2	-	1
200756	2	-	1
200757	2	3	1
200760	-	-	1
200761	1	-	-
201011	-	-	1
201013	2	-	1
201023	2	-	1
201025	2	-	1
201027	2	-	1
201030	-	-	1
201036	-	-	1
201037	-	-	1
201041	-	-	1
201042	-	-	1
201055	-	-	1
201056	-	-	1
201060	-	-	1
201063	-	-	1
201066	-	-	1
201067	-	-	1
201070	-	-	1
201872	-	-	1
201073	-	-	1
201074	-	-	1
201075	-	-	1
201105	-	-	1
201187	-	-	1
201118	-	-	1
201135	-	-	1
201142	-	-	1
201144	-	-	1
201146	-	-	1
201152	-	-	1
201153	-	-	1
201160	-	-	1
201167	-	-	1
201170	-	-	1
201211	-	-	1
201212	-	-	1
201214	-	-	1
201215	-	-	1
201220	-	-	1
201236	-	-	1
201254	-	-	1
201263	-	-	1
201302	-	-	1
201324	-	-	1
201325	-	-	1

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS
201330	-	-	1
201347	-	-	1
201360	-	-	1
201364	-	-	1
201374	-	-	1
201404	-	-	1
201416	-	-	1
201426	2	-	1
201427	2	-	1
201430	-	-	1
201441	-	-	1
201452	-	-	1
201454	-	-	1
201455	-	-	1
201456	-	-	1
201466	-	-	1
201470	-	-	1
201471	-	-	1
201472	-	-	1
201476	-	-	1
201530	-	-	1
201540	-	-	1
201576	-	-	1
201600	-	-	1
201615	-	-	1
201616	-	-	1
201620	-	-	1
201623	-	-	1
201624	-	-	1
201625	-	-	1
201626	-	-	1
201627	-	-	1
201630	-	-	1
201632	-	-	1
201634	-	-	1
201636	-	-	1
201640	-	-	1
201641	-	-	1
201644	-	-	1
201645	-	-	1
201646	-	-	1
201650	-	-	1
201652	-	-	1
201654	-	-	1
201656	-	-	1
201660	-	-	1
201662	-	-	1
201664	-	-	1
201666	-	-	1
201671	-	-	1
201677	-	-	1
201702	-	-	1

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS
200173	-	-	1
201705	-	-	1
281707	-	-	1
201720	-	-	1
201721	-	-	1
201722	-	-	1
201723	-	-	1
201724	-	-	1
201726	-	-	1
201730	-	-	1
201731	-	-	1
201761	-	-	1
201763	-	-	1
202005	-	-	1
202006	2	-	1
202007	-	-	1
202008	2	-	1
202011	-	-	1
202012	2	-	1
202014	-	-	1
202016	2	-	1
202020	-	-	1
202022	-	-	1
202024	-	-	1
202026	2	-	1
202030	-	-	1
202031	-	-	1
202032	2	-	1
202033	-	-	1
202034	-	-	1
202035	-	-	1
202036	-	-	1
202037	-	-	1
202040	-	-	1
282041	1	-	2
202042	2	3	1
202043	3	2	1
202044	3	2	1
202045	-	2	1
202046	-	2	1
202047	-	1	-
202050	-	2	1
202051	-	2	1
202052	-	1	2
202053	-	1	-
202054	-	-	1
202060	-	1	-
202061	2	1	-
202062	-	1	-
202063	-	1	-
202064	-	1	-
202065	2	1	-

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF
	LHS	CS	RHS
202210	1	-	2
202220	1	-	2

NOTE

FOR ERROR STOP NUMBER 202260, VERIFY THAT THE "TIME TO GO" SWITCHES ARE SET AT "8-1/4". IF THEY ARE SET AT "8-1/4", PROCEED WITH TROUBLESHOOTING CONSOLE LHS AND RHS AS USUAL. IF SWITCHES ARE NOT SET AT "8-1/4", SET THEM TO "0-1/4" AND RERUN CONSOLE FI PROGRAM.

282260	2	-	1	(SEE NOTE ABOVE)
--------	---	---	---	--------------------

NOTE

FOR ERROR STOP NUMBER 202270, VERIFY THAT THE "VAR SCALE" CONTROL IS TURNED FULLY CCW. IF CONTROL IS FULLY CCW, PROCEED WITH TROUBLESHOOTING CONSOLE RHS AS USUAL. IF NOT FULLY CCW, TURN "VAR SCALE" CONTROL TO FULLY CCW AND RERUN CONSOLE FI PROGRAM.

202270	-	-	1	(SEE NOTE ABOVE)
--------	---	---	---	--------------------

NOTE

FOR ERROR STOP NUMBER 202272, VERIFY THAT THE "VAR SCALE" CONTROL IS TURNED FULLY CCW. IF CONTROL IS FULLY CCW, PROCEED WITH TROUBLESHOOTING CONSOLE RHS AND LHS AS USUAL. IF NOT FULLY CCW, TURN "VAR SCALE" CONTROL TO FULLY CCW AND RERUN CONSOLE FI PROGRAM.

202272	-	-	1	(SEE NOTE ABOVE)
202320	-	-	1	
202321	-	2	1	
202322	2	-	1	
202323	1	3	2	
202324	2	3	1	
202325	-	2	1	
202330	2	3	1	
202340	-	2	1	
202350	1	-	-	
202351	1	-	-	
282352	1	-	-	

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS
202353	1	-	-
202354	1	-	-
202355	1	-	-
202356	1	-	2
202360	1	-	2
202361	1	-	-
202362	1	-	-
202363	1	-	-
202364	1	-	-
202365	1	-	-
202366	1	-	-
202367	1	-	2
202370	1	-	2
202371	1	-	2
202372	1	-	2
202374	-	-	1
202375	-	2	1
202420	2	-	1
202600	1	-	-
202620	-	1	-
203000	-	-	1
200330	-	-	1
203070	-	-	1
203102	-	-	1
203104	-	-	1
203106	-	-	1
203110	1	-	-
203124	-	-	1
203127	-	-	1
203131	-	-	1
203132	-	-	1
203200	1	-	-
203260	1	-	-
203261	1	-	-
203262	1	-	-
203263	1	-	-
203264	1	-	-
203265	1	-	-
203266	1	-	-
203267	1	-	-
203270	1	-	-
203271	1	-	-
203272	1	-	-
203273	1	-	-
203274	1	-	-
203275	1	-	-
203276	1	-	-
203277	1	-	-
203300	-	-	1
203301	-	-	1
203302	-	-	1
203303	-	-	1

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	
ERROR STOP	LHS	CS	RHS
203304	-	-	1
203305	-	-	1
203306	-	-	1
203307	-	-	1
203377	-	-	1
207530	-	-	1
207531	-	-	1
207532	2	-	1
207533	-	-	1
207570	1	-	-
207571	1	-	-
207572	1	-	-
207573	1	-	-
207576	1	-	-
207601	1	-	-
207602	1	-	-
207603	1	-	-
207604	1	-	-
207605	1	-	-
207607	1	-	-
207622	-	-	1
2076?3	-	-	1
207624	-	-	1
207625	-	-	1
207626	-	-	1
207720	2	-	1
207721	-	-	1
207722	2	-	1
207723	-	-	1
207724	1	-	2
207725	1	-	-
207727	1	-	-
207730	1	-	-
207731	1	-	-
207732	1	-	2
207733	1	-	-
207750	1	-	2
207751	1	-	-
207752	1	-	2
207753	1	-	2
207754	1	-	2
207755	1	-	2
207756	1	-	2
207757	1	-	2
207761	1	-	2
287762	1	-	2
207763	1	-	2
207764	2	-	1
207770	1	2	-
207771	1	-	-
207772	1	-	-
207773	1	3	2

TABLE 2-18. DISPLAY CONSOLE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
ERROR STOP	LHS	CS	RHS
236036	2	-	1
702600	1	-	-

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTE

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE-OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:"

	CONNECTOR	TYPE	PART NUMBER
	J1125	1K OHM RESISTOR	587118
	J1211, J1222	240 OHM RESISTOR	587119
	J1302	HIGH CURRENT LAMP DRIVER	10281639
	J1303	TYPE 1 CATEGORY SELECT	10281673
	THRU		
	J1307	TYPE 1 CATEGORY SELECT	10281673
	J1308	240 OHM RESISTOR	10283642
	J1312	ARITHMETIC LOGIC UNIT CONTROL	10281675
	J1313	ARITHMETIC LOGIC	10284731
	THRU		
	J1316	ARITHMETIC LOGIC	10284731
	J1320	BIPOLAR READ/WRITE MEMORY	10281687
THRU			
	J1323	BIPOLAR READ/WRITE MEMORY	10281687
	J1324	DISPLAY MEMORY NUMBER 5	10283635
	J1325	FILE ADDRESS CONTROL	10281777
	J1326	DISPLAY MEMORY NUMBER 3	10283633
	J1329	DISPLAY MEMORY NUMBER 1	10283631
	J1330	DISPLAY MEMORY NUMBER 4	10283634
	J1333	DISPLAY MEMORY NUMBER 2	10283700
	J1334	SENSE SWITCH LOGIC	10281798
	J1335	BIPOLAR READ/WRITE MEMORY	10216087
200001	J1104 - J1105 - J0116 - J1107 - J1108 - J1109 - J1110 - J1111 - J1112 - J1115		
	- J1116 - J1117 - J1118 - J1119 - J1120 - J1122 - J1123 - J1124 - J1126 - J1127		
	- J1128 - J1129 - J1130 - J1131 - J1132 - J1134 - J1135 - J1138 - J1139 - J1140		
	- J1141 - J1142 - J1204 - J1285 - J1208 - J1209 - J1210 - J1213 - J1223 - J1224		
	J1226 - J1227 - J1228 - J1229 - J1230 - J1232 - J1233 - J1234 - J1235 - J1328		
	J1331 - J1336 - J1338 - J1341 - J1342		

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1125	J1211	J1325
28800002	J1105 - J1106 - J1107 - J1108 - J1109 - J1110 - J1111 - J1112 - J1116 - J1117		
	J1119 - J1120 - J1123 - J1126 - J1128 - J1129 - J1130 - J1132 - J1133 - J1134		
	J1205 - J1206 - J1209 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217 - J1219		
	- J1220 - J1221 - J1223 - J1224 - J1225 - J1226 - J1227 - J1228 - J1229 - J1230		
	J1233 - J1234 - J1311 - J1318 - J1327 - J1328 - J1331 - J1341		

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
	J1312	- J1313	- J1314	- J1315	- J1316	J1325					
200003	J1104 J1128	J1109 J1132	J1112 J1209	J1115 J1229	J1117 J1339	- J1118	- J1119	- J1120	J1122	J31126	
200004	J1129	J1132	- J1133	J1135	J1227	J1339					
200005	J1104 - J1131 J1210 - J1232 - J1341	J1115 - J1132 J1214 - J1233 - J1342	J1117 - J1133 J1221 - J1234	- J1118 - J1134 J1223 - J1235	- J1119 - J1135 J1224 J1328	J1122 J1137 - J1225 J1331	- J1123 J1205 J1227 J1336	- J1124 - J1206 J1229 J1338	J1126 - J1207 - J1230 - J1339	J1130 - J1208 - J1231 - J1349	
	SUBSTITUTE THE FOLLOIING CARD ASSEI-BLIES:										
	J1211	J1315	- J1316	J1334	- J1335						
200006	J1205										
200007	J1123	- J31124	J1130	- J1131	J1142	J1224	J1229	J1339	- J1339		
200010	J1104 J1226	J1107 J1311	J1109 J1327	J1123	J1126	J1205	J1207	J1212	J1216	J1221	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1125	J1312	- J1313	- J1314	- J1315	- J1316					
200011	J1111	J1123	J1225								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1312	- J1313	- J1314	J1316	J1325						
200013	J31123 J1311	J1205 J1310	- J1206	- J1207	J1213	- J1214	- J1215	J1220	- J1221	J1229	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1320	- J1321	- J1322	- J1323	- J1324	- J1325	J1334				
200017	J1207	J1214	J1226	- J1227	- J1220	- J1229	J1311	J1327			
200020	J1231	- J1232	J1331	J1336							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1321	J1335									
208021	J1226	J1230	J1336	J1339							
	SUBSTITUTE THE FOLLOIJING CARD ASSEMBLIES:										
	J1335										
200022	J1122 - J1234	J1132 J1331	- J1133 J1336	J1135 J1330	J1215 - J1339	J1221 - J1340	J1224	J1226	J1229	J1233	

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF		IOU OFF	CPU OFF													
DIAGNOSE STATUS																		
STOP															CONNECTORS			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1325																	
200023	J1325																	
200024	J1104	J1108	J1118	-	J1119	J1123	-	J1124	J1132	-	J1133	J1207	-	J1208				
	J1210	J1214	J1224		J1226	J1230	-	J1231	-	J1232	J1328	J1331		J1336				
	J1338	-	J1339	-	J1340	-	J1341											
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1322	J1335																
200025	J1226	J1231	-	J1232	J1336													
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1320	J1335																
208027	J1214	-	J1215	J1219	-	J1220	-	J1221	J1224	J1226	J1229	J1234	J1338					
	J1340																	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1325	J1334																
200030	J1132	J1229																
200032	J1104	J1131	-	J1132	J1206	J1213	J1224	J1234	J1328	J1338	-	J1339						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1325																	
200036	J1104	J1131	J1207	-	J1208	J1210	J1212	J1214	-	J1215	-	J1216	-	J1217				
	J1226	-	J1227	-	J1228	J1317	-	J1318	-	J1319	J1332	J1339						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1312	-	J1313	-	J1314	-	J1315	-	J1316	J1320	-	J1321	-	J1322	-	J1323	-	J1324
	-	J1325	J1329															
200037	J1104	J1109	J1120	J1122	-	J1123	J1126	J1131	-	J1132	J1287	-	J1208					
	J1214	J1216	-	J1217	J1219	-	J1220	-	J1221	J1317	-	J1318	-	J1319	J1330			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1320	-	J1321	-	J1322	-	J1323	-	J1324	-	J1325							
200041	J1206	J1226	J1228	J1317	-	J1318	-	J1319										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1322	J1325																
200042	J1322																	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																		
	J1325																	

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
200844	J1111	J1206	J1228	J1317	-	J1318	-	J1319	J1338	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1321	J1325	-	J1326	J1329	-	J1330			
208045	J1321									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1325									
200847	J1317	-	J1310	-	J1319					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1320	J1325								
200050	J1320									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1325									
200055	J1317	-	J1318	-	J1319					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1324	-	J1325							
200056	J1207	J1220	J1226							
200060	J1206	J1214	-	J1215	-	J1216	J1219	-	J1220	J1226 - J1227 - J1228
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1325									
200061	J1214	J1216	J1219	-	J1220	J1227	-	J3228	J1317	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1324	-	J1325							
200866	J1123 J1327	J1207	-	J1208	J1213	J1216	-	J1217	J1227 - J1228	J1311 J1317
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1125	J1312	-	J1313	-	J1314	-	J1315	-	J1316
200067	J1217	J1228	-	J1229	J1311					
280078	J1213	-	J1214	-	J1215	-	J1216	J1219	-	J1220 J1226 J1228
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1313									
200072	J1215	-	J1216	J1226	-	J1227	J1311			

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS											
STOP														
200073	J1228													
200874	J1207	J1212	-	J1213	-	J1214	-	J1215	-	J1216	-	J1217	J1221	J1224
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1313													
200075	J1312													
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1313 - J1314 - J1315 - J1316													
200185	J1287													
200107	J1112	J1214		J1216		J1234								
200121	J1313													
200135	J1216	-	J1217	J1219	-	J1220	J1228	J1311						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J31312 - J1313 - J1314 - J1315 - J1316													
208142	J1207	J1212												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1334													
208144	J1212	-	J1213	J1217	J1311									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1334													
200146	J1217	J1228												
200152	J1125	J1208	J1227	J1311										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1312 - J1313 - J1314 - J1315 - J1316													
208153	J1229													
200168	J1220	J1228												
200167	J1212	J1215	J1221	J1227	J1311									
200170	J1227	J1327												
200210	J1221													
200211	J1212													

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF																		
DIAGNOSE STATUS	IOU OFF	CPU OFF																		
STOP																				CONNECTORS
200212	J1313																			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1314																			
200213	J1315																			
280214	J1316																			
288215	J1312																			
200220	J1212	J1215	-	J1216	J1220	J1227														
200236	J1227	J1311																		
200254	J1212	J1221		J1226																
288302	J1227																			
200324	J1125	J1213		J1327																
200325	J1313																			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1314																			
208326	J1315																			
200330	J1312																			
200333	J1216	J1221		J1228																
200360	J1208																			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1316																			
200364	J1214																			
200374	J1227																			
200416	J1286	J1212		J1214	J1217	J1223	J1225	-	J1226	J1318										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1312	-	J1313	-	J1314	-	J1315													
200426	J1123	J1212	-	J1213	-	J1214	J1216	J1226	-	J1227	-	J1228	J1311	J1317						
	J1327	-	J1329		J1338	J1341														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1313	-	J1314	-	J1315	-	J1316													

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF									
DIAGNOSE STATUS	IOU OFF	CPU OFF									
STOP											CONNECTORS
200427	J1123	J1226	J1328	J1331	-	J1332	J1338	-	J1339	-	J1340
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1326	J1329	-	J1330	J1333						
200430	J31123	J1327	-	J1328							
	SUBSTITUTE THE FOLLOIIMNG CARD ASSEMBLIES:										
	J1329										
200431	J1216	J1219	-	J1220	J1228	J1327	J1332				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1313 - J1314										
200432	J1116	J1330	J1332								
208433	J1326 - J1327										
200436	J1326										
280444	J1206										
200455	J1214	J1216	J1227	- J1228							
200460	J1286	J1212	J1214	J1217	J1221	J1223	J1226	-	J1227	J1317	- J1318
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1211 J1325										
2800461	J1214	-	J1215	-	J1216	J1227					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1312 - J1313 - J1314 - J1315 - J1316										
200471	J1217										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1312 - J1313 - J1314 - J1315 - J1316										
200472	J1315										
288473	J1316										
200474	J1312										
200475	J1313										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1314										

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF					
DIAGNOSE STATUS	IOU OFF	CPU OFF					
STOP							CONNECTORS
200601	J1217						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1312	-	J1313	-	J1314	-	J1315 - J1316
200603	J1217	J1224					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1312						
200620	J1217	J1224					
200621	J1314						
200623	J1206	J1214	-	J1215	-	216	J1220 J1223 J1227 J1318
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1316	J1325					
200626	J1212	J1214	J1228	J1318			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1325						
208627	J1212	-	J1213	-	J1214	J1216	- J1217 J1224 J1317
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1312	J1325					
200631	J1214	J1228					
200632	J1212	J1227	J1311	J1327			
200633	J1213	J1217	J1221				
200635	J1216						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1312	-	J1313	-	J1314	-	J1315 - J1316
200637	J1212						
200641	J1206	J1214	J1225	J1311			
208643	J1214						
200644	J1213	-	J1214	J1221	J1228	J1311	
200647	J1212	-	J1213	-	J1214	J1219	- J1220 J1228 J1317
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:						
	J1334						

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS												
STOP															
288650	J1135	J1206	J1212	J1214	-	J1215	J1220	J1228							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1334														
200651	J1334														
200653	J1334														
200655	J1334														
200657	J1334														
200661	J1334														
200663	J1334														
200665	J1334														
200667	J1334														
200671	J1334														
208674	J1227														
280702	J1318														
280705	J1217														
200706	J1227														
280710	J1213	-	J1214	-	J1215	-	J1216	J1221							
200713	J1207	-	J1208	J1216	-	J1217	J1219	-	J1220	J1224	J1226	-	J1227	J1230	
208723	J1208	J1224	J1227	J1230											
200724	J1318														
200726	J1224	J1230	J1332												
208727	J1208	J1226													
200731	J1207	-	J1208	J1214	-	J1215	-	J1216	-	J1217	J1221	J1224	J1226	-	J1227
	J1230	J1332													
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1312														
200735	J1313														

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS												
STOP															
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1314														
200736	J1123														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1315														
200737	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1316														
208740	J1312														
208741	J1123														
200742	J1214														
200743	J1104	J1108	-	J31109	J1135	J1206	J1214	-	J1215	J1217	J1219	-	J1220		
	J1228														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1313	J1316													
208745	J1104	J1107	-	J1108	-	J1109	J1115	J1132	-	J1133	-	J1134	-	J1135	J1206
	J1213	-	J1214	J1217	J1219	J1230	J1233								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1312 - J1313 - J1314 - J1315 - J1316														
200746	J1132 - J3133 J1220 J1233														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1334														
200751	J1134														
280755	J3109	J1214	-	J1215	J1233										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1312 - J1313 - J1314														
200756	J1315														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
	J1316														
200757	J1104	J1107	-	J1108	-	J1109	J1230								
200761	J1221	J1341													
201013	J1205														

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS															
DIAGNOSE STATUS		IOU OFF		CPU OFF																	
STOP																					
201023	J1213																				
201025	J1104	J110S																			
201027	J1111	J1116	J1212																		
201426	J1116																				
201427	J1116																				
202006	J1110	J1120	J1126																		
202010	J1205																				
202012	J1205																				
202016	J1205																				
202026	J1205																				
202032	J1134	J1210																			
202041	J1107	J1111																			
202842	J1186	J1213	J1230																		
282043	J1212	- J1213	J1230																		
202044	J1230																				
202061	J1230																				
202065	J1105	- J1106	J1213	J1230																	
202210	J1110	J1112	J1116	- J1117	- J1118	- J1119	- J1120	J1124	J1127	- J1128											
	- J1129	J1206	J1208	J1210	J1212	- J1213	- J1214	- J1215	- J1216	- J1217											
	J1219	- J1220	J1228	J1233	- J1234	J1331	J1338	J1341													
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																					
	J1211	J1312	- J1313	- J1314	- J1315	- J1316	J1334														
202220	J1116	J1206	- J1207	J1210	J1213	- J1214	- J1215	- J1216	J1221	J1225											
	J1234	- J1235	J1332	J1341																	
202260	J1208	- J1209	J1212	J1215																	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																					
	J1211	J1310	J1312																		
202322	J1132																				
202323	J1104	J1115	J1119	- J1120	J1132	J1138	J1206														

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS		
STOP					
202324	J1127				
282330	J1184 - J1185 - J1186 - J1107 - J1188 - J1109		J1205	J1213	J1238
202350	J1134	J1204	J1207		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1305				
202351	J1116	J1134	J1204	J1207	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1305				
202352	J31134	J1204 - J1205	J1207	J1231	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1385				
202353	J1134	J1204	J1207		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1306				
202354	J1134	J1204	J1207		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1306				
202355	J1134	J1204	J1287		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1306				
202356	J1134	J1204	J1207		
202360	J1134	J1204	J1207	J1336	
202361	J1134	J1204	J1207		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1382				
202362	J111	J1116	J1134	J1204	J1207
202363	J1134	J1204	J1287		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1382				
202364	J1134	J1204	J1207		

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS														
STOP																	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1303																
282365	J1116	J1134	J1204	J1207													
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1303																
202366	J1134	J1204	J1207														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1383																
202367	J1134	J1204	J1207														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1304																
202370	J1134	J1204	J1287														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1304																
202371	J1134	J1204	J1207	J1216	J1336												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1304																
202372	J1116	J1119	J1122	J1124	J31127	-	J1128	J1204	J1207	J1210	J1213						
-	J1214	-	J1215	-	J1216	-	J1217	J1219	-	J1220	J1234	J1336	J1341				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1211	J1302	-	J1303	-	J1304	-	J1305	-	J1306	J1313	-	J1314	-	J1315	-	J1316
202420	J1204	J1207	J1210	J1336	J1339												
202600	J1231	J1234															
203110	J1208																
203200	J1209	J1212															
203260	J1216																
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J1385																
203261	J1305																
203262	J1305																

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
203263	J1305		
203264	J1305		
203265	J1305		
203266	J1305		
203267	J1305		
203270	J1216 - J1217		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1306		
203271	J1306		
203272	J1306		
203273	J1306		
203274	J1306		
203275	J1306		
203276	J1306		
203277	J1306		
207532	J1306 J1133		
207570	J1232		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1313 - J1314		
207571	J1232		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1315		
207572	J1232		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1316		
207573	J1231		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1312		
207576	J1221		

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
207601	J1122	J1232										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1313	-	J1314	J1335								
207602	J1122	-	J31123	J1232								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1315	-	J1316	J1335								
207603	J1122	J1232										
	SUBSTITUTE THE FOLLOLJING CARD ASSEMBLIES:											
	J1316	J1335										
207604	J1122	J1224	J1231	-	J1232							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1312	J1335										
207685	J31122	-	J1123									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1312	-	J1313	-	J1314							
207607	J1116	J1216	J1221	J1224	J1338							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1335											
207720	J1108	-	J1109	J1212	J1233							
207722	J31104	J1108	-	J1109								
207724	J1105	-	J1106	J1116	J1118	J1132	J1206	J1226	-	J1227	J1230	J1336
	J1338	-	J1339									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1315	J1323	J1325	J1334	-	J1335						
287725	J1230											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1315											
207727	J1313											
207730	J1207	J1226	J1232									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1312	-	J1313	-	J1314	-	J1315	J1334				

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF														
DIAGNOSE STATUS	IOU OFF	CPU OFF														
STOP												CONNECTORS				
207731	J1207	J1212	-	J1213	J1215	-	J1216	-	J1217	J1219	-	J1220	J1226	J1232		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1312	J1315	-	J1316	J1334											
207732	J1184	J1130		J1132	-	J1133	-	J1134	J1206	-	J1207	J1213	-	J1214	-	J1215
	-	J1216	-	J1217	J1220	-	J1221	J1226	J1232		J1338					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1312	J1315	-	J1316	J1334											
287733	J1207	J1212		J1214	J1216		J1226	J1228	J1231							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1312	-	J1313													
207750	J1123															
207751	J1315															
207752	J1311															
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1313	-	J1314													
207753	J1312															
207754	J1123	J1227		J1311												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1312	-	J1313	-	J1314	-	J1315	-	J1316							
207755	J1123	J1311														
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1315	-	J1316													
207756	J1311															
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1313	-	J1314													
207757	J1311															
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1312															
207761	J1208															
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J1312															

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF																		
STOP			CONNECTORS																	
207762	J1307																			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1313	-	J1314																	
207763	J1307	J1311																		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1315																			
207764	J1307	J1311																		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1316																			
207770	J1104	-	J1105	-	J1186	-	J1107	-	J118B	-	J1109	-	J1110	-	J111	-	J1112	J1115		
	-	J1116	-	J1117	-	J1118	-	J1119	-	J1120	J4122	-	J1123	-	J1124	J1126	-	J1127		
		J1129	-	J1130	-	J1131	-	J1132	-	J1133	-	J1134	-	J1135	J1137	-	J1138	-	J1139	
	-	J3114	-	J1141	-	J1142	J1204	-	J1205	-	J1206	-	J1207	-	J1208	-	J1209	-	J1210	
		J1213	-	J1214	J1216	-	J1217	J1219	-	J1228	-	J1221	J1223	-	J1224	-	J1225	-	J1225	
	-	J1226	-	J1227	-	J1228	-	J1229	-	J1230	-	J1231	-	J1232	-	J1233	-	J1234	-	J1235
		J1317	-	J1318	-	J1319	J1332	J1336	J1338	J1340	-	J1341	-	J1342						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1125	J1211	J1307																	
207771	J1104	J1107	J1109	J1111	J1115	-	J1116	-	J1117	-	J1118	-	J1119	-	J1120					
	J1122	-	J1123	-	J1124	J1126	J1128	-	J1129	-	J1130	-	J31131	-	J1132	-	J1133			
	-	J1134	-	J1135	J1138	-	J31139	-	J31140	-	J1141	J1205	-	J1206	J1213	J1215				
	J1223	-	J1224	J1228	J1233	J1235	J1317	-	J1318	-	J1319	J1327	J1332							
	J1336	J1338	-	J1339	-	J1348	-	J1341	-	J1342										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1125	J1307																		
207772	J3105	-	J1106	J1108	-	J1109	-	J1110	J1115	-	J1116	-	J1117	-	J1118	-	J1119			
	-	J1120	J1123	J1127	-	J1128	-	J1129	-	J1130	-	J1131	J1135	J1139	J1205					
	-	J1206	J1208	-	J1209	J1212	-	J1213	J1216	-	J1217	J1224	-	J1225	-	J1226				
	-	J1227	-	J1228	-	J1229	-	J1230	-	J1231	-	J1232	-	J1233	-	J1234	-	J1235	J1332	
	J1336	J1342																		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1307																			
207773	J1104	-	J1105	-	J1106	-	J1107	-	J1108	-	J1109	-	J1110	J1112	J1116	-	J1117			
	-	J1118	-	J1119	-	J1120	J1122	-	J1123	J1126	-	J1127	J1130	-	J1131	-	J1132			
	-	J1133	-	J1134	-	J1135	J1206	J1209	J1213	-	J1214	-	J1215	-	J1216	-	J1217			
		J1219	-	J1220	-	J1221	J1223	-	J1224	-	J1225	-	J1226	-	J1227	-	J1229	-	J1230	
	-	J1231	-	J1233	-	J1234	J1311	J1319	J1332	J1336	J1338	-	J1339	-	J1340					
	-	J1341	-	J1342																

TABLE 2-19. DISPLAY CONSOLE LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J31125	J1307	J1313	-	J1314	J1316	J1325	J1335
236036	J1205							
782G00	J1220	J1228	-	J1229	J1328	J1336		

SUBSTITUTE THE FOLLOWIING CARD ASSEMBLIES:

J1329

TABLE 2-20. DISPLAY CONSOLE CS FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTE

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER 'SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:'

CONNECTOR	TYPE	PART NUMBER
J1101	240 OHM RESISTOR	18283642
J1182	AC COUPLED I/O	18283630
THRU		
J1187	AC COUPLED I/O	18283630
J1189	FORCE STICK DRIVER	MIS19600
J1118	TABULAR P05 GENERATOR	18283640
J1112	LINE GENERATOR CLK CONTROL	18282364
J1113	LINE GENERATOR RATE MULTIPLEXER	18281688
J1114,J1115	LINE GENERATOR UP/DOWN COUNTER	10284725
J1116,J1117	DIGILOG LINE GENERATOR	10281691
J1119,J1121	SUMMATION AMPLIFIER	10281685
J1123	LINEARITY CORRECTOR	18281692
J1124	DIGILOG CHARACTER GENERATOR	18281963
J1125	CHARACTER GENERATOR CONTROL	18281686
J31126	MEMORY A CHARACTER GENERATOR	10284661
J1127	MEMORY B CHARACTER GENERATOR	10283641
J1129	VIDEO MIXER	10281679
J1132	VIDEO AMPLIFIER	18281684

- 288882 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1114 - J1115 J31123 J1126
- 2800757 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1114 - J1115
- 202842 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1118 J1114 J1116
- 202043 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1181 J1118 J1115 J1117
- 282844 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1181 J1110 J1114 - J1115
- 202045 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1181 J1118 J1114
- 202046 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

TABLE 2-20. DISPLAY CONSOLE CS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF			
DIAGNOSE STATUS	IOU OFF	CPU OFF			
STOP					CONNECTORS
	J1101	J1110	J1115		
202047	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1110	J1114			
202050	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1110	J1115			
202051	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1101	J1110			
202052	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1110	J1114	-	J1115	
202053	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1110	J1115			
202060	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1115	J1117	J1121	J1123	
202061	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1119	J1123	-	J1124	
202062	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1117	J1121	J1123	-	J1124
2020063	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1116	J1119	J1123		
202064	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1110	J1115	J1117	J1121	J1123
202065	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1110	J1114	J1116	J1119	J1123
202321	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
202323	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
202324	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
202325	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1109				
202330	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1101	J1110	J1114	-	J1115 J1125 - J1126 - J1127
202348	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J3111	J1114	-	J1115 J1125 - J1126	

TABLE 2-20. DISPLAY CONSOLE CS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF

STOP

CONNECTORS

202375	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1101	J1123	J1129
202620	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1110		
207770	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1101		
207773	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1101	J1110	

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTE

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:"

	CONNECTOR	TYPE	PART NUMBER
	J1117	1K OHM RESISTOR	587118
	J1131,J1231	240 OHM RESISTOR	587119
	J1302,J1304	RADAR MIXER	10281380
	JX1385	VIDEO COMPRESSOR MEMORY	10281681
	THRU		
	J1310	VIDEO COMPRESSOR MEMORY	10281681
	J1311,J1312	8K READ/WRITE MEMORY	10282817
	J1313	SENSE SWITCH LOGIC	10281798
	J1315	DISPLAY MEMORY NUMBER 6	10283637
	J1316	DISPLAY MEMORY NUMBER 7	10283636
	J1317	ARITHMETIC LOGIC UNIT CONTROL	10281675
	J1318	FILE ADDRESS CONTROL	10281777
	J1319	ARITHMETIC LOGIC	10284731
	THRU		
	J1322	ARITHMETIC LOGIC	10284731
	J1323	240 OHM RESISTOR	10283642
	J1324	QUAD 2- INPUT LAMP DRIVER	10283629
200001	J1118 - J1119 - J1128	J1209 - J1210	
200002	J1222	J1230	J1314
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
200005	J1318 - J1319 - J1328 - J1321		
	J1227		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1131		
200027	J1212	J1225	J1229
200735	J1119		
200736	J1119		
200737	J1120		
200740	J1118		

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF											
DIAGNOSE STATUS	IOU OFF	CPU OFF											
STOP													
260745	J1102 - J1103	J1106	J1109 - J1110	J1111	J1114 - J1115	J1116	J3118						
-	J1119 - J1120	J1121 - J31122	J1123	J1125 - J1126	J1128	J1129	J1130						
	J1134 - J1209	J1210 - J1211	J1212	J1213 - J1214	J1215	J1216	J1217						
-	J1218 - J1219	J1220	J1222	J1224 - J1225	J1226	J1227	J1228	J1229					
-	J1230 - J1232	J1233	J1234	J1314	J1324								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1117	J1131	J1231	J1318 - J1319	J1320	J1321	J1323						
200746	J1115	J1111 - J1119	J1121	31122 - J123	J1125	J1126	J1127	J1128					
	J1132	J1134	J1209	J1210 - J1211	J1212	J1213	J1214	J1215	J1216				
	J1219 - J1220	J1222	J1224	J1225	J1226	J1227	J1229	J1230	J1232				
	J1234	J1314											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1131												
200755	J1111	J1118 - J1119	J1120	J11121	J1132	J1134	J1209	J1212	J1213				
-	J1214	J1216	J1218	J1219 - J1220	J1222	J1226	J1227	J1228	J1229				
-	J1230	J1232											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1131	J1231	J1320	J1321									
200756	J1119	J1120	J1209										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1318	J1319											
200757	J1102 - J1113	J1124	J1127 - J1128	J1129	J1130	J1132	J1134	J1209	J1213	J1214	J1215	J1216	J1217
-	J1210 - J1211	J1216	J1217 - J1218	J1219	J1220	J1222	J1223	J1224	J1225	J1226	J1227	J1228	J1229
-	J1225 - J1226	J1227	J1228	J1229	J1230	J1233	J1234	J1314					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1131	J1318	J1319	J1320	J1321								
208760	J103	J1129 - J1130	J1209	J1210	J1211	J1214	J1215	J1216	J1217				
	J1220	J1224 - J1225	J1226	J1227	J1228	J1229	J1233	J1314					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1318	J1319	J1320	J1321									
201011	J1118 - J1119	J1121	J1127 - J1128	J1133	J1209	J1214	J1215	J1216					
	J1220	J1225	J1314										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1131	J1318	J1319	J1328	J1321								
201013	J1111	J1128	J1225	J1227	1228	J1233	J1234	J1314					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1328	J1329	J1330										

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF									
DIAGNOSE STATUS	IOU OFF	CPU OFF									
STOP			CONNECTORS								
281823	J1109 - J1118	J1111 - J1115	J1114 - J1118	J1119 - J1120	J1121 - J1122	J1123 - J1124	J1125 - J1126	J1127 - J1129	J1232 - J1233	J1314 - J1327	
	J1123 - J1224	J1125 - J1225	J1126 - J1227	J1211 - J1229	J1214 - J1232	J1215 - J1233	J1216 - J1314	J1219 - J1327	J1220 - J1220	J1223 - J1223	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1131	J1231	J1313	J1317							
201025	J1182	J1212	J1220	J1228 - J1229	J1123	J31314					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES										
	J1313										
201027	J1120 - J1229	J1121	J1212 - J1213	J1214 - J1215	J1216	J1219 - J1228	J1225				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1319 - J1320	J1321									
201030	J1102	J1127	J31211 - J1212	J1219 - J1220	J1229	J1233					
201036	J1130 - J1327	J1289 - J1210	J1213 - J1214	J1215	J1226	J1228	J1230	J1314			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1317 - J1310	J1319 - J1320	J1321 - J1328	J1329 - J1330	J1330	J1330	J1330	J1330	J1330	J1330	
201037	J1127 - J1228	J1130 - J1229	J1209 - J1230	J1210 - J1234	J1219 - J1314	J1220 - J1223	J1225 - J1226	J1227	J1227	J1227	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1328 - J1329	J1330									
201841	J1327										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1317	J1330									
281842	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1338										
201055	J1327										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1317	J1328									
201056	J1211	J1216	J1224 - J1225	J1228							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1313										
281868	J1129	J1213 - J1214	J1215	J1223 - J1224	J1225	J1229					

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
201063	J1118	J1211	J1214	J1225	J1227	J1233				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1117	J3118	- J1319	- J1320	- J1321					
201066	J1118	J1214	J1220	J1223	J1229	- J1230	J1233	J1314		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1117	J131	- J1319	- J1320	- J1321					
201067	J1214									
201079	J1214	J1220	J1226	- J1227	- J1228	- J1229	- J12380			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1318	- J1319	- J1320	- J1321						
201072	J11215	- J1216	J1223	J1225	- J1226	J1234				
201073	J1111	J1214	J1216	J1234						
201074	J1108	- J1110	- J1111	J1115	J1119	- J1120	J1126	- J1127	- J1128	- J1129
-	J1130	J1211	J1215	J1217	J1224	- J1225	- J1226	- J1227	- J1228	- J1229
	J1233	- J1234								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1117	J1131	J1318	- J1319	- J1320	- J1321				
201075	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1318	- J1319	- J1320	- J1321						
201105	J1211									
201107	J1128	J1218	J1227							
201110	J1220									
201135	J1214	J1223	- J1224	- J1225	- J1226	- J1227	J1230			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1318	- J1719	- J1320	- J1321						
201142	J1211	J1225	- J1226							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1313									
201144	J1315	J1118	- J1119	J1121	J1124	- J1125	- J1126	J1212	- J1213	J1216
-	J1217	- J1218	J1223	J1225	- J1226	- J1227	J1233			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
201146	J31131 J1214	J1313 J1227				
20152	J1118	J1215	J1226			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
201153	J1117 J1228	J1318	- J1319	- J1320	- J1321	
201160	J1214	J1220				
201167	J1110	J1215	J1223	J1226	J1234	
201170	J1118	J1215	J1225	J1233		
201211	J1226					
201212	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1320					
201214	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1319					
201215	SUBSTITUTE THE FOLLOWING CORD ASSEMBLIES:					
	J1321					
201220	J1127	- J1128	J1215	J1223	- J1224	- J1225 - J1226 - J1227 - J1228 J1234
201236	J1215					
201254	J1120					
201263	J1223	J1234				
201382	J1215					
201324	J1118	J1225	J1233			
2001325	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1320					
201330	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1321					
201347	J1227					
201360	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1318 - J1319					
201364	J1227					

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	CONNECTORS			
DIAGNOSE STATUS								
STOP								
201374	J1215							
201404	J1227							
201416	J1111	J1130	J1216	J1228	J1223	J1227	J1238	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1320 - J1321							
201426	J1118	J1127	J1210	J1211	J1213	J1214	J1215	J1216
	- J1227	J1229	J1233	J1314				J1225 - J1226
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1318 - J1319 - J1320							
201427	J1289	J1210	J1216	J1224	J1229	J1314		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1315 - J1316							
201430	J1210	J1314						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1316							
201441	J1223							
201452	J1213	J1214	J1215	J1225	J1227	J1229		
201454	J1118	J1214						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1328							
201455	J1182	J111	J1114	J1127	J1215	J1223	J1225	J1226
	J1233							J1227
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1231							
201456	J1127	J1215	J1227	J1228	J1229	J1233	J1234	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1318 - J1319 - J1328 - J1321							
201466	J1225	J1226	J1227	J1233				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1310 - J1319 - J1320 - J1321							
201470	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:							

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS										
STOP													
	J1310	-	J1319										
201471	J1225	-	J1226										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1321												
281472	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1320												
201476	J1220												
201530	J1225	-	J1226										
201540	J1225												
201576	J1226	-	J1227	-	J1228								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1318	-	J1319	-	J1320	-	J1321						
201600	J1225	-	J1226	J1229									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1321												
201615	J1227	J1229											
201616	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1328												
201620	J1111	J1127	J1129	-	J1130	J1214	-	J1215	J1223	-	J1224	J1226	J1229
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1310 - J1319												
201623	J1111	J1127	J1234										
201624	J1127	J1225	J1227	J1229	J1233	-	J1234						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1321												
201625	J1118												
281626	J1127	J1214	J1228										
201627	J1118	J1215	J1226										
201630	J1223	J1225	J1227	J1233									
201632	J1226												

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1319 - J1320 - J1321					
201634	J1226					
201636	J1127	J1223				
201640	J1127					
201641	J1127	J1214	J1223	J1233		
201644	J1103	J1127	J1214	J1225 - J1226	J1228	J1233 - J1234
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201645	J1127	J1214	J1225	J1220	J1234	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201646	J1324					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201650	J1106	J1109	J1324			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201652	J1226	J1324				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313 J1323					
201654	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201656	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201660	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201662 J1313	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					
201664 .	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313					

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
201666	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1313					
201671	J1215					
201677	J1111	J1130				
201702	J1227					
201703	J1215					
201705	J1127	J1223	J1225	-	J1226	J1228 J1233 - J1234
201707	J1111	J1130				
201720	J1234					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1320					
201721	J1234	J1314				
201722	J1234					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1318	-	J1319			
201723	J1230	J1223				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1321					
201724	J1214	J1314				
201726	J1127	J1225	J1230	J1314		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1310	-	J1319	-	J1320	- J1321
201738	J1230	J1234				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1320	-	J1321			
201731	J1234					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1318	-	J1319			
281761	J1223	J1225	-	J1226		
201763	J1214	J1228	J1234			

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
202004	J1312										
202005	J1108	J1118	J1127	J1302							
202006	J1108	J1118	J1127	J1314							
202007	J1108	J1118	J1127								
202010	J1102	J1108	J1116	J1213	J1302						
202011	J110S	J1304									
202012	J1213	J1302									
202014	J1213	J1382									
202016	J1107	J1213	J1302								
202020	J1213	J1384									
020022	J1304										
202022	J1213										
202024	J1213	J1304									
202026	J1102	J1213	J1304								
282030	J1102	J1107	- J1108	- J1109	J1114	J1116	J1302				
202031	J1108	J1114	J1116	J1304							
202032	J1102	- J1103	J1105	- J1106	- J1107	J1109	- J1110	- J1111	- J1112	- J1113	
	J1116	J1125	J1213	J1216							
202033	J1102	- J1103	- J1104	- J1105	- J1106	- J1107	J1109	- J1118	J1112	- J1113	
	- J1114	- J1115	- J1116	J1118	J1212						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1308	- J1309	- J1310								
202034	J1106	- J1107	J1112	- J1113	J1115	J1118					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1308	- J1309									
202035	J1107	J1112	- J1113	J1115	J1118	J1125					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1117	J1305	J1308								
202036	J1102	- J1103	- J1104	- J1105	- J1106	- J1107	- J1108	- J1109	- J1110	J1114	
	J1118										

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1117	J1385	-	J1386	-	J1307				
202037	JJ184	-	J1105	-	J1186	J1108	J1118			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1385	-	J1386							
202040	J1184	-	J1105	-	J1106	J1108	J1118			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1385									
202041	J1214									
202042	J1124	J1223	J1226	J1228	-	J1229	-	J1238	J1314	J1324
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1323									
202043	31119	J1124	J1210	J1220	-	J1229	J1314	J1324		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1323									
202044	J1119	J1124	J1210	J1223	J1228	-	J1229	-	J1230	J1232 J1234 J1314
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1318	-	J1319	J1323						
202045	J1124	J1223	J1226	J1228	-	J1229	J1314	J1324		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1323									
202046	J1119	J1218	J1220	J1228	J1324					
202050	J1215	J1208	J1314	J1324						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1323									
202051	J1124	J1218	J1324							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1323									
202052	J1228									
202054	J1124	J1213	J1224	J1228	-	J1229	J1314	J1324		

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
202210	J1114 - J1127	J1118 - J1128	- J1119 - J1129	- J1120 - J1130	- J1121 J1132	- J1122 - J1133	- J1123 - J1134	- J1124 J1222	- J1125 - J1223	- J1126 J1234	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1131										
202036	J1302										
202220	J1114	J1127 - J1128	- J1129	J1132	- J1133	- J1134	J1238	J1234			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1131										
202260	J1118	J1120	J1124	J1126	J1128	J1138	J1132	- J1133	J1224		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1131										
202270	J1121	J1128									
202272	J1118	J1120	- J1121	J1124	J1128						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1117										
202328	J11102	J1128	J1125	- J1126	J1129						
202321	J1101	J1107	J1116	J1128	J1125	J1127	- J1128	- J1129	J1224	J1228	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1117 J1131										
202322	J1101	J1108	- J1109	J1120	J1125	J1127	J1129				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1117 J1131										
202323	J1102	J1116	J1120	J1129							
202324	J1102	J1118	J1120	J1124	J1126	J1130	J1132	J1223			
202325	J1120	J1126									
202330	J1119 J1223 J1324	11124 - J1224 J1327	J1127 - J1225	J1213 J1227	- J1214 - J1228	- J1215 J1238	- J1216 J1232	J1218 - J1233	- J1219 - J1234	- J1220 J1314	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1231 J1317 J1320 - J1321 J1323										
202340	J1119	J1124	J1214	- J1215	- J1216	J1218	- J1219	- J1220	J1227	J1230	

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF								
DIAGNOSE STATUS	IOU OFF	CPU OFF								
STOP						CONNECTORS				
	J1232	- J1233	- J1234	J1314	J1324					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1323									
202356	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1333									
202360	J1127									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1333									
202367	J1130									
202370	J1118									
202371	J1127	J1134								
202372	J1102	J1106	J1118	J1114	J1116	J1118	- J1119	- J1120	- J1121	J1124
	J1126	- J1127	- J1128	- J1129	- J1130	J1132	- J1133	- J1134	J1217	- J1218
	J1220	J1223	- J1224	J1230	J1232	J1234				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1131	J1333								
202374	J1102	- J1103	J1105	J1113	J1127					
202375	J1129	J1214	J1220	J1224	J1230	J1232	J1314			
202420	J1124	J1127	- J1128	- J1129	- J1130	J1133	- J1134			
203000	J1130	J1132								
203030	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1117									
203070	J1133									
203102	J1133									
203104	J1134									
203106	J1129									
203124	J1121									
203127	J1129									
203131	J1134									
203132	J1128									

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
203300	J1229					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203301	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203302	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203303	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203304	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203305	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203306	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203307	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1333					
203377	J1120	- J1121	J1128	- J1129		
207530	J1129	J1211	J1215	J1226		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1313	J1328	- J1321			
207531	J1211	J1214	- J1215	J1224	- J1225	- J1226
				- J1227	- J1228	J1230
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1313	J1318	- J1319	J1321		
207532	J1127	- J1128	- J1129	J1211	J1215	J1218
	- J1227	- J1228	- J1229	- J1230	J1233	- J1234
	J1223	- J1224	- J1225	- J1226		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1313	J1318	- J1319	J1321		
207533	J1128	- J1129	J1211	J1214	- J1215	J1226
						- J1227
						- J1228
						J1230
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					
	J1320	- J1321				
207622	J1129					

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF												
DIAGNOSE STATUS	IOU OFF	CPU OFF												
STOP			CONNECTORS											
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1320													
287623	J1129	J1314												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1318	-	J1319											
287624	J1129	J1230												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1318	-	J1319											
287625	J1129													
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1321													
207626	J1129	J1314												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1320	-	J1321											
207728	J1102	J1119	-	J1120	-	J1121	J1127	-	J1128	J1134	J1213	J1215	-	J1216
	J1219	-	J1220	J1224	-	J1225	-	J1226	J1228	-	J1229	-	J1238	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1313	J1318												
207721	J1118	-	J1119	-	J1120	J1212	J1215	-	J1216					
207722	J1119	-	J1120	J1134	J1220	J1228	J1230							
207723	J1118	-	J1119	J1209										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1313													
207724	J1212													
207732	J1230													
207750	J1314													
207752	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1320													
287753	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1321													
207754	J1215	J1314												

TABLE 2-21. DISPLAY CONSOLE RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1318 - J1319 - J1320 - J1321		
207755	J1314		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1318 - J1319		
207756	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1320		
207757	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1320 - J1321		
207761	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1321 - J1322		
207762	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1320 J1322		
207763	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1322		
207764	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1318 - J1319 J1322		
207773	J1102 - J1103 - J1104 - J1105 - J1106 - J1107 - J1108 - J1109 - J1110 - J1111 - J1112 - J1113 - J1119 - J1120 - J1121 - J1124 - J1125 - J1127 - J1128 - J1129 - J1130 J1132 - J1133 - J1134 J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217 - J1218 - J1219 - J1220 J1222 - J1223 - J1224 - J1225 - J1226 - J1227 - J1220 - J1229 - J1230 J1232 - J1233 - J1234 J1312 J1314 J1324 J1327		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1117 J1131 1231 J1313 J1317 J1323		
236036	J1102 - J1103 J1107 - J1118 J1116 J1118 J1127 - J1128 J1213 J1215 J1226 - J1227 - J1228 - J1229 J1302 J1314		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1313		

TABLE 2-22. DATA DISPLAY GROUP ERROR STOP LOCATION MATRIX

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
ERROR STOP NUMBER	LHS	RHS

NOTE

"Y" INDICATES ERROR STOP IS LOCATED IN INDICATED FAULT CATALOG SECTION.

"-" INDICATES ERROR STOP IS NOT LOCATED IN INDICATED FAULT CATALOG SECTION.

000000	-	Y
520001	-	Y
520002	-	Y
520003	Y	Y
520004	Y	Y
520005	-	-
520006	-	Y
520007	Y	-
520010	Y	-
520013	Y	Y
520014	Y	Y
520015	Y	Y
520016	Y	Y
520017	Y	Y
702600	-	Y

TABLE 2-23. DDG LHS FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTES:

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, TYPE NAME, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:" FOR LED PROBLEMS, SEE TM9-1430-655-40-4: -ESPECIALLY PAGES 3-97 THRU 3-100.

	CONNECTOR		TYPE				PART NUMBER				
		J1115	240 OHM RESISTOR				587117				
		J1221	100 BIT SHIFT REGISTER				10281698				
		THRU									
		J1227	100 BIT SHIFT REGISTER				10281695				
520003	J1103 J1208	J1104 J1212	J1105 J1215	J1108	-	J1109	J1117	J1203	J1284	J1205	J1286
520004	J1103	J1105	J1188	J1204	J1205	J1206	J1208				
520005	J1104										
520007	J1105										
520010	J1204										
520013	J1204										
520014	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1115	J1221	J1222	J1223	J1224	J1225	J1226	J1227			
520015	J1011 - J1112 J1211	J1102 J1113 J1212	J1103 J1114 J1215	J1104 J1117 J1218	J1105 J1203 J1219	J1106 - J1204 J1220	J1108 J1205	J1109 J1206	J1110 J1207	-	J1111 J1208
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1115										
520016	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1115										
520017	J1101 - J1112 J1211	J1102 J1113 J1212	J1103 J1114 J1213	J1104 J1117 J1214	J1105 J1203 J1215	J1106 J1204 J1217	J1108 J1205 J1218	J1109 J1286 J1219	J1110 J1207 J1220	-	J1111 J1208

TABLE 2-23. DDG LHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS
DIAGNOSE STATUS

IOU OFF
IOU OFF

CPU OFF
CPU OFF

STOP

CONNECTORS

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1115 J1221 - J1222 - J1223 - J1224 - J1225 - J1226 - J1227

2-340

TABLE 2-24. DDG RHS FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTES:

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, TYPE NAME, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW, THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER "SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:" FOR LED PROBLEMS.. SEE TM9-1 43-655-40-4: -ESPECIALLY PAGES 3-97 THRU 3-180.

	CONNECTOR		TYPE		PART NUMBER	
	J1112		CLOCK		587100	
	J1212		240 OHM RESISTOR		587119	
	J1221		DIODE/RESISTOR		587128	
000000	J1110 - J1111	J1114	J1119	J1124 - J1125	J1126	J1220
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221					
520001	J1109 - J1110	J1114	J1118 - J1119	J1121 - J1122	J1127	J1220
520002	J1103 - J1104 - J1214 - J1215	J1106 - J1107 J1220	J1110 - J1111	J1120	J1122	112G6 J1213
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221					
520003	J1110 - J1219	J1114 - J1220	J1117 - J1222	J1124 - J1224	J1213 - J1225	J1214 - J1215 - J1216 - J1217 - J1218
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212 J1221					
520004	J1109	J1114	J1124	J1213	J1216	J1222 J1224 - J1225 - J1226
520006	J1109	J1214	J1220	1222		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221					
520013	J111 - J1226	J1123 - J1124	J1211	J1214	J1216 - J1217	J1220 J1224 - J1225
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212 J1221					

TABLE 2-24. DDG RHS FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF									
DIAGNOSE STATUS	IOU OFF	CPU OFF									
STOP			CONNECTORS								
520014	J1101 - J1102 - J1103 - J1104 - J1105 - J1106 - J1107 - J1108 - J1109 - J1110		J1111 - J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1121	J1122 - J1123 - J1124 - J1125 - J1126 - J1127 - J1209 - J1211 - J1213 - J1214	J1215 - J1216 - J1217 - J1218 - J1219 - J1220 - J1222 - J1224 - J1225 - J1226						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1112	J1212	J1221								
520015	J1101 - J1102 - J1103 - J1104 - J1105 - J1107 - J1109 - J1110 - J1111 - J1113	J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1121 - J1122 - J1123	J1124 - J1125 - J1126 - J1127 - J1211 - J1213 - J1214 - J1215 - J1216 - J1217	J1218 - J1219 - J1220 - J1222 - J1224 - J1225 - J1226 - J1227							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1112	J1212	J1221								
520016	J1103 - J1105 - J1106 - J1107 - J1108 - J1110 - J1111 - J1113 - J1114 - J1115	J1116 - J1117 - J1118 - J1119 - J1121 - J1122 - J1123 - J1211 - J1215 - J1216	J1217 - J1218 - J1220								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1221										
520017	J1104 - J1105 - J1106 - J1107 - J1109 - J1110 - J1111 - J1113 - J1114 - J1115	J1116 - J1117 - J1118 - J1119 - J1120 - J1121 - J1123 - J1124 - J1126 - J1211	J1213 - J1214 - J1215 - J1216 - J1217 - J1218 - J1219 - J1220 - J1222 - J1224	J1225 - J1226 - J1227							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1112	J1221									
702600	J1120	J1125 - J1126									

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX

NOTE:

THE RADAR INTERFACE EQUIPMENT (RIE) CONTAINS FIVE SECTIONS: A RADAR INTEGRATION UNIT (RIU), A VIDEO PROCESSOR UNIT (VPU), AN ANALOG SECTION AND AN 8K MEMORY UNIT (SINGLE PORT). IN ADDITION, THE VIDEO SIMULATION UNIT (VSU) IS DIRECTLY CONNECTED TO RIE CIRCUITRY AND A FAULT IN THIS UNIT CAN CAUSE A STOP CODE TO APPEAR FOR THE RIE. USE THE FOLLOWING ERROR STOP LOCATION MATRIX TO DETERMINE THE FAULT LOCATION.

A. 'Y' INDICATES ERROR STOP IS LOCATED IN INDICATED FAULT CATALOG SECTION.

B. '-' INDICATES ERROR STOP IS NOT LOCATED IN INDICATED FAULT CATALOG SECTION.

C. PRIOR TO IN-SYSTEM MTS CARD TESTING, SET THE RIE I PNL AND RIE PNL II AS FOLLOWS:

RIE I PANEL

SWITCH NAME	SETTING
IFF INTERROGATE	
MODE INTERLACE.....	OFF
SPECIAL VIDEO	OFF
VPU INPUT SELECT	
VPU A.....	OFF
VPU B	OFF
OVERLAP SELECT (ACM).....	OFF
MAPPER DECISION VALUES	
NORMAL MAP	80800
MTI MAP	000000

RIE II PANEL

SWITCH NAME	SETTING
IFF TGT DECISION VALUES	
AZ MAX.....	377
MISS (SWEEPS)	7

D. IN THE RIE, SOMETIMES THE TOP AND BOTTOM OF THE CARD RETAINERS ARE MARKED WITH A WHITE RECTANGLE. THESE CARDS CANNOT BE TESTED BY THE MTS WHILE IN THE SYSTEM.

E. A 'Y' IN THE RIE/VSU COLUMN INDICATES THAT THE FAULT COULD BE IN EITHER THE RIE OR THE VSU, AND THAT FI SHOULD BE EXECUTED ON BOTH UNITS. REFER TO THE VSU DOCUMENTATION FOR FURTHER DETAILS.

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU
000000	Y	Y	Y	-	-
500014	Y	Y	-	-	-
500706	-	-	Y	-	-
501010	-	Y	-	-	-
501034	-	Y	-	-	-
501100	-	Y	-	-	-
501101	-	Y	-	-	-
501102	Y	Y	-	-	-
501424	-	Y	-	-	-
501506	-	-	Y	-	-
501510	Y	Y	Y	-	-
501513	Y	Y	Y	Y	Y
501514	Y	Y	-	-	Y
501515	Y	Y	Y	-	-
501520	-	Y	-	-	-
501521	Y	Y	-	-	-
501522	-	Y	-	-	-
501523	-	Y	-	-	-
501525	-	Y	-	Y	-
501526	-	Y	-	-	-
501532	-	Y	Y	-	-
501550	Y	Y	Y	-	-
501551	-	Y	-	-	-
501552	-	Y	-	-	-
501554	-	Y	-	-	-
501615	-	Y	-	-	-
501620	-	Y	-	-	-
501622	-	Y	-	-	-
501623	-	Y	Y	-	-
501624	Y	Y	-	-	-
501632	Y	Y	Y	-	-
501633	-	Y	Y	-	-
501700	Y	Y	Y	Y	-
501702	-	Y	-	-	-
501703	-	Y	Y	-	-
501705	Y	Y	Y	-	-
501706	Y	Y	Y	Y	-
501707	-	Y	-	-	-
501710	-	Y	Y	-	-
501711	Y	Y	Y	-	-
501712	Y	Y	Y	Y	-
501713	Y	Y	Y	-	-
501714	-	Y	-	-	-
501715	-	Y	-	-	-
501716	-	Y	-	-	-
501717	-	Y	-	-	-
501720	-	Y	-	-	-
501721	-	Y	-	-	-
501722	-	Y	-	-	-
501723	-	Y	-	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
501724	-	Y	-	-	-
501730	-	Y	-	-	-
501731	-	Y	-	-	-
501732	-	Y	-	-	-
501733	-	Y	-	-	-
501734	-	Y	-	-	-
501735	Y	Y	Y	-	-
501736	-	Y	-	-	-
501737	-	Y	-	-	-
501740	-	Y	-	-	-
501741	-	Y	Y	-	-
501742	-	Y	-	-	-
501744	-	Y	-	-	-
501745	-	Y	-	-	-
501746	-	Y	-	-	-
501763	-	Y	-	-	-
501765	-	Y	Y	-	-
502100	-	Y	-	-	-
502101	Y	Y	-	-	-
502102	-	Y	-	-	-
502103	-	Y	-	-	-
502104	-	Y	-	-	-
502106	-	Y	-	-	-
502107	-	Y	-	-	-
502118	-	Y	-	-	-
502111	-	Y	-	-	-
502112	-	Y	-	-	-
502113	-	Y	-	-	-
502114	-	Y	-	-	-
502177	Y	Y	Y	-	-
502214	-	Y	-	-	-
502216	Y	-	-	-	-
502217	-	Y	-	-	-
502220	-	Y	-	-	-
502222	-	Y	-	-	-
502277	-	Y	-	-	-
502300	-	Y	-	Y	-
502301	-	Y	-	Y	-
502302	-	Y	-	Y	-
502303	-	Y	-	Y	-
502304	Y	Y	-	Y	-
502305	-	Y	-	Y	-
502306	-	Y	-	Y	-
502307	-	Y	-	Y	-
502310	-	Y	-	Y	-
502311	-	Y	-	Y	-
502312	-	Y	-	Y	-
502313	-	Y	-	Y	-
502314	-	Y	-	Y	-
502315	-	Y	-	Y	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
502316	-	Y	-	Y	-
502317	-	Y	-	Y	-
502320	-	Y	-	Y	-
502321	-	Y	-	Y	-
502322	-	Y	-	Y	-
502323	Y	Y	-	Y	-
502324	-	Y	-	Y	-
502325	-	Y	-	Y	-
502326	-	Y	-	Y	-
502327	-	Y	-	Y	-
502330	-	Y	-	Y	-
502331	-	Y	-	Y	-
502332	-	Y	-	Y	-
502333	-	Y	-	Y	-
502334	-	Y	-	Y	-
5002335	-	Y	-	Y	-
502336	-	Y	-	Y	-
502337	-	Y	-	Y	-
502377	Y	Y	-	Y	-
502500	-	-	-	Y	-
502510	-	Y	-	-	-
502511	-	Y	-	-	-
502512	Y	-	-	-	-
502513	-	Y	-	-	-
502514	-	Y	-	-	-
502515	-	Y	-	-	-
502516	-	Y	-	-	-
502540	Y	Y	-	-	-
502541	-	Y	-	-	-
502543	-	Y	-	-	-
502544	-	Y	-	-	-
502553	-	Y	-	-	-
502554	-	Y	-	-	-
502577	-	Y	-	-	-
502622	-	Y	-	-	-
502700	-	Y	-	Y	-
502701	-	Y	-	Y	-
502702	-	Y	-	Y	-
502703	-	Y	-	Y	-
502704	-	Y	-	Y	-
502705	-	Y	-	Y	-
502706	-	Y	-	Y	-
502707	-	Y	-	Y	-
502710	-	Y	-	Y	-
502711	-	Y	-	Y	-
502712	-	Y	-	Y	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
502713	-	Y	-	Y	-
502714	-	Y	-	Y	-
502715	-	Y	-	Y	-
502716	-	Y	-	Y	-
502717	-	Y	-	Y	-
502720	-	Y	-	Y	-
502721	-	Y	-	Y	-
502722	-	Y	-	Y	-
502723	-	Y	-	Y	-
502724	-	Y	-	Y	-
502725	-	Y	-	Y	-
502726	-	Y	-	Y	-
502727	-	Y	-	Y	-
502730	-	Y	-	Y	-
502731	-	Y	-	Y	-
502732	-	Y	-	Y	-
502733	-	Y	-	Y	-
502734	-	Y	-	Y	-
502735	-	Y	-	Y	-
502736	-	Y	-	Y	-
502737	-	Y	-	Y	-
502777	-	Y	-	Y	-
503020	Y	Y	-	-	-
503021	Y	Y	-	-	-
503561	-	Y	Y	-	-
503562	Y	Y	Y	-	-
503563	-	Y	-	-	-
503604	-	Y	-	-	-
503610	-	Y	-	-	-
503612	Y	Y	-	-	-
503613	-	Y	-	-	-
503630	-	Y	-	-	-
503631	Y	Y	Y	-	-
503632	-	Y	-	-	-
503633	Y	Y	Y	-	-
503634	-	Y	-	-	-
503635	Y	Y	-	-	-
503637	-	Y	-	-	-
503647	Y	Y	-	-	-
503651	Y	Y	-	-	-
503653	Y	Y	-	-	-
503655	Y	Y	Y	-	-
503671	Y	Y	Y	Y	Y
503677	Y	Y	Y	Y	Y
503701	Y	Y	-	-	-
503704	Y	Y	-	-	-
503705	-	Y	-	-	-
503706	Y	Y	-	-	-
503707	-	Y	-	-	-
503711	Y	Y	Y	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
503712	Y	Y	Y	-	-
504000	Y	Y	Y	-	Y
504061	Y	-	-	-	-
504063	-	Y	-	-	-
504064	Y	-	-	-	-
504066	Y	-	-	-	-
504067	Y	-	-	-	-
504070	Y	-	-	-	-
504071	Y	-	-	-	-
504072	Y	-	-	-	-
504073	Y	-	-	-	-
504074	Y	-	-	-	-
504075	Y	-	-	-	-
504076	Y	Y	-	-	-
504077	Y	Y	Y	-	-
504100	Y	Y	-	-	-
504101	Y	-	-	-	-
504102	Y	-	-	-	-
504107	Y	Y	-	-	-
504110	Y	-	-	-	-
504112	Y	Y	Y	-	-
504114	Y	-	-	-	-
504116	Y	Y	-	-	-
504117	Y	-	-	-	-
504120	Y	-	-	-	-
504122	Y	-	-	-	-
504123	Y	-	-	-	-
504133	Y	-	-	-	-
504141	Y	-	-	-	-
504142	Y	-	-	-	-
504144	Y	-	-	-	-
504150	-	-	-	-	-
504160	Y	-	-	-	-
504174	Y	-	-	-	-
504200	Y	Y	Y	-	-
504201	Y	Y	-	-	-
504220	Y	Y	-	-	-
504221	Y	-	-	-	-
504222	Y	-	-	-	-
504223	Y	-	-	-	-
504225	Y	-	-	-	-
504226	Y	-	-	-	-
504227	Y	-	-	-	-
504231	Y	-	-	-	-
504232	Y	-	-	-	-
504233	Y	-	-	-	-
504235	Y	-	Y	-	-
504236	Y	-	Y	-	-
504237	Y	Y	Y	-	-
504241	Y	-	-	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
504242	Y	-	-	-	-
504243	Y	-	-	-	-
504244	Y	-	-	-	-
504245	Y	-	-	-	-
504247	Y	-	-	-	-
504250	Y	-	-	-	-
504254	Y	-	Y	-	-
504255	Y	-	-	-	-
504256	Y	-	-	-	-
504257	Y	-	-	-	-
504262	Y	-	Y	-	-
504263	Y	-	-	-	-
504266	Y	-	-	-	-
504267	Y	Y	-	-	-
504272	Y	-	-	-	-
504273	Y	-	Y	-	-
504276	Y	-	-	-	-
504277	Y	-	-	-	-
504302	Y	-	-	-	-
504303	Y	Y	-	-	-
504312	Y	-	-	-	-
504314	Y	-	Y	-	-
504316	Y	-	-	-	-
504317	Y	-	-	-	-
504320	Y	-	Y	-	-
504341	Y	Y	Y	-	-
504342	Y	Y	Y	-	-
504344	Y	-	-	-	-
504346	Y	-	-	-	-
504350	Y	-	Y	-	-
504352	Y	-	Y	-	-
504360	Y	-	-	-	-
504377	-	-	Y	-	-
504401	Y	-	Y	-	-
504402	Y	-	Y	-	-
504403	Y	-	-	-	-
504404	Y	-	Y	-	-
504405	Y	-	-	-	-
504407	Y	Y	-	-	-
504410	Y	-	Y	-	-
504411	Y	-	Y	-	-
504412	Y	-	Y	-	-
504413	Y	-	Y	-	-
504420	Y	Y	Y	-	-
504421	Y	-	Y	-	Y
504422	Y	Y	Y	-	-
504423	Y	-	-	-	-
504424	Y	Y	Y	-	-
504430	Y	-	-	-	-
504431	Y	-	-	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
504435	Y	-	-	-	-
504436	Y	-	-	-	-
504437	Y	-	-	-	-
504461	Y	-	Y	-	-
504462	Y	-	-	-	-
504463	Y	-	Y	-	-
504464	Y	-	Y	-	-
504466	Y	-	-	-	-
504467	Y	-	Y	-	-
504501	Y	-	-	-	-
504502	Y	-	Y	-	-
504503	Y	-	-	-	-
504504	Y	-	Y	-	-
504506	Y	-	-	-	-
504510	Y	Y	Y	-	-
504512	Y	-	-	-	-
504514	Y	-	-	-	-
504516	Y	-	-	-	-
504521	Y	-	Y	-	-
504522	Y	-	Y	-	-
504526	Y	Y	Y	-	-
504527	Y	-	-	-	-
504530	Y	-	-	-	-
504531	Y	-	-	-	-
504532	Y	-	-	-	-
504533	Y	-	-	-	-
564535	Y	-	-	-	-
504536	Y	-	-	-	-
504537	Y	Y	Y	-	-
504541	Y	-	-	-	-
504542	Y	Y	Y	-	-
504544	Y	Y	-	-	-
504546	Y	-	-	-	-
504550	Y	Y	-	-	-
504552	Y	-	-	-	-
504554	Y	-	-	-	-
504560	Y	Y	-	-	-
504562	Y	-	-	-	-
504564	Y	-	-	-	-
504570	Y	-	-	-	-
504574	Y	-	-	-	-
504600	Y	-	Y	-	-
504601	Y	-	Y	-	-
504602	Y	-	Y	-	-
504604	Y	-	Y	-	-
504610	Y	-	Y	-	-
504614	-	-	Y	-	-
504616	-	-	Y	-	-
504620	Y	-	Y	-	-
504621	Y	-	-	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
504622	Y	-	-	-	-
504624	Y	-	-	-	-
504630	Y	Y	-	-	-
504632	Y	-	-	-	-
504634	Y	-	-	-	-
504661	Y	-	Y	-	-
504662	Y	-	Y	-	-
504663	Y	-	-	-	-
504664	Y	-	Y	-	-
504667	Y	-	-	-	-
504671	Y	-	-	-	-
504672	Y	-	-	-	-
504673	Y	-	-	-	-
504701	Y	-	Y	-	-
504702	Y	-	Y	-	-
504704	Y	-	Y	-	-
504710	Y	-	Y	-	-
504712	Y	-	-	-	-
504721	Y	-	Y	-	-
504722	Y	-	Y	-	-
504724	Y	-	-	-	-
504730	Y	-	-	-	-
504737	Y	Y	-	-	-
504740	Y	Y	-	-	-
504741	Y	-	-	-	-
504742	Y	-	-	-	-
504744	Y	-	-	-	-
504750	Y	Y	-	-	-
504751	Y	Y	-	-	-
504761	Y	-	-	-	-
504771	Y	Y	Y	-	-
504773	Y	-	-	-	-
504776	Y	-	-	-	-
505300	Y	-	-	-	-
505301	Y	-	-	-	-
505312	Y	-	-	-	-
505313	Y	-	-	-	-
505315	Y	-	-	-	-
505316	Y	-	-	-	-
505317	Y	-	-	-	-
505320	Y	-	-	-	-
505321	Y	-	-	-	-
505322	Y	-	-	-	-
505323	Y	-	-	-	-
505325	Y	-	-	-	-
505326	Y	-	-	-	-
505327	Y	-	-	-	-
505330	Y	-	-	-	-
505331	Y	-	-	-	-
505332	Y	-	-	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF			
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU
505333	Y	-	-	-	-
505335	Y	-	-	-	-
505336	Y	-	-	-	-
505337	Y	-	-	-	-
505340	Y	-	-	-	-
505400	-	-	Y	-	-
505401	-	-	Y	-	-
505402	-	-	Y	-	-
505403	-	-	Y	-	-
505405	-	-	Y	-	-
505406	-	-	Y	-	-
505407	-	-	Y	-	-
505410	-	-	Y	-	-
505411	-	-	Y	-	-
505412	-	-	Y	-	-
505413	-	-	Y	-	-
505414	-	-	Y	-	-
505415	-	-	Y	-	-
505416	-	-	Y	-	-
505417	-	-	Y	-	-
505420	-	-	Y	-	-
505421	-	-	Y	-	-
505422	-	-	Y	-	-
505423	-	-	Y	-	-
505424	-	-	Y	-	-
505425	-	-	Y	-	-
505426	-	-	Y	-	-
505427	-	-	Y	-	-
505430	-	-	Y	-	-
505431	-	-	Y	-	-
505432	-	-	Y	-	-
505433	-	-	Y	-	-
505434	-	-	Y	-	-
505435	-	-	Y	-	-
505436	-	-	Y	-	-
505437	-	-	Y	-	-
505440	-	-	Y	-	-
505441	-	-	Y	-	-
505442	-	-	Y	-	-
505443	-	-	Y	-	-
505444	-	-	Y	-	-
505445	-	-	Y	-	-
505447	-	-	Y	-	-
505450	-	-	Y	-	-
505451	-	-	Y	-	-
505460	-	-	Y	-	-
505461	-	-	Y	-	-
505500	-	-	Y	-	-
505501	-	-	Y	-	-
505502	-	-	Y	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU
505503	-	-	Y	-	-
505504	-	-	Y	-	-
505505	-	-	Y	-	-
505506	-	-	Y	-	-
505510	-	-	Y	-	-
505510	-	-	Y	-	-
505511	-	-	Y	-	-
505512	-	-	Y	-	-
505513	-	-	Y	-	-
505514	-	-	Y	-	-
505515	-	-	Y	-	-
505516	-	-	Y	-	-
505517	-	-	Y	-	-
505520	-	-	Y	-	-
505521	-	-	Y	-	-
505522	-	-	Y	-	-
505523	-	-	Y	-	-
505524	-	-	Y	-	-
505525	-	-	Y	-	-
505526	-	-	Y	-	-
505527	-	-	Y	-	-
505530	-	-	Y	-	-
505531	-	-	Y	-	-
505532	-	-	Y	-	-
505533	-	-	Y	-	-
505534	-	-	Y	-	-
505535	-	-	Y	-	-
505536	-	-	Y	-	-
505537	-	-	Y	-	-
505540	-	-	Y	-	-
505541	-	-	Y	-	-
505542	Y	-	-
505544	-	-	Y	-	-
505545	-	-	Y	-	-
505546	-	-	Y	-	-
505547	-	-	Y	-	-
505550	-	-	Y	-	-
505551	-	-	Y	-	-
505560	-	-	Y	-	-
505561	-	-	Y	-	-
505600	-	-	Y	-	Y
506000	-	Y	Y	-	-
506001	-	Y	Y	-	-
506002	-	Y	Y	-	-
506003	Y	Y	Y	-	-
506004	-	-	Y	-	Y
506005	-	-	Y	-	-
506006	-	-	Y	-	-
506007	-	Y	Y	-	-
506010	-	-	Y	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
506011	-	-	Y	-	-
506012	Y	Y	Y	-	Y
506013	-	Y	Y	-	-
506014	Y	Y	Y	-	Y
506015	Y	Y	Y	-	Y
506016	Y	Y	Y	-	Y
506017	Y	-	Y	-	Y
506020	Y	-	Y	-	-
506021	Y	-	Y	-	-
506022	-	-	Y	-	Y
506023	-	-	Y	-	-
500602	-	-	Y	-	-
506025	-	-	Y	-	-
506026	Y	Y	Y	-	-
500627	Y	Y	Y	-	-
506030	Y	-	Y	-	-
506031	Y	Y	Y	-	-
506032	Y	Y	Y	-	-
500633	Y	Y	Y	-	-
506034	-	-	Y	-	-
506035	Y	-	Y	-	-
506036	-	-	Y	-	Y
506037	-	-	Y	-	-
506040	-	-	Y	-	-
506041	-	-	Y	-	-
506042	Y	Y	Y	-	Y
506043	-	-	Y	-	-
506044	Y	-	Y	-	-
506045	Y	Y	Y	-	-
506045	Y	-	Y	-	-
506047	Y	-	Y	-	-
506050	-	-	Y	-	-
506051	-	-	Y	-	-
506052	-	-	Y	-	-
506053	Y	-	Y	-	-
506054	Y	-	Y	-	-
506055	Y	Y	Y	-	-
506056	Y	Y	Y	-	-
506057	-	Y	Y	-	-
506060	Y	Y	Y	-	-
506061	Y	Y	Y	-	-
506062	Y	Y	Y	-	-
506063	-	-	Y	-	-
506064	-	-	Y	-	-
506065	Y	Y	Y	-	-
506066	Y	Y	Y	-	-
506067	-	-	Y	-	-
506070	-	-	Y	-	-
565071	-	-	Y	-	-
506072	-	-	Y	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU
502673	-	Y	Y	-	-
506074	Y	Y	Y	-	-
500675	-	-	Y	-	-
506076	-	-	Y	-	-
506077	-	Y	Y	-	-
506100	-	-	Y	-	-
506101	-	Y	Y	-	-
506102	Y	Y	Y	-	-
506103	Y	Y	Y	-	-
506104	Y	Y	Y	-	-
506105	Y	Y	Y	-	-
506106	Y	Y	Y	-	Y
506107	Y	Y	Y	-	-
506110	Y	-	Y	-	-
506111	Y	-	Y	-	-
506112	-	-	Y	-	-
506113	Y	-	Y	-	-
506114	Y	Y	Y	-	-
506115	Y	Y	Y	-	-
506116	Y	Y	Y	-	Y
506117	Y	Y	Y	-	Y
506120	Y	Y	Y	-	-
506121	Y	Y	Y	-	Y
506122	Y	-	Y	-	-
506123	Y	-	Y	-	-
506124	Y	-	Y	-	-
506125	-	-	Y	-	-
506126	Y	-	Y	-	-
506127	-	Y	Y	-	-
506130	Y	Y	Y	-	-
506131	Y	Y	Y	-	Y
506132	Y	-	Y	-	-
506133	-	-	Y	-	-
506134	-	-	Y	-	-
506135	-	-	Y	-	-
506136	-	-	Y	-	-
506137	-	-	Y	-	-
506140	-	-	Y	-	-
506141	-	-	Y	-	-
506142	-	-	Y	-	-
506143	-	-	Y	-	-
506144	Y	Y	Y	-	-
506145	Y	-	Y	-	-
506146	-	7	Y	-	-
506147	Y	-	Y	-	-
506150	Y	-	Y	-	Y
506151	Y	-	Y	-	-
506152	-	-	Y	-	-
506153	-	-	Y	-	-
506154	-	-	Y	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU
506155	-	-	Y	-	-
506156	-	-	Y	-	-
505157	Y	-	Y	-	-
506160	Y	Y	Y	-	-
506161	Y	-	Y	-	-
506162	Y	Y	Y	-	-
506163	Y	Y	Y	-	-
506164	-	-	Y	-	-
506165	-	-	Y	-	-
506166	-	-	Y	-	-
506167	Y	Y	Y	-	Y
506170	Y	Y	Y	-	-
506171	Y	Y	Y	-	-
506172	-	-	Y	-	-
506173	-	-	Y	-	-
506174	-	-	Y	-	-
506175	Y	-	Y	-	-
506176	Y	Y	Y	-	-
506177	Y	-	Y	-	-
506200	Y	Y	Y	-	-
506201	-	-	Y	-	-
506202	-	-	Y	-	-
506203	-	-	Y	-	-
506204	-	-	Y	-	-
506205	-	-	Y	-	-
526206	-	-	Y	-	-
506207	-	-	Y	-	-
526210	-	-	Y	-	-
506211	-	-	Y	-	-
506212	-	-	Y	-	-
506213	Y	-	Y	-	Y
506214	Y	Y	Y	-	Y
506215	Y	Y	Y	-	-
506216	Y	Y	Y	-	-
506217	Y	Y	Y	-	-
506221	Y	Y	Y	-	Y
506300	-	Y	-	-	-
506301	-	Y	-	-	-
506302	Y	Y	-	-	-
506304	Y	Y	Y	-	-
506307	Y	Y	-	-	-
506311	Y	Y	-	-	-
506313	-	Y	-	-	-
506315	-	Y	-	-	-
506316	-	Y	-	-	-
556317	-	Y	-	-	-
506322	Y	Y	-	-	-
506323	Y	-	-	-	-
506324	Y	-	-	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
526325	Y	-	-	-	-
506326	Y	-	-	-	-
506327	Y	-	-	-	-
506330	Y	-	-	-	-
526331	Y	-	-	-	-
506332	Y	Y	Y	-	-
506333	Y	-	-	-	-
506334	Y	-	-	-	-
506335	Y	-	Y	-	-
506336	Y	-	-	-	-
506337	-	Y	-	-	-
506340	-	Y	-	-	-
506341	-	Y	-	-	-
506342	-	Y	-	-	-
506343	-	Y	-	-	-
506344	Y	Y	-	-	-
506350	Y	Y	-	-	-
506351	Y	Y	-	-	-
506352	Y	-	-	-	-
506353	Y	Y	-	-	-
506354	-	Y	-	-	-
506355	Y	-	-	-	-
506356	Y	-	-	-	-
506370	Y	-	-	-	-
506400	Y	Y	-	-	-
506410	Y	Y	-	-	-
506461	Y	Y	-	-	-
506475	Y	-	-	-	-
506476	Y	Y	-	-	-
506477	Y	-	Y	-	-
506533	-	Y	-	-	-
506535	-	Y	-	-	-
507007	-	-	Y	-	-
507010	-	-	Y	-	-
507014	Y	-	-	-	Y
507015	Y	-	-	-	-
507016	Y	-	-	-	-
507020	Y	-	-	-	-
507021	Y	-	-	-	-
507022	Y	-	-	-	Y
507023	Y	-	-	-	-
507024	Y	-	-	-	-
507025	Y	-	-	-	-
507026	Y	-	-	-	-
507027	Y	-	-	-	-
507031	Y	Y	-	-	Y
507032	Y	-	-	-	Y
507033	Y	Y	Y	-	Y
507034	Y	Y	Y	Y	-
507035	Y	Y	Y	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
507036	Y	-	-	-	
507037	Y	Y	Y	-	
507040	Y	Y	Y	Y	
507041	Y	-	-	-	
507042	Y	-	-	-	
507044	Y	-	-	-	
507045	Y	-	-	-	
507046	Y	-	-	-	
507047	Y	Y	-	Y	
507050	Y	-	-	-	
507051	Y	Y	Y	-	
507052	Y	Y	-	-	
507053	Y	-	Y	-	
507054	Y	Y	-	-	
507055	Y	Y	-	Y	
507056	Y	Y	-	-	
507057	Y	-	Y	-	
507061	Y	-	-	-	
507062	Y	-	-	-	
507063	Y	Y	-	-	
507064	Y	-	-	-	
507065	Y	Y	-	-	
507066	Y	Y	-	-	
507070	Y	Y	-	-	
507071	Y	-	-	-	
507072	Y	-	-	-	
507073	Y	-	-	-	
507074	Y	Y	-	-	
507075	Y	-	-	-	
507076	Y	-	-	-	
507077	Y	-	-	-	
507100	Y	-	-	-	
507101	Y	-	-	-	
507102	Y	-	-	-	
507103	Y	-	-	-	
507105	Y	Y	-	-	
507106	Y	Y	-	-	
507107	Y	Y	-	-	
507110	Y	-	-	-	
507111	Y	-	-	-	
507112	Y	-	-	-	
507113	Y	-	-	-	
507115	Y	-	-	-	
507116	Y	-	-	-	
507117	Y	-	-	-	
507120	Y	-	-	-	
507121	Y	-	-	-	
507124	Y	-	-	-	
5007131	Y	-	-	-	
507135	Y	-	-	-	

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF		CPU OFF		RIE/VSU
	IOU OFF	IOU OFF	CPU OFF	CPU OFF	
ERROR STOP	RIU	VPU	ANALOG	MEMORY	
507137	Y	-	-	-	-
507146	Y	-	-	-	-
507147	Y	-	-	-	-
507160	Y	Y	-	-	-
507170	Y	Y	-	-	-
507171	Y	Y	-	-	-
507172	Y	Y	-	-	-
507173	Y	Y	-	-	-
507174	Y	Y	-	-	-
507175	Y	Y	-	-	-
507176	Y	Y	-	-	-
507177	Y	Y	-	-	-
507221	Y	Y	Y	-	-
507301	Y	Y	-	-	-
507302	Y	-	-	-	-
507305	Y	-	-	-	-
507403	-	-	-	-	-
507450	-	-	Y	-	-
507451	-	-	Y	-	-
507452	-	-	Y	-	-
507453	-	-	Y	-	-
507455	Y	Y	-	-	-
507456	Y	-	-	-	-
507460	Y	-	-	-	-
507463	Y	-	-	-	Y
507464	Y	Y	Y	-	-
507500	Y	Y	Y	-	-
507501	Y	Y	Y	Y	-
507502	Y	-	-	-	-
507503	Y	Y	Y	Y	-
507504	Y	Y	Y	Y	Y
507505	Y	-	Y	-	-
507510	Y	-	-	Y	-
507511	Y	Y	Y	-	-
507513	Y	-	-	-	-
507514	Y	-	-	-	-
507525	Y	-	-	-	-
507527	Y	-	-	-	-
507537	Y	-	-	-	-
507543	Y	Y	-	-	-
507544	Y	-	-	-	-
507552	Y	-	-	-	-
507560	Y	-	-	-	-
507577	Y	Y	Y	Y	Y
507700	Y	Y	-	-	Y
507705	Y	Y	Y	-	Y
507706	Y	-	Y	-	-
507707	Y	-	Y	-	-
507730	Y	-	Y	-	-
507742	Y	Y	-	-	-

TABLE 2-25. RIE ERROR STOP LOCATION MATRIX - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF			
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU	
587744	Y	-	-	-	-	
507745	Y	-	-	-	-	
587746	Y	-	-	-	-	
572610	-	Y	-	-	-	
774500	Y	Y	-	-	-	
777000	-		-	-	Y	

Change 4 2-360

TABLE 2-26. RIU FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTE:

1. PRIOR TO IN-SYSTEM MTS CARD TESTING, SET THE RIE I PNL AND RIE II PNL AS FOLLOWS:
 - RIE I PANEL
 - SWITCH NAME SETTING
 - IFF INTERROGATE
 - MODE INTERLACE OFF
 - SPECIAL VIDEO OFF
 - VPU INPUT SELECT
 - VPU A OFF
 - VPU B OFF
 - OVERLAP SELECT (RCM) OFF
 - MAPPER DECISION VALUES
 - NORMAL MAP8800
 - MTI MAP08888
 - RIE II PANEL
 - SWITCH NAME SETTING
 - IFF TGT DECISION VALUES
 - AZ MAX377
 - MISS (SWEEPS) 7
2. IN THE RIU BAY THE TOP AND BOTTOM OF THE FOLLOWING CARD RETAINERS ARE MARKED WITH A WHITE RECTANGLE. THESE CARDS CANNOT BE TESTED BY THE MTS WHILE IN THE SYSTEM.

J1125 J1132 J1140 - J1141 J1143 J2218 J2227 - J2228

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
501514	J1108	J1114	J 1116	- J1117	- J1118	- J1119	- J1120	- J1121	- J1122	J1124		
	J1126	- J1127	J1129	- J1130	- J1131	- J1132	J1134	J1138	J1304	J1313		
	- J1314	J1317	- J1318	- J1319	- J1320	J1324	J1329	- J1330	J1336	- S1337		
	- J1339	J1340	J2234	J2308	- J2309	J2312	J2314	J2318	- J2319	J2322		
	J2324	- J2325	J2327	J2329	- J2330	- J2331	J2337	- J2338	- J2339	- J2340		
	- J2341	- J2342	- J2343	- J2344	- J2345							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1139	J2332										
501515	J1108	- J1109	J1116	J1313	J1325	J1332	J2201	- J2202	12305	- J2386		
	J2318	J2330										
501521	J1313	- J1314	J1317	- J1318	J1320	J1327	J1330	J1333				
501550	J1128	J2212										
501624	J1110	- J1111	- J1112	J1338								
501632	J1112											
501700	J1128	- J1129	J1333	- J1334	J1336	- J1337	- J1338	- J1339	J2131	J2281		
	J2211	- J2212	J2304									
581785	J1127	- J1128	J1334	- J1335	J1337	J1339						
501706	J1126	- J1127	- J1128	J1335	J1337							
501711	J2131	J2202										
501712	J1248	- J2137	J2231	J2233	- J2234	- J2235	- J2236	- J2237	J2239	- J2240		
	- J2241	- J2242	- J2243	- J2244	- J2245	- J2246	J2301	- J2302	- J2303	- J2304		
	J2306	- J2307	J2310	- J2311	- J2312	J2314	- J2315	- J2316	- J2317	- J2318		
	J2320	- J2321	J2322	J2324	- J2325	- J2326	- J2327	- J2328	- J2329	- J2330		
	- J2331	J2335	- J2336	- J2337	J2339	- J2340	- J2341	- J2342	- J2343	- J2344		
	- J2345	- J2346										
501713	J1110	J1115	- J1119	- J1120	- J1130	- J1131						
501735	J1128											
502101	J1109											
502177	J1108	- J1109	- J1118	- J1111	J1116	J1126	J1128	- J1129	J1132	J1222		
	J1247											
502216	J1109											
502304	J1346											
502323	J1341											

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF							
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP						CONNECTORS					
502377	J1116	J1121	J1130	J1132	J1134	J1342					
582512	J1339										
502540	J1114	- J1115	J1119	- J1120	J1124						
503020	J1119	J1131	J1135	J2233							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1139										
503021	J1109	J1112	J1117	- J1118	- J1119	- J1120	- J1121	J1124	J1129	- J1130	J1130
	J1137	J1319	J1337	- J1338	- J1339	- J1340	J2315	J2317	- J2318	J2321	J2321
	- J2322	J2324	J2327	J2329	- J2330	J2333	- J2334	J2336	- J2337	J2339	J2339
	- J2340	- J2341	- J2342	- J2343	- J2344	- J2345	- J2346				
503562	J1222	J1320	J1323	J1333	J2136	J2331	J2341				
503612	J1189	J1111	- J1112	J1120	J1125	- J1126	- J1127	J1129	- J1130	- J1131	J1131
	- J1132	J2230	J2234	- J2235	- J2236						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1123										
503631	J1135	J1137	J1144	- J1145	J1147	- J1148	J1205	J1319	- J1320	J1323	J1323
	J1337	J1340	J2129	J2210	J2224	J2233	- J2234	- J2235	J2246	J2311	J2311
	J2336	J2339	J2341	- J2342	- J2343						
503633	J1108	J1110	- J1111	- J1112	J1116	J1120	J2333				
503635	J1108	J1120	J1221	J1232	- J1233	- J1234	J1240	- J1241			
503647	J1116	J1122	J1124	J1126	- J1127	J1129	J1132	J1134	J2207	J2304	J2304
	- J2305	J2307	- J2308	- J2309	J2311	- J2312	- J2313	- J2314	- J2315	- J2316	J2316
	- J2317	- J2318	- J2319	- J2320	- J2321	J2323	- J2324	J2326	J2330	J2334	J2334
	- J2335	J2338	J2341	- J2342	J2345						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1139	J2332									
503651	J1336										
503653	J1337										
503655	J1114	- J1115	J1124	J1129	J1345	- J1346	J2314	2319	- J2320	J2325	J2325
	J2330										
503671	J1108	J1116	J1120	J1130	J1135	J1137	J1144	- J1145	J1147	- J1148	J1148
	J1205	J1317	J1319	- J1320	J1323	J1325	J1345	- J1346	J2129	J2212	J2212
	J2222	J2224	J2341	- J2342	J2345						

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
STOP	CONNECTORS											
503677	J1108	J1109	J1110	J1111	J1112	J1114	J1116	J1118	J1119	J1120	J1121	J1122
-	J1121	J1122	J1126	J1127	J1128	J1129	31130	J1131	51132	J1134	J1135	J1136
	J1138	J1208	J1217	J1219	J1233	J1242	J1244	J1247	J1313	J1317	J1318	J1319
-	J1318	J1319	J1320	J1323	J1324	J1325	J1326	J1328	J1330	J1332	J1333	J1334
-	J1333	J1334	J1335	J1336	J1337	J1338	J1339	J1340	J1341	J1342	J1343	J1344
-	J1344	J1345	J1346	J2104	J2130	J2132	J2134	J2136	J2140	J2203	J2204	J2205
-	J2204	J2207	J2208	J2209	J2210	J2211	J2212	J2218	J2219	J2220	J2221	J2222
-	J2221	J2222	J2223	J2224	J2226	J2227	J2228	J2229	J2230	J2231	J2232	J2233
	J2233	J2234	J2235	J2236	J2237	J2238	J2240	J2241	J2242	J2243	J2244	J2245
-	J2302	J2304	J2305	J2308	J2309	J2310	J2311	J2312	J2313	J2314	J2315	J2316
-	J2315	J2316	J2317	J2318	J2319	J2320	J2321	J2322	J2323	J2324	J2325	J2326
-	J2325	J2326	J2327	J2328	J2329	J2330	J2331	J2333	J2334	J2335	J2336	J2337
-	J2336	J2337	J2338	J2339	J2340	32341	J2342	J2343	J2344	J2345	J2346	J2347
-	J2346											
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1123	J2217	J2332									
503701	J1318	J1319	J1323	J2104	J2105	J2110	J2117	J2118	J2121	J2128	J2129	J2130
	J2130	J2136	J2137	J2138	J2201	J2202	J2203	J2204	J2214	J2218	J2219	J2220
-	J2219	J2220	J2221	J2222	J2223	J2224	J2229	J2230	J2231	J2233	J2234	J2235
-	J2234	J2235	J2236	J2237	J2238	J2240	J2241	J2242	J2243	J2244	J2245	J2246
-	J2245	J2301	J2302	J2304	J2305	J2308	J2312	J2314	J2316	J2317	J2318	J2319
-	J2318	J2322	J2325	J2328	J2329	J2330	J2331	J2335	J2341	J2342	J2343	J2344
	J2345	J2346										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2217	J2332										
503704	J2222	J2229	J2233	J2234	J2235	J2345						
503706	J1318	J1325										
503711	J3108	J2241										
503712	J1116	J2231	J2244	J2316	J2345							
504000	J1108	J1111	1112	J1114	J1117	J1119	J1120	J1124	J1130	J1135	J1136	J1137
	J1137	J1140	J1144	J1146	J1147	J1148	J1209	J1210	J1222	J1313	J1314	J1315
	J1317	J1319	J1320	J1323	J1324	J1330	J1333	J1344	J2101	J2102	J2103	J2104
-	J2103	J2104	J2107	J2108	J2109	J2110	J2111	J2112	J2113	J2114	J2115	J2116
-	J2115	J2116	J2117	J2118	J2119	J2121	J2123	J2124	J2125	J2126	J2127	J2128
-	J2127	J2128	J2129	J2130	J2131	J2132	J2133	J2134	J2135	J2136	J2137	J2138
-	J2137	J2138	32139	J2140	J2141	J2142	J2143	J2144	J2201	J2202	J2203	J2204
	J2204	J2207	J2208	J2211	J2218	J2219	J2220	J2221	J2222	J2223	J2224	J2225
-	J2224	J2226	J2227	J2228	J2229	J2230	32231	J2233	32234	J2235	J2236	J2237
-	J2236	J2237	J2238	J2239	J2240	J2241	J2242	J2244	J2245	J2246	J2247	J2248
	J2301	J2302	J2304	J2305	J2308	J2309	J2310	J2311	J2313	J2314	J2315	J2316
-	J2315	J2316	J2317	J2318	J2319	J2320	J2321	J2322	J2323	J2324	J2325	J2326
-	J2325	J2326	J2327	J2329	J2329	J2336	J2331	J2333	J2334	J2335	J2336	J2337
-	J2336	J2337	J2338	32339	J2340	J2341	J2342	J2343	J2344	J2345	J2346	J2347

Change 2 2-366

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS													
STOP																
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J2217	J2332														
504061	J2244	J2246														
504864	J2222	J2234 - 32235	J2244	-	J2245	-	J2246									
504066	J2222	J2234 - J2235														
504067	J1337	J2234														
504070	J2234	J2244 - J2245	-	J2246												
504071	J2222	J2244														
504072	J1339	J2222	J2234	-	J2235											
504073	J2222	J2234														
504074	J1323 - J2303	J2222	J2233	-	J2234	-	J2235	J2244	-	J2245	-	J2246	J2301	-	J2382	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J2217															
504075	J2234	J2244	-	J2245	-	J2246										
504076	J1336	J2222	J2230	J2233	-	J2234	-	J2235	J2244	-	J2245	-	J2246			
504077	J1208	J1217	J1219	J1242	J1244	J1313	J1320	J1323	-	J1324	-	J1325				
-	J1326	J1333	J1335	-	J1336	J1339	-	J1340	-	J1341	-	J1342	-	J1343	-	J1344
-	J1345	-	J1346	J2103	-	J2104	-	J2105	J2118	J2117	-	J2118	J2121	-	J2125	
-	J2128	J2130	J2132	J2134	J2136	-	J2137	-	J2138	J2201	-	J2202	-	J2203		
-	J2204	J2214	J2218	-	J2219	-	J2220	-	32221	-	J2222	-	J2223	-	J2224	J2229
-	J2230	-	J2231	J2234	-	J2235	J2237	-	J2238	J2240	-	J2241	-	J2242	-	J2243
-	J2244	J2301	J2304	-	J2385	J2308										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J2217															
504100	J1334	J1340	-	J1341	J1343	J2140	J2202	J2210	J2218	-	J2219	-	J2220			
-	J2221	-	J2222	-	J2223	-	J2224	J2227	J2229	-	J2230	-	J2231	J2233	-	J2234
-	J2235	J2237	-	J2238	J2240	-	J2241	-	J2242	J2244	J2301	-	J2302	J2304		
-	J2305	J2310	J2315	J2322	J2324	J2329	J2333	J2336	-	J2337	J2339					
-	J2340	J2342	-	J2343	-	J2344	J2346									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																
	J2217															
504101	J2234	J2245														

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS												
DIAGNOSE STATUS	IOU OFF	CPU OFF													
STOP															
504102	J2235 J2301	- J2236	- J2237	- J2238	J2240	- J2241	- J2242	- J32243	- J2244	J2246					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J2217														
504107	J1313 J2218 - J2302 J2337	J1337 - J2219 J2304 J2339	J1340 - J2222 - J2305	- J1341 - J2223 - J2308	J2140 J2234 - J2309	J2201 J2237 J2319	J2203 - J2238 J2330	- J2204 J2240 - J2331	J2211 J2244 J2333	- J2212 J2301 - J2334					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J2217														
504110	J2234	J2242													
504112	J2182 - J2118 J2134 - J2221	- J2103 - J2119 - J2135 J2227	- J2104 - J2121 - J2136 J2231	- J2105 - J2122 - J2137 J2235	J2187 - J2123 - J2130 J2239	J2110 - J2124 J2140 J2242	- J2111 J2127 J2143 - J2243	J2113 - J2130 - J2144 - J2244	J2116 - J2131 J2218	- J2117 - J2132 J2220					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J2217														
504114	J2104 - J2238	J2283 J2310	- J2204	J2219	J2222	- J2223	- J2224	J2234	- J2235	J2237					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:															
	J2217														
504116	J1325	J2125	J2221	J2229	J2231	J2233	- J2234	- J2235							
504117	J1329	J2126													
504120	J2234	- J2235													
504122	J2234	- J2235													
504123	J2125	J2220	- J2221	J2234	- J2235										
504133	J2243														
504141	J2234	J2246													
504142	J2104	J2234	- J2235	J2242	- J2243										
504144	J2235														
504150	J2235														
504160	J2104	J2235													

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS			IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP													
504174	J2234	- J2235											
504200	J2104	- J2105	J2108	J2110	J2115	J2118	J2120	- J2121	- J2122	- J2123			
	- J2124	- J2125	- J2126	J2136	J2219	J2226	- J2227	- J2228	J2231	J2239			
	J2241	J2243											
504201	J2104	- J2105	- J2106	- J2107	J2109	J2113	J2115	- J2116	- J2117	- J2118			
	- J2119	- J2120	- J2121	- J2122	- J2123	- J2124	- J2125	- J2126	- J2127	- J2128			
	- J2129	- J2130	- J2131	J2133	J2136	- J2137	J2214	J2218	- J2219	J2221			
	- J2222	- J2223	- J2224	- J2225	- J2226	- J2227	- J2228	- J2229	- J2230	- J2231			
	J2233	J2235	- J2236	- J2237	J2239	- J2240	- J2241						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
J2217													
504220	J1320	J2117	- J2118	J2136									
504221	J2121												
504222	J2104	- J2105											
504223	J2105	J2121											
504225	J2224												
504226	J2119												
504227	J2104	J2125	J2242										
504231	J2101	J2105	J2121										
504232	J2104	- J2105	J2119										
504233	J2107	J2116	J2121										
504235	J2101	J2105	J2110	- J2111	J2115	J2117	J2121	J2123	J2125	J2135			
	J2239												
504236	J2104	- J2105	J2108	- J2109	J2115	J2119	- J2120	J2139	J2143	J2227			
	J2239	J2243											
504237	J2101	- J2102	- J2103	- J2104	- J2105	- J2106	- J2107	- J2108	- J2109	- J2110			
	- J2111	- J2112	- J2113	- J2114	- J2115	- J2116	- J2117	- J2118	- J2119	- J2120			
	- J2121	- J2122	- J2123	- J2124	- J2125	- J2126	- J2127	- J2128	- J2129	- J2130			
	- J2131	- J2132	- J2133	- J2134	- J2135	- J2136	- J2137	- J2138	- J2139	- J2140			
	- J2141	- J2142	J2144	J2201	- J2202	J2218	- J2219	- J2220	J2222	- J2221			
	- J2224	- J2225	J2229	- J2230	- J2231	J2233	J2236	- J2237	J2239	- J2240			
	J2242	J2244	J2346										

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J2217

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
504241	J2181	J2105	J2109	J2118	J2121						
584242	J2104	- J2105	J2108								
504243	J2181	J2105	J2107	J2109	J2111	J2115	J2121	J2224	- J2225	J2236	
504244	J2101	J2105	- J2106	J2108	- J2109	J2111	J2113	J2117	- J2118	J2121	
	J2127	- J2128	J2131	J2135	J2137	- J2138	J2219	- J2220			
504245	J2101	J2109	J2115	J2125	- 32126	- J2127					
504247	J2115	J2120	J2124	J2128							
504250	J2106	J2109									
504254	J2101	J2103	- J2104	- J2105	- J2106	- J2107	- J2108	- J2109	J2111	- J2112	
-	J2113	- J2114	J2116	- J2117	- J2118	- J2119	J2121	J2127	J2131	- J2132	
	J2134	- J2135	- J2136	- J2137	J2140	J2143	J2219	J2243			
504255	J2110	J2112	J2115	J2136							
504256	J2101	J2108	- J2109	J2115							
504257	J2101	J2108	- J2109	- J2110	J2112	J2115	- J2116	J2118	- J2119	- J2120	
	J2122	J2124	J2126	- J2127	- J2128	J2132	J2134	J2137	J2140		
504262	J2118	- J2119	- J2120	J2123							
504263	J2225										
504266	J2104										
504267	J2101	- J2102	- J2103	- J2104	J2107	J2113	J2130	J2140	J2220	- J2221	
-	J2222	J2225	J2228	- J2229	- J2230	- J2231	J2233	- J2234	- J2235	- J2236	
-	J2237	- J2238	J2242	- J2243	J2304	- J2305	J2308	- J2389	- J2310	- J2311	
SUBSTITUTE	THE FOLLOWING CARD ASSEMBLIES:										
	J2217										
504272	J2111	J2113	J2117	J2228							
504273	J2115	J2226									
504276	J2102	J2104	- J2105	- J2106	- J2107	J2111	J2113	J2117	- J2118	J2120	
-	J2121	J2226									
504277	J2228										
504302	J2117	J2120	J2228								
504303	J2106	J2111	J2113	J2117	- J2118	- J2119	J2122	J2140			

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	CONNECTORS								
DIAGNOSE STATUS													
STOP													
504312	J2123												
504314	J1119	J2106	- J2107	J2111	J2114	- J2115	- J2116	- J2117	- J2118	- J2119			
	J2132	- J2133	- J2134	J2137	- J2130	- J2139	- J2140	J2218	- J2219	- J2220			
	- J2221	J2225	- J2226	32228	J2230	J2240							
504316	J2119												
504317	J2107	J2111	J2118	J2226	J2228								
504320	J1317	- J1318	- J1319	- J1320	J2227	J2233	J2235	J2242					
504341	J2125	J2219	J2227	J2236	J2242	J2244							
504342	J2128	J2123	J2226	- J2227	J2229	J2236	J2239	J2243	- J2244	- J2245			
	- J2246	J2318	- J2319	J2330	J2341								
504344	J2104	J2120	J2123	J2125	J2136	J2226	- J2227	- J2228	J2236	J2239			
	J2242	- J2243	- J2244										
504346	J1114	J2220	- J2221	J2229	J2233	J2304							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1139												
504350	J2239	J2243	- J2244										
504352	J2237	J2241	- J2242	J2244									
584360	J2104												
584481	J2121	J2124	J2227	J2236	J2239	J2243	J2245	- J2246					
504402	J2115	J2121	J2126	J2226	J2228	J2239	J2245	- J2246					
504403	J1126	J2219	J2229	J2233	J2239								
504404	J2122	- J2123	J2226	J2228	J2246								
504405	J2244												
504407	J1127	J2107	J2113	J2219	- J2220	- J2221	J2229	J2233	J2239	J2241			
504410	J2101	J2107	J2109	J2221	J2229	J2237	- J2238	- J2239	- J2240	- J2241			
	- J2242	- J2243	- J2244	- J2245	- J2246								
504411	J2237	- J2238	- J2239	J2245	- J2246								
504412	J2238	- J2239	J2241	- J2242	- J2243	- J2244	- J2245	- J2246					
504413	J2237	J2242	- J2243										

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
504420	J2101 - J2116 - J2129 - J2140 - J2226 - J2239 - J2308 - J2325	32102 - J2117 - J2130 - J2202 - J2227 - J2240 - J2309 - J2329	J2104 - J2118 - J2131 - J2203 - J2228 - J2241 - J2311 - J2330	J2106 - J2119 - J2132 - J2204 - J2229 - J2242 - J2313 - J2331	J2107 - J2120 - J2133 - J2207 - J2238 - J2244 - J2314 - J2334	J2108 - J2121 - J2134 - J2218 - J2231 - J2245 - J2315 - J2339	J2110 - J2122 - J2136 - J2219 - J2233 - J2246 - J2316 - J2341	J2111 - J2123 - J2137 - J2220 - J2235 - J2302 - J2317 - J2342	J2112 - J2125 - J2138 - J2221 - J2236 - J2304 - J2318 - J2345	J2115 - J2126 - J2139 - J2225 - J2237 - J2305 - J2321	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2217	J2332									
504421	J2110 - J2135	J2117 - J2138	J2118 - J2139	J2120 - J2140	J2122 - J2143	J2124 - J2220	J2125 - J2221	J2126 - J2239	J2129 - J2243	J2133 - J2245	
504422	J2101 - J2102	J2102	J2109	J2120	J2122	J2127	J2242	J2246			
504423	J2143	J2243									
504424	J2103	J2110	J2120	J2122	J2128	J2135 - J2136	J2225	J2242			
504430	J2120	J2122									
504431	J2122	J2141 - J2142	J2144								
504435	J2127										
504436	J2120	J2122	J2124	J2138							
504437	J2120	J2122	J2124	J2126	J2133						
504461	J2120 - J2121	J2122									
504462	J2120 - J2121	J2122									
504463	J2120	J2122									
504464	J2120 - J2246	J2122	J2125	J2129	J2135	J2139 - J2140	J2143	J2243	J2245		
504466	J2139										
504467	J2120	J2122	J2133	J2138 - J2139	J2219						
504501	J2126	J2132	J2233 - J2234								
504502	J2118	J2124	J2126	J2132	J2134	J2141 - J2142	J2144	J2225	J2242		
504503	J2132	J2242 - J2243	J2244								
504504	J1126 - J2143	J2110 - J2144	J2124 - J2220	J2125 - J2221	J2126 - J2225	J2130 - J2233	J2131 - J2240	J2139 - J2243	J2141 - J2244	J2142 - J2246	

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
STOP												CONNECTORS
584586	J2118	J2124	J2127	- J2128	J2141	- J2142	J2144					
504518	J2101	J2103	- J2104	J2107	J2110	- J2111	- J2112	- J2113	J2115	J2118		
	J2120	J2122	J2124	- J2125	- J2126	- J2127	- J2128	- J2129	- J2130	- J2131		
	- J2132	- J2133	- J2134	- J2135	J2137	- J2138	- J2139	J2141	- J2142	J2144		
	J2201	- J2202	- J2203	- J2204	J2233	J2237	- J2238	J2240	J2304	- J2305		
	J2308	- J2389										
SUBSTITUTE	THE FOLLOWING CARD ASSEMBLIES:											
	J2217											
504512	J2141	- J2142										
504514	J2118	J2124	- J2125	- J2126								
504516	J2101	J2120	J2122	J2124	J2127	J2141	J2144					
584521	J2122	- J2123	- J2124	J2129	J2138	- J2139	J2226	J2245				
504522	J2101	J2110	J2112	- J2113	J2118	- J2119	J2124	J2126	- J2127	J2129		
	- J2130	J2133	J2137	- J2138	J2140							
504526	J2101	J2105	J2107	- J2108	- J2109	- J2110	- J2111	- J2112	- J2113	J2115		
	J2120	J2124	- J2125	- J2126	- J2127	J2130	J2133	- J2134	J2137	- J2138		
	J2140	J2144	32207	J2218	J2220	- J2221	- J2222	J2226	- J2227	J2231		
	J2233	J2239	J2302	J2305	- J2306	- J2307	- J2308	- J2309	- J2310	- J2311		
	J2314	- J2315	- J2316	J2321	- J2322	- J2323	- J2324	- J2325	- J2326	J2330		
	- J2331	J2341	J2346									
SUBSTITUTE	THE FOLLOWING CARD ASSEMBLIES:											
	J2332											
504527	J2110											
504530	J2109											
504531	J2109	J2244										
504532	J1121	J2119	J2126									
504533	J2110	J2112	J2137	J2139								
504535	2244											
504536	J2118	J2219										
504537	J2108	- J2109	J2115	J2119	- J2120	- J2121	J2123	- J2124	J2126	J2133		
	J2137	- J2138	- J2139	J2141	- J2142	J2144	J2227	J2244				
504541	J2107	J2113	J2219	- J2220	- J2221	J2227	- J2228	- J2229	J2233	J2241		

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS			IOU OFF		CPU OFF		CONNECTORS													
DIAGNOSE STATUS			IOU OFF	IOU OFF	CPU OFF	CPU OFF														
STOP																				
504542	J1122	J2104	32218	-	J2219	-	J2220	-	J2221	-	J2222	J2226	-	J2227	J2229					
	-	J2230	-	J2231	J2234	-	J2235	-	J2236	J2240										
504544	J2104	J2218	J2220	-	J2221	-	J2222	J2226	J2228	J2230	-	J2231	J2234							
	-	J2235																		
504546	J1132	J2184	J2218	-	J2219	-	J2220	-	J2221	-	J2222	J2235								
504550	J2218	J2220	-	J2221	-	J2222	J2226	J2238	J2234	-	J2235	-	J2236	J2240						
504552	J2184	J2235																		
504554	J2114	J2129	J2132	J2218	-	J2219	J2223	J2229	J2241	-	J2242									
504560	J2104	J2218	J2220	-	J2221	-	J2222	J2226	J2229	J2234	-	J2235								
584562	J2104	J2218	J2228	-	J2221															
504564	J1110	J2114	J2119	J2218	J2233															
504570	J1120	J2184	J2218	-	J2219	-	J2220	-	J2221	-	J2222	J2226	J2229	-	J2230					
	-	J2231	J2240																	
504574	J2234	-	J2235																	
504600	J1336	J2107	J2109	-	J2110	-	J2111	-	J2112	-	J2113	-	J2114	-	J2115	-	J2116			
	-	J2117	-	J2118	-	J2119	J2127	-	J2128	J2133	J2135	J2137	-	J2138	J2140					
	J2142	J2227	J2242																	
504601	J2125																			
584602	J2109	J2124	-	J2125	-	J2126	J2128	J2136												
504684	J2123	J2127	J2219	J2240	J2242															
504610	J2101	J2106	J2108	-	J2189	J2115	J2120	J2122	-	J2123	-	J2124	-	J2125						
	-	J2126	-	J2127	-	J2128	J2130	J2135	J2141	-	J2142	J2144								
504620	J1134	J1336	J1340	J2181	-	J2102	-	J2103	J2105	J2107	-	J2108	-	J2109						
	-	J2110	-	J2111	-	J2112	-	J2113	-	J2114	J2116	-	J2117	-	J2118	-	J2119	-	32120	
	-	J2121	-	J2122	-	J2123	-	J2124	-	J2125	-	J2126	-	32127	-	J2128	-	J2129	-	J2130
	-	J2131	-	J2132	-	J2133	-	J2134	-	J2135	-	J2136	-	J2137	-	J2138	-	J2139	-	J2140
	-	J2141	-	J2142	-	J2143	-	32144	J2226	-	J2227	J2233	J2242	-	J2243	-	J2244			
504621	J2142	J2144																		
504622	J2117	J2137	J2141	-	J2142	-	J2143	-	J2144	J2243										
504624	J2117	J2148	-	J2141	-	J2142	-	J2143	-	J2144	J2243									
504630	J2108	-	J2109	J2111	J2113	J2116	-	J2117	J2125	J2133	J2138	J2140								
	-	J2141	-	J2142	-	J2143	-	J2144	J2241	J2243										

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS											
DIAGNOSE STATUS		IOU OFF		CPU OFF													
STOP																	
504632	J2141	J2241															
504634	J2241																
504661	J2120	J2136	-	J2137	J2139	J2141	J2144	J2233	J2240								
504662	J2122	J2136	J2141	-	J2142												
504663	J2241																
504664	J2120	J2137	J2142	J2144													
504667	J2121	J2241															
504671	J2119	J2129															
504672	J2229	J2240															
504673	J2240																
504701	J2120	J2125	J2141	-	J2142	32144											
504702	J2122	J2141															
504704	J2122	J2141	J2144														
504710	J2122																
504712	J2141	J2144															
504721	J2101	J2125	J2127	-	J2128	J2141	-	J2142									
504722	J2141	-	J2142														
504724	J2141	-	J2142														
504730	J2110	J2117	J2141	-	J2142												
504737	J2101	J2113	J2117	J2123	J2125	J2127	-	J2128	-	J2129	J2141 - J2142						
504740	J2101	J2242	J2339														
504741	J2103	J2111	-	J2112	J2114	J2239											
504742	J2102	-	J2103	J2187	J2114	J2118	-	J2119	J2139	J2143	J2227 J2243						
504744	J2226																
564750	J1120	J1124	J1127	-	J1128	-	J1129	J2107	J2110	-	J2111	J2116	J2118				
	J2123	J2125	J2130	-	J2131	-	J2132	J2134	-	J2135	J2137	-	J2138	J2140			
	-	J2141	-	J2142	-	J2143	-	J2144	J2219	J2226	-	J2227	-	J2228	J2238	-	J2239

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
- J2240	J2243	- J2244	J2304	- J2305	J2308					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1123	J2217								
504751	J1126	J2102	- J2103	J2107	J2110	- J2111	- J2112	J2114	J2127	J2139
504761	J2183	J2107	- J2108	- J2109	J2113	- J2114	- J2115	- J2116	J2123	J2131
	J2324									
504771	J1115	J1119	J1124	J1129	J2101	- J2102	- J2183	- J2104	- J2805	- J2106
	- J2107	- J2108	- J2109	- J2118	- J2111	- 32112	- J2113	- J2114	- J2115	- J2116
	- J2117	- J2118	- J2119	J2123	J2130	- J2131	- J2132	- J2133	- J2134	- J2135
	- J2136	- J2137	- J2138	- J2139	J2143	J2226	- J2227	- J2228	- J2229	- J2230
	J2233	J2239	J2243							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J2217									
504773	J2103	J2239								
504776	J2103	J2116	J2119	J2131	J2138					
505300	J1130	- J1131	J1134	- J1135	J1144	- J1145	J1147			
505301	J1130	- J1131	J1145	- J1146	- J3147					
505312	J1147	- J1148								
505313	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									
505315	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									
505316	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									
505317	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									
505320	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									
505321	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									
505322	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									
505323	J1131	J1134	- J1135	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1147
	- J1148									

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS													
DIAGNOSE STATUS		IOU OFF		CPU OFF															
STOP																			
505325	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505326	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505327	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505330	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505331	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505332	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505333	J1131	J1134	-	J1135	J1140	-	J31141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505335	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505336	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505337	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
505340	J1131	J1134	-	J1135	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	J1147			
	-	J1148																	
506003	J2206																		
506012	J1118	J1335	J1337	J2125	J2205	-	J2206	J2211	J2213	-	J2214	J2301							
	J2304	J2306	-	J2387															
506014	J2201	-	J2282	-	J2203	-	J2284	-	J2205	-	J2206	-	J2207	-	J2208	J2211	-	J2212	
	-	J2213	-	J2214	-	J2218	-	J2219	-	J2220	-	J2222	-	J2227	-	J2228	J2301	-	J2302
	-	J2303	-	J2384	-	J2385	-	J2306	-	J2308	-	J2389	-	J2310	-	J2311			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
		J2217	J2332																
506015	J2201	-	J2202	-	J2203	-	J2204	-	J2205	-	J2206	-	J2207	-	J2208	-	J2209	J2211	
	-	J2212	-	J2213	-	J2214	-	J2301	-	J2303	-	J2306	-	J2310					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
		J2332																	

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF													
DIAGNOSE STATUS		IOU OFF		CPU OFF		CPU OFF											
STOP													CONNECTORS				
506016	J2203	J2205	-	J2206	-	J2207	-	J2208	-	J2209	-	J2210	-	J2211	J2213	J2306	
	- J2307																
506017	J2104	J2203	-	J2204		J2207	-	J2208	-	J2209		J2211	J2213	-	J2214	J2226	
	J2228	-	J2229	J2234	-	J2235	-	J2236	-	J2237	-	J2238	J2240	-	J2241	-	J2242
	- J2243	J2301	-	J2302		J2306		J2310									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J2217	J2332															
506020	J2101	J2103	-	J2104		J2130		J2233		J2237	-	J2238	J2303	-	J2304	-	J2305
	J2308	-	J2309	-	J2310	-	J2311										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J2217																
506821	J2303																
506026	J1109	J2202	-	J2203	-	J2204	-	J2205	-	J2206	-	J2207	-	J2208	J2301	-	J2302
	- J2303	J2306		J2310													
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J2217																
506027	J2310																
506030	J2208	J2214		J2303	-	J2384											
506031	J2283	-	J2204	-	J2205	-	J2206	-	J2207	-	J2208	J2211	-	J2212	J2214		
506032	J2205	-	J2206	-	J2207	-	J2208	-	J2209	-	J2210	J2214	J2310				
506033	J2204	J2207	-	J2208	-	J2209	-	J2210	J2214	J2301	J2310						
506035	J2303																
506042	J1109	J2125		J2201	-	J2202	-	J2203	-	J2204	J2207	-	J2208	-	J2209	J2211	
	J2213	-	J2214	J2303	J2306	-	J2307										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J2332																
506044	J2214																
506045	J2203	-	J2204	-	J2205	-	J2206	-	J2207	-	J2208	J2211	-	J2212	J2214	J2301	
506046	J2140	J2201	-	J2202	-	J2203	-	J2204	J2214	J2218	-	J2219	J2222	-	J2223		
	- J2224	J2310															
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																	
	J2217																

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS									
DIAGNOSE STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS									
STOP																			
506047	J2201	-	J2202	-	J2203	-	J2204	-	J2205	J2208	-	J2209	J2214	J2310					
506053	J2134		J2137	-	J2138	-	J2139	-	J2140	J2201	-	J2202	-	J2203	-	J2204	J2207		
	J2310																		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2217																			
506054	J2104		J2203	-	J2204		J2219		J2222	-	J2223	-	J2224	J2234	-	J2235	J2237		
	-	J2238	J2310																
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2217																			
506055	J2201	-	J2202		J2204		J2207		J2306										
506056	J2125		J2201	-	J2202		J2207		J2303	J2306	-	J2307							
506060	J1111		J1117	-	J1118		J1327		J1333	-	J1334	J1336	-	J1337	-	J1338	-	J1339	
	J2205	-	J2206																
506061	J2205																		
506062	J2303		J2306																
506065	J1112		J1114		J1117		J1131		J1336	-	J1337	J2205	-	J2206	J2211		J2213		
	-	J2214	J2301	-	J2302	-	J2303	-	J2304	J2306	-	J2307	-	J2308	-	J2309			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2332																			
506066	J1334	-	J1335	-	J1336		J1339		J2203	-	J2204	-	J2205	-	J2206	-	J2207	-	J2208
	-	J2209	-	J2210	-	J2211	-	J2212	J2301	J2303	-	J2304	J2307						
506074	J2202	-	J2203	-	J2204	-	J2205	-	J2206	-	J2207	-	J2208	-	J2209	-	J2210	-	J2211
	-	J2212	J2214	J2301	-	J2302	-	J2303	J2305	J2310									
506102	J1126	-	J1127	-	J1128		J2201	-	J2202	J2205	-	J2206	-	J2207	J2209	-	J2210	-	J2211
	-	J2211	-	J2212	J2214	J2218	-	J2219	-	J2220	J2222	J2228	J2233	J2303					
	J2311	J2315	J2318	-	J2319	J2322	-	J2323	-	J2324	-	J2325	-	J2326	J2329				
	-	J2330	J2333	J2336	-	J2337	J2339	-	J2340	-	J2341	-	J2342	-	J2343	-	J2344		
	J2346																		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2217																			
506103	J1128		J2201	-	J2202		J2205	-	J2206	-	J2207	-	J2208	-	J2209	-	J2210	-	J2211
	-	J2212	-	J2213	-	J2214	J2233	J2301	-	J2302	-	J2303	-	J2304	-	J2305	-	J2306	
	J2308	-	J2309	-	J2310	J2337	J2339	J2342	-	J2343	-	J2344	J2346						
506104	J1120		J1128		J1335		J1337		J2201	-	J2202	-	J2203	-	J2204	-	J2205	-	J2206
	-	J2207	-	J2208	-	J2209	-	J2210	-	J2211	-	J2212	-	J2213	-	J2214	J2233	-	J2301

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
	- J2302 J2324	- J2303 2336	- J2304 J2339	- J2305 J2342	- J2306 J2343	- J2307 J2344	- J2308 J2346	- J2309	- J2310	- J2315	
506105	J2286	J2209	- J2210	J2233	J2342						
506106	J1112 - J2207 - J2242 - J2315 - J2325 - J2337	J1118 J2209 J2303 - J2316 - J2326 - J2338	J1126 - J2210 - J2304 - J2317 - J2328 - J2339	- J1127 - J2211 - J2305 - J2318 - J2329 - J2340	- J1128 - J2212 J2308 - J2319 - J2330 - J2341	J1320 J2231 - J2309 - J2320 - J2331 - J2342	J2202 J2233 - J2311 - J2321 J2333 J2344	- J2203 - J2234 - J2312 - J2322 - J2334 - J2345	J2205 - J2235 - J2313 - J2323 - J2335 - J2346	- J2206 J2241 - J2314 - J2324 - J2336	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
506107	J2332 J2206	J2209									
506110	J2211										
506111	J2202 J2310	J2204	J2206	- J2207	J2212	J2302	J2304	J2306	- J2307	- J2308	
506113	J2308	J2320									
506114	J2125 - J2304	J2201 J2306	- J2202 - J2307	J2205 J2309	- J2206	J2208	- J2209	J2211	J2301	J2303	
506115	J1127 - J2304 J2341	- J1128 J2310	J1130 - J2311	J2206 - J2312	J2209 J2317	- J2210 J2320	- J2211 - J2321	- J2212 - J2322	- J2213 J2333	J2383 J2339	
506116	J2202 J2301	J2204 - J2302	- J2285 - J2303	- J2206 J2305	- J2207 - J2386	- J2208 - J2307	J2211 J2310	- J2212	- J2213	- J2214	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
506117	J2202 - J2213	- J2203 - J2214	- J2204 J2301	- J2205 J2303	- J2206 J2306	- J2207 J2310	- J2208	- J2209	J2211	- J2212	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
506120	J2205	- J2206	- J2207	- J2208	- J2209	- J2210	J2212	J2214	J2301	J2303	
506121	J1334 - J2211	J1336 J2213	J2203 - J2214	- J2204 J2303	- J2205 J2306	- J2206 J2310	- J2207	- J2208	- J2209	- J2210	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
506122	J2202										

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
506123	J2302										
506124	J2205										
506126	J2104 J2240	J2203 - J2241	J2226 - J2242	J2228 - J2243	J2229 - J2244	J2234 J2301	J2235 - J2302	J2236	J2237	J2238	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2217											
506130	J2101 J2237 - J2305	J2103 - J2238 J2308	J2104 J2240 - J2309	J2130 J2244 - J2310	J2202 - J2245 J2311	J2203 - J2246	J2204 J2301	J2205 - J2302	J2206 - J2303	J2233 - J2384	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2217											
506131	J1118 - J2211	J2202 J2213	J2203 - J2301	J2204 - J2302	J2205 - J2303	J2206 J2305	J2207 - J2306	J2208 - J2307	J2209 J2310	J2210	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2332											
506132	J2214	J2303	J2304								
506144	J2201	J2202	J2203	J2204	J2306						
506145	J2304										
506147	J2201	J2203	J2204	J2206	J2303						
506150	J2201	J2202	J2203	J2284							
506151	J2202	J2203	J2204								
506157	J2207										
506160	J2201	J2202	J2207	J2306							
506161	J2201	J2203	J2204	J2207	J23086						
506162	J1108 - J1337	J1111 - J1338	J1112 - J1339	J1117 J2203	J1118 - J2205	J1247 - J2206	J1333 J2211	J1334 - J2213	J1335 - J2306	J1336 - J2307	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2204 J2310											
506163	J1333	J2203	J2204	J2206	J2207	J2208	J2211	J2213	J2306	J2307	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2332											

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS	
DIAGNOSE STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS	
STOP											
506167	J1336 - J2242	J1337 - J2301	J2205 - J2302	J2206 - J2303	J2209 - J2304	J2210 - J2306	J2214 - J2307	J2219	J2227	J2238	
506170	J1336 - J2210	J1337 - J2211	J1339 - J2212	J2203 - J2214	J2204 - J2301	J2205 - J2302	J2206 - J2303	J2207 - J2304	J2208 - J2307	J2209 - J2310	
506171	J2203	J2204	J2205	J2206	J2208	J2210	J2211	J2212	J2214	J2302	
506175	J1340	J2205	J2206	J2208	J2238	J2301	J2302	J2310			
506176	J2202 - J2212	J2203 - J2214	J2204 - J2301	J2205 - J2302	J2206 - J2303	J2207 - J2305	J2208 - J2306	J2209 - J2310	J2210	J2211	
506177	J2203	J2204	J2210	J2214							
506200	J2203	J2204	J2208	J2209	J2210	J2211	J2212	J2302	J2303	J2306	
506214	J1109 - J1222 - J1337 - J2118 - J2202 - J2213 - J2230 - J2242 - J2306 - J2316 - J2326 - J2337	J1110 - J1233 - J1340 - J2121 - J2203 - J2214 - J2231 - J2243 - J2307 - J2317 - J2327 - J2338	J1111 - J1137 - J1242 - J1341 - J2127 - J2284 - J2219 - J2233 - J2244 - J2308 - J2318 - J2328 - J2339	J1112 - J1144 - J1244 - J1343 - J2128 - J2205 - J2220 - J2234 - J2245 - J2309 - J2319 - J2329 - J2341	J1114 - J1147 - J1247 - J1343 - J2101 - J2130 - J2131 - J2136 - J2206 - J2221 - J2235 - J2246 - J2301 - J2310 - J2320 - J2330 - J2342	J1115 - J1148 - J1313 - J2103 - J2104 - J2137 - J2207 - J2222 - J2236 - J2302 - J2311 - J2312 - J2321 - J2331 - J2343	J1116 - J1205 - J1320 - J2105 - J2136 - J2209 - J2223 - J2237 - J2303 - J2312 - J2322 - J2333 - J2344	J1117 - J1208 - J1323 - J2105 - J2137 - J2210 - J2224 - J2238 - J2304 - J2313 - J2323 - J2334 - J2345	J1118 - J1217 - J1325 - J2110 - J2138 - J2211 - J2227 - J2240 - J2304 - J2314 - J2324 - J2335 - J2346	J1129 - J1219 - J1336 - J2117 - J2201 - J2212 - J2229 - J2241 - J2305 - J2315 - J2325 - J2336	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
506215	J1123 - J1108 - J1134 - J1314 - J1326 - J1340 - J2204 - J2214 - J2235 - J2304	J1149 - J1109 - J1138 - J1315 - J1327 - J1341 - J2205 - J2219 - J2305	J2217 - J1181 - J1126 - J1143 - J1316 - J1330 - J1342 - J2206 - J2221 - J2238 - J2306	J2332 - J1111 - J1127 - J1246 - J1332 - J1333 - J2118 - J2125 - J2207 - J2222 - J2241 - J2307	J1112 - J1128 - J1247 - J1333 - J1334 - J2125 - J2208 - J2223 - J2242 - J2308	J1114 - J1116 - J1310 - J1319 - J1334 - J2131 - J2209 - J2224 - J2242 - J2310	J1116 - J1117 - J1310 - J1320 - J1336 - J2136 - J2210 - J2225 - J2244 - J2329	J1117 - J1131 - J1311 - J1321 - J1337 - J2201 - J2211 - J2301 - J2334	J1118 - J1132 - J1312 - J1322 - J1338 - J2202 - J2212 - J2302 - J2337	J1120 - J1133 - J1313 - J1324 - J1339 - J2203 - J2213 - J2234 - J2303 - J2345	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
506216	J1108 - J1120 - J1135 - J1323	J1109 - J1121 - J1137 - J1324	J1110 - J1124 - J1138 - J1325	J1111 - J1125 - J1208 - J1330	J1112 - J1126 - J1214 - J1333	J1114 - J1127 - J1222 - J1334	J1115 - J1128 - J1233 - J1335	11J16 - J1129 - J1247 - J1336	J1118 - J1131 - J1317 - J1338	J1119 - J1132 - J1319 - J1339	

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
- J1340	- J1341	- J1342	- J1343	- J1344	- J1345	- J1346	J2207	- J2200	J2212		
J2241	J2301	J2302	J2304	J2305	J2307	J2308	J2309	J2310	J2311		
- J2312	- J2313	- J2314	- J2315	J2317	- J2318	- J2319	- J2320	- J2321	- J2322		
- J2323	- J2324	- J2325	- J2326	- J2327	- J2328	- J2329	- J2330	- J2331	J2333		
- J2334	- J2335	- J2336	- J2337	- J2338	- J2339	- J2340	- J2341	- J2342	- J2343		
- J2344	- J2345										

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J2332

506217	J1323	- J1324	J1330	J1336	J1339	- J1340	J2218	J2221	J2227	J2315
	J2317	J2319	- J2320	J2322	J2324	J2327	J2331	J2333	J2337	- J2338
	J2340	- J2341	J2344	- J2345	- J2346					
506220	J1109	J1112	J1116	J1118	- J1119	J1121	- J1122	J1128	J1130	J1132
	J1134	J2330	J2341							
506221	J1108	J1113	J1120	- J1121	- J1122	J1126	J1128	J1130	- J1131	- J1132
	J1134	J2303	J2330							
506302	J1323	J2136								
506304	J1112	J1119	- J1120	- J1121	- J1122	J1210	J1228	J1235	J2241	
506307	J1220	J2125								
506311	J1112	J1323	- J1324							
506322	J1116	J1120	J1145	J1315	J1323	- J1324	- J1325	J1337	J1343	J2119
	J2125	- J2126	J2241	J2331	J2341					

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J2216

506323	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1228
506324	J1140	- J1141	- J1142	- J1143	- J1144	- J1145	J1228
506325	J1142	- J1143	- J1144	- J1145			

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J2216

506326	J1142	- J1143	- J1144	- J1145			
506327	J1142	- J1143	- J1144	- J1145			
506330	J1142	- J1143	J1146				
506331	J1143						
506332	J1110	J1112	J1130	J1132	J1142	- J1143	

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
506333	J1213 - J1214	J1218	J1222	J1228							
506314	J1205 - J1221 - J1222	J1210 - J1222	J1213 - J1224	J1214 - J1228	J1215 - J1230	J1216 - J1217	J1218 - J1219	J1220			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1123	J1139									
506335	J1140 - J1141	J1148	J2307								
506336	J1140 - J1147	J1148	J1222								
506344	J2314 - J2315	J2318	J2326 - J2327	J2328 - J2329	J2330 - J2335	J2341					
506350	J1110 - J1140 - J1141 - J1142	J1111 - J1141 - J1142	J1119 - J1142	J1121 - J1143	J1122 - J1144	J1125 - J1228	J1130 - J2125	J1132 - J2341	J1133 - J2346	J1138	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1123										
506351	J1108 - J1233	J1205 - J1238	J1206 - J1239	J1207 - J1243	J1208 - J1244	J1209 - J1247	J1213	J1222	J1228	J1230	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1123										
506352	J1208 - J1213	J1214	J1218 - J1219	J1228	J2334						
506353	J1323 - J1325										
586355	J1346										
506356	J1341 - J1344										
506370	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2216										
506400	J1189 - J1111	J1114 - J1115	J1116	J1118 - J1119	J1120 - J1124						
506410	J1323 - J1325										
506461	J1144 - J2315 - J2326 - J2338	J1145 - J2316 - J2327 - J2339	J1222 - J2318 - J2328 - J2340	J1333 - J2319 - J2320 - J2329	J1337 - J2320 - J2321 - J2330	J2119 - J2321 - J2331	J2136 - J2322 - J2333	J2214 - J2323 - J2335	J2312 - J2324 - J2336	J2314 - J2325 - J2337	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2332										
506475	J1140 - J1141 - J1142	J1143 - J1144 - J1145									

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
506476	J1135 - J1228	J1136 - J1326	J1140	31141	J1142	J1143	J1144	J1145	J1146	J1147	
506477	J1140	J1141	J1143								
507014	J1307	J1308	J1312	J1321	J1322						
507015	J1316										
507016	J3120 - J1332	J1304 - J1333	J1311 - J1339	J1315 - J1340	J1317 - J1342	J1318 - J1343	J1320 - J1344	J1323	J1324	J1326	
507020	J1312	J1317	J1333	J1334	J1336	J1338	J1339				
507021	J1312	J1329	J1330	J1332	J1333	J1334	J1336	J1338	J1341		
507022	J1306	J1311	J1312	J1314	J1315	J1316	J1334	J1336	J1338	J1341	
507023	J1312	J1329	J1330	J1333	J1334	J1336	J1337	J1338			
507024	J1312	J1334	J1337	J1338	J1341						
507025	J1312	J1334	J1337	J1338	J1341						
507026	J1312	J1335	J1337	J1338	J1339	J1341					
507027	J1312	J1335	J1338	J1339	J1341						
507031	J1112 - J1321 - J1337	J1308 - J1322 - J1338	J1311 - J1323 - J1341	J1312 - J1324 - J1342	J1315 - J1325 - J1343	J1316 - J1330 - J1344	J1317 - J1332	J1318 - J1334	J1319 - J1335	J1320 - J1336	
507032	J1238 - J1312 - J1327 - J1340	J1239 - J1314 - J1328 - J1341	J1240 - J1315 - J1330 - J1344	J1242 - J1316 - J1332 - J1345	J1243 - J1321 - J1333	J1246 - J1322 - J1334	J1306 - J1323 - J1335	J1308 - J1324 - J1336	J1309 - J1325 - J1330	J1311 - J1326 - J1339	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1139											
507033	J1111 - J1242 - J1311 - J1321 - J1332 - J1343	J1112 - J1243 - J1312 - J1322 - J1333 - J1344	J1114 - J1246 - J1313 - J1323 - J1334 - J2241	J1116 - J1212 - J1247 - J1304 - J1325 - J1336	J1117 - J1216 - J1304 - J1325 - J1336	J1118 - J1228 - J1305 - J1326 - J1338	J1119 - J1237 - J1306 - J1327 - J1339	J1120 - 31239 - J1307 - J1328 - J1340	31121 - J1240 - J1308 - J1319 - J1329 - J1341	J1122 - J1241 - J1309 - J1320 - J1330 - J1342	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1113 J1123 J1139 J1227											
507034	J1108	J1109	J1110	J1111	J1112	J1114	J1115	J1116	J1117	J1118	

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
- J1119	- J1120	- J1121	- J1122	J1124	- J1125	- J1126	- J1127	- J1128	- J1129		
- J1130	- J1131	- J1132	- J1133	- J1134	- J1135	- J1136	J1138	31142	- J1143		
- J1144	J1148	J1207	- J1208	J1212	- J1213	J1215	J1217	J1219	J1221		
J1224	J1228	J1232	J1237	- J1238	J1244	J1325	J1334	- J1335	J1337		
- J1338	J1344	- J1345	- J1346	J2323							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1123	J1139	J1227								
507035	J1307	J1311	J1315	J1318	- J1319	- J1320	- J1321	J1323	- J1324	- J1325	
	- J1326	J1328	J1332	J1334	J1337	J1339	J1342	- J1343			
507036	J1306	J1312	- J1313	J1320	J1322	- J1323	- J1324	J1329	- J1330	J1334	
	J1336	- J1337	- J1338	- J1339	- J1340	- J1341	- J1342	- J1343	- J1344		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2216										
507037	J1306	J1315	J1317	- J1318	J1327	- J1328	- J1329	- J1330	J1332	- J1333	
	J1335	J1342	J1344	- J1345							
507040	J1112	J1125	J1140	- J31141	J1304	- J1305	J1387	J1310	- J1311	- J1312	
	- J1313	- J1314	- J1315	- J1316	- J1317	- J1318	- J1319	- J1320	- J1321	- J1322	
	- J1323	- J1324	- J1325	- J1326	- J1327	- J1328	J1330	J1332	- J1333	- J1334	
	J1336	- J1337	- J1338	- J1339	- J1340	- J1341	- J1342	- J1343	- J1344	- J1345	
	- J1346	J2305	J2308	- J2309	J2311	J2313	- J2314	- J2315	- J2316	J2318	
	- J2319	- J2320	- J2321	- J2322	- J2323	- J2324	- J2325	J2329	- J2330	- J2331	
	J2333	- J2334	- J2335	J2337	- J2338	- J2339	J2341	- J2342	- J2343	- J2344	
	J2346										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2332										
507041	J1316	J1323									
507042	J1321	- J1322									
507044	J1136	J1246	- J1247	- J1248	J1339	J1345	- J1346				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1139										
507045	J1314	J1319	J1323	J1332							
507046	J1240	J1242	- J1243	J1305	J1307	J1311	J1313	- J1314	- J1315	- J1316	
	- J1317	- J1318	- J1319	J1321	J1323	J1325	- J1326	J1328	- J1329	- J1330	
	J1332	- J1333	J1336	- J1337	- J1338	- J1339					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1139										
507047	J1141	J1224	J1232	J1237	- J1238	- J1239	- J1240	J1242	- J1243	J1246	

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
	J1364	J1307	J1311	J1313	J1314	J1315	J1316	J1317	J1318	J1319		
	- J1320	- J1321	- J1322	- J1323	J1325	- J1326	- J1327	- J1328	- J1329	- J1330		
	J1332	- J1333	J1335	- J1336	- J1337	- J1338	- J1339					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1139											
507050	J1344	- J1345	- J1346									
507051	J1130	J1133	J1137	- 31139	J1228	J1312	- J1313	J1315	J1317	- J1318		
	- J1319	J1323	- J1324	- J1325	J1329	- J1330	J1332	J1335	- J1336	J1338		
	- J1339	J1341	- J1342	- J1343	- J1344	- J1345	- J1346	J2245	- J2246	J2346		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J1149											
507052	J1240	J1242	J1304	J1311	- J1312	J1314	- J1315	J1318	- J1319	J1323		
	- J1324	- J1325	J1336	- J1337	- J1338	J1342	- J1343	- J1344	- J1345	- J1346		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2216											
507053	J1335	J1337	J1342	J1344	- J1345	- J1346						
507054	J1306	J1311	J1316	J1337	J1339	J1344	- J1345	- J1346				
507055	J1324	J1337	J1344	- J1345	- J1346							
507056	J1312	J1337	31344	- J1345	- J1346							
507057	J1339	J1344	- J1345	- J1346								
507061	J1313	J1317	- J1318	- J1319	- J1320	J1332	J1341	J1343				
507062	J1320	J1332	J1339	J1341	- J1342	- J1343						
507063	J1109	J1112	J1208	J1217	J1219	J1233	J1242	J1244	J1313	J1317		
	- J1318	- J1319	- J1320	J1332	J1341	J1343	J1346	J2136	J2221	J2241		
	J2302	J2304	- J2305	J2308	- J2309	J2311	- J2312	- J2313	- J2314	- J2315		
	- J2316	- J2317	- J2318	- J2319	- J2320	- J2321	- J2322	- J2323	- J2324	- J2325		
	- J2326	- J2327	J2329	- J2330	- J2331	J2333	- J2334	J2336	- J2337	- J2338		
	- J2339	- J2340	- J2341	- J2342	- J2343	- J2344	- J2345	- J2346				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2332											
507064	J1320	J1341	J1343	J2220	- J2221	J2229	J2233	J2241	- J2242			
507065	J1320	J1341	J1343									
507066	J1112	J1315	J1320	J1325	J1332	J1341	- J1342	- J1343				

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF				CONNECTORS	
DIAGNOSE STATUS		IOU OFF		CPU OFF					
STOP									
507070	J1312	J1329	J1333	J1336	J1345	-	J1346		
507071	J1330	J1333	J1336	J1338	-	J1339	J1345	-	J1346
507072	J1336	J1345	-	J1346					
507073	J1312	J1337	J1345	-	J1346				
507074	J1337	J1345	-	J1346					
507075	J1337	J1345	-	J1346					
507076	J1337	J1345	-	J1346					
507077	J1339	J1345	-	J1346					
507100	J1334	J1336	J1338						
507101	J1314	J1318	J1326	J1334	J1336				
507102	J1314	J1317	J1325	-	J1326	J1334	J1336		
507103	J1314	J1318	J1325	J1334	J1337	-	J1338		
507185	J1141	J1312	J1315	J1322	J1334	J1337	-	J1338	J2234
507106	J1141	J1316	J1335	J1339	J2234				
507107	J1141	J1312	J1316	J1322	J1335	J1338	-	J1339	J2234
507110	J1336								
507111	J1314	J1317	J1336						
507112	J1314	J1336							
507113	J1314	J1319	J1337						
507115	J1316	J1337	-	J1338					
507116	J1316	J1339							
507117	J1316	J1338	-	J1339					
507120	J1332								
507121	J1321								
507124	J1325								
507131	J1326								

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
507135	J1326												
507137	J1326												
507146	J1323	J1327											
507147	J1333												
507160	J1315	- J1316	J1318	- J1319	J1329	J1333	J1336	- J1337	J1339				
507170	J1140 - J1339	J1315 J2235	- J1316	J1326	- J1327	J1332	- J1333	- J1334	J1336	J1338			
507171	J1140	J1315	- J1316	J1334	J1336	J2235							
507172	J1140	J1316	J1334	J1336	J2235								
507173	J1140	J1316	J1334	J1336	J2235								
507174	J1141	J1312	J1316	J1322	J1334	J1337	- J1338	J2234					
507175	J1334	J1337											
507176	J1335	J1337											
507177	J1333	J1335	J1339										
507221	J1108 J2207 - J2315 - J2325 - J2336 - J2346	J1110 J2208 - J2316 - J2326 - J2337	J1114 J2241 - J2317 - J2327 - J2338	J1117 J2308 - J2318 - J2328 - J2339	- J1118 - J2389 - J2319 - J2329 - J2340	- J1119 - J2310 - J2328 - J2330 - J2341	- J1128 - J2311 - J2321 - J2331 - J2342	J1124 - J2312 - J2322 J2333 - J2343	J1129 - J2313 - J2323 - J2334 - J2344	J1330 - J2314 - J2324 - J2335 - J2345			
SUBSTITUTE THE FOLLOWING CARP ASSEMBLIES:													
J2332													
567301	J1338 - J1346	J1334	J1336	J1339	- J1340	- J1341	- J1342	- J1343	- J1344	- J1345			
507302	J2317												
587305	J1324	J1327	J1339	J1342	- J1343	- J1344							
567403	J1330	J2330	- J2331	J2341	- J2342								
587455	J1108 J2325	J1114 J2341	- J1119 - J2342	J1131 J2344	- J1222 - J2345	J1313	J1320	J2312	J2317	J2321			
507456	J1323	- J1324	J1334	J1336	J1338	J1340	- J1341	J1343					
507460	J2331												

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF							
DIAGNOSE STATUS		IOU OFF		CPU OFF		CPU OFF					
STOP						CONNECTORS					
507463	J1336	J2312	J2315	-	J2316	J2319	-	J2320	-	J2321	J2341
507464	J1109	J1317	J2207	-	J2304	J2305	-	J2307	-	J2308	J2309
	- J2313	- J2314	- J2315	-	J2316	- J2317	-	J2318	-	J2319	- J2320
	- J2323	- J2324	- J2325	-	J2326	- J2327	-	J2329	-	J2330	- J2331
	- J2335	- J2336	- J2337	-	J2338	- J2339	-	J2340	-	J2341	- J2342
	- J2345	- J2346								- J2343	- J2344
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J2332											
507500	J1110	J1115	-	J1116	J1119	-	J1120	J1130	-	J1131	J1336
	- J2312	J2314	-	J2315	-	J2316	-	J2317	J2319	-	J2320
	- J2327	-	J2328	-	J2329	-	J2330	J2334	-	J2335	J2339
507501	J1108	J1111	-	J1112	J1114	-	J1120	J1122	-	J1125	J1130
	- J1324	J1337	-	J1338	-	J1339	-	J1340	J2136	J2218	J2221
	- J2243	J2311	-	J2312	J2315	-	J2316	-	J2317	-	J2318
	J2323	-	J2324	J2326	-	J2327	-	J2328	-	J2329	-
	J2341									J2334	-
										J2335	J2339
507502	J2341										
507503	J2318	J2327	-	J2328	-	J2329	J2333	-	J2334	J2336	-
	J2344	J2346								J2337	12339
											-
											J2340
507504	J1108	-	J1109	-	J1110	-	J1111	-	J1112	J1120	-
	-	J1129	J1131	J1247	J1304	J1313	J1323	J1329	J1333	J1336	-
	J1340	J2107	J2121	J2127	J2134	-	J2135	J2212	J2214	J2218	-
	-	J2228	-	J2229	J2236	J2305	J2311	-	J2312	-	J2313
	-	J2318	J2320	-	J2321	-	J2322	-	J2323	-	J2324
	-	J2329	-	J2330	-	J2331	J2333	-	J2334	-	J2335
	-	J2341	J2343	-	J2344	J2346				-	J2336
										-	J2337
										J2339	-
										J2340	-
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1123											
J2332											
507505	J2327	-	J2328	-	J2329	J2335					
507510	J1116	J2127	J2134	J2212	J2218	J2228	J2309	J2312	-	J2313	-
	J2323	-	J2324	J2326	J2335	J2343	J2346				J2314
507511	J1112	J2209	J2311	-	J2312	-	J2313	-	J2314	J2316	-
	J2321	-	J2322	-	J2323	-	J2324	-	J2325	-	J2326
	J2333	J2335	-	J2336	J2339	J2341	J2343	-	J2344	J2327	-
										J2329	-
										J2330	-
										J2331	-
507513	J2312	-	J2313	-	J2314	J2317	-	J2318	J2320	J2323	-
	J2329	-	J2330	J2335	J2340					-	J2324
										-	Y2325
										-	J2326
507514	J2312	-	J2313	-	J2314	J2317	-	J2316	J2323	-	J2324
	J2335		J2340							-	J2325
										-	J2326
										-	J2329

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS					
DIAGNOSE STATUS		IOU OFF		CPU OFF							
STOP											
507525	J2344										
507527	J2323	J2330									
507537	J2317	J2322	- J2323	J2330							
507543	J2107	J2311	- J2312	J2314	J2316	- J2317	- J2318	J2320	J2322	J2325	
	- J2326	- J2327	- J2328	- J2329	- J2330	- J2331	J2334	- J2335	J2338	- J2339	
	J2341	- J2342	J2346								
507544	J2328										
507552	J2218	J2228	J2312	J2314	J2316	- J2317	- J2318	J2320	- J2321	J2324	
	J2334	J2336	J2344								
087560	J2229	J2312	- J2313	- 32314	J2319	J2323					
507577	J1109	J1111	- J1112	J1116	- 31117	J1120	- J1121	- J1122	J1126	J1130	
	- J1131	- J1132	J1134	J1138	J2318	J2330	J2335				
507700	J1108	J1110	- J1111	- J1112	J1114	- J1115	- J1116	- J1117	- J1118	- J1119	
	- J1120	- J1121	- J1122	J1124	- J1125	- J1126	- J1127	- J1128	- J1129	- J1130	
	- J1131	- J1132	- J1133	- J1134	- J1135	- J1136	- J1137	J1140	- J1141	- J1142	
	- J1143	- J1144	- J1145	- J1146	- J1147	- J1148	J1315	- J1316	J1319	J1333	
	J1335	J1343	- J1344	J2231	J2241	J2301	J2341	- J2342			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1113	J1123	J1139	J1149	J2332						
507705	J1112	J1140	J1148	J1228	J1323	J2214	J2231	J2305	J2308	- J2309	
	J2311	- J2312	- J2313	- J2314	- J2315	- J2316	- J2317	- J2318	- J2319	- J2320	
	- J2321	J2323	- J2324	- J2325	- J2326	J2329	- J2330	- J2331	J2333	- J2334	
	- J2335	J2337	- J2338	- J2339	- 32340	- J2341	- J2342	J2345	- J2346		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2332										
507706	J1140										
507707	J1119	J1140	J1147								
507730	J1140	J1147	J2104	J2116	J2118	- J2119	- J2120	- J2121	- J2122	J2129	
	- J2130	- J2131	- J2132	- J2133	J2207	- J2208	J2210	J2212	J2218	- J2219	
	- J2220	J2222	- J2223								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1227	J2216	- J2217								
507742	J1108	J1110	- J1111	- J1112	J1114	- J1115	- J1116	J1118	- J1119	- J1128	
	- J1121	- J1122	J1124	J1126	- J1127	J1129	J1131	- J1132	- J1133	- J1134	
	- J1135	- J1136	- J1137	- J1138	J1140	- J1141	- J1142	- J1143	- J1144	- 31145	

TABLE 2-26. RIU FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF															
ERROR STOP	RIU		VPU		ANALOG		MEMORY		RIE/VSU										
-	J1146	-	J1147	-	J1148		J1219		J1222	-	J1223	-	J1224		J1228		J1230	-	J1231
	J1233	-	J1234		J1319	-	J1320		J1323	-	J1324		J1340	-	J1341		J1343	-	J1344
	J2125		J2136																

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1123		J1139		J1227														
507744	J1118	-	J1119	-	J1120	-	J1121	-	J1122		J1124		J1126	-	J1127		J1129		J1133
	J1134																		
507745	J1117	-	J1118	-	J1119	-	J1120		J1122		J1137								
507746	J1117	-	J1118	-	J1119	-	J1120		J1130		J1132		J1137						
774500	J1317																		

Change 2 2-392

TABLE 2-27. VPU TEST FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTES:

1. PRIOR TO IN-SYSTEM MTS CARD TESTING, SET THE RIE I PNL AND RIE II PNL AS FOLLOWS:

RIE I PANEL

SWITCH NAME	SETTING
IFF INTERROGATE	
MODE INTERLACE	OFF
SPECIAL VIDEO	OFF
VPU INPUT SELECT	
VPU A	OFF
VPU B	OFF
OVERLAP SELECT (ACM)	OFF
MAPPER DECISION VALUES	
NORMAL MAP000800
MTI MAP000000

RIE II PANEL

SWITCH NAME	SETTING
IFF TGT DECISION VALUES	
AZ MAX377
MISS (SWEEPS)	7

2. IN THE VPU BAY ONE THE FOLLOWING CARD RETAINERS ARE MARKED WITH A WHITE RECTANGLE. THESE CARDS CANNOT BE TESTED BY THE MTS WHILE IN THE SYSTEM.

J1348 J1349 J1350 J1351

TABLE 2-27. VPU TEST FAULT LOCATION - Continued

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF			
DIAGNOSE STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF			
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU						
0000000	J1107	J1108	J1109	J1110	J1111	J1113	J1114	J1115	J1116	J1117	
	J1118	J1121	J1122	J1123	J1124	J1125	J1126	J1127	J1128	J1132	
	J1134	J1205	J1211	J1215	J1216	J1225	J1229	J1308	J1313	J1324	
	J1325	J1332	J1334	J1335	J1340	J1341	J1343	J1348	J1349	J1409	
	J1410	J1414	J1416	J1422	J1423	J1424	J1436	J1439	J1507	J1510	
	J1511	J1513	J1514	J1515	J1517	J1518	J1519	J1520	J1521	J1522	
	J1524	J1528	J1529	J1534	J1535	J1539	J1548	J2102	J2103	J2104	
	J2117	J2118	J2120	J2121	J2122	J2124	J2125	J2128	J2129	J2131	
	J2132	J2133	J2134	J2136	J2137	J2138	J2139	J2140	J2141	J2142	
	J2143	J2144	J2201	J2202	J2203	J2205	J2206	J2207	J2208	J2209	
	J2210	J2211	J2212	J2214	J2215	J2216	J2217	J2218	J2219	J2220	
	J2221	J2224	J2225	J2226	J2227	J2228	J2229	J2231	J2232	J2233	
	J2234	J2235	J2236	J2237	J2238	J2239	J2241	J2242	J2243	J2244	
	J2245	J2246	J2247	J2302	J2303	J2304	J2305	J2306	J2387	J2308	
	J2309	J2310	J2311	J2312	J2313	J2314	J2315	J2318	J2319	J2320	
	J2321	J2322	J2323	J2324	J2325	J2326	J2327	J2328	J2329	J2331	
	J2332	J2333	J2334	J2335	J2336	J2337	J2338	J2339	J2341	J2342	
	J2343	J2401	J2402	J2403	J2404	J2405	J2406	J2407	J2408	J2409	
	J2410	J2411	J2412	J2413	J2414	J2415	J2416	J2417	J2418	J2419	
	J2420	J2421	J2422	J2423	J2424	J2425	J2426	J2427	J2428	J2429	
	J2432	J2433	J2435	J2438	J2439	J2441	J2442	J2443	J2444	J2445	
	J2502	J2503	J2504	J2505	J2506	J2507	J2508	J2509	J2510	J2511	
	J2512	J2513	J2514	J2515	J2516	J2517	J2518	J2519	J2522	J2523	
	J2524	J2525	J2526	J2527	J2532	J2535	J2536	J2538	J2539	J2541	
	J2544	J2545	J2546								

SUBSTITUTE THE FOLLOIING CARD ASSEMBLIES:

	J2130	J2230									
500014	J2229										
501010	J2329	J2402									
501034	J2137	J2138	J2139	J2142	J2143	J2144	J2201	J2203	J2206	J2207	
	J2208	J2209	J2210	J2212	J2217	J2218	J2220	J2221	J2225	J2226	
	J2227	J2228	J2231	J2232	J2233	J2236	J2237	J2238	J2239	J2240	
	J2241	J2242	J2243	J2244	J2245	J2246	J2247	J2301	J2382	J2303	
	J2304	J2305	J2306	J2311	J2313	J2314	J2315	J2316	J2317	J2323	
	J2324	J2325	J2333	J2334	J2335	J2336	J2337	J2338	J2341	J2343	
	J2403	J2409	J2411	J2427	J2428	J2429	J2431	J2432	J2433	J2434	
	J2502	J2511									
501100	J2136	J2137	J2138	J2139	J2140	J2141	J2142	J2143	J2144	J2201	
	J2202	J2203	J2204	J2205	J2206	J2207	J2208	J2209	J2210	J2212	
	J2213	J2215	J2216	J2217	J2218	J2219	J2220	J2221	J2222	J2223	
	J2224	J2225	J2226	J2227	J2228	J2229	J2231	J2232	J2233	J2234	
	J2235	J2236	J2237	J2238	J2239	J2240	J2241	J2242	J2243	J2244	
	J2245	J2246	J2247	J2301	J2302	J2303	J2304	J2305	J2306	J2307	
	J2309	J2310	J2311	J2312	J2313	J2314	J2315	J2316	J2317	J2318	

Change 2 2-394

TABLE 2-27. VPU TEST FAULT LOCATION - Continued

PROGRAM LOAD STATUS		IOU OFF		CPU OFF							
DIAGNOSE STATUS		IOU OFF		CPU OFF							
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU						
- J2518	- J2519	- J2520	J2522	- J2523	- J2524	- J2525	- J2526	- J2527	- J2528	- J2529	- J2530
- J2531	- J2532	J2534	- J2535	J2538	- J2539	- J2540	- J2541	- J2542	- J2543	- J2544	- J2545
- J2544	- J2545	- J2546									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1438	J2130	J2230	J2330							
501514	J1118	- J1111	J1113	J1115	- J1116	J1118	J1121	- J1122	- J1123	- J1124	- J1125
-	J1125	- J1126	- J1127	J1226	J1319	- J1320	- J1321	- J1322	- J1323	- J1324	- J1325
-	J1326	J1329	- J1330	- J1331	- J1332	- J1333	- J1334	- J1335	- J1336	- J1337	- J1338
-	J1340	- J1341	- J1342	J1426	- J1427	- J1428	- J1429	- J1430	- J1431	- J1432	- J1433
-	J1433	- J1434	- J1435	J1440	J1444	J1513	J1516	J1527	J1529	J1534	- J1535
-	J1539	- J1548	J2203	- J2204	- J2205	J2208	J2213	J2216	- J2217	- J2218	- J2219
-	J2219	- J2220	- J2221	- J2222	J2224	- J2225	- J2226	J2228	- J2229	J2237	- J2238
-	J2239	- J2240	J2242	J2245	J2247	- J2310	- J2311	J2316	J2327	- J2328	- J2329
-	J2332	J2342	J2406	J2408	- J2409	J2421	J2423	J2425	- J2426	- J2427	- J2428
-	J2428	J2431	- J2432	J2440	J2443	J2446	J2508	J2515	- J2516	J2520	- J2521
-	J2522	- J2523	- J2524	- J2525	- J2526	- J2527	J2531	- J2532	J2534	J2541	- J2542
-	J2542	J2544	J2546								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1230	J2330									
501515	J1110	J1111	31116	J1133	J2104	J2117	J2119	- J2120	- J2121	- J2122	- J2123
-	J2124	- J2125	- J2126	J2128	- J2129	J2131	- J2132	J2136	- J2137	- J2138	- J2139
-	J2139	- J2140	J2208	J2212	- J2213	J2215	- J2216	- J2217	- J2218	- J2219	- J2220
-	J2220	- J2221	- J2222	- J2223	- J2224	- J2225	- J2226	- J2227	- J2228	- J2229	- J2230
-	J2236	- J2237	J2240	- J2241	- J2242	- J2243	- J2244	- J2245	- J2246	- J2247	- J2248
-	J2309	J2314	- J2315	- J2316	- J2317	J2322	J2332	J2339	J2341	- J2342	- J2343
-	J2343	- J2344	J2401	- J2402	J2408	- J2409	J2419	J2431	- J2432	J2504	- J2505
-	J2507	J2510	J2518	J2522	J2531	- J2532	J2535				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J2130	J2330									
501520	J2136	J2437	- J2438	- J2439	- J2440	J2538	- J2539	- J2540			
501521	J2318	J2323	J2326	J2404	J2414	- J2415	J2418	J2425	J2429	J2518	- J2519
501522	J2202	- J2203	- J2204	- J2205	- J2206	J2208	J2215	J2305	- J2306	J2308	- J2309
-	J2309	J2312	J2325	J2327	J2338	J2401	J2417	J2428	J2422	J2424	- J2425
-	J2427	- J2428	J2432	- J2433	J2435	J2518	J2518	J2522			
501523	J1110	J1408	J1411	J2202	J2206	J2214	J2216	J2223	J2305	- J2306	- J2307
-	J2310	J2312	J2325	- J2326	- J2327	- J2328	J2401	- J2482	J2417	J2420	- J2421
-	J2422	J2424	J2427	- J2428	- J2429	J2435	J2437	- J3243	J2441	J2446	- J2447
501525	J2223	J2232	J2420								
501526	J2225										
501532	J2143	J2216	J2226	J2229	J2417	J2419	J2421	J2513	J2519		

TABLE 2-27. VPU TEST FAULT LOCATION - Continued

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF								
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU							
501550	J2205 - J2206 - J2207 J2305 - J2306 J2504	J2310	J2210 - J2211 J2326 J2333	J2213 - J2215 J2423 J2435	J2232 - J2244 J2437 - J2438	J2245 J2441						
501551	J1411	J2231	J2234	J2322	J2333							
501552	J2234											
501554	J2218 - J2220 - J2231 - J2232 - J2233 J2335 - J2336 - J2337 - J2338 J2341	J2238 - J2239 - J2240 - J2241	J2244									
501615	J2317 - J2318 - J2319	J2325 - J2326 - J2327 - J2328	J2419									
501620	J2136 - J2137 - J2138 - J2139 - J2140 - J2210 - J2212 - J2213 - J2214 - J2215 - J2216 - J2217 - J2218 - J2219 - J2220 - J2221 - J2222 - J2223 - J2224 J2240 - J2320 - J2321 - J2322 - J2323 - J2324 - J2325 - J2326 - J2327 - J2328 - J2329 J2331 - J2332 - J2333 - J2334 - J2335 - J2336 - J2337 - J2338 - J2339 - J2340 - J2341 - J2342 - J2343 - J2344 J2425 - J2432 - J2433	J2201 - J2206 - J2207 - J2208 - J2209 - J2216 - J2217 - J2218 - J2219 - J2220 - J2315 - J2316 - J2317 - J2318 - J2319 - J2325 - J2326 - J2327 - J2328 - J2329 - J2336 - J2337 - J2338 - J2339 - J2340 - J2426 - J2427 - J2428 - J2429 J2431										
501622	J1126 - J2402 - J2539	J2210 - J2404 - J2405	J2237 - J2405 - J2414 - J2415	J2238 - J2318 - J2323 - J2416	J2326 - J2418	J2328 - J2425 - J2426	J2336 - J2401	J2518				
501623	J2202 - J2226 - J2511	J2203 - J2305 - J2528	J2205 - J2306 - J2539 - J2540	J2206 - J2308 - J2544	J2207 - J2323 - J2544 - J2545	J2208 - J2327 - J2545 - J2546	J2209 - J2411 - J2419	J2211 - J2419	J2214 - J2427	J2216 - J2445		
501624	J1110 - J2240 - J2401 - J2441 - J2512 - J2523	J1111 - J2329 - J2402 - J2442 - J2513	J1113 - J2331 - J2408 - J2443 - J2514	J1124 - J2333 - J2409 - J2444 - J2515	J1125 - J2334 - J2412 - J2503 - J2516	J2144 - J2335 - J2415 - J2507 - J2517	J2216 - J2336 - J2416 - J2508 - J2518	J2221 - J2337 - J2420 - J2509 - 32519	J2229 - J2338 - J2421 - J2510 - J2520	J2236 - J2344 - J2422 - J2511 - J2522		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:												
	J2130	J2230										
501632	J2323	J2405	J2414									
501633	J1415 - J2210 - J2303 - J2318 - J2336 - J2429 - J2545	J2201 - J2211 - J2304 - J2319 - J2338 - J2445 - J2546	J2202 - J2213 - J2305 - J2320 - J2340 - J2508	J2203 - J2214 - J2306 - J2321 - J2343 - J2520	J2204 - J2226 - J2307 - J2324 - J2402 - J2522	J2205 - J2235 - J2308 - J2325 - J2411 - J2538	J2206 - J2238 - J2309 - J2327 - J2413 - J2539	J2207 - J2239 - J2311 - J2329 - J2419 - J2540	J2208 - J2242 - J2314 - J2334 - J2420 - J2541	J2209 - J2301 - J2317 - J2335 - J2427 - J2542		
501700	J1124 - J2125	J1408 - J2126	J1414 - J2128	J2117 - J2129	J2118 - J2131	J2119 - J2133	J2120 - J2134	J2121 - J2136	J2122 - J2139	J2124 - J2140		

TABLE 2-27. VPU TEST FAULT LOCATION - Continued

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF							
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU						
- J2141	- J2142	- J2143	- J2144	J2201	- J2202	- J2203	- J2204	- J2205	J2208		
- J2209	- J2210	- J2211	- J2212	- J2213	J2215	- J2216	- J2217	- J2218	J2222		
- J2223	J2226	J2228	- J2229	J2231	- J2232	- J2233	- J2234	- J2235	J2237		
- J2238	- J2239	- J2240	- J2241	- J2242	- J2243	- J2244	- J2245	J2247	J2301		
J2303	- J2304	- J2305	J2307	J2309	- J2310	- J2311	J2313	- J2314	J2321		
- J2322	J2325	- J2326	- J2327	- J2328	- J2329	J2331	- J2332	- J2333	- J2334		
- J2335	- J2336	- J2337	- J2338	- J2339	- J2340	- J2341	- J2342	- J2343	- J2344		
J2401	- J2402	- J2403	- J2404	J2406	J2409	J2412	J2417	J2421	- J2422		
- J2423	- J2424	- J2425	J2427	- J2428	- J2429	J2433	J2435	J2437	- J2438		
- J2439	- J2440	- J2441	- J2442	- J2443	J2446	J2503	- J2504	J2509	- J2510		
- J2511	- J2512	- J2513	- J2514	- J2515	- J2516	- J2517	- J2518	J2522	- J2523		
J2539	- J2540	J2543	J2545	- J2546							

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J2230	J2330										
501702	J2139	J2143	- J2144	J2201	- J2202	- J2203	- J2204	- J2205	- J2206	- J2207		
-	J2208	- J2209	- J2210	J2218	J2227	J2229	J2231	- J2232	- J2233	J2235		
-	J2236	- J2237	- J2238	J2240	- J2241	- J2242	J2244	- J2245	- J2246	- J2247		
	J2301	- J2302	- J2303	J2305	- J2306	- J2307	J2310	- J2311	- J2312	- J2313		
-	J2314	- J2315	- J2316	- J2317	J2319	- J2320	- J2321	J2324	- J2325	J2328		
-	J2329	J2331	J2333	- J2334	- J2335	- J2336	- J2337	- J2338	J2342	- J2343		
-	J2344	J2427	- J2428	- J2429	J2431	- J2432	- J2433	- J2434				
501703	J1408	J1411	J1414	J2133	- J2134	J2141	- J2142	- J2143	- J2144	J2206		
	J2209	J2213	J2216	J2218	J2226	- J2227	J2229	J2233	J2236	- J2237		
	J2239	J2246	J2301	J2303	J2305	- J2306	- J2307	J2310	- J2311	- J2312		
-	J2313	J2318	- J2319	- J2320	- J2321	J2323	J2326	- J2327	3J232	- J2333		
-	J2334	- J2335	- J2336	J2403	- J2404	J2407	- J2408	- J2409	- J2410	J2412		
	J2414	- J2415	J2417	- J2418	- J2419	- J2420	- J2421	- J2422	- J2423	- J2424		
-	J2425	- J2426	- J2427	- J2428	- J2429	J2432	- J2433	J2435	J2437	- J2438		
-	J2439	- 32440	- J2441	- J2442	J2444	J2446	J2507	- J2508	J2511	J2517		
-	J2518	J2525	J2527									

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J2330											
501705	J2122	J2124	J2133	- J2134	J2139	J2141	- J2142	- J2145	J2144	J2215		
	J2231	J2234	J2238	J2242	- J2243	- J2244	- J2245	J2247	J2329	J2331		
	J2333	J2337	- J2338	J2341	J2401	- J2402	J2417	J2420	J2511	J2515		
	J2520											
501706	J2117	J2128	J2133	- J2134	J2139	J2141	- J2142	- J2143	- J2144	J2208		
	J2210	J2214	- J2215	J2218	J2224	J2229	J2231	J2234	- J2235	J2239		
	J2242	- J2243	- J2244	- J2245	J2247	J2314	J2316	J2319	J2329	J2331		
	J2333	J2337	J2401	- J2402	J2407	J2419	J2423	J2511	- J2512	J2515		
-	J2516	J2520	J2522	- J2523	J2538							
501707	J2233	J2242	J2315	J2338	J2437	J2515	- J2516	J2922	- J2523			
581710	J2138	J2246	J2511	J2515	J2538							

TABLE 2-27. VPU TEST FAULT LOCATION - Continued

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF										
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU									
501711	J2117 - J2118 - J2119	J2121 - J2122	J2124 - J2132 - J2133 - J2134	J2139	J2141 - J2142 - J2143	J2144 - J2203	J2214 - J2215 - J2216	J2226 - J2227	J2228 - J2231 - J2232	J2236 - J2238	J2301 - J2304 - J2305 - J2308	J2310		
	J2316 - J2317	J2326	J2331 - J2334	J2341 - J2344	J2406	J2409	J2421	J2424	J2427 - J2428	J2429 - J2432	J2435 - J2438	J2442 - J2444		
	J2445 - J2446	J2503	J2504 - J2507	J2511	J2515	J2523	J2540							
501712	J1123 - J1323 - J1343	J1206 - J1324 - J1345	J1207 - J1329 - J1346	J1208 - J1332 - J1347	J1229 - J1333 - J1348	J1232 - J1334 - J1407	J1233 - J1337 - J1408	J1314 - J1338 - J1416	J1317 - J1339 - J1419	J1422 - J1423	J1425 - J1426	J1432 - J1433	J1439 - J1440	J1444 - J1448
	J1509 - J2117	J1512 - J2118	J1513 - J2119	J1515 - J2122	J1519 - J2128	J1520 - J2133	J1523 - J2143	J1533 - J2144	J1538 - J2201	J2212 - J2214	J2216	J2237	J2239	J2314 - J2315
	J2428 - J2429	J2432	J2435	J2435	J2520	J2522	J2523	J2539	J2540	J2545				
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:														
J1224														
501713	J2133	J2141	J2143	J2207	J2223	J2227	J2228	J2232	J2237	J2331				
501714	J2121	J2140	J2212	J2222	J2246	J2340	J2506	J2522						
501715	J2104	J2217	J2221	J2224	J2225	J2228	J2244							
501716	J2121	J2202	J2205	J2206	J2207	J2208	J2209	J2210	J2435					
501717	J2210	J2234	J2235	J2239	J2321	J2339	J2402							
501720	J2303	J2540	J2546											
501721	J2227	J2239	J2241	J2303	J2305	J2520								
501722	J2236	J2341	J2445											
501723	J2322	J2341	J2411	J2412	J2539	J2540	J2545							
501724	J2313													
501730	J2432													
501731	J2215													
501732	J2218													
501733	J2102 - J2307 - J2331 - J2407 - J2433	J2202 - J2308 - J2333 - J2408 - J2435	J2219 - J2309 - J2334 - J2411 - J2437	J2227 - J2316 - J2335 - J2412 - J2438	J2232 - J2317 - J2336 - J2418 - J2439	J2236 - J2319 - J2337 - J2422 - J2440	J2237 - J2321 - J2341 - J2427 - J2444	J2241 - J2323 - J2401 - J2428 - J2446	J2304 - J2328 - J2404 - J2429 - J2503	J2305 - J2329 - J2406 - J2432 - J2528				
501734	J2102	J2202	J2209	J2215	J2223	J2229	J2233	J2234	J2236	J2237				

TABLE 2-27. VPU TEST FAULT LOCATION - Continued

PROGRAM LOAD STATUS DIAGNOSE STATUS		IOU OFF IOU OFF		CPU OFF CPU OFF							
ERROR STOP	RIU	VPU	ANALOG	MEMORY	RIE/VSU						
	J2241	J2245	J2246	J2247	J2303	J2305	J2307	J23088	J2309	J2310	
	J2312	J2313	J2315	J2316	J2317	J2320	J2321	J2325	J2328	J2329	
	J2331	J2333	J2334	J2335	J2336	J2337	J2338	J2340	J2341	J2342	
	J2344	J2406	J2420	J2427	J2428	J2429	J2432	J2435	J2437	J2438	
	J2439	J2440	J2443	J2444	J2446	J2502	J2503	J2504	J2510	J2517	
	J2518	J2519	J2520	J2523							

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J2230											
501735	J1408	J1411	J1414	J1415	J2134	J2141	J2142	J2144	J2204	J2205	
	J2206	J2207	J2208	J2210	J2211	J2213	J2214	J2215	J2227	J2233	
	J2235	J2236	J2237	J2238	J2239	J2241	J2245	J2246	J2247	J2301	
	J2303	J2305	J2306	J2307	J2308	J2309	J2310	J2311	J2312	J2313	
	J2314	J2315	J2316	J2317	J2320	J2321	J2328	J2329	J2331	J2333	
	J2334	J2335	J2336	J2337	J2338	J2341	J2401	J2410	J2411	J2413	
	J2420	J2422	J2424	J2427	J2428	J2429	J2432	J2433	J2435	J2437	
	J2438	J2439	J2440	J2441	J2442	J2445	J2446	J2507	J2515	J2516	
	J2519	J2520	J2522	J2538	J2541	J2545	J2546				
501736	J2212	J2243	J2335	J2336	J2340	J2419	J2508	J2513			
501737	J2212	J2215	J2222	J2232	J2236	J2303	J2310	J2315	J2523		
501740	J2233	J2242	J2244	J2247	J2303	J2307	J2312	J2313	J2316	J2329	
	J2337	J2343	J2432	J2433	J2435	J2445	J2538	J2544	J2545	J2546	
501741	J2133	J2134	J2142	J2143	J2144	J2233	J2238	J2242	J2244	J2247	
	J2301	J2303	J2305	J2307	J2309	J2312	J2313	J2316	J2329	J2335	
	J2336	J2337	J2338	J2343	J2421	J2427	J2428	J2429	J2432	J2433	
	J2435	J2507									
501742	J2204	J2221	J2232	J2233	J2309	J2317	J2332	J2408	J2420	J2421	
	J2422	J2424									
501744	J2428	J2516									
501745	J2305	J2408									
501746	J1415	J2205	J2206	J2207	J2208	J2213	J2214	J2215	J2217	J2227	
	J2233	J2245	J2246	J2247	J2303	J2305	J2306	J2307	J2308	J2309	
	J2310	J2312	J2313	J2314	J2315	J2317	J2334	J2342	J2410	J2411	
	J2420	J2421	J2423	J2424	J2428	J2432	J2445	J2515	J2516	J2519	
	J2520	J2522	J2525	J2526	J2528	J2538	J2540	J2542	J2543	J2545	
	J2546										
501763	J2204	J2214	J2215	J2218	J2221	J2233	J2236	J2237	J2241	J2303	
	J2305	J2308	J2309	J2312	J2313	J2314	J2315	J2316	J2317	J2321	
	J2332	J2333	J2334	J2409	J2421	J2424	J2432	J2435	J2440	J2445	
	J2512	J2513	J2519	J2520	J2522	J2539	J2540	J2544	J2545	J2546	
501765	J2133	J2134	J2141	J2142	J2143	J2144	J2208	J2210	J2214	J2220	

Change 2 2-400

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS																	
STOP																				
	J2235	J2239	J2241	-	J2242	-	J2243	-	J2244	-	J2245	-	J2246	-	J2247	J2313				
	J2334	-	J2335	-	J2336	-	J2337	-	J2338	-	J2343	-	J2408	-	J2410	J2421	-	J2422		
	J2424	J2427	-	J2428	-	J2429	-	J2432	-	J2433	-	J2435	-	J2439	-	J2516	-	J2520		
	J2522	J2526																		
502180	J1317	-	J1318	-	J1319	-	J1320	-	J1321	-	J1322	-	J1325	-	J1326	-	J1329	-	J1331	
	J1333	-	J1334	-	J1336	-	J1338	-	J1339	-	J1340	-	J1341	-	J1342	-	J1343	-	J1344	
	-	J1345	-	J1346	-	J1418	-	J1419	-	J1426	-	J1432	-	J1433	-	J1434	-	J1435	-	J1442
	-	J1443	-	J1446	-	J1447	-	J1448	-	J1507	-	J1588	-	J1512	-	J1513	-	J1514	-	J1515
	J1517	J1546	-	J1547	-	J1548	-	J1549												
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1230	J1438																		
502102	J1512																			
502103	J1519	-	J1520																	
582104	J1512																			
502106	J1448	J1512																		
502107	J1447	-	J1448	-	J1512	-	J1519	-	J1520											
502110	J1512																			
582111	J1512																			
502112	J1512																			
502113	J1434	-	J1435	-	J1441	-	J1442	-	J1447	-	J1448									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1438																			
502114	J1335	J1509	J1512	-	J1513	J1515	J1518	-	J1519	-	J1520	J1522	-	J1523						
	-	J1524	-	J1525	-	J1526	J1530	J1534	-	J1535	J1538	J1545	-	J1546						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
	J1438																			
502177	J1120	J1123	-	J1124	J1126	J1227	-	J1228	-	J1229	J1319	-	J1320	-	J1321					
	J1325	-	J1326	-	J1329	J1331	J1333	-	J1334	-	J1335	J1337	-	J1338	-	J1339				
	-	J1340	-	J1341	-	J1342	-	J1343	-	J1344	-	J1345	-	J1346	J1407	J1410	J1413			
	J1417	-	J1418	-	J1419	J1423	J1426	-	J1427	-	J1428	-	J1429	-	J1438	-	J1431			
	-	J1432	-	J1433	-	J1434	-	J1435	-	J1436	J1439	J1441	-	J1442	J1445	J1447				
	-	J1448	-	J1587	-	J1508	-	J1509	J1511	-	J1512	-	J1513	-	J1514	-	J1515	-	J1516	
	-	J1517	-	J1518	-	J1519	-	J1520	-	J1521	-	J1522	-	J1523	-	J1524	-	J1525	-	J1526
	-	J1527	-	J1529	-	J1530	J1533	-	J1534	-	J1535	-	J1536	J1539	J1546	-	J1547			
	-	J1548	-	J1549	J2139	-	J2140	J2216	J2438	J2441										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP	J1230	J1438									
502214	J1330	J1426	J1431	J1445							
502217	J1448 J1530	J1507 J1534	- J1508	J1514	- J1515	J1519	- J1520	J1522	- J1523	J1525	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1438											
502220	J1521	- J1522	- J1523	J1525	J1530	J1534	- J1535	J1538	J1545	- J1546	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1438											
582222	J1417 - J1549	J1442	J1447	- J1448	J1507	- J1508	- J1509	J1546	- J1547	- J1548	
502277	J1330 - J1410 - J1430 J1507 J1521 - J2439	- J1331 - J1411 - J1431 - J1508 J1526 - J2440	- J1332 - J1412 - J1432 - J1509 - J1527	- J1333 - J1413 - J1433 J1511 J1534	- J1334 - J1414 - J1434 - J1512 - J1546	- J1335 - J1415 - J1439 - J1513 - J1547	- J1336 J1426 J1442 - J1514 - J1548	J1341 - J1427 J1445 - J1515 - J1549	J1408 - J1428 J1447 - J1516 J2437	- J1409 - J1429 - J1448 J1518 - J2438	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1438											
502308	J1415	J2432	J2537	- J2538	J2541	J2543	J2545	- J2546			
502301	J1415	J2433	J2537	- J2538	J2541	J2543	J2545	- J2546			
582302	J1415	J1442	J2434	J2537	- J2538	J2541	J2543	J2545	- J2546		
582303	J1322 - J2538	J1347 J2542	J1415 J2544	J1508 - J2545	J1510 - J2546	- J1511	J2324	J2535	- J2536	- J2537	
502304	J1347 J2441	J1412 J2443	J1414 J2445	J1507 - J2446	J1509 - J2535	- J1510 - J2536	- J1511	J2435	J2437	- J2438	
582305	J1414	J2432	J2437	- J2438	J2441	J2443	J2445	- J2446			
502306	J1414	J2432	J2437	- J2438	J2442	J2444	- J2445	- J2446			
582307	J1414 J2532	J1516 J2534	J1536 J2536	J2432	J2437	- J2438	J2442	J2444	- J2445	- J2446	
502310	J1415	J2332	J2432	J2533	J2539	- J2540	J2542	J2544	- J2545	- J2546	
502311	J1414	- J1415	J2433	J2539	- J2540	J2542	J2544	- J2545	- J2546		
502312	J1413	J1415	J2434	J2539	- J2540	- J2541	J2543	J2545	- J2546		

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS				
DIAGNOSE STATUS		IOU OFF		CPU OFF						
STOP										
582313	J1346 - J2536	J1412 J2539	J1415 - J2540	J1508 - J2541	J1589 - J2543	J1510 - J2545	J1511 - J2546	J2325	32531	J2535
502314	J1346 J1516	J1411 J2435	J1414 J2439	J1417 - J2440	J1432 J2442	J1507 J2444	J1589 - J2445	J1510 - J2446	J1511 J2535	J1513 - J2536
502315	J1418 J2534	J1414	J1517	J2435	J2439	- J2440	J2442	J2444	- J2445	- J2446
582316	J1409	J1414	J2435	J2439	- J2440	- J2441	J2443	J2445	- J2446	
502317	J1408	J1414	J2435	J2439	- J2440	- J2441	J2443	J2445	- J2446	
582320	J1415	J2432	J2537	- J2538	J2542	J2544	- J2545	- J2546		
502321	J1414	- J1415	J2433	J2537	- J2538	J2542	J2544	- J2545	- J2546	
502322	J1413 - J2546	J1415	J1440	J1444	J2434	J2537	- J2538	J2541	J2543	J2545
502323	J1322 J2532	J1347 J2535	J1412 - J2536	J1415 - J2537	J1426 - J2538	J15088 J2541	- J1509 J2543	- J1510 J2545	- J1511 - J2546	J2325
502324	J1347 J2442	J1411 J2444	J1414 - J2445	J1507 - J2446	J1509 J2535	- J1510 - J2536	- J1511	J2435	J2437	- J2438
502325	J1410 J2443	J1414 J2445	J2344 - J2446	J2401	J2409	J2413	J2434	J2437	- J2438	J2441
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J2330										
582326	J1489	J1414	J2434	J2437	- J2438	J2441	J2443	J2445	- J2446	
582327	J1408	J1414	J2434	J2437	- J2438	J2442	J2444	- J2445	- J2446	
502330	J1415	J1426	J2432	J2539	- J2540	J2542	J2544	- J2545	- J2546	
502331	J1414	- J1415	J2433	J2539	- J2540	J2541 J2543	J2545	- J2546		
582332	J1413	J1415	J2434	J2539	- J2548	- J2541	J2545	- J2546		
502333	J1322 - J2536	J1347 J2539	J1412 - J2540	J1415 J2542	J1508 J2544	- J1509 - J2545	- J1510 - J2546	- J1511	J2324	J2535
502334	J1347 - J2441	J1411 J2443	J1414 J2445	J1507 - J2446	J1509 J2535	- J1510 - J2536	- J1511	32435	J2439	- J2440
582335	J1410	J1414	J2433	J2439	- J2448	- J2441	J3443	J2445	- J2446	

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS																
582336	J1409	J1414	J2433	J2439	-	J2440	-	J2441	J2443	J2445	-	J2446							
502337	J1408	J1414	J2433	J2439	-	J2440	J2442	J2445	-	J2446									
502377	J1329	-	J1338	J1345	J1407	-	J1408	-	J1409	-	J1410	-	J1411	-	J1412	-	J1413		
-	J1414	-	J1415	-	J1416	-	J1417	-	J1418	J1426	-	J1427	-	J1428	-	J1429	-	J1430	
-	J1431	-	J1432	-	J1433	-	J1434	-	J1435	J1439	J1441	J1443	J1445	J1511					
-	J1512	-	J1513	-	J1514	-	J1515	-	J1516	-	J1517	-	J1518	J1521	J1526	-	J1527		
	J1529	J1536	J1539	J1548	-	J1549	J2236	J2240	J2344	J2409	J2413								
	J2423	J2437	-	J2438	-	J2439	-	J2448	J2444	J2589	J2527	-	J2528	J2531					
-	J2532	-	J2533	-	J2534	-	J2535	-	J2536	-	J2537	-	J2538	-	J2539	-	J2540	-	J2541
-	J2542																		

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1438	J2330																
502518	J2531	J2533	J2536															
582511	J2533																	
502513	J1118	J1115	J1118															
582514	J1329	J1345	-	J1346	-	J1347	-	J1348	-	J1349	J1439							
582515	J1439	J1511	J1514	J1518	J1526													
502516	J1439	J1514	J1527															
582540	J1330	-	J1331	J1335	J1341	J1349	J1418	J1426	-	J1427	-	J1428	-	J1429				
-	J1430	-	J1431	-	J1432	J1436	J1448	J1527	J51540	J1548	-	J1549	-	J1549	J2531			
-	J2532	-	J2533	-	J2534													

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1438																	
582541	J2533	J2535																
502543	J2533																	
582544	J2445																	
582553	J1123	-	J1124	-	J1125	-	J1126	-	J1127	J2139								
502554	J1111	J1134	J1329	-	J1330	-	J1331	-	J1332	J1335	-	J1336	-	J1337	-	J1338		
-	J1339	-	J1340	-	J1341	-	J1342	J1345	J1421	J1426	-	J1427	-	J1428	-	J1429		
-	J1430	J1433	-	J1434	-	J1435	-	J1436	J1442	-	J1443	J1445	-	J1446	-	J1447		
-	J1448	J1514	-	J1515	J1519	-	J1528	-	J1521	-	J1522	-	J1523	J1525	J1534			
-	J1535	J1538	J1540	J1545	-	J1546	-	J1547	-	J1548	-	J1549	J2532	J2542				
	J2545																	

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS														
STOP																	
	J1438																
502577	J1344 J1439	J1400 J1511	J1408 J1518	-	J1409 J2537	-	J1410 J2538	-	J1411 J2539	-	J1412 J2540	-	J1413	-	J1414	-	J1415
502622	J1410																
502700	J1409 - J2546	J1412	J2220	J2314	J2332	J2537	-	J2538	J2541	J2543	J2545						
502701	J1409	J1412	J2432	J2537	-	J2538	J2542	J2545	-	52546							
502782	J1489	J1412	J2433	J2537	-	J2538	J2542	J2544	-	J2545	-	J2546					
502703	J1409	J1412	J2434	J2537	-	J2538	J2542	J2544	-	J2545	-	32546					
502704	J1346 - J2438	J14880 J2441	J1408 J2443	J1411 J2445	-	J1508 J2446	J1589 J2535	-	J1510 J2536	-	J1511	J2435	J2437				
582705	J1408	J1411	J2427	J2437	-	J2438	J2442	J2444	-	J2445	-	J2446					
502706	J1408	J1411	J2427	J2437	-	J2438	J2442	J2444	-	J2445	-	J2446					
582707	J1408	J1411	J2427	J2437	-	J2438	J2441	J2443	J2445	-	J2446						
502710	J1408	J1412	J2432	J2539	-	J2540	-	J2541	J2543	J2545	-	J2546					
582711	J1409	J1412	J2433	J2539	-	J2540	-	J2541	J2543	J2545	-	J2546					
502712	J1410	J1412	J2434	J2539	-	J2540	J2542	J2544	-	J2545	-	J2546					
502713	J1322 J2539	J1347 - J2540	J1411 J2542	-	J1412 J2544	J1417 - J2545	J1510 - J2546	-	J1511	J2324	J2535	-	J2536				
582714	J1347 - J2441	J1411 J2443	- J1412 J2445	J1507 - J2446	J1509 - J2535	-	J1510 - J2536	-	J1511	J2435	J2439	-	J2440				
502715	J1411	J1413	J2431	J2439	-	J2440	-	J2441	J2443	J2445	-	J2446					
502716	J1411	J1414	J2431	J2439	-	J2440	J2442	J2444	-	J2445	-	J2446					
502717	J1411	J1415	J2431	J2439	-	J2440	J2442	J2444	-	J2445	-	J2446					
502720	J1408	J1412	J2228	J2432	J2537	-	J2538	J2541	J2543	J2545	-	J2546					
582721	J1409	J1412	J2433	J2537	-	J2538	J2541	J2543	J2545	-	J2546						
502722	J1410	J1412	J2434	J2537	-	J2538	J2542	J2544	-	J2545	-	J2546					
502723	J1411	- J1412	J2323	J2537	-	J2538	J2542	52544	-	J2545	-	J2546					
502724	J1346	J1411	- J1412	J1507	J1509	-	J1510	-	J1511	J2435	J2437	-	J2438				

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS	
DIAGNOSE STATUS		IOU OFF		CPU OFF			
STOP							
502725	J1411	J1413	J2429	J2437	- J2438	J2442	J2444 - J2445 - J2446
502726	J1411	J1414	J2429	J2437	- J2438	J2442	J2444 - J2445 - J2446
502727	J1411	J1415	J2429	J2437	- J2438	J2442	J2444 - J2445 - J2446
562730	J1488	- J1409	J1412	J2432	J2539 - J2540	- J2541	J2543 J2545 - J2546
502731	J1409	J1412	J2433	J2539	- J2540	J2542	J2544 - J2545 - J2546
582732	J1409	- J1410	J1412	J2434	J2539 - J2540	J2542	J2544 - J2545 - J2546
582733	J1409	J1411	- J1412	J2323	J2539 - J2540	J2542	J2544 - J2545 - J2546
582734	J1346	J1488	J1411	- J1412	J1508 - J1509	- J1511	J2435 J2439
	- J2440	- J2441	J2443	J2445	- J2446	J2533	J2535 - J2536
502735	J1408	J1411	J1413	J2428	J2439 - J2440	J2442	J2444 - J2445 - J2446
502736	J1408	J1411	J1414	J2428	J2439 - J2440	J2442	J2444 - J2445 - J2446
582737	J1408	J1411	J1415	J2428	J2439 - J2440	J2442	J2444 - J2445 - J2446
502777	J1410	- J1411	- J1412	- J1413	J1439	J1515	
503820	J1110	- J1111	J1118	J1320	J1322	J1325	J1329 - J1330 - J1331 - J1332
	- J1333	- J1334	- J1335	J1337	- J1338	- J1339	- J1340 J1342 - J1343 - J1344
	- J1345	- J1346	- J1347	- J1348	- J1349	J1407	- J1408 - J1409 - J1410 - J1411
	- J1412	- J1413	- J1414	- J1415	- J1416	- J1417	- J1418 - J1419
	- J1427	- J1428	- J1429	- J1430	- J1431	- J1432	- J1433 - J1434 - J1435
	J1442	J1445	- J1446	- J1447	- J1448	J1587	- J1508 - J1509 - J1510 - J1511
	- J1512	- J1513	- J1514	- J1515	- J1516	- J1517	- J1518 - J1519 - J1520 - J1521
	- J1522	- J1523	- J1524	- J1525	- J1526	- J1527	J1529 J1533 - J1534 - J1535
	- J1536	J1539	J1543	J1545	- J1546	- J1547	- J1548 - J1549 J2535
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:							
	J1230	J1438					
503021	J1108	J1118	- J1111	J1115	- J1116	J1123	- J1124 J1126 - J1127 J1229
	J1319	J1321	J1326	J1329	- J1330	- J1331	- J1332 - J1333 J1335 - J1336
	- J1337	- J1338	- J1339	- J1340	- J1341	- J1342	- J1343 - J1344 - J1345 - J1346
	- J1347	- J1348	- J1349	J1417	- J1418	- J1419	J1422 J1426 - J1427 - J1428
	- J1429	- J1430	- J1431	- J1432	- J1433	- J1434	- J1435 - J1436 J1439 - J1440
	J1442	- J1443	J1445	J1447	- J1448	J1507	- J1588 - J1509 - J1510 - J1511
	- J1512	- J1513	- J1514	- J1515	- J1516	- J1517	- J1518 - J1519 - J1520 - J1521
	- J1522	- J1523	- J1524	- J1525	J1527	J1529	- J1530 J1533 - J1534 - J1535
	- J1536	- J1537	- J1538	- J1539	- J1540	J1545	- J1546 - J3547 - J1548 J2138
	J2143	J2201	J2219	J2231	J2235	- J2236	- J2237 - J2233 - J22-9 - J2248
	- J2241	- J2242	- J2243	- J2244	- J2245	- J2246	- J2247 J2301 - J2302 - J2303
	- J2384	- J2305	- J2306	- J2307	J2309	- J2310	J2313 - J2314 - J2315 - J2316

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF
STOP										
	- J2317	J2326	J2332	- J2333	J2337	- J2338	- J2339	- J2340	J2422	J2427
	- J2428	J2503	J2508	J2512	J2517					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1438									
503561	J1118	J1330	J1335	J1339	J1420	J1430	- J1431	J1511	J1513	J2227
	- J2223	J2242								
583562	J1108	J1110	- J1111	J1113	J1123	- J1124	1126	J1317	J1320	- J1321
	J1325	- J1326	J1329	- J1330	- J1331	J1333	- J1334	- J1335	- J1336	J1339
	- J1340	J1342	J1344	J1346	- J1347	- J1348	- J1349	J1407	J1418	- J1419
	- J1420	- J1421	J1423	J1428	- J1429	- J1430	J1434	- J1435	- J1436	J1439
	J1441	- J1442	- J1443	- J1444	J1447	- J1448	J1511	- J1512	- J1513	J1532
	J1535	J1537	J2138							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1230 J1438									
503563	J1329	J1345	- J1346	- J1347	- J1348	- J1349	J1441	J1444		
503604	J1348	J1351	J1439							
503610	J1348									
503612	J1109	- J1110	J1115	J1122	J1124	- J1125	- J1126	- J1127	J1330	- J1331
	- J1332	J1335	- J1336	- J1337	J1339	- J1340	J1342	- J1343	- J1344	- J1345
	J1347	- J1348	- J1349	J1417	- J1418	- J1419	J1422	J1426	- J1427	- J1428
	- J1429	- J1430	- J1431	- J1432	- J1133	J1436	J1439	J1442	J1445	J1448
	J1513	J1529	J1533	- J1534	- J1535	- J1536	- J1537	- J1538	J1540	J1547
	- J1548	- J1549	J2126	J2311						
503613	J1124	- J1125	- J1126	J1418	- J1419	J1426	- J1427	- J1428	- J1429	J1432
	J1434	- J1435	J1512	- J1513	J1516					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1438									
503630	J1117	J1332	- J1333	J1349	J1423	J1436	J1441	J1444	- J1445	- J1446
	J1543									
503631	J1205	J1211	- J1212	- J1213	- J1214	- J1215	J1219	- J1220	- J1221	J1225
	J1236	- J1237	J1307	- J1308	J1310	J1312	J1319	- J1320	- J1321	- J1322
	- J1323	J1335	J1345	J1408	- J1409	- J1410	- J1411	- J1412	- J1413	- J1414
	- J1415	- J1416	- J1417	- J1418	J1420	- J1421	- J1422	J1424	- J1425	- J1426
	J1430	- J1431	- J1432	J1510	J1512	- J1513	- J1514	- J1515	- J1516	J1518
	- J1519	- J1520	- J1521	- J1522	- J1523	- J1524	- J1525	J1527	J1529	- J1530
	J1534	- J1535	- J1536	J1548	- J1549	J2124	J2323	- J2324	- J2325	- J2326
	J2432	J2445	J2528	J2532	- J2533	J2535	- J2536	- J2537	- J2538	- J2539
	- J2548	- J2541	J2545							
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS																	
STOP																				
	J1230																			
503632	J1334	J1348	J1423	J1436	J1443	-	J1444	-	J1445	-	J1446	J1543	J1545							
	-	J1546	-	J1547	J1549															
503633	J1331	-	J1332	-	J1333	J1335	-	J1336	-	J1337	-	J1338	-	J1339	-	J1348	-	J1341		
	J1343	-	J1344	-	J1346	J1349	-	J1350	-	J1351	-	J1407	-	J1488	-	J1409	-	J1410		
	-	J1411	-	J1412	-	J1413	-	J1414	-	J1415	-	J1416	-	J1419	-	J1422	-	J1438	J1433	
	-	J1434	-	J1435	-	J1436	-	J1441	-	J1442	-	J1443	-	J1444	-	J1445	-	J1446	J1588	
	-	J1509	-	J1518	-	J1513	-	J1514	-	J1515	-	J1517	-	J1520	-	J1521	-	J1523	-	J1524
	-	J1525	-	J1526	-	J1528	-	J1539	-	J1543	-	J1544	-	J1545	-	J1546	-	J1548	J1617	
	-	J2220	-	J2437	-	J2438	-	J2439	-	J2448	-	J2445	-	J2532	-	J2537	-	J2538	-	J2539
	-	J2548	-	J2545																
503634	J1343	J1346	J1423	J1436	J1444	-	J1445	-	J1446	J1515	J1546	-	J1547							
503635	J1333	J1412	J1430	J1433	-	J1434	-	J1435	J1514	J1524	-	J1525	J1533							
	J2534	-	J2535																	
503637	J1346																			
503647	J1329	-	J1330	-	J1331	J1333	-	J1334	J1336	-	J1337	-	J1338	-	J1339	-	J1340			
	-	J1341	-	J1342	-	J1343	-	J1344	-	J1345	-	J1346	-	J1347	-	J1349	J1418	J1422		
	-	J1427	-	J1431	-	J1432	-	J1433	J1439	J1442	-	J1447	-	J1448	-	J1448	J1512	-	J1513	
	-	J1514	-	J1515	-	J1516	-	J1518	J1522	-	J1523	-	J1527	-	J1520	-	J1529	-	J1530	
	-	J1534	-	J1535	-	J1539	-	J1547	-	J1548	-	J1549								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																				
	J1230		J1438																	
503651	J1348	-	J1349	-	J1350	-	J1351	J1426	J1432	J1441										
503653	J1332	J1334	-	J1335	J1337	J1341	J1348	-	J1349	-	J1350	-	J1351	J1420						
	-	J1421	-	J1422	-	J1423	-	J1424	J1439	-	J1440	-	J1446	-	J1535					
503655	J1123	-	J1124	J1126	-	J1127	J1317	-	J1318	-	J1319	-	J1320	-	J1321	-	J1322			
	-	J1325	-	J1326	-	J1329	-	J1330	-	J1331	-	J1332	-	J1333	-	J1334	-	J1335	-	J1336
	-	J1337	-	J1338	-	J1339	-	J1340	-	J1341	-	J1342	-	J1343	-	J1344	-	J1345	J1347	
	-	J1407	-	J1410	-	J1413	-	J1418	-	J1419	-	J1420	-	J1421	-	J1422	-	J1423	J1425	
	-	J1426	-	J1427	-	J1428	-	J1429	-	J1430	-	J1431	-	J1432	-	J1433	-	J1434	-	J1435
	-	J1436	-	J1441	-	J1444	-	J1446	-	J1447	-	J1448	-	J1512	-	J1513	-	J1514	-	J1515
	-	J1516	-	J1519	-	J1520	-	J1521	-	J1522	-	J1523	-	J1526	-	J1527	-	J1529	J1534	
	-	J1538	-	J1546																
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																				
	J1230		J1438																	
503671	J1129	J1134	J1237	J1331	J1334	-	J1335	J1339	J1345	-	J1346	-	J1347							
	-	J1408	-	J1409	-	J1410	-	J1411	-	J1412	-	J1415	-	J1416	-	J1417	-	J1418	-	J1419
	-	J1420	-	J1421	-	J1422	-	J1423	-	J1424	-	J1425	-	J1426	-	J1428	-	J1430	-	J1431
	-	J1432	-	J1433	-	J1434	-	J1435	-	J1436	-	J1441	-	J1444	-	J1445	-	J1446	-	J1514
	-	J1515	-	J1520	-	J1522	-	J1523	-	J1526	-	J1532	-	J1534	-	J1539	-	J1544	-	J1547

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP	J2126 J2532	J2213 - J2533	J2219 J2537	J2232 J2539	J2311 - J2540	J2348	J2420	J2423	J2527	- J2528
503677	J1113 - J1323 - J1336 - J1430 - J1447 J1526 J2104 - J2214 - J2233 J2408 - J2446 J2539	J1114 J1325 J1339 - J1431 - J1448 - J1527 J2136 - J2215 J2238 - J2489 J2514 - J2541	J1116 - J1326 - J1340 - J1432 J1507 J1529 - J2137 - J2216 J2240 J2424 - J2524 - J2542	J1121 J1329 - J1341 - J1433 J1509 J1534 - J2138 - J2217 J2246 J2434 - J2525 - J2543	J1134 - J1330 - J1342 - J1434 - J1518 - J1535 J2140 J2219 - J2304 J2439 J2527 - J2544	J1226 - J1331 - J1420 - J1435 - J1511 J1539 - J2208 - J2220 J2308 - J2441 - J2532 - J2545	J1319 - J1320 - J1332 - J1426 - J1427 - J1440 - J1512 - J1540 - J2209 - J2221 - J2389 - 32442 - J2533 - J2546	J1320 - J1333 - J1427 - J1441 - J1513 J1546 - J2210 - J2225 J2322 J2341 - J2443 - J2534	J1321 - J1334 - J1428 31443 - J1515 J1548 - J2211 J2227 J2341 - 32444 - J2535	- J1322 - J1335 - J1429 - J1444 J1521 - J1549 J2213 J2232 J2401 - J2445 - J2536
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1230	J1438	J2130	J2230	J2330					
503781	J1115 - J1443 - J1538	J1123 J1516 - J1539	J1231 J1526 - J1548	J1329 - J1527 J1547	J1335 J1529	J1347 J1533	J1427 - J1534	J1435 - J1535	J1440 - J1536	J1442 - J1537
583704	J1538									
503705	J1346	J1417	- J1418	- J1419	J1423	J1531	- J1532			
583706	J1329	J1524	- J1525	J1527	J1538	- J1531	- J1532	- J1533	- J1534	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1438									
503707	J1530	- J1531	- J1532							
503711	J1340 J1419 J1510	J1342 J1421 J1513	J1410 - J1422 J1518	- J1411 - J1423 J1522	- J1412 - J1424 - J1523	- J1413 - J1425 J1533	- J1414 J1431 - J1534	- J1415 J1441 - J1535	- J1416 J1444 - J1536	- J1417 - J1445
503712	J1132 - J1333 - J1343 - J1409 - J1419 - J1429 - J1441 - J1509 - J1519 - J1529 - J1539 J2126 J2405	J1207 - J1334 - J1344 - J1410 - J1420 - J1430 - J1442 - J1510 - J1520 - J1530 - J1540 J2143 J2407	J1219 - J1335 - J1345 - J1411 - J1421 - J1431 - J1443 - J1511 - J1521 - J1531 J1543 J2307 J2419	J1231 - J1336 - J1346 - J1412 - J1422 - J1432 - J1444 - J1512 - J1522 - J1532 - J1544 J2311 J2502	J1313 - J1337 - J1348 - J1413 - J1423 - J1433 - J1445 - J1513 - J1523 - J1533 - J1545 - J2312 - J2503	J1317 - J1338 - J1348 - J1414 - J1424 - J1434 - J1446 - J1514 - J1524 - J1534 - J1546 J2318 - J2504	J1329 - J1330 - J1350 - J1415 - J1425 - J1435 - J1447 - J1515 - J1525 - J1535 - J1547 J2323 - J2535	- J1330 - J1340 - J1351 - J1416 - J1426 - J1436 - J1448 - J1516 - J1526 - J1536 - J1548 J2328 - J2536	- J1331 - J1341 J1407 - J1417 - J1427 J1439 - J1507 - J1517 - J1527 - J1537 - J1549 J2335	- J1332 - J1342 - J1488 - J1418 - J1428 - J1440 - J1508 - J1518 - J1528 - J1538 J2120 J2402

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS									
STOP												
504000	J1107 - J1108 - J1109 - J1110 - J1111	J1113 - J1114 - J1116 - J1120 - J1121	J1123 - J1124 - J1226 - J1319 - J1320 - J1321 - J1322 - J1323 - J1325 - J1326	J1329 - J1330 - J1331 - J1332 - J1333 - J1334 - J1335 - J1339 - J1340 - J1341	- J1342 - J1426 - J1427 - J1428 - J1429 - J1430 - J1431 - J1432 - J1433 - J1434	- J1435 - J1444 - J1513 - J1527 - J1529 - J1534 - J1539 - J1540 - J2229 - J2441						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230											
504063	J2421											
504076	J1115											
504077	J1115 - J1118 - J1124 - J1134 - J1210 - J1211 - J1213 - J1214 - J1215 - J1217	J1221 - J1222 - J1227 - J1228 - J1229 - J1231 - J1232 - J1235 - J1236 - J1546	J2137 - J2138 - J2240 - J2441 - J2514									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230											
504188	J1113 - J1114 - J1116											
504107	J1124 - J1336 - J1339											
584112	J1110 - J1111 - J1113 - J1115 - J1118 - J1122 - J1123 - J1125 - J1126 - J1127	J2209 - J2216 - J2219 - J2220 - J2224 - J2225 - J2229 - J2231 - J2233 - J2237	J2325 - J2326 - J2427									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130											
504116	J1124											
504280	J2502 - J2586											
584201	J1118 - J1113 - J1115 - J1116 - J1117 - J1122 - J1123 - J1124 - J1125 - J1126	J1127										
504220	J1111 - J1121											
584237	J1118 - J1115 - J1116 - J1121 - J1134											
504267	J1113 - J1114 - J1122 - J1123 - J1124 - J3126 - J1127 - J1231											
504303	J1123 - J1127											
584341	J1115 - J1116 - J1123											
504342	J1287 - J1218 - J1386 - J1325 - J1409 - J1417 - J1429 - J3525 - J1528 - J1537	J1545										
504407	J1111											

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS				
DIAGNOSE STATUS		IOU OFF		CPU OFF						
STOP										
504428	J2131	J2427	J2535							
504422	J1116 J1431	J1205 J1539	- J1206 31543	J1208 J2233	J1214 J2438	J1229 J2519	J1237 J2524	J1319 J2526	J3468 J2535	- J1489
504424	J1288	J1426	J2438							
504518	J1124									
584526	J1111 - J1436 J2431 - J2534	J1223 J1446 J2433 J2536	J1229 J1510 J2435	J:233 J1324 J2442	J1307 J2134 - J2443	J1344 J2205 J2518	J1421 J2207 - J2519	J1430 J2317 J2524	J1432 J2340 J2526	J1435 J2426 J2533
584537	J1115	- J1116	J1123							
584542	J2317	J2322								
504544	J2317	J2322								
504550	J2322									
504568	J2317									
504630	J2247	J2342	- J2343							
504737	J2342	- J2343								
504748	J2520									
584750	J1113	J2338								
504751	J2131 J2219 - J2233 - J2326	J2281 - J2228 J2237 - J2327	J2288 J2222 - J2238 J2344	- J2209 J2224 - J2239	- J2210 - J2225 - J2240	J2212 J2227 - J2241	J2214 - J2228 J2246	- J2215 - J2229 J2304	- J2216 J2231 J2324	- J2217 - J2232 - J2325

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J2130

504771	J2225	J2237	- J2238	J2412	- J2413	J2519
5060068	J2133	- J2134	J2141	- J2142		
506001	J2141	- J2142				
506082	J2133	- J2134	J2141	J2143	- J2144	
506083	J2133	- J2134	J2142	- J2143	- J2144	
506007	J2134					

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS												
DIAGNOSE STATUS		IOU OFF		CPU OFF														
STOP																		
506012	J2128	12134	J2136	J2139	J2141	-	32142	-	J2143	-	J2144							
506013	J2128	J2131	J2136	J2139														
586014	J2133	J2141	-	J2142														
506015	J2133	J2141	-	J2142	J2144													
506816	J2134	J2143	-	J2144														
586026	J2125																	
506027	J2142																	
506831	J2133	J2141	-	J2142														
506032	J2133	J2143	-	J2144														
506033	J2133	-	J2134	J2139	J2143	-	J2144											
506042	J2139																	
506045	J2134	J2141	-	J2142														
506055	J2121																	
506056	J2117	J2120	-	J2121	-	J2122	J2125	J2132	J2140									
506057	J2140																	
506060	J1124	J2117	J2119	J2121	-	J2122	J2124	-	J2125	-	J2126	J2128	-	J2129				
	J2132	-	J2133	-	J2134	J2136	-	J2137	-	J2138	-	J2139	-	J2140	-	J2141	-	J2142
	-	J2143	-	J2144														
586061	J2131																	
586862	J2132																	
506065	J1231	J1513	J2117	-	J2118	-	J2119	-	J2120	-	J2121	J2124	-	J2125	-	J2126		
	J2128	-	J2129	J2131	-	J2132	-	J2133	-	J2134	J2137	J2139	-	J2140	J2142			
	-	J2143	-	J2144	J2281	J2203	J2205	J2287	J2212	J2214	-	J2215	-	J2216				
	-	J2217	-	J2218	-	J2219	J2226	J2235	J2239	-	J2240	J2381	J2303	-	J2304			
		J2307	J2309	J2311	J2313	-	J2314	J2319	-	J2320	J2323	J2326	J2328					
		J2337	-	J2338	J2401	-	J2402	-	J2483	-	J2404	-	J2405	-	J2486	-	J2487	J2410
	-	J2411	J2414	J2416	J2421	J2424	J2426	-	J2427	-	J2428	J2584	-	J2585				
		J2508	J2510	J2512	-	J2513	J2516	-	J2517									
586066	J2121	-	J2122	J2124	-	J2125	-	J2126	J2128	-	J2129	J2132	-	J2133	-	J2134		
	J2136	J2138	-	J2139	-	J2140	-	J2141	-	J2142	-	J2143	-	J2144				
506073	J2125	J2140	J2142															

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS	
DIAGNOSE STATUS		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS	
STOP		IOU OFF		CPU OFF		IOU OFF		CPU OFF		CONNECTORS	
506074	J2118 - J2119 J2137 - J2138	J2121 - J2122 J2140 - J2141	J2124 - J2125 J2142 - J2143	J2126 - J2128 J2144	J2133 - J2134						
506181	J2125										
506102	J2133 - J2134 - J2519 J2522	J2141 - J2142 - J2143 - J2144	J2331 - J2333 J2338 - J2518								
506103	J1110 - J1509 - J2320 - J2321	J2101 - J2102 J2331 - J2337	J2133 - J2134 - J2338 - J2408	J2141 - J2142 J2216 - J2523	J2318 - J2319 J2545 - J2546						
506104	J1509 - J1516 J2320 - J2321	J2132 - J2133 J2323 - J2542	J2134 - J2135 J2544	J2139 - J2141 - J2142 - J2143	J2144						
506105	J2134 - J2143 - J2144										
586106	J1128 - J1133	J1527 - J2122 J2124 - J2125	J2126 - J2128 J2136 - J2142								
506107	J2143										
506114	J2128 - J2132 J2134 - J2141	J2142 - J2143 - J2144									
506115	J2133 - J2142 - J2143	J2337									
586116	J2143										
506117	J2142										
506120	J2143										
506121	J2133 - J2140 J2143 - J2144										
506127	J2128										
506130	J2122 - J2124 J2138 - J2139	J2140									
506131	J2121 - J2133 - J2134 - J2143	J2144									
506144	J2121										
506160	J2125										
506162	J1124 - J2117 J2131 - J2132 - J2142 - J2143	J2119 - J2121 - J2133 - J2134 - J2144	J2122 - J2124 J2136 - J2137	J2125 - J2126 - J2138 - J2139	32128 - J2129 - J2140 - J2141						
506163	J2121 - J2125 J2131 - J2134	J2140 - J2142 - J2143									
506167	J1115 - J1231										
586170	J1124 - J1335	J2125 - J2126 J2128 - J2132	J2133 - J2134 - J2136 - J2139	J2136 - J2139 - J2140 - J2141							

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
	- J2140	- 211	- J2142	- J2143	- J2144						
586171	J2143										
586176	J2121 - J2143	- J2122 - J2144	J2124	- J2125	- J2126	J2128	J2133	- J2134	J2141	- J2142	
586200	J2121										
506214	J1188 J1426 J2126 J2413	J1115 J1429 J2129 J2423	- J1116 J1434 J2131 J2441	- J1117 J1435 J2136 J2514	- J1118 J1527 J2137 J2515	J1123 J2117 J2138 J2518	J1288 - J2118 - J2139 J2524	J1231 - J2119 - J2140 - J2525	J1329 - J2120 J2403	- J1330 - J2121 J2407	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2330											
506215	J1110 J1331 J1516 - J2122 J2136 - J2202 - J2218 - J2231 - J2247 J2339 - J2428 J2509 J2531	- J1111 J1335 J2101 J2124 - J2137 - J2203 - J2219 - J2232 J2302 - J2340 - J2421 J2513 - J2532	J1113 J1339 - J2102 - J2125 - J2138 J2285 - J2220 - J2233 - J2303 - J2341 - J2422 - J2514 - J2533	- J1114 - J1340 - J2103 - J2126 - J2139 - J2140 - J2209 - J2221 - J2236 - J2304 - J2402 - J2423 - J2515 - J2534	- J1115 J1427 - J2104 - J2128 - J2129 - J2141 - J2209 - J2222 - J2237 - J2308 - J2403 - J2441 - J2517 - J2535	J1121 J1434 J2117 - J2129 - J2141 - J2212 - J2224 - J2238 - J2309 - J2407 - J2442 - J2518 - J2536	J1124 J1447 - J2118 - J2131 - J2142 - J2213 - J2225 - J2239 - J2323 - J2411 - J2443 - J2523 - J2541	J1226 J1509 - J2119 - J2132 - J2143 - J2215 - J2226 - J2240 - J2324 - J2413 - J2444 - J2524 - J2542	J1231 J1512 - J2120 - J2133 - J2144 - J2216 - J2227 - J2241 - J2325 - J2417 - J2583 - J2525 - J2543	J1329 J1514 - J2121 - J2134 J2201 - J2217 - J2228 J2246 - J2326 J2419 - J2584 J2527 - J2544	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J2130 J2330											
586216	J1116 J1329 - J1341 - J1434 J1539	J1121 - J1330 - J1342 - J1435 - J1540	J1226 - J1331 J1426 J1440 J1546	J1319 - J1332 - J1427 - J1441 J2229	- J1320 - J1333 - J1428 - J1444 - J1445	- J1321 - J1334 - J1429 - J1445 - J1445	- J1322 - J1335 - J1430 J1513	- J1323 - J1336 - J1431 J1527	J1325 - J1339 - J1432 - J1529	- J1326 - J1340 - J1433 - J1534	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230											
586217	J1109 J1335 J2227 J2441	- J1180 J1418 J2308 J2533	- J1111 - J1419 J2318 J2543	J11 4 J1422 J2320 - J2544	- J1115 - J1426 - J2321 - J2322	- J1116 - J1427 - J2322 - J2322	J1118 - J1428 - J2323 - J2324	J1121 J1432 - J2324 - J2325	31123 J1513 - J2325	J1330 J1516 - J2326	
586228	J1114 J1516 - J2129 J2216	J1335 J2101 - J2132 J2218	J1339 - J2117 - J2133 - J2219	- J1340 - J2118 - J2136 - J2220	J1420 - J2119 - J2137 - J2221	J1426 - J2120 - J2138 J2226	- J1427 - J2121 - J2139 - J2227	- J1423 J2125 - J2140 J2233	J1434 - J2126 12208 J2237	J1509 J2120 J2212 - J2238	

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
	- J2239 - J2240	J2244	J2303	J2314	- J2315	- 32316 - J2317	J2320	- J2321			
	- J2322 - J2332	J2337	J2401	- J2482	J2488	J2419 - J2432	32514	J2522			
	J2531 - J2532	- J2533	- J2534	- J2535	- 32536	J2541 - J2542					
506221	J1113 - J1114	J1329	J1335	J1420	J1426	- J1427 - J1428	- J1429	J1434			
	- J1435 - J1509	J1511	J1516	J2104	J2118	- J2119 - J2126	J2129	J2131			
	- J2132 - J2133	- J2134	J2136	- J2137	- J2138	- J2139 - J2140	J2212	J2216			
	J2218 - J2219	- J2220	- J2221	J2224	J2227	J2233 - J2237	- J2238	J2240			
	J2303 - J2304	J2314	- J2315	- J2316	- J2317	J2320 - J2321	- 32322	- J2323			
	J2332 - J2401	- J2482	J2408	J2419	J2432	J2513 - J2514	J2532	- J2533			
	- J2534 - J2535	J2541									
506300	J110B - 31109	J1113	- J1114	J1116	- J1117	J1120 - J1121	J1123	- J1124			
	J1128 - J1129	J1132	J1213	J1235							
506301	J1168 - J1109	J1114	J1116	J1124	J1329	J1426	J1439	J1514	J1530		
	- J1531 - J1532										
506302	J1107 - J1188	- J1109	- J1118	J1116	- J1117	J1122 - J1123	- J1124	- J1125			
	J2338 - J2528										
506304	J1187 - J1188	- J1109	- J1118	- J1111	J1113	- J1114 - J1115	- J1116	- J1117			
	- J1118 - J1121	J1123	J1132	- J1133	- J1134	J1209 - J1211	- J1212	J1231			
	J2233 - J2502	J2505	- J2586								
586307	J1114	J1117	J1124	J1439	J2338						
506311	J1107 - J1108	- J1189	- J1118	- J1111	J1113	- J1114 - J1115	- J1116	- J1117			
	- J1118 - J1120	- J1121	- J1122	- J1123	- J1124	- J1125 - J1126	- J1127	- J1128			
	- J1129 - J1132	J1209	- J1210	J1213	J1231						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1230											
506313	J1120	J1129									
566315	J1124	J2528									
506316	J1111	J1113	J1124	- J1125	- J1126	- J1127					
506317	J1118	J1120									
506322	J1107 - J1108	- J1109	- J1110	- J1111	J1113	- J1114 - J1115	- J1116	- J1117			
	- J1118 - J1120	- J1121	- J1122	- J1123	- J1124	- J1125 - J1126	- J1127	- J1128			
	- J1129 - J1132	- J1133	- J1134	J1235	J1329	J1439	J1549				
506332	J1344										
506336	J2236										
506337	J1124	J1350	- J1351	J1439							

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
506340	J1329 J1441	J1348 J1443	- J1349 - J1445	- J1350 - J1446	- J1351 - J1549	J1419	- J1420	J1426	J1432	J1439	
506341	J1351	J1439	J1443								
506342	J1351										
506343	J1350	- J1351	J1431	J1433	J1441						
586344	J1114 J2522	- J1115	J1117	J1123	J1129	J1133	J1213	J1329	J2514	J2520	
586350	J1115 J1446	- J1116 J1535	J1120	- J1121	J1228	J1330	J1350	- J1351	J1439	- J1440	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1238											
586351	J1118	J2126	J2520								
506353	J1329 - J1447	J1418 J1527	J1422 J1530	J1435 - J1531	- J1436 - J1532	J1439 J1536	J1441 - J1537	- J1442 - J1538	- J1443 J1548	J1446	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1438											
506354	J1120 J1343 J1410	J1124 - J1344 J1413	J1324 - J1345 J1416	- J1325 - J1346 - J1417	- J1326 - J1347 J1419	J1329 - J1348 J1423	- J1330 - J1349 J1425	J1334 - J1350 J1427	J1339 - J1351 J1439	- J1340 J1407 J1516	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1230 J1438											
506400	J1110	- J1111	J1117	J1120	J1122	J1125	J1225	J1227	J1232	J1330	
506410	J1114 - J1518 - J1530	J1117 - J1519 - J1531	J1124 - J1520 - J1532	J1329 - J1521 - J1533	J1426 - J1522 - J1534	J1439 - J1523 J1537	J1514 - J1524 - J1538	- J1515 - J1525 J1540	- J1516 J1527 J1548	- J1517 J1529	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1438											
506461	J1107 - J1118	- J111088 J1121	- J1109 J1123	- J1110 - J1124	- J1111 - J1125	J1113 J1128	- J1114 - J1129	- J1115 J1132	- J1116 - J1133	- J1117 - J1134	
31209	- J1210 - J1236 J2481	- J1211 - J1237 J2514	- J1212 J1305	- J1213 - J1306	J1218 J1312	- J1219 - J1313	J1231 - J1314	- J1232 - J1315	J1235 J1317	J1329	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1238											
586476	J1116	J1118									

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
506533	J2331										
506535	J2242 - J2243	J2311	J2327	J2429	J2524	J2526					
507031	J1113	J1116	J1134	J1446	J1448	J1517	J1546	- J1547	- J1548		
507033	J1336	J2117	J2129								
507034	J1108	1118	- J1111	J1113	- J1114	- J1115	- J1116	- J1117	- J1118	J1120	
	- J1121	- J1122	- J1123	- J1124	- J1125	- J1126	- J1127	- J1128	- J1129	J1318	
	J1331	J1340	J1430	- J1431	J1445	J1517	J1523	J1533	J1539	J1546	
	- J1547	J2126	J2140								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1230											
507035	J1115	- J1116									
507837	J2524	- J2525	- J2526	J2531	J2535	- J2536					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J2330											
507040	J1087	- J1108	- J1109	- J1110	- J1111	J1113	- J1114	- J1115	- J1116	- J1117	
-	J1118	J1120	- J1121	- J1122	- J1123	- J1124	- J1125	- J1126	- J1127	- J1128	
	- J1129	J1132	J1209	- J1210	- J1211	J1219	J1231	- J1232	J1235	- J1236	
	- J1237	J1305	- J1386	J1310	- J1311	- J1312	- J1313	- J1314	- J1315	J1430	
	J1440	J2325									
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1230											
507847	J1107	- J1188	- J1109	J1111	J1113	J1115					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1230											
507051	J1331	- J1332	- J1333	- J1334	J1336	J1341	J1433	J1440	- J1441	J1446	
	- J1447	- J1448	J1507	- J1508	J1513	- J1514	J1521	J1526	J1534		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1438											
587852	J1110	- J1111	J1113	- J1114	- J1115	- J1116	- J1117	- J1118	1121	- J1122	
	J1125	J1134	J1235								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1230											
507054	J1341	- J1342	J1345	J1427	- J1428	- J1429	J1431	- J1432	- J1433	- J1434	
	- J1435	J1445	J1515	J1517							

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1438										
507055	J2533									
507056	J2533	J2536								
507063	J2137	- J2138	J2240	J2514						
507865	J1325 J1540	- J1326	J1329	- J1330	J1347	J1435	J1443	J1516	J1526	J1529
507066	J1111	J1114	- J1115	J1117	- J3118	J1120	J1128	- J1129	J1235	
587070	J1426 J1515	J1428 J1549	J1430	- J1431	- J1432	J1434	- J1435	J1445	J1447	- J1448
507074	J1447	- J1448	J1546	J1549						
507105	J1109	J1531								
507106	J1109	J1531								
507107	J1109	J1531								
507160	J1107	- J1108	- J1109	- J1110	J1114	J1117				
507170	J1107	- J1108	- J1109	J1111	J1113	J1115	J1532			
507171	J1107	- J1108	- J1109	J1111	J1113	J1532				
507172	J1107	- J1188	- J1109	J1532						
507173	J1187	- J1108	- J1109	J1532						
507174	J1107	- J1188	- J1109	J1531						
587175	J1107	- J1188	- J1109	J1117	- J1118					
507176	J1107	- J1108	- J1109							
507177	J1107	- J1108	- J1109							
507221	J1113	J1116	31121	J1226	J1319	- J1320	- J1321	- J1322	- J1323	J1325
	- J1326	J1329	- J1330	- J1331	- J1332	- J1333	- J1334	- J1335	- J1336	J1339
	- J1340	- J1341	- J1342	J1426	- J1427	- J1428	- J1429	- J1430	- J1431	- J1432
	- J1433	- J1434	- J1435	J1440	J1444	J1527	J1529	J1534	J1539	- J1548
	J2229									

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1238

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	CONNECTORS					
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF						
STOP										
507301	J1333	J1349	J1428							
507455	J1226	J1329	- J1330	J1333	- J1334	- J1335	- J1336	- J1337	- J1338	- J1339
	- J1340	- J1341	- J1342	- J1343	- J1344	J1349	J1418	J1422	J1426	- 31427
	J1429	- J1430	- J1431	- J1432	- J1433	- J1434	- J1435	- J1436	J1440	J1446
	- J1447	- J1448	J1512	J1514	- J1515	- J1516	J1527	J1529	J1534	J1539
	J1548	- J1549	J2137	J2140						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1230	J1438								
507464	J11128	J1133	J1527							
5075800	J118	- J1111	J1113	J1115	- J1116	J1123	- J11124	J1126	- J1127	J1133
507501	J11087	- J1108	- J3189	- J1118	- J1111	J1113	- J1114	- J1115	- J1116	- J1117
	- J1118	J1121	- J1122	- J1123	- J1124	- J1125	- J1126	- J1127	J1132	- J1133
	J1229	J1335	J2240	J2408	J2441	- J2442	- J2443	- J2444	- J2445	- J2446
	J2533	- J2534	J2536	J2541	- J2542	- J2543	J2545	- J2546		
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J2330									
507503	J1111									
507504	J1B08	J1110	- J111	J1113	J1115	- J1116	J1122	- J1123	- J1124	- J1125
	- J1126	- J1127	J11133	- J11134	J1229	J1320	J1331	J1335	J1340	- J1341
	J1345	J1423	J1426	- J1427	- J1428	- J1429	J1431	- J1432	- J1433	- J1434
	- J1435	- J1436	J1439	J1447	- J1448	- J1449	- J1514	- J1515	- J1519	- J1520
	- J1522	- J1523	J1525	J1529	J1534	- J1535	J1538	J1540	J1545	- J1546
	- J1547	- J1548	- J1549	J2139	- J2140	J2216	J2302	J2304	J2309	- J2310
	J2319	J2323	J2401	J2424	J2439	J2442	J2445	- J2446	J2509	J2531
	- J2532	- J2533	- J2534	- J2535	- J2536	J2541	J2543	J2545	- J2546	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1438									
507511	J2408									
507543	J1110	- J1111	J1113	J1115	J1121	J1126	J1128	- J1129	J1133	J1229
	J1335	J1423	J1439	J1527	J2247					
507577	J1426	J1432	J1435	J1442	J1445	J1447	- J1448	J2104	J2131	J2208
	J2212	- J2213	J2215	- J2216	- J2217	- J2218	- J2219	- J2220	- J2221	J2224
	- J2225	- J2226	- J2227	J2232	- J2233	J2240	J2246	J2304	J2309	J2322
	J2408	J2441	- J2442	- J2443	- J2444	- J2445	- J2446	J2524	- J2525	J2527
	J2531	- J2532	- J2533	- J2534	- J2535	- J2536	J2541	- J2542	- J2543	- J2544
	- J2545	- J2546								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1438	J2130	J2230	J2330						

TABLE 2-27. VPU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF															
DIAGNOSE STATUS		IOU OFF		CPU OFF															
STOP												CONNECTORS							
50770880	J1108	J1178	-	J1188	-	J1109	-	J1110	-	J1111	J1113	-	J1114	-	J1115	-	J1116		
	-	J1118	J1120	-	J1121	-	J1122	-	J1123	-	J1124	-	J1125	-	J1126	-	J1127	-	J1128
	-	J1129	J1132	-	J1133	J1329	J1333	J1417	-	J1418	J1429	-	J1430	-	J1431	-	J1432	-	J1433
	-	J1432	J1434	J1443	J1445	J1447	-	J1448	J1512	J1526	-	J1527	J1539						
	J1546	J1548	-	J1549															
507705	J1187	-	31108	-	J1109	-	J1110	-	J1111	J1113	-	J1114	-	J1115	-	J1116	-	J1117	
	-	J1118	J1120	J1123	-	J1124	-	J1125	J1128	-	J1129	J1132	-	J1133	J1227				
	J1329	J2514																	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
J1230																			
507742	J1107	-	J1108	-	J1109	-	J1110	-	J1111	J1113	-	J1114	-	J1115	-	J1116	-	J1117	
	-	J1118	J1120	-	J1121	-	J1122	-	J1123	-	J1124	-	J1125	-	J1126	-	J1127	-	J1128
	-	J1129	J1132	-	J1133	J1209	-	J1210	-	J1211	J1213	J1225	-	J1226	-	J1227	-	J1228	
	-	J1228	-	J1229	J1232	J1332	-	J1333	J1341	-	J1342	J1417	-	J1418	J1429				
	-	J1430	-	J1431	-	J1432	J1434	J1439	J1443	J1447	-	J1448	J1507	-	J1508				
	J1511	-	J1512	-	J1513	-	J1514	J1521	J1526	J1533	-	J1534	J1546	-	J1547				
	-	J1548	-	J1549	J2233	J2338													
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																			
J1230																			
572610	J2236																		
774508	J1518																		

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP

CONNECTORS

NOTES:

ALL CIRCUIT CARD ASSEMBLIES ARE LOCATED IN RACK 1 DOOR B RADAR/SIMULATOR UNIT A6 UNLESS OTHERWISE NOTED.

IF A LINE RECEIVER CARD (10281656) OR A CFAR QUANTIZER CARD (10281657) IS SUBSTITUTED REFER TO TM9-1430-651-14 FOR ALIGNMENT INSTRUCTIONS.

ALL DIGITAL CARDS ARE LOCATED IN THE RIU UNLESS OTHERWISE NOTED

000000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1115	J1208	J1215	-	J1216	J1220	J1322	J1408	J1418	-	J1411	J1414		
	J1416	-	J1417	J1506	-	J1507	J1514	-	J1515	J1517	J1520	-	J1521	
500706	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420													
501506	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1506													
501510	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420 J1506 J1520													
501513	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1109	J1111	J1210	J1219	J1320	J1407	J1413	-	J1414	-	J1415	-	J1416	
	-	J1417	J1420	J1506	-	J1507	J1510	-	J1511	J1513	-	J1514	-	J1515
	J1521													
501515	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1506													
581532	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1513													
501550	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1519													
501623	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1514													
501632	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1507													
501633	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1513 - J1514 - J1515													
501700	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1507 J1513 - J1514 - J1515													
501703	SUBSTITUTE THE FOLLOWIING CARD ASSEMBLIES:													

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS					
STOP	J1507	J1515						
501705	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1506							
501706	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1506							
501710	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1586							
581711	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1506 - J1507							
501712	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108 - J1109 J1219 J1506 - J1587 J1510 - J1511 J1513 - J1514							
501713	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1586							
501735	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1506 - J1587							
501741	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1587							
501765	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1586 - J1507							
502177	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1519							
503561	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1428							
583562	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1520							
503631	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1124 J1219 J1317 J1320 J1420 J1510 J1513 J1517 J1521							
503633	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420							
503655	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420							
503671	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1220 - J1221 - J1222 J1313 J1420 J1517 J1521							
503677	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420 J1521							

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
503711	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1124 J1521									
503712	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220 - J1221 J1517 J1521									
504000	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 - J110B - J1109 - J1118 J1420 J1506		J1112	J1114	-	J1115	-	J1116	-	J1117
504077	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1124 J1420									
504112	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108 J1115 J1117									
504200	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1112									
504235	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110 - J1111 - J1112 - J1113 - J1114									
504236	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110 - J1111 - J1112 - J1113 - J1114									
504237	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107 - J118 J1110 - 1111 - 111 - J112 - J1113 - J1114									
504254	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
504262	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
504273	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110 - J1111 J1113 - J1114									
504314	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1118 - J1111 - J1112 - J1113 - J1114									
504320	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107									
504341	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1107									
504342	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 - J1108 - J1109		J1112	J1115	-	J1116				
504350	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1188									

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
504352	SUBSTITUTE-THE FOLLOWING CARD ASSEMBLIES: J1106 J1124					
504377	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 - J1108 - J1109 - J1124		J1110	J1113	J1114	J1115 - J1116 - J1117
504401	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1187 - J1188					
504402	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1188					
504404	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1187 - J1108					
504410	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1116					
504411	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J11087 - J1108 - J1189		J1116	J1117		
504412	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1116 - J1117					
504413	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1116 - J1117					
504420	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 - J1108 - J1109		J1115	J1116	J1117	
504421	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1118 J1114					
504422	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110 - J1111 J1413					
504424	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1187 J1114					
584461	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110 J1112					
504463	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1113					
584464	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1188					
504467	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1113 - J1114					

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS						
STOP									
504502	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110								
504504	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 J1118 - J1111								
504510	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1111 - J1112 J1114								
504521	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108								
504522	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1112								
504526	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1106 - J1107 - J1108 J1111 - J1112 J1115 - J1116 - J1117 J1312 J1507								
504537	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1112 J1114 - J1115								
504542	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1188 J1115								
504600	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J110 J1114								
504601	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110								
504602	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110								
504604	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1110 - J1111								
504610	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1111								
504614	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:								
504616	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114								
504620	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1118 - J1111 - J1112								
504661	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1112								

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
564662	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1113									
504664	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1113									
504701	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
584702	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
504704	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
504710	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
504721	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
504722	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114									
504771	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1114 J1222									
505400	J1119	J1131	J1144	J1146	-	J1147	-	J1148		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1123 - J1124 J1208 J1210 J1215 - J1216 J1220 - J1221 - J1222 J1323 J1327 J1519 - J1520 - J1521									
505401	J1119	J1131	J1144	J1146	-	J1147	-	J1148		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1220									
505402	J1119	J1131	J1144	J1146	-	J1147	-	J1148		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1220 - J1221 - J1222									
505403	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215									
505405	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
	J1212	J1220 - J1221 - J1222	
505406	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212 J1220 - J1221 - J1222		
505407	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220 - J1221 - J1222 J1322		
505410	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220 - J1221 - J1222 J1322		
505411	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220		
505412	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220		
505413	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220		
505414	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220		
505415	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220		
505416	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1228		
505417	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220		
505420	J1131	J1147	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220		
505421	J1131	J1147	

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS	
STOP				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220			
505422	31131	J1147		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220			
505423	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
585424	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505425	J1319	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
565426	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505427	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505430	J1131	J1134 - J1135	31144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
585431	J1131	J1134 - J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
565432	J1131	J1134 - J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
585433	J1131	J1134 - J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
	J1221		
505434	J1131	J1134 - J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221		
505435	J1134	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		
505436	J1134	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		
505437	J1134	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222 J1322		
505440	J1134	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		
505441	J1134	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		
505442	J1131	J1134 - J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		
505443	J1131	J1134 - J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		
505444	J1131	J1134 - J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		
505445	J1131	J1134 - J1135	31144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222		

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF												
DIAGNOSE STATUS	IOU OFF	CPU OFF												
STOP								CONNECTORS						
505447	J1131	J1147	-	J1148										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1220	J1327												
505450	REFER TO TM9-1430-655-20-3 FIGURE 3-17. STEP 15A													
505451	REFER TO TM9-1403-655-20-3 FIGURE 3-17. STEP 15A													
505460	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1123	-	J1124	J1221										
505461	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1123	-	J1124	J1221										
505500	J1119	J1131	J1134	-	J1135	J1144	J1146	-	J1147	-	J1148	J1240		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1123	-	J1124	J1208	J1210	J1215	-	J1216	J1220	-	J1221	-	J1222	J1323
	J1327	J1519	-	J1520	-	J1521								
585501	J1119	J1131	J1144	J1146	-	J1147	-	J1148						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1208	J1220												
505502	J1119	J1131	J1144	J1146	-	J1147	-	J1148						
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1208	J1210	J1220	-	J1221	-	J1222							
505503	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1215													
505504	J1111	1130	J1135	J1147										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1123	-	J1124	J1220	-	J1221	-	J1222						
505505	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1212	J1220	-	J1221	-	J1222								
505506	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1212	J1220	-	J1221	-	J1222								
585507	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1228	-	J1221	-	J1222	J1322								
505510	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:													
	J1220	-	J1221	-	J1222	J1322								
505511	J1131	J1147												

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
585512	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505513	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505514	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505515	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505516	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505517	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505520	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505521	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505522	J1131	J1147	
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220
505523	J1119	J1135	J1144
			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS	
STOP				
	J1221			
505524	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
585525	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505526	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505527	J1119	J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505530	J1131	J1134 -	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505531	J1131	J1134 -	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
585532	J1131	J1134 -	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
585533	J1131	J1134 -	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505534	J1131	J1'34 -	J1135	J1144
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1221			
505535	J1134	- J1135	J1144	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222			

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS			
STOP						
505536	J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505537	J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505540	J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505541	J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
585542	J1131 J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505544	J1131 J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505545	J1131 J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505546	J1131 J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505547	J1131 J1134 - J1135	J1144				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1222					
505550	TEST DIGITAL CARDS IN VPU J2509J2513 J2514		J2516	J2519	J2522	
	REFER TO TM9-1430-655-20-3 FIGURE 3-17. STEP 1SA					
505550	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1323					
505551	TEST DIGITAL CARDS IN VPU J2509	J2513	J2514	J2516	J2519	J2522

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF			
STOP			CONNECTORS		
	REFER TO TM9-1430-655-28-3 FIGURE 3-17. STEP 15A				
585551	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1323				
505560	J2113	- J2114	J2132	J2134	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1123 - J1124 J1216 J1221 - J1222				
505561	J2113	- J2114	J2132	J2134	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1123 - J11124 J1216 J1221 - J1222				
506800	J1208	J1218 - J1219	J1322	J1506	
506001	J1208	J1218 - J1219	J1322	J1506	
506002	J1208	J1218 - J1219	J1322	J1587	
506003	J1288	J1218 - J1219	J1322	J1507	
566004	J1268	J1218 - J1219	J1322	J1586	
506005	J1208	J1218 - J1219	J1322		
506006	J1208	J1218 - J1219	J1322		
5860807	J1208	J1218 - J1219	J1322		
506010	J1288	31210 - J1219	J1322		
506811	J1208	J1218 - J1219	J1322		
506012	J1208	J1218 - J1219	J1322		
506013	J1208	J1218 - J1219	J1322		
506014	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP	J1208	J1218 - J1219	J1322 J1506
506015	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322 J1506
506016	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322 J1507
506017	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506020	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506021	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506022	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506023	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506024	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506025	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506026	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506027	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506030	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506031	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322 J1506
506032	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322 J1587
506033	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322 J1507
506034	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322
506035	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219		J1322

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF		
DIAGNOSE STATUS	IOU OFF	CPU OFF		
STOP				CONNECTORS
506036	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
508683	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506040	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506041	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506042	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1216	- J1219	J1322
506043	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506044	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506045	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
				J1506
506046	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506047	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218-	J1219 J1322	
506050	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506051	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1288	J1218	- J1219	J1322
586052	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506053	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506054	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506055	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322
506056	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:			
	J1208	J1218	- J1219	J1322

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF				
DIAGNOSE STATUS	IOU OFF	CPU OFF				
STOP						CONNECTORS
506057	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1218 - J1219 J1322					
506060	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					J1506 - J1587
506061	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506062	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506063	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506064	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1218 - J1219 J1322					
506065	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506066	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					J1506 - J1507
506067	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1218 - J1219 J1322					
506070	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506071	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506072	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1218 - J1219 J1322					
506073	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506074	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					J1586 - J1587
506075	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1218 - J1219 J1322					
506076	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
506077	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 - J1219 J1322					
5061008	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:					

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS		
STOP	J1208	J1218 - J1219	J1322		
506101	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1288	J1218 - J1219	J1322		
506102	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1218 - J1219	J1322	J1506	
506103	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1288	J1216 J1218 - J1219	J1322	J1506	
506104	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1218 - J1219	J1322	J1507	
506105	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1288	J1218 - J1219	J1322	J1507	
506106	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1218 - J1219	J1322		
506107	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1288	J1218 - J1219	J1322		
506110	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1218 - J1219	J1322		
506111	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1288	J1218 - J1219	J1322	J1507	
506112	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1210 J1212			
506113	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1210 J1212	J1322	J1507	
506114	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1210 J1212			
506115	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1210 J1212	J1322	J1506	
506116	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1210 J1212			
506117	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1200	J1210 J1212			
506120	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1210 J1212			
506121	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:				
	J1208	J1210 J1212	J157		

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
506122	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506123	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506124	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506125	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1210 J1212		
506126	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506127	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506130	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 J1212		
506131	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212 J1507		
506132	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506133	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1210 J1212		
506134	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506135	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 J1212		
506136	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1210 J1212		
506137	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506140	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506141	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506142	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS
STOP			
506143	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1210 J1212		
506144	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506145	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506146	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1288 J1210 J1212		
506147	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212 J1506		
506150	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506151	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506152	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506153	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506154	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506155	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506156	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506157	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506160	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212		
506161	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 J3112		
506162	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212 J1586 - J1587		
506163	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212 J15087		
506164	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
	J1208	J1210	J1212
506165	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506 166	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506167	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506170	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212 J1506 - J1507
506171	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212 J1506 - J1507
506172	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506173	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506174	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506175	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506176	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212 J1506 - J1507
506177	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212 J1507
506200	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506201	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506202	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1288	J1210	J1212
506203	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506204	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1212
506205	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:		
	J1208	J1210	J1217

Change 2 2-441

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
STOP		CONNECTORS
506206	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212	
506207	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:. J1208 J1210 J1212	
506210	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212	
506211	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1218 J1212	
506212	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 J1210 J1212	
506213	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:. J1208 J1210 J1212	
506214	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1108	
506215	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:. J1420 J1506 - J1507 J1519 - J1520	
506216	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:. J1420	
506217	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420	
506220	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1520 - J1521	
506221	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:. J1521	
506304	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:. J1407 J1413	
506332	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1519 - J1520 - J1521	
505335	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1220	
506477	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:. J1106	
507007	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:; J1206	

Change 2 2-442

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
507010			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420
507033			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420
507034			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1208 J1420 J1519 -J1520 - J1521
507035			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1420
507037			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420
507040			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1420
507051			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420
507053			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1420
507057			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1420
507221			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1112 J1408 J1506
507450			TEST ALL DIGITAL CARDS IN (RIU) BAY 2 SHELF 3
507450			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1219 J1317 - J1718 J1320
507451			TEST ALL DIGITAL CARDS IN (RIU3 BAY 2 SHELF 3
507451			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1219 J1317 - J1318 J1320
507452			TEST ALL DIGITAL CARDS IN (RIU3 BAY 2 SHELF 3
507452			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1219 J1317 - J1318 J1320
507453			TEST ALL DIGITAL CARDS IN (RIU3 BAY 2 SHELF 3
507453			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1219 J1317 - J1315 J1320

Change 2 2-443

TABLE 2-28. RIE ANALOG TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	
DIAGNOSE STATUS	IOU OFF	CPU OFF	
STOP			CONNECTORS
507464			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1316
507500			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1216 J1316 J1326
507501			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1216 J1326 J1420 J1506
507503			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1316 J1506
507504			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1316 J1322 J1327 J1411 J1506
507505			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1316
507511			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1521
507577			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1214 J1313 J1420 J1520
507705			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1123
507706			SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1210
507707			J1140 J1147 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208
507730			J1140 J1147 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1212

Change 2 2-444

TABLE 2-29. RIE MEMORY (SINGLE PORT) FAULT LOCATION

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF

CAUTION

CMOS MEMORIES CONTAIN ELECTROSTATIC SENSITIVE DEVICES REQUIRING SPECIAL HANDLING TO AVOID ELECTROSTATIC DISCHARGE DAMAGE. WHEN REMOVING AND REPLACING MEMORY CARDS J1206 THRU J1216 OBSERVE THE FOLLOWING PRECAUTIONS :

- A. IMMEDIATELY PRIOR TO HANDLING WITHIN THE SHELTER, MAKE PHYSICAL CONTACT WITH A GROUNDED SURFACE TO DISCHARGE ANY POSSIBLE BUILDUP OF STATIC ELECTRICITY.
- B. PACKAGE THE MEMORY STORAGE CARDS IN ELECTROSTATIC BAGS PRIOR TO REMOVING FROM THE SHELTER.

NOTE

A LIST OF NON TESTABLE CARDS WITH CONNECTOR NUMBER, CARD TYPE, AND ASSOCIATED PART NUMBER IS PROVIDED BELOW. THIS LIST IS TO AID THE OPERATOR IN THE IDENTIFICATION OF THESE CARDS WHEN THEY ARE LISTED UNDER THE HEADER SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES.

CONNECTOR	TYPE	PART NUMBER
J1205	TIMING AND CONTROL	13143778
J1206	CMOS STORAGE	13143777
J1207	CMOS STORAGE	13143777
J1208	CMOS STORAGE	13143777
J1209	CMOS STORAGE	13143777
J1210	CMOS STORAGE	13143777
J1211	CMOS STORAGE	13143777
J1212	CMOS STORAGE	13143777
J1213	CMOS STORAGE	13143777
J1214	CMOS STORAGE	13143777
J1215	CMOS STORAGE-	13143777
J1216	CMOS STORAGE	13143777
J1217	QUAD TWO INPUT GATE	10283626

TABLE 2-29. RIE MEMORY (SINGLE PORT) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
501513	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216	
501525	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: - J1211 - J1212	
501700	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216	
501706	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1213	
501712	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206	
502300	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1215	
502301	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1214	
502302	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1213 - J1214	
502303	A. SUBSTITUTE J1211 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 J1212 - J1213 - J1214 - J1215 - J1216	
502304	A. SUBSTITUTE J1210 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 J1211 - J1212 - J1213 - J1214 - J1215 - J1216	
502305	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209	
502306	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207	
502307	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 J1217	
502310	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215	
502311	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1214	
502312	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212	
502313	A. SUBSTITUTE J1211 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 J1212 - J1213 - J1214 - J1215 - J1216	
502314	A. SUBSTITUTE J1210 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 J1211 - J1212 - J1213 - J1214 - J1215 - J1216	
502315	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 - J1209	
502316	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207	

TABLE 2-29. RIE MEMORY (SINGLE PORT) FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
502317	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206	
502320	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1215	
502321	SUBSTITUTE The FOLLOWING CARD ASSEMBLIES: J1214	
502322	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212	
502323	A. SUBSTITUTE J1211 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 J1212 - J1213 - J1214 - J1215 - J1216	
502324	A. SUBSTITUTE J1210 J1206 - J1207 - J1208 - J1209 J1211 - J1212 - J1213 - J1214 - J1215 - J1216	
502325	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208	
502326	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207	
502327	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206	
502330	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215	
502331	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1214	
502332	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1213	
502333	A. SUBSTITUTE J1212 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 - J1211 J1213 - J1214 - J1215 - J1216	
502334	A. SUBSTITUTE J1210 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 J1211 - J1212 - J1213 - J1214 - J1215 - J1216	
502335	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209	
502336	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207	
502337	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206	
502377	A. SUBSTITUTE J1205 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217	
502500	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1217	
502700	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1216	
502701	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215	

TABLE 2-29. RIE MEMORY (SINGLE PORT)) FAULT LOCATION - CONTINUED

502702	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1213
502703	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212
502704	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES : J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216
502705	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209 J1211
502706	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208
502707	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207 J1212
502710	SUBSTITUTE SHE FOLLOWING CARD ASSEMBLIES: J1216
502711	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1214
502712	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1213
502713	A. SUBSTITUTE J1217 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 J1214 - J1215 - J1216
502714	A. SUBSTITUTE J1210 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216
502715	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209
502716	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208
502717	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206
502720	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1216
502721	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1214 - J1215
502722	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1213
502723	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212
502724	A. SUBSTITUTE J1210 B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 J1211 - J1212 - J1213 - J1214 - J1215 - J1216
50272S	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209
502726	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208
502727	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206

TABLE 2-29. RIE MEMORY (SINGLE PORT) FAULT LOCATION - CONTINUED

502730	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1216									
502731	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1215									
502732	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1213									
502733	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1212									
502734	A. SUBSTITUTE J1211									
	B. SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 J1212 - J1213 - J1214 - J1215 - J1216									
502735	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1209									
502736	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208									
502737	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1207									
502777	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1208 - J1209 J1212 J1216									
503671	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205									
503677	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216									
507034	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES : J1205									
507501	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205 - J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217									
507503	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES J1205 - J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217									
507504	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:: J1205 - J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217									
507510	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES' J1205 - J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217									
507577	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1205 - J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213 - J1214 - J1215 - J1216 - J1217									

All data on pages 2-451 thru 2-456, including table 2-30, deleted

Change 3 2-449/(2-450 blank)

TABLE 2-31. VSU TEST FAULT

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF								
DIAGNOSE STATUS	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF	IOU OFF	CPU OFF								
STOP	CONNECTORS																			
000000	J1105	-	J1106	-	J1107	-	J1108	-	J1109	-	J1110	-	J1111	J1113	-	J1114	-	J1115		
	-	J1116	-	J1117	-	J1118	-	J1119	-	J1120	-	J1125	-	J1128	-	J1129	-	J1131	J1133	
		J1136		J1141		J1143		J1203	-	J1204	-	J1205		J1209	-	J1209		J1211	J1214	
	-	J1215		J1217		J1221	-	J1222	-	J1223	-	J1224	-	J1225	-	J1226	-	J1227	-	J1228
	-	J1229	-	J1230	-	J1231	-	J1232	-	J1233	-	J1234	-	J1235	-	J1236		J1239	-	J1240
	-	J1241	-	J1242		J1244		J1248		J1309		J1320		J1324		J1327	-	J1328		J1331
		J1333	-	J1334	-	J1335		J1337	-	J1338	-	J1339	-	J1340		J1345		1404		J1406
		J1410	-	J1411		J1415		J1418		J1429	-	J1430		J1438		J1441		J1443		

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1130	J1147	J1450																	
000002	J1105	-	J1106	-	J1107		J1109	-	J1110		J1113	-	J1114	-	J1115		J1117		J1121	
	-	J1122		J1124		J1126		J1129		J1131	-	J1132	-	J1133	-	J1134		J1136		J1140
	-	J1141	-	J1142		J1144	-	J1145		J1205	-	J1206	-	J1207	-	J1208		J1210	-	J1211
		J1213	-	J1214	-	J1215		J1217	-	J1218	-	J1219	-	J1220	-	J1221	-	J1222	-	J1223
	-	J1224	-	J1225	-	J1226	-	J1227	-	J1228	-	J1229	-	J1230	-	J1231	-	J1232	-	J1233
	-	J1234	-	J1235	-	J1236		J1239	-	J1240	-	J1241	-	J1242		J1244	-	J1245	-	J1246
	-	J1247	-	J1248		J1304	-	J1305	-	J1306	-	J1307		J1317	-	J1318	-	J1319		J1322
		J1324	-	J1325		J1327	-	J1328	-	J1329	-	J1330	-	J1331		J1333	-	J1334	-	J1335
		J1337	-	J1338		J1348		J1404	-	J1405	-	J1406	-	J1407	-	J1408	-	J1409	-	J1410
	-	J1411	-	J1412		J1414	-	J1415	-	J1416	-	J1417	-	J1418	-	J1419	-	J1420		J1422
	-	J1423	-	J1424	-	J1425	-	J1426		J1428	-	J1429	-	J1430		J1432	-	J1433		J1436
	-	J1437	-	J1438	-	J1439	-	J1440	-	J1441	-	J1442	-	J1443	-	J1444	-	J1445		
510001	J1119	J1135	J1139	-	J1140	-	J1141	-	J1142		J1214		J1222		J1230		J1232			
	J1235	J1239	J1241	-	J1242		J1244	-	J1245	-	J1246	-	J1247	-	J1248					
510002	J1119	J1139	J1214	J1222	J1232	J1235	J1244	-	J1245	J1247	-	J1248								
510003	J1119	J1135	J1139	-	J1140	-	J1141	-	31142	J1214	J1222	J1230	J1232							
	J1235	J1239	J1241	-	J1242	J1244	-	J1245	-	J1246	-	J12A7	-	J1248						
510004	J1119	J1139	J1214	J1222	J1232	J1235	J1244	-	J1245	J1247	-	J1248								
510005	J1119	J1135	J1139	-	J1140	-	J1141	-	J1142	J1209	J1213	-	J1214	-	J1215					
	J1219	-	J1220	J1222	J1226	J1230	-	J1231	-	J1232	J1235	J1239	-	J1240						
	-	J1241	-	J1242	J1244	-	J1245	-	J1246	-	J1247	-	J1248							

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1147																			
510806	J1110	J1119	J1139	J1142	J1204	-	J1205	-	J1214	J1222	J1235	-	J1236							
	J1241	J1244	-	J1245	-	J1246	-	J1247	-	J1248										

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

	J1249																			
510007	J1135	J1140	-	J1141	-	J1142	J1230	J1235	J1239	J1241	-	J1242	J1244							
	-	J1245	-	J1246	-	J1247	J1324	J1328	-	J1329	J1332	-	J1333	-	J1334					

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
510010	J1135 J1233 J1324	J1140 - J1141 J1235 - J1239 J1332 - J1333	- J1142 - J1241 - J1334	- J1142 - J1241 - J1335	J1213 - J1214 J1242 - J1244 J1335	- J1215 - J1245	- J1217 - J1246	J1226 - J1227 J1247	J1230 J1313		
510011	J1135 J1244	J1140 - J1141 J1245 - J1246	- J1141 - J1246	- J1142 - J1247	J1214 J1324	J1230 J1332	J1235 - J1333	J1239 - J1334	J1241	- J1242	
510012	SUBSTITUTE	J1116 (LOCATED IN RSU, A6 BAY)									
510012	J1135	J1214	J1235	J1239	J1241	J1245	J1324	J1332	- J1333	- J1334	
510013	J1106 - J1125 - J1147 J1217 J1230 - J1243 - J1333	J1108 J1131 J1204 - J1218 - J1231 - J1244 - J1334	J1111 - J1112 J1135 - J1137 J1205 - J1206 - J1219 - J1232 - J1245 J1341	- J1112 - J1137 - J1206 - J1220 - J1233 - J1246 - J1342	- J1113 - J1138 - J1207 - J1221 - J1235 - J1247 J1404	- J1114 - J1139 - J1209 - J1222 - J1236 - J1249 J1414	J1118 - J1140 - J1218 - J1223 - J1239 - J1322 J1427	J1121 - J1122 - J1141 - J1212 - J1224 - J1240 - J1323 - J1444	- J1122 - J1142 - J1212 - J1227 - J1241 - J1324 - J1445	J1124 J1146 J1214 J1228 J1242 J1332 11446	
510014	J1135	J1209	J1214	J1235	J1239	J1241	J1245				
510015	J1135	J1204	J1214	J1235	J1239	J1241	J1245				
510016	J1139	- J1140	J1142	J1240	- J1241	- J1242	- J1243				
510017	J1241										
510020	J1227										
510022	J1104 - J1116 - J1126 - J1215 - J1245 J1330 - J1419 - J1431 - J1442	- J1105 - J1117 - J1127 J1217 - J1246 J1406 - J1420 - J1432 - J1443	- J1106 - J1118 - J1128 - J1218 - J1311 - J1407 - J1421 - J1433 - J1445	- 31107 - J1119 - J1129 J1224 - J1312 - J1408 - J1422 - J1434 - J1446	- J1108 - J1120 J1131 J1231 - J1313 - J1409 - J1423 - J1435	J1110 - J1121 J1135 J1235 J1316 J1411 - J1424 - J1436	- J1111 - J1122 J1139 J1239 J1322 J1415 - J1425 - J1437	J1113 - J1123 J1203 - J1240 J1325 - J1416 - J1426 - J1438	- J1114 - J1124 J1206 J1243 - J1326 - J1417 - J1428 J1440	- J1115 - J1125 J1214 - J1244 J1328 J1418 J1430 - J1441	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1130	J1147	J1249	J1450							
510023	J1434	J1441									
510026	J1109 - J1212 J1235	J1203 - J1204 J1213 - J1215 J1243 - J1314	- J1205 - J1217	- J1206 - J1219	- J1207 - J1220	- J1208 - J1221	- J1209 - J1226	- J1210 - J1227	- J1211 - J1231		
510027	J1108 J1235	J1110 J1310	J1205 - J1311	J1208	J1218	J1219	J1221	J1226	- J1227	J1229	

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF																			
DIAGNOSE STATUS	IOU OFF	CPU OFF																			
STOP			CONNECTORS																		
510030	J1104	J1110	-	J1111	J1113	J1115	-	J1116	-	J1117	-	J1118	-	J1119	-	J1120					
	-	J1121	-	J1122	-	J1123	-	J1124	-	J1125	-	J1126	-	J1127	-	J1133	-	J1134	-	J1137	
		J1139		J1141		J1143		J1203		J1206		J1208		J1211		J1213		-	J1214		J1217
	-	J1218		J1224	-	J1225		J1227		J1229		J1232		J1243	-	J1244			J1309		J1334
		J1414		J1424		J1427		J1432		J1434		J1444	-	J1445	-	J1446					

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1147

510031	J1104	-	J1105	-	J1106	-	J1107	-	J1108	-	J1109	-	J1110	-	J1111	-	J1112	-	J1113	
	-	J1114	-	J1115	-	J1116	-	J1117	-	J1118	-	J1119	-	J1120	-	J1123	-	J1124	-	J1125
	-	J1176	-	J1127	-	J1128	-	J1129	-	J1131	-	J1132	-	J1133	-	J1134	-	J1135	-	J1136
	-	J1137	-	J1138	-	J1139	-	J1140	-	J1141	-	J1143	-	J1144	-	J1145	-	J1146	-	J1203
	-	J1204	-	J1205	-	J1206	-	J1207	-	J1208	-	J1209	-	J1210	-	J1211	-	J1212	-	J1214
	-	J1215		J1217	-	J1218		J1220		J1222	-	J1223	-	J1224	-	J1225	-	J1226	-	J1227
		J1229		J1232		J1239		J1244		J1246		J1248		J1302		J1304		J1312	-	J1313
	-	J1314		J1322		J1325		J1328		J1331	-	J1332	-	J1333	-	J1334	-	J1335	-	J1408
	-	J1409		J1412		J1415	-	31416	-	J1417		J1424	-	J1425	-	J1426		J1431	-	J1432
	-	J1433	-	J1434	-	J1435	-	J1436		J1441	-	J1442	-	J1443	-	J1444	-	J1445	-	J1446

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1450

510032	J1107	J1125	J1127	J1137	-	J1138	J1144	-	J1145	-	J1146	J1203	J1205			
	J1207	-	J1208	-	J1209	-	J1210	-	J1211	-	J1212	J1215	J1219	J1223	-	J1224
	J1235	J1330	-	J1331	-	J1332	-	J1333	J1415	-	J1416	J1425	J1434	-	J1435	
	J1444	-	J1445													

510034	J1104	J1116	J1120	J1131	-	J1132	J1214	J1404	J1410	J1418					
--------	-------	-------	-------	-------	---	-------	-------	-------	-------	-------	--	--	--	--	--

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1238

510035	J1108	J1120	J1122	-	J1123	J1203	-	J1204	-	J1205	-	J1206	-	J1207	-	J1208		
	-	J1209	-	J1210	-	J1211		J1219		J1221		J1223	-	J1224		J1226		
510036	J1120	-	J1121	J1203	J1209	J1221												
510837	J1112	-	J1113	J1116	-	J1117	-	J1118	-	J119	-	J1120	-	J1121	J1203	J1205		
	-	J1206	-	J1207	-	J1208	-	J1209	J1217	J1221	J1223	J1227	J1229	J1234				
510041	J1108	-	J1109	J1112	J1117	-	J1118	-	J1119	J1121	-	J1122	-	J1123	-	J1124		
	J1127	-	J1128	-	J1129	J1131	J1136	J1140	J1146	J1208	J1211	-	J1212	-	J1217	J1302		
	-	J1213	-	J1214	-	J1215	J1220	J1222	J1226	J1240	J1242	J1247						
	J1311	J1437																
510042	J1104	J1108	-	J1109	-	J1110	-	J1111	-	J1112	-	J1113	-	J1114	-	J1115	-	J1116
	-	J1117	-	J1118	-	J1119	J1123	-	J1124	J1128	J1131	J1214	J1239	J1302				
	J1309	J1311	J1314	J1326	J1332	J1419	-	J1420	J1422	J1430								
510043	J1112	-	J1113	J1116	-	J1117	-	J1118	-	J1119	J1139	-	J1140	J1143	J1309			
	J1314																	

TABLE 2-31 VSU TEST FAULT LOCATION CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF	CONNECTORS								
DIAGNOSE STATUS	IOU OFF	CPU OFF									
STOP											
510044	J1105 - J1106 - J1107 - J1108 - J1109 - J1110 - J1111 - J1112 - J1113 - J1114										
	- J1115 - J1116 - J1117 - J1118 - J1119 - J1120 - J1124 - J1128 - J1131 - J1134										
	J1136 - J1139 - J1141 - J1203 - J1204 - J1205 - J1206 - J1208 - J1209 - J1211										
	J1213 - J1214 - J1215 - J1222 - J1240 - J1241 - J1242 - J1244 - J1246										
510045	J1112 - J1113 - J1116 - J1117 - J1118										
510046	J1108 - 31111 - J1113 - 31114 - J1115 - J1116 - J1119 - J1119 - J1120 - J1126	J1113 - 31114 - J1115 - J1116 - J1119 - J1119 - J1120 - J1126									
	J1126 - J1129 - J1140										
510047	J1104 - J1109 - J1112 - 31113 - J1116 - J1117 - 31118 - J1136 - J1143 - J1334	J1109 - J1112 - 31113 - J1116 - J1117 - 31118 - J1136 - J1143 - J1334									
510050	J1108 - 31110 - J1111 - J1112 - J1113 - J1114 - 31115 - J1116 - J1117 - J1120	J1108 - 31110 - J1111 - J1112 - J1113 - J1114 - 31115 - J1116 - J1117 - J1120									
	J1124 - J1131 - J1134 - J1141										
510051	J1104 - J1109 - J1112 - J1113 - J1116 - J1117 - J1118 - J1131	J1109 - J1112 - J1113 - J1116 - J1117 - J1118 - J1131									
510052	J1108 - J1110 - J1111 - J1112 - J1113 - J1119 - J1116 - J1117 - J1127 - J1131	J1110 - J1111 - J1112 - J1113 - J1119 - J1116 - J1117 - J1127 - J1131									
	J1139 - J1433										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1238											
510102	J1115 - J1117 - J1131 - J1134 - J1141 - J1142 - J1143 - J1144 - J1145 - J1146	J1117 - J1131 - J1134 - J1141 - J1142 - J1143 - J1144 - J1145 - J1146									
	J1217 - J1218 - J1219 - J1220 - J1221 - J1222 - J1223 - J1224 - J1225 - J1226	J1217 - J1218 - J1219 - J1220 - J1221 - J1222 - J1223 - J1224 - J1225 - J1226									
	- J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239 - J1240	- J1231 - J1232 - J1233 - J1234 - J1235 - J1236 - J1237 - J1238 - J1239 - J1240									
	- J1243 - J1244 - J1245 - J1246 - J1247 - J1248 - J1312 - J1313 - J1327 - J1338	- J1243 - J1244 - J1245 - J1246 - J1247 - J1248 - J1312 - J1313 - J1327 - J1338									
	- J1339 - J1340 - J1417										
510103	J1131 - J1139 - J1140 - J1221 - J1223 - J1227 - J1228 - J1231 - J1232 - J1233	J1139 - J1140 - J1221 - J1223 - J1227 - J1228 - J1231 - J1232 - J1233									
	- J1234 - J1236 - J1242 - J1243 - J1328 - J1341										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1249											
510104	J1131 - J1139 - J1211 - J1218 - J1219 - J1226 - J1227 - J1228 - J2339 - J1231	J1139 - J1211 - J1218 - J1219 - J1226 - J1227 - J1228 - J2339 - J1231									
	- J1232 - J1233 - J1234 - J1235 - J1236 - J1242 - J1247 - J1309 - J1339										
510105	J1104 - J1105 - J1106 - J1107 - J1103 - J1109 - J1110 - J1111 - J1112 - J1113	J1105 - J1106 - J1107 - J1103 - J1109 - J1110 - J1111 - J1112 - J1113									
	- J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1126 - J1121 - J1122 - J1123	- J1114 - J1115 - J1116 - J1117 - J1118 - J1119 - J1126 - J1121 - J1122 - J1123									
	- J1124 - J1125 - J1126 - J1127 - J1128 - J1129 - J1131 - J1132 - J1133 - J1134	- J1124 - J1125 - J1126 - J1127 - J1128 - J1129 - J1131 - J1132 - J1133 - J1134									
	- J1135 - J1136 - J1137 - J1138 - J1139 - J1140 - J1141 - J1142 - J1143 - J1144	- J1135 - J1136 - J1137 - J1138 - J1139 - J1140 - J1141 - J1142 - J1143 - J1144									
	- J1145 - J1146 - J1203 - J1204 - J1205 - J1206 - J1207 - J1208 - J1209 - J1210	- J1145 - J1146 - J1203 - J1204 - J1205 - J1206 - J1207 - J1208 - J1209 - J1210									
	- J1211 - J1212 - J1213 - J1214 - 31215 - J1217 - J1216 - J1219 - J1220 - J1221	- J1211 - J1212 - J1213 - J1214 - 31215 - J1217 - J1216 - J1219 - J1220 - J1221									
	- J1222 - J1223 - J1224 - J1225 - J1226 - J1227 - J1228 - J1229 - J1230 - J1231	- J1222 - J1223 - J1224 - J1225 - J1226 - J1227 - J1228 - J1229 - J1230 - J1231									
	- J1232 - J1233 - J1234 - J1235 - J1236 - J1239 - J1240 - J1241 - J1242 - J1243	- J1232 - J1233 - J1234 - J1235 - J1236 - J1239 - J1240 - J1241 - J1242 - J1243									
	- J1244 - J1245 - J1246 - J1247 - J1248 - J1302 - J1304 - J1306 - J1309 - J1310	- J1244 - J1245 - J1246 - J1247 - J1248 - J1302 - J1304 - J1306 - J1309 - J1310									
	- J1311 - J1312 - J1313 - J1314 - J1316 - J1317 - J1318 - J1319 - J1322 - J1323	- J1311 - J1312 - J1313 - J1314 - J1316 - J1317 - J1318 - J1319 - J1322 - J1323									
	- J1325 - J1326 - J1327 - J1328 - J1329 - J1331 - J1332 - J1333 - J1334 - J1335	- J1325 - J1326 - J1327 - J1328 - J1329 - J1331 - J1332 - J1333 - J1334 - J1335									
	- J1337 - J1338 - J1339 - J1340 - J1345 - J1404 - J1405 - J1406 - J1407 - J1408	- J1337 - J1338 - J1339 - J1340 - J1345 - J1404 - J1405 - J1406 - J1407 - J1408									
	- J1409 - J1410 - J1411 - J1412 - J1414 - J1415 - 31416 - J1417 - J1418 - J1419	- J1409 - J1410 - J1411 - J1412 - J1414 - J1415 - 31416 - J1417 - J1418 - J1419									

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF
DIAGNOSE STATUS	IOU OFF	CPU OFF
- J1420 - J1421 - J1422 - J1423 - J1424 - J1425 - J1426 - J1427 - J1428 - J1429		
- J1436 - J1431 - J1432 - J1433 - J1434 - J1435 - J1436 - J1437 - J143S - J1439		
- J1440 - J1441 - J1442 - J1443 - J1444 - J1445 - J1446		

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1130 J1147 J123S J1249 J1450

510106	J1236	J1339	J1343							
510111	J1133	J1142	J1203	J1205 - J1206	J1208	J1211	J1214	J1215	J1224	
	- J1225 - J1226 - J1227	J1229 - J1230 - J1231	- J1232 - J1233	J1235 - J1236						
	J1242	J1322 - J1323 - J1324	J1327 - J1328 - J1329	J1331	J1333 - J1334					
	- J1335	J1337 - J133S - J1339	- J1340	J1343 - J1344 - J1345	- J1346	J1405				
	- J1406	J1411	J1415	J1421	J1423	J1429 - J1430	J1437			

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1453

510112	J1104	J1107 - J1105 - J1109 - J1110	J1112	J1116 - J1117 - J1119 - J1119						
J1129	J1131	J1133 - J1134	J1136 - J1137	J1139 - J1140 - J1141 - J1142						
	- J1143 - J1144 - J1145 - J1146	J1203 - J1204 - J1205 - J1206 - J1207 - J1208								
	- J120S - J1210 - J1211 - J1212 - J1213 - J1214 - J1215	J1217 - J1218 - J1219								
	- J1220	J1222	J1224 - J1225 - J1226 - J1227 - J1228 - J1229 - J1230 - J1231							
	- J1232 - J1233 - J1234	J1236	J1240	J1242 - J1243 - J1244 - J1245 - J1246						
	J1248	J1302	J1312 - J1313	J1322 - J1323	J1327 - J1328	J1347 - J1348				
	J1418 - 31419	J1421	J1423	J1437 - J1438	J1441 - J1442	J1445 - J1446				

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:

J1450

510115	J1133	J1214	J1219 - J1220	J1226	J1228 - J1229 - J1230 - J1231 - J1232					
	- J1233 - J1234 - J1235 - J1236	J1242	J1246	J1327	J1337 - J1338 - J1339					
	- J1340	J1346	J1406							

510116 J1418

510117	J1116	J1118	J1131	J1133	J1143	J1203	J1215	J1217 - J1218 - J1219		
	- J1226	J1222	J1225 - J1226 - J1227 - J1228 - J1229 - J1230 - J1231 - J1232							
	- J1233 - J1234 - J1235 - J1236	J1239 - J1240 - J1241 - J1242 - J1243 - J1244								
	J1246 - J1247 - J1248	J1317 - J1318 - J1319 - J1320	J1322 - J1323 - J1324							
	- J1325 - J1326 - J1327 - J1328 - J1329	J1331 - J1332 - J1333 - 31334 - J1335								
	J1337 - J1338 - J1339 - J1340 - J1341 - J1342 - J1343 - J1344 - J1345 - J1346									
	- J1347 - J1348	J1404 - J1405 - J1406 - J1407 - J140S	J1410 - J1411 - J1415							
	J1418 - J1419 - J1420	J1422 - J1423	J1429 - J1430	J1437 - J1438 - J1439						
	J1441 - J1442 - J1443 - J1444 - J1445 - J1446									

SUBSTITUTE THE FOLLOWING CORD ASSEMBLIES:

J1238 J1336

510123 J1218 J1234

510124 J1133 J1139 J1217 J1224 - J1225 J1227 - J1229 - J1229 - J1230 - J1231

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
	- J1232	J1234	J1409								
510130	J1213 - - J1224 - - J1236	J1214 - J1225 - J1243 -	J1215 - J1226 - J1244	J1217 - - J1227 - J1247	J1218 - - J1228	J1219 - J1230	J1220 - - J1231	J1221 - - J1232	J1222 - - J1233	J1223 - J1235	
510131	J1226										
510132	J1131	J1225	J1227 -	J1228	J1231 -	J1232					
510135	J1217	J1219	J1221	J1223	J1232	J1236	J1243	J1343			
510136	J1221	J1223									
510137	J1343										
510140	J1344										
510141	J1345										
510142	J1346										
510143	J1344										
510144	J1345										
510145	J1211 -	J1212 -	J1213	J1226							
510147	J1221	J122B									
510150	J1213	J1221	J1228	J1230							
510151	J1212	J1219	J1221	J1223	J1227	J1236					
510156	J1217	J1226									
510170	J1136	J1213 -	J1214	J1217	J1228						
510207	J1104 J1243	J1107 -	J1108	J1211	J1213	J1217	J1219 -	J1220	J1226 -	J1227	
510261	J1104 - J1119 - J1132 - J1142 - J1209 J1224 - J1234 J1362 - J1318 - J1332 - J1415	J1107 - J1121 - - J1133 - - J1143 - J1212 - - J1225 - - J1235 - J1306 - J1319 - - J1333 - - J1415 -	J1108 - - J1122 - - J1134 - - J1144 - - J1213 - - J1226 - - J1236 - J1309 - J1320 - - J1333 - - J1417 -	J1109 - - J1123 - - J1135 - - J1145 - - J1214 - - J1227 - - J1239 - - J1310 - - J1322 - - J1406 - - J1418 -	J1110 - - J1124 - - J1136 - - J1146 - - J1215 - - J1228 - - J1240 - - J1311 - - J1323 - - J1407 - - J1419 -	J1112 - - J1125 - - J1137 - - J1203 - - J1217 - - J1229 - - J1242 - - J1312 - - J1325 - - J1408 - - J1420 -	J1113 - - J1126 - - J1138 - - J1204 - - J1218 - - J1230 - - J1243 - - J1313 - - J1326 - - J1409 - - J1421 -	J1119 - - J1127 - - J1139 - - J1205 - - J1219 - - J1231 - - J1244 - - J1314 - - J1327 - - J1411 - - J1422 -	J1117 - - J1128 - J1141 - J1208 - J1222 - J1233 - J1248 - J1316 - J1331 - J1412 - J1423	J1118 J1131 J1141 J1208 J1222 J1233 J1248 J1317 J1331 J1414 J1424	

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	CPU OFF								
DIAGNOSE STATUS	IOU OFF	CPU OFF								
STOP	CONNECTORS									
	J1426 - J1427	J1430 - J1431	J1432 - J1433	J1434 - J1435	J1436 - J1437	J1438 - J1440	J1441 - J1443	J1445		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES::									
	J1336	J1450								
510262	J1133	J1139	J1142	J1215	J1218	J1219	J1221	J1222	J1223	J1227
	J1228	J1229	J1233	J1234	J1235	J1236	J1239	J1240	J1241	J1242
	J1243	J1244	J1245	J1247	J1323	J1337	J1338	J1339	J1340	J1341
	J1344									
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1130									
510391	J1194	J1107	J1108	J1109	J1110	J1112	J1116	J1117	J1118	J1119
	J1133	J1134	J1136	J1139	J1149	J1141	J1142	J1143	J1203	J1204
	J1206	J1207	J1209	J1211	J1212	J1213	J1215	J1217	J1218	J1219
	J1226	J1221	J1222	J1223	J1224	J1225	J1226	J1227	J1228	J1229
	J1230	J1231	J1232	J1233	J1234	J1235	J1236	J1240	J1242	J1243
	J1244	J1245	J1246	J1247	J1304	J1306	J1309	J1311	J1312	J1313
	J1314	J1323	J1325	J1327	J1326	J1332	J1333	J1334	J1335	J1337
	J1340	J1341	J1406	J1407	J1408	J1409	J1411	J1412	J1414	J1415
	J1416	J1417	J1418	J1419	J1420	J1421	J1423	J1424	J1425	J1426
	J1429	J1430	J1438	J1439	J1440	J1441				
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES::									
	J1130	J1147	J1238	J1249	J1450					
510304	J1109	J1113	J1119	J1140	J1141	J1215	J1217	J1216	J1219	J1220
	J1223	J1224	J1225	J1226	J1227	J1228	J1229	J1232	J1233	J1234
	J1239	J1240	J1242	J1243	J1306	J1309	J1310	J1311	J1312	J1313
	J1314	J1317	J1318	J1319	J1320	J1322	J1323	J1324	J1326	J1328
	J1331	J1420								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1130									
510305	J1112	J1118	J1128	J1131	J1136	J1140	J1141	J1142	J1212	J1213
	J1215	J1217	J1218	J1219	J1220	J1221	J1223	J1226	J1227	J1228
	J1229	J1230	J1231	J1232	J1233	J1234	J1235	J1236	J1240	J1242
	J1243	J1247	J1314	J1318	J1319	J1329	J1325	J1341	J1442	
510306	J1119	J1121	J1122	J1123	J1125	J1126	J1127	J112S	J1129	J1132
	J1134	J1136	J1137	J1138	J1140	J1141	J1142	J1144	J1145	J1146
	J1203	J1205	J1206	J1207	J1209	J1216	J1211	J1212	J1213	J1215
	J1217	J1218	J1219	J1220	J1221	J1222	J1223	J1225	J1226	J1227
	J1228	J1229	J1230	J1231	J1232	J1234	J1236	J1239	J1240	J1241
	J1242	J1243	J1244	J1245	J1246	J1248	J1304	J1308	J1309	J1310
	J1311	J1312	J1313	J1314	J1317	J1318	J1319	J1320	J1322	J1325
	J1327	J1328	J1332	J1333	J1338	J1339	J1341	J1412	J1415	J1416
	J1417	J1424	J1425	J1426	J1434	J1435	J1443	J1444	J1445	

TABLE 2-31 VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS																													
STOP																																
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																																
J1130																																
510307	J1123	J1125 - J1126 - J1127 - J1128 - J1129	J1136	J1140 - J1141 - J1142	J1145 - J1146	J1207	J1211 - J1212 - J1213	J1218	J1230	J1232	J1235	J1236	J1239	J1242	J1244	J1246 - J1247	J1313 - J1314	J1325	J1327													
	- J1326	J1334	J1341	J1405 - J1406																												
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES																																
J1130																																
510310	J1104	J1110	J1112	J1119	J1121 - J1122 - J1123 - J1124 - J1125 - J1126	- J1127 - J1128 - J1129	J1131 - J1132 - J1133 - J1134 - J113S - J1136 - J1137	- J1136 - J1139 - J1148 - J1141 - J1142 - J1143 - J1144 - J1145 - J1146	J1203	- J1204 - J1205 - J1206 - J1207 - J1208 - J1209 - J1210 - J1211 - J1212 - J1213	- J1214 - J1215	J1217 - J1218 - J1219 - J1220 - J1221 - J1222 - J1223 - J1224	- J1225 - J1226 - J1227 - J1228 - J1229 - J1230 - J1231 - J1232 - J1233 - J1234	- J1235 - J1236	J1239 - J1240 - J1241 - J1242 - J1243 - J1244 - J1245 - J1246	J1248	J1306	J1308 - J1309	J1312 - J1313 - J1314	J1317 - J1318	J1322	- J1323 - J1324 - J1325	J1327 - J1328 - J1329 - J1330	J1332 - J1333 - J1334	- J1335	J1337 - J1338 - J1339 - J1340 - J1341	J1345	J1404	J1407	J1412		
	J1415	J1417	J1424	J1426	J1429	J1434	J1442 - J1443	J1445																								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:																																
J1130 J1147 J1249																																
510311	J1127	J1136 - J1137 - J1138	J1144 - J1145 - J1146	J1203	J1205 - J1206	- J1207 - J1208 - J1209 - J1210	J1212	J1215	J1219 - J1220	J1223 - J1224	- J1225	J1231	J1233	J1240	J1243	J1306	J1308 - J1309	J1312	J1317	- J1318	J1323	J1325	J1327 - J132S	J1333	J1337	J1340 - J1341	J1344	- J1412	J1415 - J1416 - J1417	J1424 - J1425 - J1426	J1434 - J1435	J1443
	- J1444	- J1445																														
510312	J1108	J1110 - J1111	J1117	J1137 - J1138	J1141	J1144 - J1145 - J1146	- J1203	J1205	J1207 - J1208 - J1209	J1210 - J1211 - J1212	J1214	- J1215	J1218	J1220 - J1221	J1223 - J1224	J1226	J1235	J1240 - J1241	- J1312 - J1313	J1317	J1319	J1323	J1326	J1331 - J1332 - J1333	J1338	- J1340 - J1341	J1346	J1407	J1415 - J1416	J1425 - J1426	J1434 - J1435	
	J1444	- J1445																														
510313	J1107	J1137 - J1138	J1144 - J1145	J1203	J1205	J1207 - J1208 - J1209	- J1216 - J1211 - J1212	J1215	J1221	J1223 - J1224	J1226	J1235	J1240 - J1241	- J1319	J1323	J1329 - J1330 - J1331	J1333	J1337	J1340 - J1341	J1345	- J1415 - J1416	J1425 - J1426	J1434 - J1435	J1444 - J1445								
510321	J1206	J1247																														
510322	J1144	J1204	J1206	J1211 - J1212	J1214	J1223 - J1224	J1318	J1320	- J1323	J1323																						
510323	J1107	J1129	J1137 - J1138	J1144 - J1145 - J1146	J1203	J1204 - J1205	- J1206 - J1207 - J1208 - J12Q9 - J1210 - J1211	J1214	J1218 - J1219 - J1220																							

TABLE 2-31 VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
	- J1221	J1223	- J1224	- J1225	J1229	J1232	J1317	- J1318	- J1319	- J1320	
	J1323	J1329	- J1331	- J1332	- J1333	J1340	- J1341	- J1342	- J1343	- J1344	
	J1412	J1415	- J1416	- J1417	J1424	- J1425	- J1426	J1434	- J1435	J1443	
	- J1444	- J1445									
510324	J1105	- J1106	- J1107	- J1108	- J1109	J1111	- J1112	J1114	- J1115	J1117	
	J1119	- J1120	- J1121	- J1122	- J1123	- J1124	- J1125	J1133	J1135	J1140	
	- J1141	J1143	J1203	- J1204	- J1205	- J1206	- J1207	- J1208	- J1209	J1211	
	J1215	J1217	- J1219	- J1219	J1224	J1226	- J1227	J1235	- J1236	J1239	
	- J1240	- J1241	- J1242	- J1243	- J1244	- J1245	- J1246	- J1247	J1305	J1312	
	- J1313	- J1314	J1317	- J1318	J1320	J1322	- J1323	- J1324	- J1325	- J1326	
	- J1327	- J1328	- J1329	- J1330	J1332	- J1333	- J1334	- J1335	J1337	- J1338	
	- J1339	J1341	J1418	- J1419	- J1420	J1422	- J1423	J1429	- J1430	J1437	
	- J1436	- J1439	- J1440	- J1441	- J1442						
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1130	J1147	J1249								
510325	J1120	J1125	J1135	J1203	- J1204	J1206	- J1207	J1215	J1217	- J1218	
	J1220	J1227	J1231	J1235	J1239	- J1240	- J1241	- J1242	J1245	J1312	
	- J1313	J1317	- J1318	J1322	- J1323	J1325	J1328	J1332	- J1333	J1335	
510326	J1108	J1114	- J1115	J1128	J1141	J1204	- J1205	- J1206	J1213	- J1214	
	- J1215	J1219	J1234	- J1235	J1239	J1241	J1309	J1312	- J1313	- J1314	
	J1322	J1324	- J1325	- J1326	- J1327	- J1328	- J1329	- J1330	J1332	- J1333	
	- J1334	- J1335	J1407	- J1408	- J1409	J1414	J1416	- J1417	J1421	J1424	
	- J1425	- J1426	J1428	J1430	- J1431	- J1432	- J1433	- J1434	- J1435	J1442	
	- J1443	- J1444	- J1445	- J1446							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1450										
510327	J1109	J1114	J1121	- J1122	- J1123	- J1124	- J1125	- J1126	- J1127	- J1128	
	- J1129	J1133	J1141	J1203	J1217	J1219	- J1220	- J1221	J1224	- J1225	
	J1229	J1232	J1235	J1243	J1245	J1313	J1322	- J1323	- J1324	J1332	
	- J1333	- J1334	- J1335	J1338							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1130	J1147									
510330	J1113	J1115	J1119	J1131	- J1132	- J1133	- J1134	- J1135	- J1136	J1139	
	- J1140	J1143	J1211	- J1212	J121S	J1223	- J1224	- J1225	J1313	- J1314	
	J1322	J1324	- J1325	J1332	- J1333	- J1334	J1414	J1418	- J1419	- J1420	
	- J1421	- J1422	- J1423	- J1424	J1426	J1429	J1433	- J1434	- J1435	J1437	
	- J1438	- J1439	- J1440	- J1441	- J1442	J1446					
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
	J1450										
510331	J1140	J1211	J1223	- J1224	J1322	J1324	J1326	J1332	- J1333	- J1334	
	J1423										

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS	IOU OFF	IOU OFF	CPU OFF	CPU OFF	CONNECTORS					
DIAGNOSE STATUS	IOU OFF	IOU OFF	CPU OFF	CPU OFF						
STOP										
510332	J1268	J1221	J1225	J1322	J1324	J1332	- J1333	- J1334		
510333	J1205	J1221	J1223	J1225	J1322	J1324	J1332	- J1333	- J1334	
510335	J1203 J1335	J1206	J1221	J1224	- J1225	J1244	J1322	J1324	J1332	- J1333
510335	J1324	J1332	- J1333	J1335						
510337	J1324	J1332	- J1333	J1335						
510340	J1324	J1332	- J1333	J1335						
510341	J1119	J1129	J1136	J1140	- J1141	- J1142	J1205	- J1206	- J1207	J1209
-	J1210	J1212	- J1213	J1218	- J1219	J1221	J1223	J1225	- J1226	- J1227
-	J1231	J1235	J1239	- J1240	- J1241	J1244	- J1245	- J1246	J1304	- J1305
-	J1306	J1309	J1312	J1314	J1316	J1318	J1320	J1322	- J1323	J1325
-	J1328	- J1329	- J1330	- J1331	J1334	- J1335	J1407			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1147									
510342	J1104	J1140	J1205	J1208	J1217	- J1218	- J1219	J1221	J1224	- J1225
-	J1227	J1729	J1231	- J1232	J1235	J1240	- J1241	- J1242	J1244	- J1245
-	J1245	J1303	J1303	J1313	- J1314	J1S29	- J1329	- J1330	- J1331	- J1332
-	J1334	- J1335	J1337							
510343	J1119	J1135	J1204	J1210	J1213	- J1214	J1217	J1219	- J1220	J1224
	J1227	J1235	J1239	- J1240	- J1241	J1245	J1303	- J1304	J1312	J1314
	J1320	J1325	J1329	J1341	J1407					
510344	J1104	J1116	J1119	J1133	J1135	J1203	- J1204	- J1205	- J1206	J1208
	J1211	J1213	- J1214	J1218	- J1219	- J1240	- J1221	J1224	J1232	J1236
	J1245	J1304	J1306	J1311	J1314	J1322	- J1323	J1326	J1329	J1332
-	J1333	J1335	J1415	- J1419	- J1420	- J1421	J1423	J1426	J1429	J1432
-	J1433	- J1434	- J1435	J1437	- J1438	- J1439	- J1446	- J1441	- J1442	J1445
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
	J1450									
510357	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1									
	J1313									
510357	J130D	- J1310	J1329							
510361	J1109	J1119	J1304	- J1305	J1309	J1312	- J1313			
501362	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1									
	J1311	J1312	J1313	J1314						

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS													
STOP																
510363	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1311 J1313															
510363	J1302	-	J1303													
510367	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1313															
510367	J1109	J1119	J1304	-	J1305	J1309	J1312									
510370	J1305	J1312	-	J1313	J1316											
510371	1. IF CHAFF DISPLAY IS MISSING WITH RIE PANEL 1 "SPECIAL VIDEO" SWITCH IN EITHER "MTI" OR "NORM" POSITION SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1: J1313 J1314 2. IF CHAFF DISPLAY IS MISSING WITH RIE PANEL 1 "SPECIAL VIPEO" SWITCH IN "MTI" POSITION SUBSTITUTE THE FOLLOWING CARD ASSEMBLY LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1: J1313 3. IF CHAFF DISPLAY IS MISSING WITH RIE P0NEL 1 SPECIAL VIDEO" SWITCH IN "NORM" POSITION SUBSTITUTE THE FOLLOWING CARD ASSEMBLY LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1: J1314															
510372	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1313															
510372	J1105	-	J1106	J1108	J1143	J1145	J1218	J1218	-	J1219	-	J1220	J1222			
	J1303		J1312	-	J1313	J1326	J1332									
510401	J1104	J1107	J1113	J1118	-	J1119	J1129	J1131	J1134	J1136	-	J1137				
	J1139	J1205	J120S	J1213	J1217	J1223	J1226	J1239	J1248	J1326						
	J1328	-	J1432													
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1147															
510402	J1104	-	J1105	-	J1106	-	J1107	-	J1108	-	J1109	J1118	-	J1119	J1123	J1127
	-	J1128	J1134	J1137	-	J1138	J1140	J1143	J1209	J1212	-	J1213	-	J1214		
		J1217	J1226	J1249	J1440											
510405	J1112	-	J1113	J1116	-	J1117	-	J1118	J1121	J1134	J1137	-	J1138	-	J1139	
	-	J1140	-	J1141	J1143	J1219	-	J1220	J1226	J1427						
510406	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1314															

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
510456	J1107 - J1220	J1112 - J1113 J1227 J1234	J1116 - J1117 - J1118 J1410	J1121	J1134	J1138	J1219				
510407	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1314										
510407	J1107 J1210	J1112 - J1113 J1219 - J1220	J1115 - J1116 - J1117 - J1118	J1120	J1121	J1125					
510410	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK I J1314										
510410	J1107										
510411	SUBSTITUTE THE FOLLOWING CARD ASSEMBLES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1314										
510411	J1107 - J1215 J1414	J1138 - J1139 - J1140 - J1141 J1222 J1225 J1228 - J1229 J1427 J1432 - J1433 J1444 - J1445	J1144 - J1145 - J1146 J1231 - J1232 - J1233	J1211	J1214	J1214	J1214	J1322	J1330		
510412	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK I J1313 J1314										
510412	J1137 J1143										
510413	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1311 J1314										
510413	J1137 - J1138 J1213 J1440										
510414	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATRO UNIT A6 RACK 1 J1313 J1314										
510414	J1107 J1119 J1219 - J1220										
510415	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1311										
510415	J1140 J1143 J1205 J1212 J1440										
510416	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT R6 RACK 1 J1313										

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
510416	J1107	J1217								
510417	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1									
	J1312	J1314								
510417	J1137	J1139 - J1140	J1143	J1208	J1213					
510420	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1									
	J1313	J1314								
510420	J1107	J1226								
510421	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1									
	J1311	J1314								
510421	J1104 J1213	J1108	J1112 - J1113 - J1114 - J1115 - J1116 - J1117 - J1118	J1120						
510422	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1									
	J1313									
510423	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1									
	J1314									
510423	J1116 - J1117									
510424	J1134 J1223	J1137 - J1138 - J1139	J11210	J1212 - J1213	J1217	J1219 - J1220				
510425	J1134	J1137 - J1138	J1143	J1205	J1208	J1218	J1225 - J1226			
510427	J1109 - J1134 - J1211 J1323	J1112 - J1135 - J1212 J1409	J1114 - J1140 - J1213 J1426	J1116 - J1141 - J1235 J1433	J1118 J1143 - J1226 J1440	J1121 J1205 - J1229 J1446	J1124 J1207 - J1243 J1244	J1131 - J1208 - J1246	J1132 - J1209 - J1246	J1133 - J1210 - J1311
510430	J1107 - J1108 - J1126 - J1127 J1204 - J1205 - J1215 - J1218 - J1232 - J1233 J1324 - J1329 J1408 - J1412 - J1435 - J1436	J1110 - J1111 J1131 - J1136 - J1206 - J1207 J1220 - J1221 - J1234 - J1235 J1331 - J1332 J1415 - J1416 - J1443 - J1444	J1113 - J1114 - J1137 - J1138 - J1208 - J1209 - J1221 - J1222 - J1236 - J1237 - J1333 - J1334 - J1417 - J1418 - J1445 - J1446	J1116 - J1117 J1141 - J1144 - J1210 - J1211 - J1224 - J1225 J1240 - J1304 J1340 - J1341 - J1424 - J1425	J1118 - J1119 - J1145 - J1146 - J1212 - J1213 - J1228 - J1229 - J1306 - J1307 - J1344 - J1345 - J1429 - J1430	J1125 - J1146 - J1214 - J1231 - J1322 - J1346 - J1434				
510431	J1119 - J1120 - J1121 - J1122 - J1123 - J1124	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131	J1126 - J1127 - J1128 - J1129 - J1130 - J1131
J1142	J1144 - J1145 - J1146 - J1147	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207	J1204 - J1205 - J1206 - J1207

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
	- J1210	- J1211	J1215	J1220	- J1221	J1223	- J1224	- J1225	J1236	J1235	
	J1239	J1304	J1323	J1330	J1333	J1337	- J1340	- J1341	J1344	- J1345	
	J1412	J1415	- J1416	- J1417	J1424	- J1425	- J1426	- J1427	J1434	- J1435	
	- J1436	J1443	- J1444	- J1445							
510432	J1118	J1120	J1125	J1132	J1214	- J1215	J1217	J1219	J1222	J1312	
	- J1313	- J1314	J1325	J1328	J1330	J1404	J1409	J1412	J1415	- J1416	
	- J1417	- J1418	- J1419	J1422	- J1423	J1433	J1436	J1440	- J1441	- J1442	
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1450										
510433	J1194	J1111	J1113	J1115	J1118	- J1119	- J1120	J1133	J1137	J1140	
	J1206	J1208	J1217	J1243	J1248	J1309	J1437				
510446	J1115	J1117	J1124	- J1125	J1127	- J1128	- J1129	J1131	- J1132	- J1133	
	- J1134	- J1135	- J1136	- J1137	J1139	- J1140	J1143	J1208	J1225	J1232	
	J1243	- J1244	- J1245	J1412	J1417	J1434					
510441	J1131	J1135	J1243	- J1244							
510442	J1109	J1116	J1119	J1124	- J1125	J1132	- J1133	J1137	J1139	J1143	
	J1203	J1208	- 31209	- J1210	31212	- J1213	J1226	J1Z40	J1248	J1311	
	J1327	J1337	J1439								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1130 J1238										
518443	J1104	- J1105	- J1106	- J1107	- J1108	J1110	- J1111	J1115	- J1116	- J1117	
	- J1118	- J1119	J1125	J1126	J1131	- J1132	J1134	- J1135	J1139	- J1140	
	J1142	J1211	- J1212	- J1213	J1215	J1219	- J1220	J1226	- J1227	J1242	
	J1244	- J1245	- J1246	J1248	J1311	- J1312	J1316	J1327	J1329		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1130 J1249										
510444	J1105	- J1106	J1110	J1116	J1118	J1211	- J1212	- J1213	J1220	J1229	
	J1231	J1338									
510445	J1106	J1217	J1226	J1228							
510446	J1106	J1109	J1111	J1115	J1117	- J1119	J1123	- J1124	- J1125	J1128	
	- J1129	J1131	- J1132	- J1133	- J1134	- J1135	- J1136	J1139	- J1140	J1142	
	J1203	J1208	J1217	J1220	J1226	J1228	J1230	J1232	J1240	J1242	
	J1246										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1249										
510447	J1105	- J1106	J1124	J1126	J1132	J1134	- J1135	- J1136	J1140	- J1141	
	J1204	- J1205	- J1206	- J1207	- J1208	- J1209	- J1210	J1212	- J1213	- J1214	
	J1219	- J1220	- J1221	J1225	J1248						

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1249										
510450	J1105	J1203								
510451	J1105 - J1248	J1106	J1203	J1205	J1208	J1211	J1221	J1223	J1224	J1225
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1249										
510452	J1104 -	J1105 -	J1106 -	J1107 -	J1108 -	J1109 -	J1110 -	J1111	J1113 -	J1114
	- J1119 -	J1116 -	J1117 -	J1118 -	J1119 -	J1120 -	J1121 -	J1122 -	J1123 -	J1124
	- J1125	J1128 -	J1129	J1131 -	J1132 -	J1133 -	J1134 -	J1135	J1139 -	J1140
	- J1141	J1143	J1205	J1205 -	J1209 -	J1210	J1212 -	J1213 -	J1214 -	J1215
	J1217 -	J1218 -	J1219 -	J1220 -	J1221	J1223	J1226 -	J1227 -	J1228 -	J1229
	- J1230 -	J1731 -	J1232 -	J1233	J1235 -	J1236	J1239 -	J1240	J1242 -	J1243
	- J1244	J1246	J1248	J1310 -	J1311 -	J1312 -	J1313 -	J1314	J1317 -	J1318
	- J1319 -	J1329	J1323	J1377 -	J1328	J1339	J1341	J1418	J1429	J1431
	- J1432	J1435	J1441							
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1130 J1147										
510453	J1104 -	J1105 -	J1106 -	J1107 -	J1108 -	J1109 -	J1110 -	J1111	J1113 -	J1114
	- J1115 -	J1116 -	J1117 -	J1119 -	J1119 -	J1120 -	J1121 -	J1122 -	J1123 -	J1124
	- J1125	J1126 -	J1127 -	J1128	J1131 -	J1132	J1134 -	J1135 -	J1136 -	J1137
	J1139 -	J1140 -	J1141 -	J1142 -	J1143 -	J1144 -	J1145 -	J1146	J1204 -	J1205
	- J1206 -	J1207 -	J1208 -	J1209	J1211 -	J1212 -	J1213 -	J1214 -	J1215	J1217
	- J1218 -	J1219 -	J1220 -	J1221 -	J1222 -	J1223 -	J1224 -	J1225 -	J1226 -	J1227
	- J1228 -	J1229	J1231 -	J1232 -	J1233 -	J1234 -	J1235 -	J1236	J1239 -	J1240
	- J1241 -	J1242 -	J1243 -	J1244 -	J1245 -	J1246 -	J1247 -	J1240	J1306	J1309
	- J1310 -	J1311 -	J1312 -	J1313 -	J1314	J1316 -	J1317 -	J1318 -	J1319 -	J1320
	J1322 -	J1323	J1325 -	J1328 -	J1327 -	J1328	J1331 -	J1332 -	J1333 -	J1334
	- J1335	J1337 -	J1338 -	J1339 -	J1340 -	J1341	J1406 -	J1407 -	J1408 -	J1409
	J1411 -	J1412	J1414 -	J1415 -	J1416 -	J1417 -	J1418 -	J1419 -	J1420	J1423
	- J1424 -	J1425 -	J1426	J1429 -	J1430	J1436	J1438 -	J1439 -	J1440 -	J1441
	J1443	J1445								
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1130 J1147 J1249 J1450										
510454	J1104	J1108 -	J1109	J1115	J1117	J1123 -	J1124	J1127 -	J1128	J1131
	- J1132	J1134 -	J1135 -	J1136 -	J1137 -	J1138 -	J1139 -	J1140 -	J1141	J1143
	J1146	J1205	J1211 -	J1212 -	J1213 -	J1214 -	J1215	J1220 -	J1221 -	J1222
	J1224 -	J1225 -	J1226 -	J1227 -	J1228	J1230	J1232	J1236	J1240	J1242
	- J1243	J1245 -	J1246	J1306	J1309 -	J1310	J1314	J1322	J1326	J1340
	- J1341	J1414	J1417	J1422	J1429	J1436	J1439 -	J1440	J1443	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1130										

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
501464	J1129	J1133	J1213							
510464	J1104 J1127 - J1211 - J1229 - J1244 - J1338	J1106 J1128 - J1212 J1231 - J1245 - J1339	J1115 J1131 J1214 J1232 - J1246 - J1340	- J1116 - J1132 J1218 - J1235 J1248 - J1341	J1118 J1134 - J1219 - J1236 J1310 J1407	- J1119 - J1135 J1221 - J1239 J1319 J1410	- J1120 - J1136 J1223 - J1240 - J1320 J1429	J1123 J1139 - J1224 - J1241 J1323 J1443	- J1124 - J1209 - J1225 - J1242 - J1331	- J1125 - J1210 - J1229 - J1243 - J1337
510465	J1108 J1223	- J1109 J1226	J1124 J1244	- J1125 J1248	J1127 J1439	J1131	J1134	- J1135	J1205	J1212
510466	J1115 J1213	J1124 J1221	J1127 J1246	J1132 J1346	J1134	- J1135	- J1136	J1139	J1208	J1210
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1136										
510467	J1124 J1231	- J1125	J1135	J1142	J1210	J1212	- J1213	J1221	J1223	J1228
510470	J1113 - J1132 - J1207 - J1223 - J1409 - J1443	J1115 - J1133 - J1209 - J1224 J1416 - J1444	J1118 - J1134 - J1209 J1227 - J1417 - J1445	J1120 - J1135 - J1210 J1231 - J1424	J1124 J1148 - J1211 - J1232 - J1425	- J1125 - J1141 - J1212 J1235 - J1432	- J1126 J1143 - J1213 - J1239 - J1433	- J1127 - J1144 - J1214 J1241 - J1434	- J1128 J1204 - J1215 J1245 - J1435	J1131 J1206 J1221 31408 J1442
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1450										
510501	J1104 - J1117 - J1137 - J1204 - J1215 - J1226 - J1236 - J1248 - J1322 - J1335 J1411 - J1423 - J1434 J1445	J1107 - J1118 J1139 - J1206 J1217 - J1227 J1239 - J1309 - J1323 J1337 - J1412 - J1424 - J1435	- J1108 - J1119 - J1140 - J1207 - J1218 - J1228 - J1240 - J1310 J1325 - J1338 - J1340 - J1414 - J1425 - J1436	- J1109 J1125 - J1141 - J1208 - J1219 - J1229 - J1241 - J1311 - J1327 - J1340 - J1415 - J1426 - J1437	- J1110 J1129 - J1142 - J120S - J1220 - J1230 - J1242 - J1312 - J1328 J1404 - J1416 - J142B - J1438	J1112 J1131 - J1143 - J1210 - J1221 - J1231 - J1243 - J1313 - J1329 - J1405 - J1417 - J1429 - J1439	- J1113 J1133 - J1144 - J1211 - J1222 - J1232 - J1244 - J1314 - J1329 - J1406 - J1418 - J1430 - J1446	- J1114 - J1134 - J1145 - J1212 - J1223 - J1233 - J1245 - J1317 - J1332 - J1407 - J1419 - J1431 - J1441	- J1115 - J1135 - J1146 - J1213 - J1224 - J1234 - J1246 - J1318 - J1333 - J1408 - J1420 - J1432 - J1442	- J1116 - J1136 - J1203 - J1214 - J1225 - J1235 - J1247 - J1320 - J1334 - J1409 - J1422 - J1433 - J1443
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:										
J1130 J1147 J1238 J1249 J1450										
510502	J1112 J1131	J1118 - J1132	- J1119 J1134	J1121 J1136	- J1122 - J1141	J1125 - J1142	- J1126 - J1146	- J1127 - J1211	- J112B - J1212	- J1129 - J1713

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS																
STOP			J1214	J1217	J1219	-	J1220	-	J1221	-	J1222	-	J1223	J1226	-	J1227	-	J1228	
	J1230	-	J1231	-	J1232	-	J1233	-	J1234	-	J1235	-	J1236	J1239	-	J1240	-	J1243	
	J1244	-	J1245	-	J1246		J1309		J1314		J1325		J1327	J1337	-	J1338	-	J1339	
	J1341		J1405	-	J1406	-	J1407	-	J1408	-	J1409	-	J1410	-	J1411	-	J1412	J1415	
	J1415	-	J1417	-	J1415	-	J1419	-	J1420		J1422	-	J1423	-	J1424		J1426	J1428	
	J1429	-	J1430	-	J1431		J1434	-	J1435	-	J1436		J1438	-	J1439	-	J1440	-	J1441
	J1442	-	J1443	-	J1444														

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1130

510503	J1136	J1140	-	J1141	J1211	J1213	J1219	J1221	J1223	J1227	-	J1228							
	J1230	J1232	J1236	J1242	J1406	J1409	-	J1410	-	J1411	-	J1412	J1417						
	J1418	J1422	-	J1423	J1435	-	J1436	J1444											
510534	J1215	J1217	J1219	-	J1220	-	J1221	J1223	J1226	J1230	-	J1231	-	J1232					
	J1236	J1327	-	J1328	J1339	J1341	J1405	-	J1406	J1410	-	J1411	-	J1412					
	J1416	J1419	-	J1420	J1425	J1437													
510565	J1131	J1137	-	J1138	J1144	-	J1145	-	J1146	J1203	-	J1204	-	J1265	-	J1206			
	J1207	-	J1208	-	J1209	-	J1210	-	J1211	-	J1212	-	J1213	J1215	J1217	J1220			
	J1223	-	J1224	-	J1225	J1228	-	J1229	-	J1230	J1232	-	J1233	-	J1234	J1236			
	J1242	J1244	J1306	J1324	J1327	-	J1328	J1332	-	J1333	J1340	-	J1341						
	J1345	J1404	-	J1405	-	J1406	-	J1407	-	J1408	-	J1409	-	J1410	-	J1411	-	J1412	
	J1415	-	J1416	-	J1417	-	J1418	-	J1419	-	J1420	J1422	-	J1423	-	J1424	-	J1425	
	J1426	J1428	-	J1429	-	J1430	-	J1431	J1434	-	J1435	-	J1436	-	J1437	-	J1438		
	J1439	-	J1440	-	J1441	-	J1442	-	J1443	-	J1444	-	J1445						
510586	J1104	J1110	J1112	J1117	-	J1118	-	J1119	-	J1120	-	J1121	J1123	-	J1124				
	J1125	-	J1126	-	J1127	-	J1128	-	J1129	J1131	J1135	-	J1136	-	J11137	-	J1138		
	J1139	-	J1140	-	J1141	-	J1142	-	J1143	-	J1144	-	J1145	-	J1146	J1203	-	J1204	
	J1205	-	J1206	-	J1207	-	J120S	-	J1209	-	J1210	-	J1211	-	J1212	-	J1213	-	J1214
	J1215	J1218	-	J1219	-	J1220	J1222	-	J1223	-	J1224	-	J1225	-	J1226	-	J1227		
	J1228	J1230	J1234	-	J1235	-	J1236	J1239	-	J1240	-	J1241	-	J1242	-	J1243			
	J1244	-	J1245	-	J1246	-	J1247	-	J1248	J1309	J1312	-	J1313	-	J1314	-	J1316		
	J1322	-	J1323	J1325	J1333	J1346	-	J1341	J1344	J1404	-	J1405	-	J1406					
	J1407	-	J1408	-	J14OD	-	J1410	-	J1411	-	J1412	J1414	-	J1415	-	J1416	-	J1417	
	J1418	-	J1419	-	J1420	J1422	-	J1423	-	J1424	-	J1425	-	J1426	J1428	-	J1429		
	J1430	-	J1431	-	J1432	-	J1433	-	J1434	-	J1435	-	J1436	-	J1437	-	J1438	-	J1439
	J1440	-	J1441	-	J1442	-	J1443	-	J1444	-	J1445	-	J1446						

SUBSTITIUTE THE FOLOWING CARD ASSEMBLIES:
J1130 J1147 J1249 J1450

510507	J1137	-	J1138	J1144	-	J1145	-	J1146	J1203	J1205	-	J1206	-	J1207	-	J1208	
	J1209	-	J1210	-	J1211	-	J1212	J1215	J1218	-	J1219	-	J1220	-	J1221	J1223	
	J1224	J1227	-	J1228	J1235	J1331	-	J1332	-	J1333	J1340	-	J1341	J1346			
	J1404	-	J1405	J1407	-	J1400	J1411	J1415	-	J1416	J1419	J1422	-	J1423			
	J1424	-	J1425	-	J1426	J1429	-	J1430	-	J1431	J1434	-	J1435	-	J1436	-	J1437
	J143S	-	J1439	-	J1440	J1442	J1444	-	J1445								
510510	J1107	J1137	-	J1138	J1144	-	J1145	J1203	J1205	J1207	-	J1208	J1210				

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
- J1211 - J1212	J1215	J1221	J1223	- J1224	- J1225	J1235	J1329	- J1330			
- J1331 - J1333	J1337	J1340	- J1341	- J1345	- J1404	J1408	J1415	- J1416			
J1425 - J1426	J1434	- J1435	J1444	- J1445							
510511	J1214										
510512	J1107 - J1137 - J1138	J1144 - J1145 - J1146	J1233 - J1206 - J1207 - J1208	- J1209 - J1210 - J1211	J1214 - J1219 - J1221	J1223 - J1225 - J1329	J1331	- J1332 - J1333	J1340 - J1341	J1344 - J1404 - J1405	J1412 - J1415 - J1416
	J1425 - J1426	J1434 - J1435	J1444 - J1445								
510513	J1129 - J1137 - J1138	J1144 - J1145 - J1145	J1203 - J1204 - J1205 - J1206	- J1207 - J1208 - J1209	- J1210 - J1211	J1214 - J1219 - J1220	- J1221	J1223	- J1224	J1225 - J1329	J1331
	J1225 - J1229	J1232 - J1304	J1333 - J1340	- J1341	J1344 - J1404 - J1405	J1412 - J1415 - J1416	- J1417	J1424	- J1425	J1426 - J1434 - J1435	- J1436
	J1412 - J1415 - J1416	- J1417	J1424 - J1425	- J1426	J1434 - J1435	- J1436					
	J1443 - J1444 - J1445										
510514	J1129 - J1137 - J1138	J1144 - J1145 - J1146	J1203 - J1265 - J1206 - J1207	- J1208 - J1209 - J1210	- J1211	J1214 - J1221	J1224 - J1225	J1229	J1232	- J1233	J1234
	J1304 - J1306	J1333 - J1340	- J1341	J1344 - J1404 - J1405	- J1405	J1412 - J1415	J1416	J1417			
	J1420 - J1424	J1426 - J1429	J1434 - J1435	- J1440	J1443 - J1445						
510515	J1144 - J1205 - J1207	J1211 - J1214 - J1221	J1224 - J1225	J1340	- J1341						
	J1343 - J1404 - J1405										
510516	J1214 - J1233	J1247									
510517	J1144 - J1204	J1206 - J1211 - J1212	J1214 - J1223 - J1224	J1404	- J1405						
510520	J1144 - J1204	J1206 - J1211 - J1212	J1214 - J1223 - J1224	J1404	- J1405						
510521	J1215 - J1406	J1408 - J1409	J1415 - J1416 - J1417	- J1413	J1423	- J1424					
	- J1425										
5105Z2	J1215 - J1410 - J1411	J1415 - J1437									
510523	J1119 - J1140 - J1141	J1215 - J1217 - J1219	J1229 - J1232 - J1243	J1410	- J1411	J1414 - J1415	J1418 - J1419	J1422 - J1423	J1426 - J1427	- J1428	
	- J1429 - J1430	J1442									
510524	J1215 - J1229	J1232 - J1247	J1340 - J1415 - J1422	- J1423	J1430 - J1432	- J1433	J1437 - J1440	- J1441	- J1442	- J1443	- J1444
	- J1433 - J1434	J1437 - J1438	- J1439	- J1440	- J1441	- J1442	- J1443	- J1444			
	- J1445 - J1446										
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1450											
518525	J1140 - J1442	J1215 - J1445	J1415 - J1446	J1429 - J1430	- J1431	J1432 - J1433	J1437 - J1440	- J1441			
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:											
J1238											

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
510526	J1204 J1246 J1446	J1206 - J1207 J1404 J1406	J1208 - J1209 J1409 - J1410	J1211 J1412	J1218 J1414	J1224 J1429	J1243 J1431	J1244 J1433		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1249									
510527	J1404	J1411	J1414 - J1415							
510530	J1109 - J1110 - J1426 - J1427	J1112 - J1428	J1316 - J1429	J1411 J1431	J1418 J1442	J1422 - J1423	J1424 - J1425			
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1249									
510531	J1109 - J1110 - J1436 - J1437	J1316 - J1439	J1420 - J1441	J1423 J1442	J1430	J1432 - J1433	J1434 - J1435			
510532	J1109 - J1442 - J1443 - J1444	J1312 - J1444	J1316 - J1445	J1420 - J1446	J1429 - J1446	J1438 - J1431	J1432 - J1437	J1441		
510533	J1232 J1427	J1340 J1429	J1404 - J1437	J1410 - J1438	J1412 J1444	J1414 - J1415	J1419	J1422 - J1423		
510534	J1203 - J1204 J1221 J1223 - J1224 J1419 J1422	J1205 - J1224 - J1426 - J1427	J1206 - J1247 - J1427	J1207 - J1341 - J1429	J1208 - J1406 - J1434	J1209 - J1409 - J1445	J1211 - J1410	J1213 - J1412	J1219 - J1415	
510535	J1214 - J1419 - J1431	J1221 - J1422 J1442 - J1443	J1247 - J1423 - J1443	J1338 - J1424 - J1425	J1339 - J1425 - J1426	J1341 - J1426 - J1477	J1408 - J1428 - J1428	J1411 - J1429 - J1429	J1414 - J1436 - J1436	J1418
510536	J1219 - J1436 - J1436	J1221 - J1437 - J1437	J1411 - J1438 - J1439	J1422 - J1439 - J1441	J1423 - J1442 - J1442	J1428 - J1430 - J1446	J1433 - J1434 - J1435	J1434 - J1435	J1435	
510537	J1411 - J1443 - J1443	J1429 - J1444 - J1444	J1430 - J1445 - J1446	J1431 - J1446	J1433	J1437 - J1438	J1440 - J1441	J1442		
510540	J1209 - J1210 J1442	J1221	J1414	J1416	J1419	J1420	J1426	J1428	J1440	
510541	J1406	J1410	J1412	J1418	J1423	J1437	J1442			
510542	J1207	J1221	J1228	J1405	J1422 - J1423	J1426	J1428	J1435	J1443	
510543	J1204 J1441 - J1442	J1221 - J1443	J1229 - J1443	J1340 J1446	J1405	J1425	J1432 - J1433	J1437	J1439	
510544	J1213 - J1442 - J1442	J1215 - J1443	J1314 J1446	J1417	J1419	J1423	J1432 - J1433	J1437	J1441	

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS		IOU OFF		CPU OFF		CONNECTORS				
DIAGNOSE STATUS		IOU OFF		CPU OFF						
STOP										
510546	J1109	J1241	J1244	J1246	J1411	J1419	J1423	J1429	J1430	J1441
510547	J1109	J1408	J1419	J1420	J1439	J1437	J1439			
510550	J1109	J1141	J1246	J1420	J1429	J1430	J1433	J1441	J1442	
510551	J1226	J1411	J1416	J1417	J1418	J1419	J1420	J1430	J1436	
510552	J1118 J1416	J1141 J1425	J1203 J1430	J1213 J1435	J1215 J1433	J1220 J1441	J1407	J1408	J1410	J1411
510553	J1411	J1422	J1423	J1424	J1428	J1430				
518554	J1118	J1411	J1417	J1428	J1430	J1435	J1436	J1437	J1438	J1439
510555	J1411	J1429	J1436	J1440	J1441	J1442	J1443	J1444		
510557	J1131 J1408 J1430	J1203 J1410 J1438	J1215 J1411 J1441	J1227 J1415 J1444	J1312 J1416	J1313 J1417	J1314 J1419	J1316 J1420	J1317 J1422	J1318 J1429

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
J1130

510560	J1104	J1112	J1203	J1204	J1205	J1206	J1207	J1208	J1209	J1210
	J1211	J1212	J1213	J1219	J1220	J1223	J1224	J1225	J1226	J1248
	J1313	J1316	J1317	J1318	J1407	J1408	J1410	J1411	J1414	J1415
	J1416	J1417	J1418	J1419	J1420	J1422	J1423	J1425	J1428	J1429
	J1430	J1435	J1437	J1438	J1443	J1441	J1442	J1444		

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES
J1249

510561	J1203	J1204	J1205	J1206	J1207	J1208	J1220	J1225	J1408	J1416
	J1417	J1420								
510562	J1205	J1208	J1211	J1224	J1225	J1407	J1416	J1417		
510563	J1203	J1206	J1225	J1408	J1416	J1417				
510564	J1411	J1416	J1419	J1422	J1423	J1424	J1425	J1426	J1428	J1431
510565	J1316 J1428	J1411 J1431	J1416 J1440	J1418 J1442	J1419	J1422	J1423	J1424	J1425	J1426
510566	J1424	J1425								
516567	J1424	J1425								
510570	J1424	J1425								

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS								
STOP											
510571	J1411	J1423	J1432	J1434	- J1435	- J1436	- J1437	- J1438	- J1439	J1441	
510572	J1316 - J1438	J1408 - J1439	J1411	J1423	J1432	- J1433	- J1434	- J1435	- J1436	- J1437	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1130											
510573	J1435	- J1436									
510574	J1435	- J1436									
510575	J1435	- J1436									
510576	J1411	J1431	- J1432	J1437	- J1438	J1440	- J1441	J1443	- J1444	- J1445	
510577	J1104 - J1128 - J1220 J1243 J1330 J1431	J1105 - J1129 J1225 J1305 J1337 - J1432	J1112 - J1135 J1228 J1311 J1407 - J1437	J1113 - J1145 J1231 - J1312 J1409 - J1438	J1115 - J1206 J1233 - J1316 J1411 - J1441	J1116 - J1212 - J1234 - J1322 - J1412 - J1442	J1120 - J1213 - J1236 - J1323 - J1417 - J1443	J1123 - J1214 - J1243 - J1324 - J1422 - J1444	J1124 - J1218 - J1244 - J1325 - J1423 - J1445	J1126 - J1219 - J1246 - J1328 - J1428 - J1446	
SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1147											
510600	J1443	- J1444									
510601	J1443	- J1444									
510602	J1443	- J1444									
510603	J1109 J1437	J1113 J1441	J1204 - J1442	J1207	J1215	J1407	J1411	J1422	- J1423	J1430	
510604	J1204 - J1225 - J1425	J1205 J1332 J1435	J1207 - J1407 - J1436	J1708 - J1408 - J1443	J1209 - J1410 - J1444	J1210 - J1411 - J1412	J1212 - J1416	J1213 - J1417	J1219 - J1417	J1224 - J1424	
510605	J1411	J1416	J1419								
510606	J1110	J1411	J1416	J1423							
510607	J1416	- J1417	J1437								
510610	J1416	- J1417									
510611	J1416	- J1417									
510612	J1411	J1422	J1425								

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
510513	J1109 - J1110	J1411	J1423	J1425	J1428					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLY: J1130									
510614	J1424 - J1425									
510615	J1424 - J1425									
510616	J1424 - J1425									
510617	J1411	J1435	J1438							
510620	J1109 - J1110	J1411	J1430	J1435	J1437					
510621	J1435 - J1436									
510622	J1435 - J1436									
510623	J1435 - J1436									
510625	J1109	J1411	J1430	J1441 - J1442	J1444					
510626	J1443 - J1444									
510627	J1443 - J1444									
510630	J1443 - J1444									
510631	J1408 - J1409	J1414	J1419	J1422	J1428					
510632	J1212	J1223	J1407	J1418 - J1419	J1420	J1428				
510633	J1418	J1428								
510634	J1422	J1428								
510635	J1422 - J1423	J1428								
510637	J1406 J1441	J1410	J1412	J1431 - J1432	J1433	J1438				
510643	J1437 - J1438	J1439								
510641	J1437	J1439								
510642	J1405 - J1406 - J1418 - J1435	J1420 - J1436	J1407 - J1422 - J1438	J1408 - J1423 - J1439	J1409 - J1424 - J1441	J1410 - J1428 - J1442	J1411 - J1429 - J1443	J1412 - J1431 - J1444	J1416 - J1432 - J1446	J1417 - J1434
510643	J1217	J143S	J1441 - J1442							
510644	J1442									

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS							
STOP										
510646	J1104	J1108	- J1109	- J1110	J1112	J1115	- J1116	- J1117	- J1118	- J1119
	- J1120	- J1121	- J1122	- J1123	- J1124	- J1125	- 31126	- J1127	- J1128	- J1129
	J1131	- J1132	- J1133	- J1134	- J1135	- J1136	- J1137	- J1138	- J1139	- J1140
	- J1141	- J1142	- J1143	- J1144	- J1145	- J1146	J1203	- J1204	- J1205	- J1206
	- J1207	J1209	- J1210	- J1211	- J1212	- J1213	- J1214	- J1215	J1217	- J1210
	- J1219	- J1220	J1222	J1224	J1226	- J1227	- J1228	- J1229	- J1230	- J1231
	- J1232	- J1233	- J1234	- J1235	- J1236	J1239	- J1240	- J1241	- J1242	- J1243
	- J1244	- J1245	- J1246	- J1247	- J1248	J1306	J1308	- J1309	- J1318	- J1311
	- J1312	- J1313	- J1314	J1317	- J1318	- J1319	- J1320	J1322	- J1323	J1325
	- J1326	- J1327	- J1328	- J1329	J1331	- J1332	J1334	- J1335	J1337	J1340
	J1404	J1408	J1411	- J1412	J1418	- J1419	- J1420	J1422	J1430	J1436
	J1438	- J1439	- J1440	- J1441	- J1442					
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES									
	J1130	J1147	J1238	J1249						
510647	J1104	J1112	J1138	- J1139	J1144	- J1145	- J1146	J1203	J1213	J1217
	- J1218	- J1219	- J1220	J1224	J1226	- J1227	- J1228	J1231	J1234	- J1235
	- J1236	J1243	J1247	- J1248	J1306	J1316	J1327	31337	- J1338	- J1339
	J1341	J1406	- J1407	- J1408	- J1409	- J1410	- J1411	J1414	- J1415	- J1416
	- J1417	- J1418	- J1419	- J1420	- J1421	- J1422	- J1423	- J1424	- J1425	- J1426
	J1428	- J1429	- J1430	- J1431	- J1432	- J1433	- J1434	- J1435	- J1436	- J1437
	- J1438	- J1439	- J1440	- J1441	- J1442	- J1443	- J1444	- J1445		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1249	J1450								
510650	J1104	J1112	J1116	J1118	- J1119	- J1120	J1129	J1131	J1137	- J1139
	- J1139	- J1140	- 31141	- J1142	J1144	- J1145	- J1146	J1203	- J1204	- J1205
	- J1206	- J1207	- J120S	- J1209	- J1210	- J1211	- J1212	- J1213	- J1214	- J1215
	J1217	- J1218	- J1219	- J1220	- J1221	- J1222	- J1223	- J1224	- J1225	- J1226
	- J1227	- J1228	- J1229	- J1230	- J1231	- J1232	- J1233	- J1234	J1236	J1240
	J1243	- J1244	J1247	- 31248	J1304	J1310	J1324	J1327	- J132S	J1333
	J1337	- J1338	- J1339	- J1340	- J1341	J1343	- J1344	- J1345	- J1346	J1407
	- J1408	J1411	- J1412	J1414	- J1415	- J1416	- J1417	- J1418	J1423	- J1424
	- J1425	- J1426	J1429	J1434	- J1435	- J1436	J1438	J1443	- J1444	- J1445
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1130									
510651	J1104	J1117	- J1118	J1137	- J1138	- J1139	J1142	J1144	- J1145	- J1146
	J1203	- J1204	J1206	J1209	J1211	J1217	- J1218	J1221	J1223	- J1224
	- J1225	J1227	- J1228	J1231	J1248	J1327	- J1328	J1332	- J1333	J1339
	- J1346	- J1341	J1343	J1412	J1416	J1425	J1435	J1444		
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:									
	J1130									
510652	J1116	J1131	J1137	- J138	J1144	- J1145	- J1146	J1203	- J1284	J1206
	- J1207	- J1208	J1211	J1214	- J1215	J1221	J1223	- J1224	- J1225	J1248
	J1306	J1333	J1339	- J1340	J1407	J1417	J1421	J1424	J1436	J1443

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS															
STOP																		
510653	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT AT RACK 1 J1311																	
510653	J1139	-	J1140	-	J1141	-	J1142	J1144	-	J1145								
510654	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1312																	
510654	J1134																	
510655	J1104	J1109	J1113	J1117	-	J1119	-	J1119	J1124	J1131	-	J1132	-	J1133				
	-	J1134	-	J1135	-	J1136	J1139	-	J1140	-	J1141	-	J1142	-	J1143	J1204	J1207	
	J1209	-	J1210	-	J1211	-	J1212	-	J1213	-	J1214	J1217	-	J1218	-	J1219	-	J1220
	-	J1221	-	J1222	-	J1223	J1226	-	J1227	-	J1226	-	J1229	J1231	-	J1232	-	J1233
	J1235	-	J1236	J1239	-	J1240	-	J1241	-	J1242	J1244	-	J1245	-	J1246	-	J1247	
	J1312	-	J1313	J1316	J1324	-	J1325	J1328	-	J1329	-	J1330	J1339	J1404				
	J1406	-	J1407	-	J1408	-	J1409	-	J1410	J1412	J1414	-	J1415	-	J1416	-	J1417	
	-	J1418	J1423	-	J1424	-	J1425	-	J1426	J1429								
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1450																	
510700	J1119	J1217	-	J1218	-	J1219	-	J1220	J1223	-	J1224	-	J1225	J1227	-	J1228		
	J1230	-	J1231	-	J1232	J1235												
510701	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1313																	
510782	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1312 J1313 J1314																	
510702	J1218	J1303	J1324	J1326	J1329	-	J1330	-	J1331	-	J1332	J1337						
510703	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1312																	
510703	J1109	J1119	J1302	-	J1303	-	J1304	-	J1309	-	J1306	J1314	J1331					
510704	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1313																	
510704	J1329	-	J1330	-	J1331	-	J1332	J1337										
510705	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1																	

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS DIAGNOSE STATUS	IOU OFF IOU OFF	CPU OFF CPU OFF	CONNECTORS														
STOP																	
	J1313																
510706	J1204																
510707	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1313																
510707	J1204	J1303															
510710	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1314																
510711	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1312 J1313																
510711	J1303	J1324	J1326	J1329	-	J1330	-	J1331	-	J1332	J1337						
510712	J1218	J1329	-	J1330	-	J1331	-	J1332		J1337							
510713	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1312																
510713	J1302	-	J1303	J1307	-	J1309	-	J1309	J1326	J1331							
510714	1. IF CHAFF DISPLAY IS MISSING WITH RIE PANEL 1 "SPECIAL VIDEO" SWITCH IN EITHER "MTI" OR "NORM" POSITION--SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1313 J1314																
	2. IF CHOFF DISPLAY IS MISSING WITH RIE PANEL 1 "SPECIAL VIDEO" SWITCH IN "MTI" POSITION--SUBSTITUTE THE FOLLOWING CARD ASSEMBLY: LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1 J1313																
	3. IF CHOFF DISPLAY IS MISSING WITH RIE PANEL 1 "SPECIAL VIDEO" SWITCH IN "NORM" POSITION--SUBSTITUTE THE FOLLOWING CARD ASSEMBLY: LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1																
510714	J1204	J1303	J1314														
510715	J1104	J1108	-	J1109	J118	-	J1119	J1132	-	J1133	J1135	-	J1136	J1141			
	J1204	-	J1205	-	J1206	-	J1207	J1209	-	J1210	J1212	J1214	J1217	-	J1218		
	-	J1219	-	J1220	J1225	J1228	J1235	J1239	J1241	J1245	J1306	J1309					
	-	J1312	-	J1313	-	J1314	J1317	-	J1318	J1320	J1322	-	J1323	-	J1324	-	J1325
	-	J1326	-	J1327	-	J1328	-	J1329	-	J1330	J1334	-	J1335	J1337	J1406	-	J1407
	J1414	J1422	J1430	-	J1431	J1433	J1446										
	SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES: J1450																

TABLE 2-31. VSU TEST FAULT LOCATION - CONTINUED

PROGRAM LOAD STATUS IOU OFF CPU OFF
 DIAGNOSE STATUS IOU OFF CPU OFF

STOP CONNECTORS

510716 SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES
 LOCATED IN RADAR SIMULATOR UNIT A6 RACK 1
 J1313

510716 J1204 J1303

511002 J1405 - J1406 - J1407 - J1408 - J1409 - J1416 - J1411 - J1412 J1416 - J1417
 - J1418 J1420 J1422 - J1423 - J1424 J1428 - J1429 J1431 J1435 - J1436
 J1438 - J1433 J1441 - J1442 - J1443 - J1444 J4434

511003 J1438 J1441 - J1442

511005 J1105 - J1106 J1108 J1111 - J1112 J1114 - J1115 J1117 J1119 - J1120
 J1121 - J1122 - J1123 - J1124 - J1125 J1133 J1139 - J1146 J1203 J1205
 - J1206 J1208 J1211 J1214 - J1215 J1217 - J1218 - J1219 J1240 J1244
 J1246 J1312 - J1313 J1326 J1328 J1341 J1409 - J1410 - J1411 - J1412
 J1418 J1429 - J1436 J1437

SUBSTITUTE THE FOLLOWING CARD ASSEMBLIES:
 J1136 J1249

Change 2 2-482

By Order of the Secretary the Army:

Official:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff


R.L. DILWORTH
Brigadier General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-32, Organizational Maintenance requirements for AN/TSQ-73 Missile System.

☆U.S. GOVERNMENT PRINTING OFFICE: 1996-733-072/40091

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

 <div style="border: 1px solid black; border-radius: 15px; padding: 5px; display: inline-block; margin-left: 10px;"> <p style="margin: 0;"><i>THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.</i></p> </div>		SOMETHING WRONG WITH PUBLICATION		
		FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)		
PUBLICATION NUMBER		DATE SENT		
PUBLICATION DATE		PUBLICATION TITLE		
BE EXACT PIN-POINT WHERE IT IS				
PAGE NO.	PARA- GRAPH	FIGURE NO.	TABLE NO.	<p style="text-align: center; font-weight: bold;">IN THIS SPACE, TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT.</p>
PRINTED NAME, GRADE OR TITLE AND TELEPHONE NUMBER			SIGN HERE	

The Metric System and Equivalents

Linear Measure

1 centimeter = 10 millimeters = .39 inch
 1 decimeter = 10 centimeters = 3.94 inches
 1 meter = 10 decimeters = 39.37 inches
 1 dekameter = 10 meters = 32.8 feet
 1 hectometer = 10 dekameters = 328.08 feet
 1 kilometer = 10 hectometers = 3,280.8 feet

Weights

1 centigram = 10 milligrams = .15 grain
 1 decigram = 10 centigrams = 1.54 grains
 1 gram = 10 decigrams = .035 ounce
 1 decagram = 10 grams = .35 ounce
 acres
 1 hectogram = 10 decagrams = 3.52 ounces
 1 kilogram = 10 hectograms = 2.2 pounds
 1 quintal = 100 kilograms = 220.46 pounds
 1 metric ton = 10 quintals = 1.1 short tons

Liquid Measure

1 centiliter = 10 milliliters = .34 fl. ounce
 1 deciliter = 10 centiliters = 3.38 fl. ounces
 1 liter = 10 deciliters = 33.81 fl. ounces
 1 dekaliter = 10 liters = 2.64 gallons
 1 hectoliter = 10 dekaliters = 26.42 gallons
 1 kiloliter = 10 hectoliters = 264.18 gallons

Square Measure

1 sq. centimeter = 100 sq. millimeters = .155 sq. inch
 1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches
 1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet
 1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet
 1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47
 1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

Cubic Measure

1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch
 1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches
 1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

Approximate Conversion Factors

<i>To change</i>	<i>To</i>	<i>Multiply by</i>	<i>To change</i>	<i>To</i>	<i>Multiply by</i>
inches	centimeters	2.540	ounce-inches	Newton-meters	.007062
feet	meters	.305	centimeters	inches	.394
yards	meters	.914	meters	feet	3.280
miles	kilometers	1.609	meters	yards	1.094
square inches	square centimeters	6.451	kilometers	miles	.621
square feet	square meters	.093	square centimeters	square inches	.155
square yards	square meters	.836	square meters	square feet	10.764
square miles	square kilometers	2.590	square meters	square yards	1.196
acres	square hectometers	.405	square kilometers	square miles	.386
cubic feet	cubic meters	.028	square hectometers	acres	2.471
cubic yards	cubic meters	.765	cubic meters	cubic feet	35.315
fluid ounces	milliliters	29,573	cubic meters	cubic yards	1.308
pints	liters	.473	milliliters	fluid ounces	.034
quarts	liters	.946	liters	pints	2.113
gallons	liters	3.785	liters	quarts	1.057
ounces	grams	28.349	liters	gallons	.264
pounds	kilograms	.454	grams	ounces	.035
short tons	metric tons	.907	kilograms	pounds	2.205
pound-feet	Newton-meters	1.356	metric tons	short tons	1.102
pound-inches	Newton-meters	.11296			

Temperature (Exact)

°F	Fahrenheit temperature	5/9 (after subtracting 32)	Celsius temperature	°C
----	------------------------	----------------------------	---------------------	----

PIN: 035253-005