

LUBRICATION ORDER

14 JULY 1972 (Supersedes L05-4310-346-12 dated 7 JAN 72)

**COMPRESSOR, AIR, RECIPROCATING, 4 WHEEL MTD, G.E.D., 15 CFM,
3500 PSI, (STEWART WARNER MODEL 12021A)**

Reference: L05-2805-259-12 FEDERAL SUPPLY CATALOG C91 00-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing or fording.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.


Drain reservoir when hot. Fill and check level.

*The time specified is the time required to perform services at that particular interval.

*TOTAL MAN-HR		*TOTAL MAN-HR	
INTERVAL	MAN-HR	INTERNAL	MAN-HR
50	1.0	250	.5
		1000	2.0

FOLD

FOLD

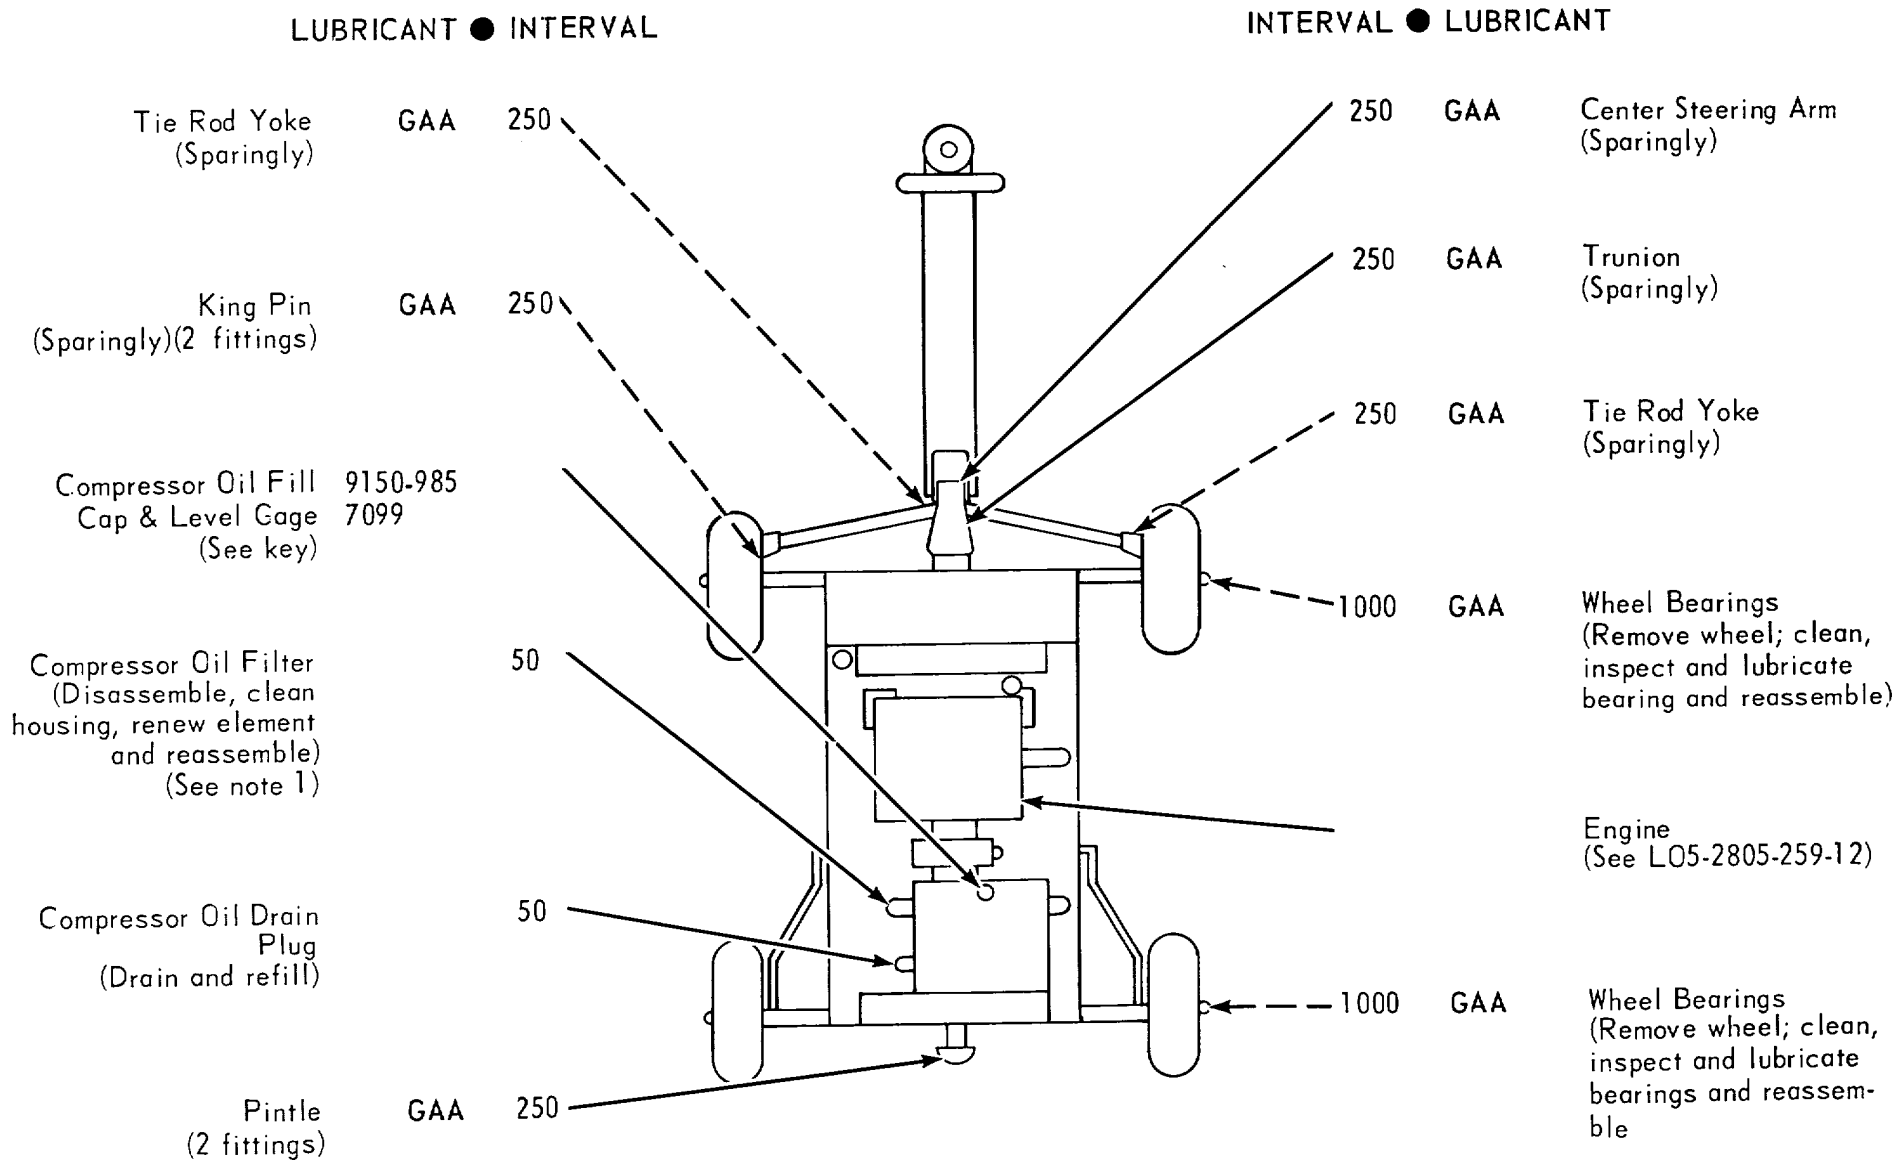

-KEY-

LUBRICANTS	CAPACITY	EXPECTED TEMPERATURES	INTERVALS
OE HDO-LUBRICATING OIL			Intervals given are in hours of normal operation
Oil Can Points		OE/HDO 30	
LUBRICATING OIL			
Compressor, Crankcase		9150-985-7099	
GAA - GREASE, Automotive & Artillery		GAA	

NOTES:

1. OIL FILTER. After installing new oil filter element, fill crankcase, operate compressor 5 minutes, check filter housing for leaks, check crankcase oil level and bring to full mark.

2. OIL CAN POINTS. Every 50 hours, clean and lightly coat hinges, latches, hand brake linkage with OE/HDO.

3. LUBRICANTS. The following is a list of lubricants with the Military Symbols and the applicable specification numbers.

OE HDO MIL-L-2104C 9150-985-7099 MIL-L-23699
 GAA MIL-G-10924

Copy of this Lubrication Order will remain with the equipment at all times; instructions contained herein are mandatory.

BY ORDER OF THE SECRETARY OF THE ARMY:

BRUCE PALMER, JR.
 General, U.S. Army
 Acting Chief of Staff

OFFICIAL:

VERNE L. BOWERS
 Major General, United States Army,
 The Adjutant General.

FOLD

FOLD

