

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR'S, ORGANIZATIONAL DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS
PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
SWITCH BOARD, TELEPHONE, MANUAL SB-993/GT
FSN 5805-708-2202

Headquarters, Department of the Army, Washington, D.C.

31 August 1973

Current as of February 1973

	<i>Paragraph</i>	<i>Page</i>
SECTION I INTRODUCTION		
S c o p e	1-1	2
G e n e r a l	1-2	2
Explanation of columns	1-3	2
Special information	1-4	4
Location of repair parts	1-5	5
Abbreviations (Not applicable)	1-6	5
Reporting of equipment manual improvements	1-7	
II BASIC ISSUE ITEMS LIST (Not applicable)		
III ITEMS TROOP INSTALLED OR AUTHORIZED LIST (Not applicable)		
IV. PBESCIBED LOAD ALIOWANCE (Not applicable)		
V. REPAIR PARTS LIST		6
VI SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
VII REPAIR PARTS LIST		7
VIII SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IX INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CBOSS-REFERENCE TO FIGURE AND ITEM NUMBER		8

SECTION I INTRODUCTION

1-1. Scope

This manual lists basic issue items, items troop installed or authorized, repair parts, and special tools required by the crew/operator for operation and required for the performance of organizational, direct support, general support, and depot maintenance of the SB-993/GT. The PCCN for the SB-993/GT is GCWAAY for all models.

1-2. General

This basic issue items, items troop installed or authorized, repair parts, and special tools list is divided into the following sections-

- a. Basic Issue Item List-Section II. Not applicable.
- b. Item Troop Installed or Authorized List-Section III. Not applicable.
- c. Prescribed Load Allowance (PLA)-Section IV. Not applicable.
- d. Repair Parts List-Section V. A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.
- e. Special Tools, Test and support Equipment-Section VI. Not applicable.
- f. Repair Parts List-Section VII. A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.
- g. Special Tools, Test and Support Equipment-Section VIII. Not applicable.
- h. Index-Federal Stock Number and Reference Number cross-Reference to Figure and Item Number-Section IX. A list in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of column found in the tabular list.

- a Source, Maintenance, and Recoverability Codes (SMR).

(1) Source code. Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are—

Code	Explanation
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at direct support maintenance level
MH	Item to be manufactured or fabricated at general support maintenance level

Code	Explanation
MD-	Item to be manufactured or fabricated at depot maintenance level.
AO-	Item to be assembled at organizational level.
AF-	Item to be assembled at direct support maintenance level.
AH-	Item to be assembled at general support maintenance level.
AD-	Item to be assembled at depot maintenance level
XA-	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB-	Item is not procured or stocked. If not available through salvage, requisition.
XC-	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturer' part number.
XD-	Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows-

(a) Use (third position). The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance

Code	Application/Explanation
O-	Support item is removed, replaced, used at the organizational level of maintenance

NOTE

A code "c" may be use in this position to denote crew or operator maintenance performed within organizational maintenance

Code	Application/Explanation
F-	Support item is removed, replaced, used at the direct support maintenance level.
H-	Support item is removed, replaced, used at the general support maintenance.
D-	Support items that are removed, replaced, used at depot only.

(b) Repair (fourth position). The maintenance code entered in the fourth position indicates whether the item is to be repaired and indicates the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code-

Code	Application/Explanation
O-	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F-	The lowest maintenance level capable of complete repair of the support item is direct support.
H-	The lowest maintenance level capable of complete repair of the support item is general support
D-	The lowest maintenance level capable of complete repair of the support item is the depot level.
L-	Repair restricted to designated Specialized Repair Activity.
Z-	Non-repairable. No repair is authorized.
B-	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows-

Code	Explanation
Z-	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O-	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.

- | <i>Code</i> | <i>Explanation</i> |
|-------------|---|
| F— | Repairable item. When uneconomically repairable, condemn and dispose at the direct support level. |
| H— | Repairable item. When uneconomically repairable, condemn and dispose at the general support level. |
| D— | Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level. |
| L— | Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level. |
| A— | Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). |

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetic abbreviation, e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. Quantity Furnished with Equipment (Basic Issue Items Only). Not applicable.

f. Quantity Authorized (Items Troop Installed or Authorized Only). Not applicable.

g. Quantity Incorporated in Unit. This column indicates the quantity of the item used in the equipment.

h. 15-Day Organizational Maintenance Allowances.

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required"

basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to the Commanding General, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, N.J., 07703.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other support equipment.

i. 30-Day DS/GS Maintenance Allowances.

NOTE

Allowances in GS column are for GS maintenance only.

(1) The repair parts indicated by asterisk entries in separate allowance columns for DS and GS represent those authorized for use at that category of maintenance to be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Allowance quantities are indicated in the special tool lists section for special tools, TMDE, and other support equipment.

j. 1-Year Allowances Per 100 Equipments/Contingency Planning Purposes. Column intentionally left blank.

k. Depot Maintenance Allowance Per 100 Equipments. This column indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments.

l. Illustration.

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown in TM 11-5805-294-15.

(2) *Item number.* Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are—

<i>Code</i>	<i>Used on</i>
ABP	SB-993/GT

b. The following publication pertains to the SB-993/G7 and its components:

TM 11-5805-294-15 Operation and Organizational and Field Maintenance: Switchboard, Telephone, Manual SB-993/GT.

1-5. Location of Repair Parts

a. This manual contains one cross reference index (sec IX) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec IX), and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec V and VII) and locate the figure number (col 7a-20P, 10a-34P) and item number or reference designation (col 7b-20P, 10b-34P) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b-20P and 10a and 10b-35P, of the repair parts list (sec V and VII) until the item is located.

d. When the FSN, reference number, figure number, and item number are not known, scrutinize column 3 of the repair parts list (sec V and VII), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Manual Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSFL-MA-CW, Fort Monmouth, N.J., 07703.

(Next printed page is 6)

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUSTRATION	
						(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIGURE NO	(b) ITEM NO
PAOZZ	5805-708-2203	ADAPTER, CONNECTOR U-184/GT U184GT (80058)	CP1	EA	7	*	*	*	*	1	CP1
PAOZZ	5805-681-9874	CASE, SWITCHBOARD CY-2589/GT CY2589GT (80058)	A1	EA	1	*	*	*	*	1	A1
PAOZZ	5805-502-1366	CLIP, ELECTRICAL SCD1916-16 (80063)	MP3	EA	14	*	*	*	*	1	MP3
PAOZZ	5805-356-4894	STRAP, MOUNTING SCD19198GR6 (80063)	MP13	EA	1	*	*	*	*	1	MP13

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR. CODE USABLE ON CODE		(4) UNIT OF MEAS	(5) QTY INC	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER EQUIP CNTGCY	(9) DEPOT MAINT ALW PER EQUIP	(10) ILLUSTRATION	
						(A)	(B)	(C)	(A)	(B)	(C)			(A)	(B)
PAOZZ	5805-708-2203	ADAPTER, CONNECTOR U-184/GT U184GT (80058)	CP1	EA	7	*	*	*	*	*	*		4	1	CP1
PAOZZ	5805-681-9874	CASE, SWITCHBOARD CY-2589/GT CY2589GT (80058)	A1	EA	1	*	*	*	*	*	*		3	1	A1
PAOZZ	5805-502-1366	CLIP, ELECTRICAL SCD1916-16 (80063)	MP3	EA	14	*	*	*	*	*	*		3	1	MP3
PAOZZ	5805-356-4894	STRAP, MOUNTING SCD19198GR6 (80069)	MP13	EA	1	*	*	*	*	*	*		2	1	MP13

INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER
CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5805-356-4894	1	MP13	5805-681-9874	1	A1
5805-502-1366	1	MP3	5805-708-2203	1	CP1

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

Active Army:

USASA (3)	MAAG (1)	7-100
CNGB (1)	USARMIS (1)	8-35
ACSC-E (2)	WRAMC (1)	8-36
USAARENBD (2)	Units org under fol TOE	8-65
USAMB (10)	(1 copy each):	8-66
AMC (1)	5-25	8-67
FORSCOM (5)	5-26	10-500
ARADCOM (2)	5-27	11-16
ARADCOM Rgn (2)	5-38	11-97
OS Maj Comd (4)	5-54	11-117
LOGCOMD (5)	5-77	11-500 (AA-AC)
MICOM (2)	5-78	17
TECOM (2)	5-127	17-15
USASTRATCOM (4)	5-137	17-16
HISA (ECOM) (21)	5-145	17-18
MDW (7)	5-146	17-27
Armies (2)	5-147	17-35
Corps (2)	5-148	17-36
Svc Colleges (2)	5-155	17-37
USASESS (5)	5-156	17-51
USAADS (2)	5-157	17-55
USAFAS (2)	5-177	17-57
USAARMS (2)	6-37	17-100
USAIS (2)	6-100	19-47
USAES (2)	6-115	19-247
USAINTS (3)	6-117	29-1
USACDCEC (5)	6-155	29-21
Instl (2) except	6-156	29-56
Fort Gordon (10)	6-185	29-65
Fort Huachuca (10)	6-186	29-75
Fort Carson (10)	6-200	29-76
Ft Richardson (ECOM Ofc)	6-215	29-105
(2)	6-216	29-106
WSMR (2)	6-300	32-56
Army Dep (2) except	6-575	32-57
LBAD (14)	6-576	33-77
SAAD (30)	7	37
TOAD (14)	7-15	39-51
LEAD (7)	7-16	55-17
ATAD (10)	7-18	55-18
USA Dep (2)	7-35	55-28
Sig Sec USA Dep (2)	7-36	55-37
Sig Dep (5)	7-37	55-38
Sig FLDMS (1)	7-45	55-128
USAERDAA (1)	7-46	57
USAERDAW (1)	7-47	57-100

NG: None.

USAR: None.

For explanation of abbreviations used, see AR 310-50.

