

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST**

FOR

**TELEPHONE SET TA-341B/TT
(NSN 6605-00-179-8441)**

This publication is a courtesy quick copy from the UNITED STATES ARMY ADJUTANT GENERAL PUBLICATIONS CENTER, ST. LOUIS, MISSOURI, to meet your needs while we are replenishing our regular stock.

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
 AND SPECIAL TOOLS LIST
 FOR
 TELEPHONE SET TA-341 B/TT
 (NSN 5805-01 -039-3499)**

Current as of 21 October 1980

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS
 You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.
 In either case, a reply will be furnished direct to you.

TABLE of CONTENTS

		Page	Illus Figure
SECTION I.	Introduction.....	1	
	II. Repair Parts List	5	
Group 00	Telephone Set TA-341B/TT	5	
	01 Telephone Set Assembly (No parts authorized		
0101	Base Plate Assembly	7	3
	Handset Handle Assembly	9	5
	010101 Printed Circuit Card Assembly (No parts authorized)		
	010102 Hookswitch Assembly (No parts authorized)		
SECTION III.	Special Tools List (Not applicable)		
IV.	National Stock Number and Part Number Index.....	10	

*This manual supersedes so much of TM 11-5805-384-12, 22 November 1974, as pertains to repair parts and special tools list.

**SECTION I
INTRODUCTION**

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the TA-341B/TT. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part

Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	Nonreparable. No repair is authorized.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
D	Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation,

or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-41/42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc.). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. The following publications pertain to the TA-341B/TT and its components: TM 11-5805-384-12, Telephone Sets TA-341/TT, TA-341A/TT and TA-341B/TT.

b. The illustrations in this manual are identical to those published in TM 11-5805-384-30P. Only those parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing; therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual equipment.

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) First. Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) Second. Find the illustration covering the functional group to which the item belongs.

(3) Third. Identify the item on the illustration and note the illustration figure and item number of the item.

(4) Fourth. Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

 
 
(1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) Second. After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)

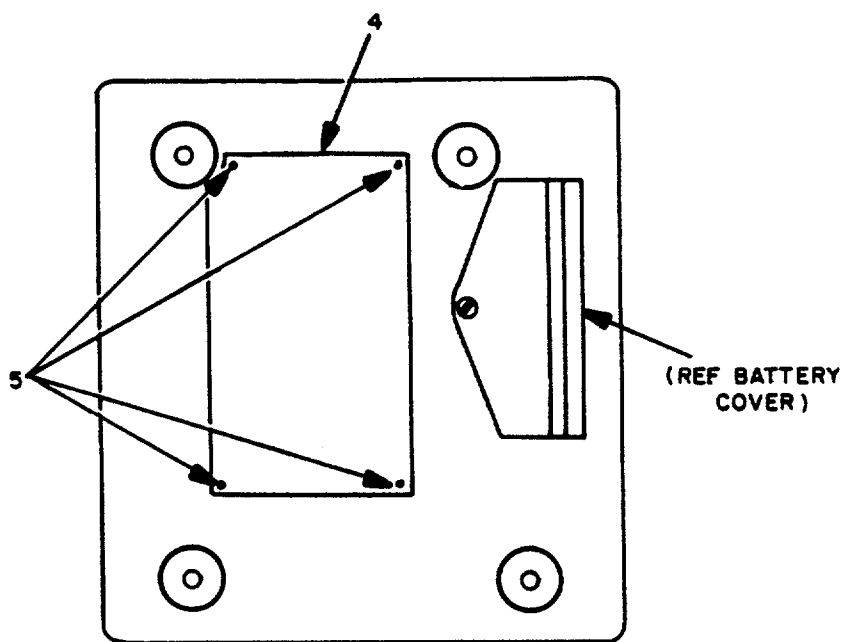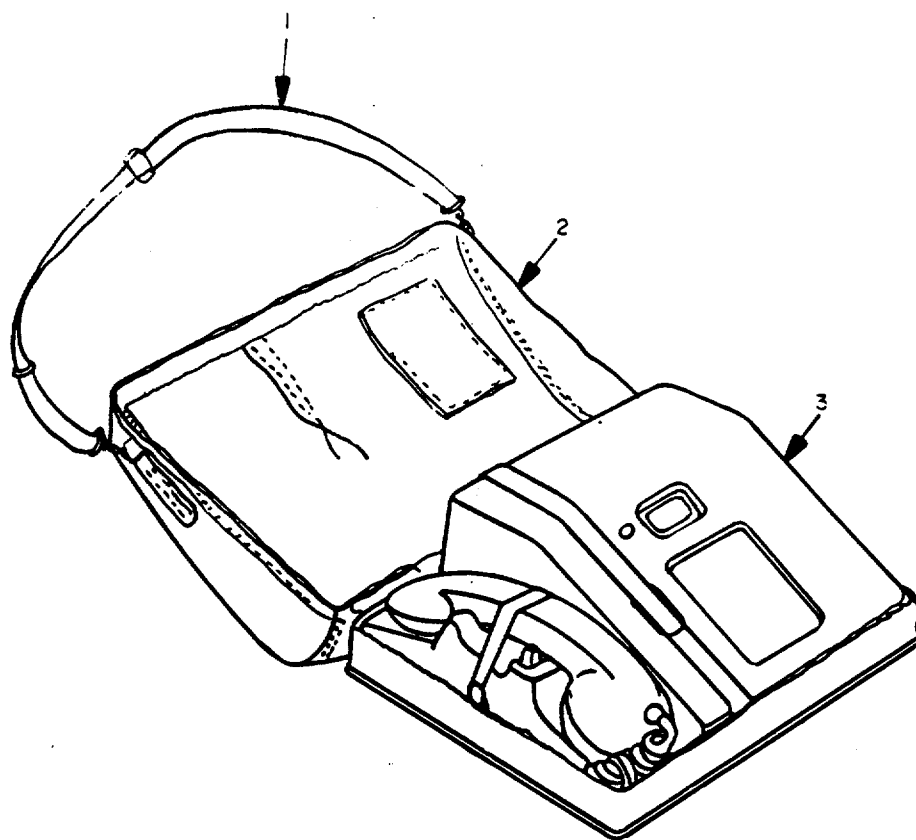

BOTTOM VIEW OF TELEPHONE

EL6QJ001

Figure 1. Telephone Set TA-341B/TT

SECTION II

TM 11-5805-384-20P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 00 TELEPHONE SET TA-341B/TT		
1	1	XDOZZ		SMC751153	80063	SLING, CARRYING CASE	EA	1
1	2	XDOZZ		SMD751154	80063	CASE, TELEPHONE SET	EA	1
1	3	XDODD		SMD751156	80063	TELEPHONE SET ASSEMBLY	EA	1
1	4	XDOZZ		SMD751155	80063	PLATE, IDENT	EA	1


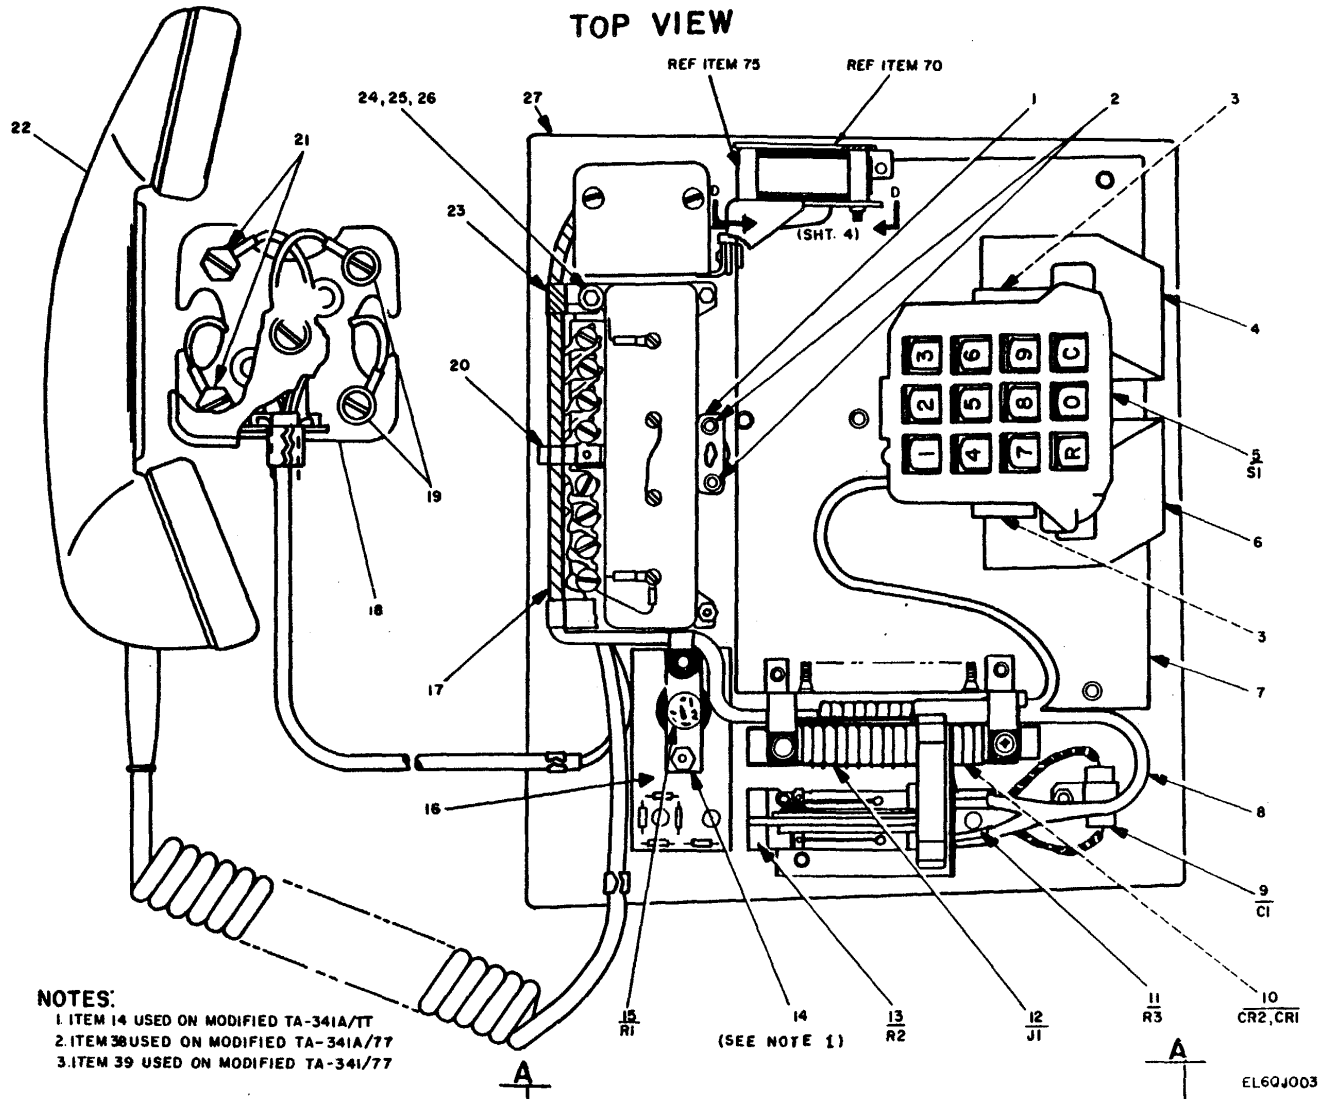 


Figure 3. Base Plate Assembly

SECTION II

TM 11-5805-384-20P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 0101 BASE PLATE ASSEMBLY		
3	18	PAOZZ	5805-00-348-3833	SMC751184	80063	DESK CORD AND CONNECTOR BLOCK ASSY	EA	1
3	19	XDOZZ		SMB751201	80063	SCREW, MACHINE	EA	2
3	21	XDOZZ		SMB751256	80063	SCREW, MACHINE	EA	2
3	22	PAOZZ	5965-00-372-2524	SMD751185	80063	HANDSET	EA	1

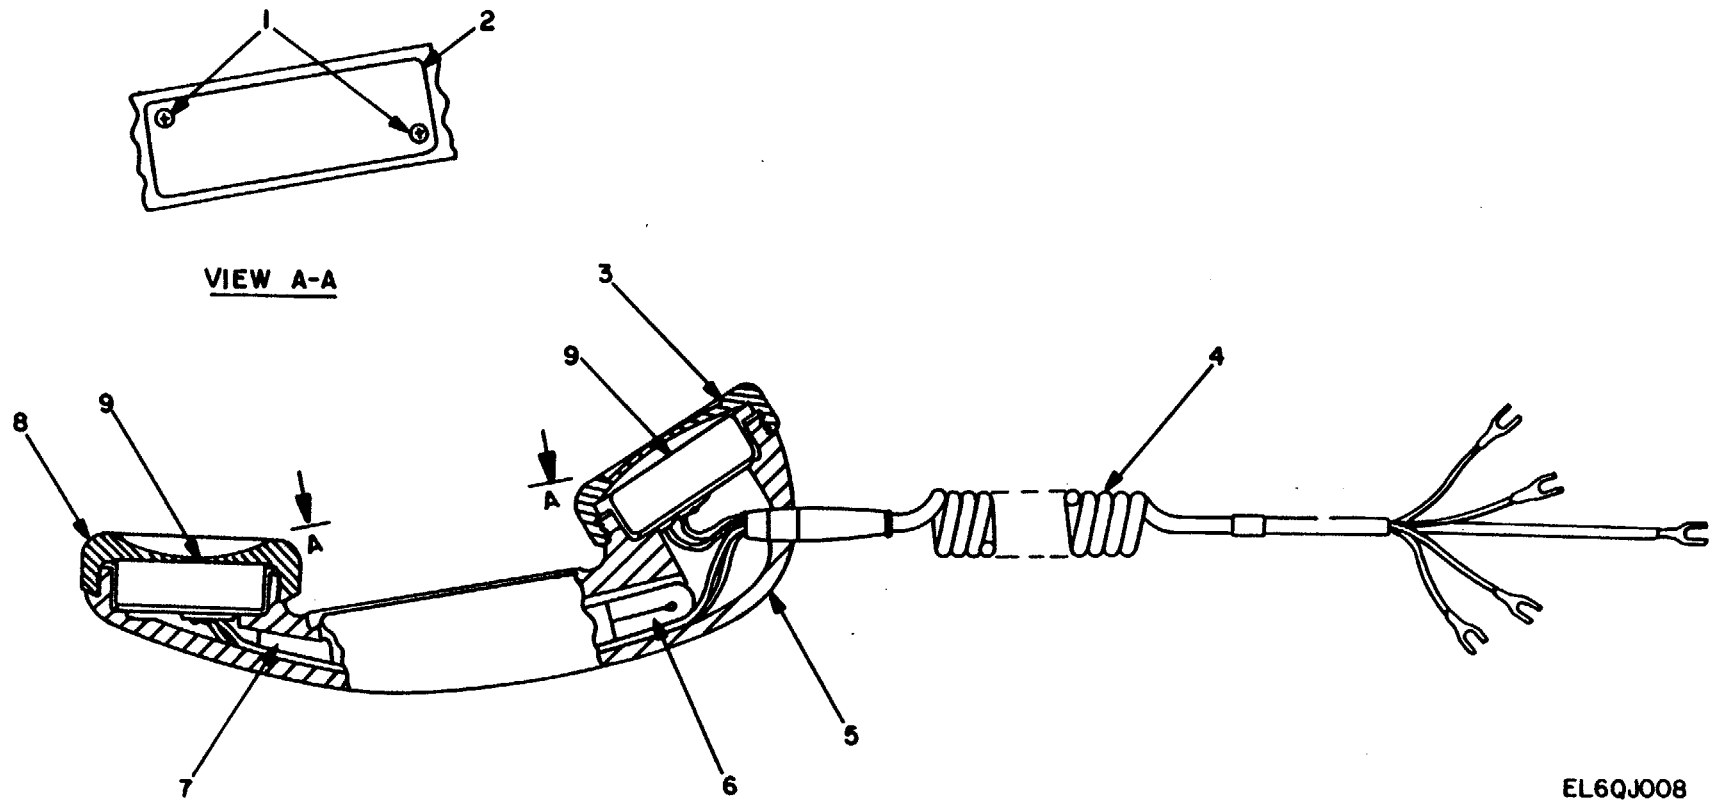 

EL6QJ008

Figure 5. Base Plate Assembly, Handset Handle Assembly

SECTION II

TM 11-5805-384-20P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
5	3	PAOZZ	5805-00-348-3850	SMD751204	80063	CAP, XMTR, HANDSET.....	EA	1
5	4	PAOZZ	5805-00-348-3851	SMC751206	80063	CORD ASSY ,HANDSET.....	EA	1
5	8	XDOZZ		SMD751205	80063	CAP, RCVR, HANDSET.....	EA	1
5	9	PAOZZ	5965-00-549-0220	TA-235/PT	80058	RCVR-XMTR ELEM, TEL.....	EA	2

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5805-00-348-3833	3	18	5965-00-372-2524	3	22
5805-00-348-3850	5	3	5965-00-549-0220	5	9
5805-00-348-3851	5	4			

PART NUMBER	FSCM	FIGURE NO.	ITEM NO.	PART NUMBER	FSCM	FIGURE NO.	ITEM NO.
TA-235/PT	80058	5	9	SMD751154	80063	1	2
SMB751201	80063	3	19	SMD751155	80063	1	4
SMB751256	80063	3	21	SMD751156	80063	1	3
SMC751153	80063	1	1	SMD751185	80063	3	22
SMC751184	80063	3	18	SMD751204	80063	5	3
SMC751206	80063	5	4	SMD751205	80063	5	8

By Order of the Secretary of the Army:

M. C. MEYER
General, United States Army
Chief of Staff

Official:

J. C. PENNINGTON
Major General, United States Army
The Adjutant General

Distribution:

Active Army

HISA (Ft Monmouth) (21) -
USAINSCOM (2)
COE (1)
TSG (1)
USAARENBD (1)
DARCOM (1)
TRADOC (2)
OS Maj Comd (4)
TECOM (2)
USACC (4)
MDW (1)
Armies (2)
Corps(2)
Svc Colleges (1)
USASIGS (S)
USAADS (2)
USAFAS (2)
USAARMS (2)
USAIS (2)

USAES (2)
USAICS (3)
MAAG (1)
USARMIS (1)
USAERDAA (1)
USAERDAW (1)
Ft Gordon (10)
Ft Carson (5)
Ft Gillem (10)
Ft Richardson (CERCOM Ofc) (2)
Army Dep (1) except
SAAD (30)
TOAD (14)
SHAD (2)
USA Dep (1)
Sig Sec USA Dep (1)
Units org under fol TOE: (2)
29-207
29-610

NG: None

USAR: None

For explanation of abbreviations used, see AR 310-50.

