TECHNICAL MANUAL

# ORGANIZATIONAL MAINTENANCE

**REPAIR PARTS AND SPECIAL TOOLS LIST** 

FOR

**TELEPHONE SET** 

TA-838/TT (NSN 5805-00-124-8678)

AND

TA-838A/TT (NSN5805-01-125-5976)

HEADQUARTERS, DEPARTMENT OF THE ARMY

12 SEPTEMBER 1985

TECHNICAL MANUAL

No. 11-5805-650-20P

HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON DC, 12 September 1985

### ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR

# TELEPHONE SET TA-838/TT (NSN 5805-00-124-8678)

#### AND

### TA-838A/TT (NSN 5805-01-125-5976)

### Current as of 1 June 1985

## REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-ME-MP, Fort Monmouth, NJ 07703-5007.

In either case, a reply will be furnished direct to you.

### Table of Contents

			mus
		Page	Figure
Section	I. Introduction	1	
	II. Repair Parts List		
GROUP	00 Telephone Set TA-838/TT and TA-838A/TT.	1-1	1
	01 Curcuit Card Assembly TA-838/TT (No parts authorized)		
	Circuit Card Assembly TA-838A/TT (No parts authorized)		
	02 Handset Assembly	4-1	4
	03 Shell Assembly	5-1	5
SECTION	III. Special Tools List (Not applicable)		
	IV. National Stock Number and Part Number Index	I-1	

т11.

# **SECTION I**

# INTRODUCTION

#### 1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational maintenance of the TA-838)/TT and TA-838A/TT. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

#### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.


b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphameric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

#### 3. Explanation of Columns (Section II and III)

a. Item No. (Column(1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

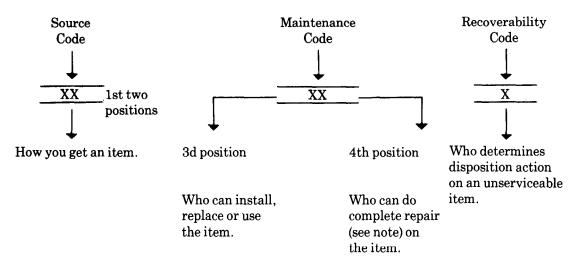

#### NOTE

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:



#### Explanation

Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the third position of the SMR code.

### NOTE

Items coded PC are subject to deterioration.

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the third position of the SMR code. The complete kit must be requisitioned and applied.

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the description and usable on code (UOC) column and listed in the Bulk Material group of the repair parts list. If the item is authorized to you by the third position code of the SMR code, but the source code indicates it is made at a higher category, order the item from the higher category of maintenance.

Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the category of maintenance indicated by the source code. If the disposition code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher category, order the item from the higher category of maintenance.

Code

Explanation

XA-Do not requisition an "XA" coded item. Order its next higher assembly.

XB-If an "XB" item is not available from salvage, order it using the FSCM and part number given.

XC-Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturers part number.

XD-Item is not stocked. Order an "XD" coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

#### NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) *Maintenance code.* Maintenance codes tell you the category of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance category authorized

to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance. Code

### Application/Explanation

C-Crew or operator maintenance done within organizational or aviation maintenance.

O-Organizational or aviation unit category can remove, replace, and use the item.

F-Direct support or aviation intermediate category can remove, replace, and use the item.

H-General support category can remove, replace, and use the item.

L-Specialized repair activity can remove, replace, and use the item.

D-Depot category can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance category with the capability to do complete repair (i.e., perform all authorized repair functions). This position will contain one of the following maintenance codes.

#### NOTE

Some limited repair may be done on the item at a lower category of maintenance, if au-

thorized by the Maintenance Allocation Chart (MAC) and SMR codes.

Code

#### Application/Explanation

O-Organizational or aviation unit is the lowest category that can do complete repair of the item.

F-Direct support or aviation intermediate is the lowest category that can do complete repair of the item.

H-General support is the lowest category that can do complete repair of the item.

L-Specialized repair activity (designate the specialized repair activity) is the lowest category that can do complete repair of the item.

D-Depot is the lowest category that can do complete repair of the item.

Z-Nonreparable. No repair is authorized.

B-No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item), However, the item may be reconditioned by adjusting, lubricating, etc., at the user category.

(3) Recoverability code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows: Recoverability

codes

#### Application/Explanation

Z-Nonreparable Item. When unserviceable, condemn and dispose of the item at the category of maintenance shown in the third position of SMR Code.

- O-Reparable item. When uneconomically reparable, condemn and dispose of the item at organizational or aviation unit category.
- F-Reparable item. When uneconomically reparable, condemn and dispose of the item at direct support or aviation intermediate category.

H-Reparable item. When uneconomically reparable, condemn and dispose of the item at general support category.

D-Reparable item. When beyond lower category repair capability, return to depot. Condemnation and disposal of item not authorized below depot category.

L-Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).

A-Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. FSCM (Column (3)), The Federal Supply Code for Manufacturer (FSCM) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

d. Part Number (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

### NOTE

When you use a NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. Description and Usable on Code (UOC) (Column (5)). This column includes the following information.

(1) The Federal item name and, when required, a minimum description to identify the item.

(2) Usable on code, when applicable (para 5),

(3) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both section II and section III.

f. Qty (Column (6.)). Indicates the quantity of the item used in the breakout shown on the illustration figure,

### TM 11-5805-650-20P

which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

## 4. Explanation of Columns (Section IV)

a. National Stock Number (NSN) Index.

(1) *Stock number column.* This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN. When using this column to locate an item, ignore the first four digits of the NSN. When requisitioning items use the complete NSN (13 digits).

(2) *Fig. column.* This column lists the number of the figure where the item is identified/located. The illustrations are in numerical sequence in sections II and III.

(3) *Item column.* The item number identifies the item associated with the figure listed in the adjacent Fig. column. This item is also identified by the NSN listed on the same line.

*b. Part Number Index.* Part numbers in this index are listed by part number in ascending alphameric sequence.

(1) *FSCM column.* This column lists the Federal supply code for manufacturer (FSCM).
(2) *Part number column.* This column indicates the part number assigned to the item.

(3) *Stock number column.* This column lists the National stock number for the associated part number and manufacturer identified in the part number and FSCM columns to the left.

(4) *Fig. column.* This column lists the number of the figure where the item is identified/located in sections II and III.

(5) *Item column.* The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

### 5. Special Information

*a. Usable on Code.* The usable on code appears in the lower left corner of the description column heading. Usable on codes are shown as "UOC: "in the description column (justified left) on the first line applicable item description nomenclature. Uncoded items are applicable to all models. Identification of the usable on codes used in this RPSTL are:

Code	Used on
CFS	TA-838/TT
EUG	TA-838A/TT

*b. Associated Publications.* The publications listed below pertain to the TA-838/TT and TA-838A/TT and their components:

TM 11-5805-650-12, Telephone Set TA-838/TT

TM 11-5805-650-20P, Telephone Set TA-838/TT

c. *Illustrations*—*Listing.* The illustrations in this RPSTL are identical to those published in TM 11-5805-650-34P. Only those parts coded "C" or "O" in the third position of the SMR code are listed in the tabular listing; therefore, there may be a break in the item number sequence, figure number and page number. Only illustrations containing organizational or aviation unit authorized items appear in this RPSTL.

d. *National Stock Numbers.* National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-MM, Fort Monmouth, NJ. 07703-5006 for the part required to support your equipment.

### 6. How to Locate Repair Parts

a. When National stock number or part number is not known.

(1) *First.* Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) *Third.* Identify the item on the figure and note the item number.

(4) *Fourth.* Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) *Fifth.* Refer to the Part Number Index to find the NSN, if assigned.

*b.* When National stock number or part number is known.

(1) First. Using the index of National stock numbers and part numbers, find the pertinent National stock num-

ber or part number. The NSN index is in National item identification number (NIIN) sequence (para 4a(1)). The part numbers in the part number index are listed in ascending alphameric sequence (para 4b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.

(2) Second. After finding the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.

### 7. Abbreviations

Not applicable.

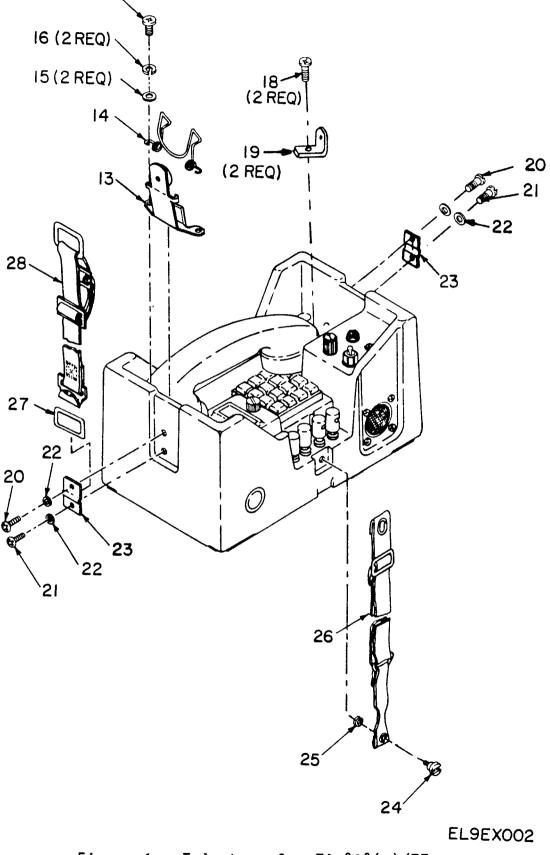


Figure 1. Telephone Set TA-838( )/TT

TM11-580 SECTION	)5-650-20P				
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR	( - <i>)</i>	PART		
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 00 TELEPHONE SET	
				TA-838/TT & TA-838A/TT	
				FIG.1	
13	PAOZZ	80063	SM-B-790810	BRACKET	1
14	PAOZZ	80063	SM-C-790713	SPRING, HELICAL, TORS	1
15	PAOZZ	96906	MS15795-805	WASHER, FLAT	2
16	PAOZZ	96906	MS35338-136	WASHER, LOCK	2
17	PAOZZ	96906	MS51959-28	SCREW, MACHINE	2
20	PAOZZ	96906	MS51957-42	SCREW, MACHINE	2
21	PAOZZ	96906	MS51957-44	SCREW, MACHINE	1
22	PAOZZ	96906	MS15795-807	WASHER, FLAT	2
23	PAOZZ	80063	SM-B-790688	RETAINER LOOP	1
24	PAOZZ	80063	SM-B-790719	SCREW, SHOULDER	1
25	PAOZZ	96906	MS35338-135	WASHER, LOCK	1
26	PAOZZ	80063	SM-C-790718	STRAP, TIEDOWN, ELECT	1
28	PAOZZ	80063	SM-C-790702	STRAP, WEBBING	1

END OF FIGURE

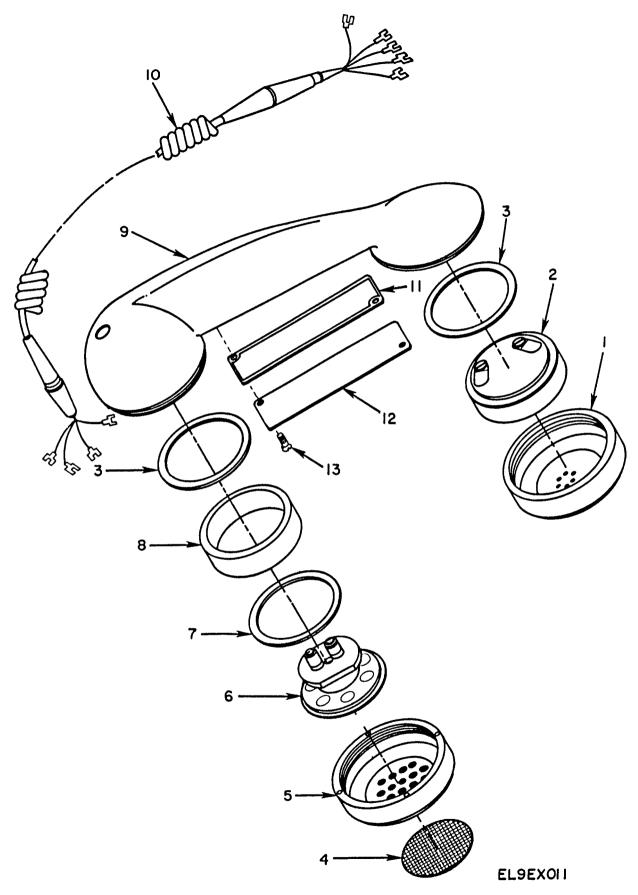


Figure 4. Handset Assembly

TM11-5805 SECTION I					
(1) ITEM	(2) SMR	(3)	(4) PART	(5)	(6)
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 02 HANDSET ASSEMBLY	
				FIG.4	
4	PAOZZ	80063	SM-B-207932	FILTER ELEMENT, AIR FOR USE IN COLD WEATHER OPERATION ONLY	1

END OF FIGURE

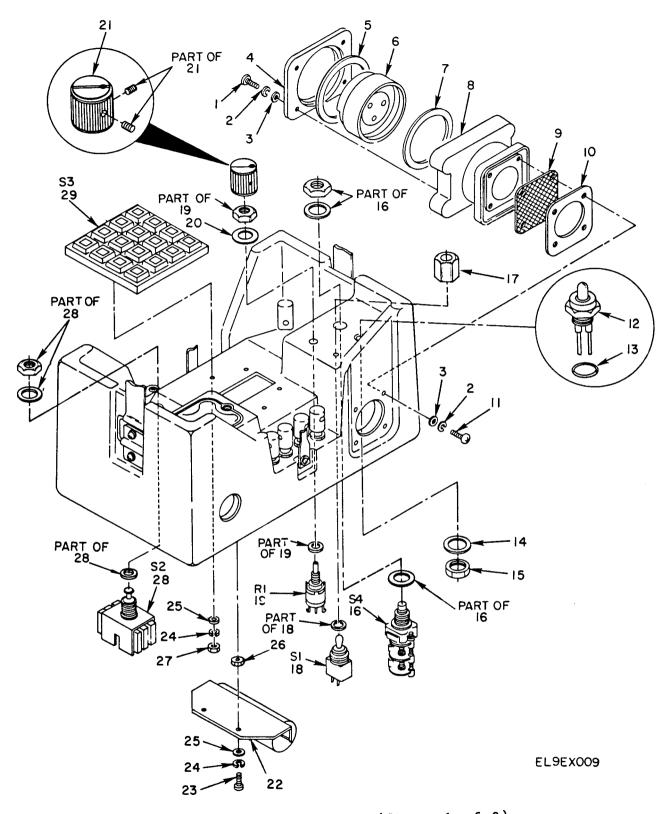


Figure 5. Shell Assembly (Sheet 1 of 2)

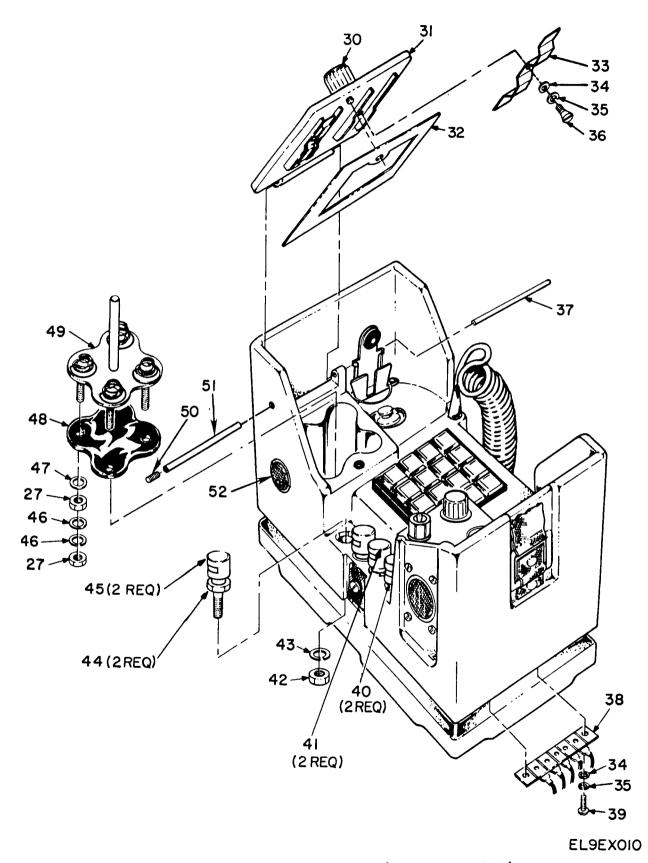


Figure 5. Shell Assembly (Sheet 2 of 2)

	5-650-20P				
SECTION					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 03 SHELL ASSEMBLY	
				FIG.5	
21	PAOZZ	96906	MS91528-0C1B	KNOB	1
41	PAOZZ	80063	SC-C-76202-1	BOOT, DUST AND MOIST	2
				UOC:CFS	
45	PAOZZ	80063	SC-C-76202-2	CAP, ELECTRICAL	2
				UOC:CFS	

END OF FIGURE

#### NATIONAL STOCK NUMBER AND PART NUMBER INDEX

	NATIONAL S	TOCK NUMBER	INDEX		
STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
5305-00-054-6667	1	20			
5305-00-054-6669	1	21			
5355-00-057-7794	5	21			
5940-00-254-2243	5	45			
4130-00-392-7628	4	4			
5310-00-722-5998	1	15			
5305-00-763-6963	1	17			
5970-00-869-6263	5	41			
5310-00-880-5978	1	22			
5310-00-929-6395	1	16			
5310-00-933-8118	1	25			
5340-01-015-1216	1	13			
5340-01-015-1254	1	28			
5975-01-015-1258	1	26			
5305-01-016-2297	1	24			
5360-01-017-9236	1	14			

#### NATIONAL STOCK NUMBER AND PART NUMBER INDEX

		PART NUMBER INDEX		
FSCM	PART NUMBER	STOCK NUMBER	FIG.	ITEM
96906	MS15795-805	5310-00-722-5998	1	15
96906	MS15795-807	5310-00-880-5978	1	22
96906	MS35338-135	5310-00-933-8118	1	25
96906	MS35338-136	5310-00-929-6395	1	16
96906	MS51957-42	5305-00-054-6667	1	20
96906	MS51957-44	5305-00-054-6669	1	21
96906	MS51959-28	5305-00-763-6963	1	17
96906	MS91528-0C1B	5355-00-057-7794	5	21
80063	SC-C-76202-1	5970-00-869-6263	5	41
80063	SC-C-76202-2	5940-00-254-2243	5	45
80063	SM-B-207932	4130-00-392-7628	4	4
80063	SM-B-790688		1	23
80063	SM-B-790719	5305-01-016-2297	1	24
80063	SM-B-790810	5340-01-015-1216	1	13
80063	SM-C-790702	5340-01-015-1254	1	28
80063	SM-C-790713	5360-01-017-9236	1	14
80063	SM-C-790718	5975-01-015-1258	1	26


$\Box$			1	RECOMM			B WRING with this publication?
			DOPE AL FORM, C	BOUT IT AREFUL LD IT AI	WN THE ON THIS LY TEAR IT ND DROP IT	FROM	(PRINT YOUR UNIT'S COMPLETE ADDRESS) Commander Stateside Army Depot ATTN: AMSTA-US Stateside, N.J. 07703-5007 SENT 10 July 1975
PUBLICAT		BER			PUBLICATION D	ATE	PUBLICATION TITLE
Т	M 11-5	840-340	)-20P		23 Jan 7	8	Radar Set AN/PRC-76
		OINT WHE			S SPACE TELL	WHAT	
PAGE NO	PARA- GRAPH	FIGURE NO	TABLE NO		HAT SHOULD		
33				For i <u>Reaso</u>		-	he NSN to read: 5835-00-134-9186.
44		19				sepa	n the junction box (item no. 5). rate item and as not called out
45				listi	he cover or ng for fig n: Same ar	ure 1	
		DE OR TITLE DeSpiri			ber - 1776	SIGN HE	VUMANA A. tol
			P		EDITIONS	P R	S IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR ECOMMENDATION MAKE A CARBON COPY OF THIS

1

TEAR ALONG PERFORATED LINE FILL IN YOUR UNIT'S ADDRESS FOLD BACK DEPARTMENT OF THE ARMY POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD 314 L.S. MAIL 5 MPL OFFICIAL BUSINESS L PENALTY FOR PRIVATE USE \$300 L A Commander **US Army Communications-Electronics Command** and Fort Monmouth ATTN: AMSEL-ME-MP Fort Monmouth, New Jersey 07703-5007

REVERSE OF DA FORM 2028-2

71				SOMETHIN	B WRONE WITH THIS PUBLICATION
		DOPE A FORM. (	BOUT I CAREFU	OWN THE TON THIS JLLY TEAR	OM: (PRINT YOUR UNIT'S COMPLETE ADDRESS
		DROP IT		D IT AND	ITE SENT
PUBLICATION				PUBLICATION DATE	PUBLICATION TITLE TELEPHONE SET
	11-5805-6			12 SEP 85	TA-838/TT AND TA-838A/TT
				SPACE TELL WHAT IS V HAT SHOULD BE DONE	
RINTED NAME G	RADE OR TITLE AND	TELEPHONE NUM	ABER	SIGN H	HERE

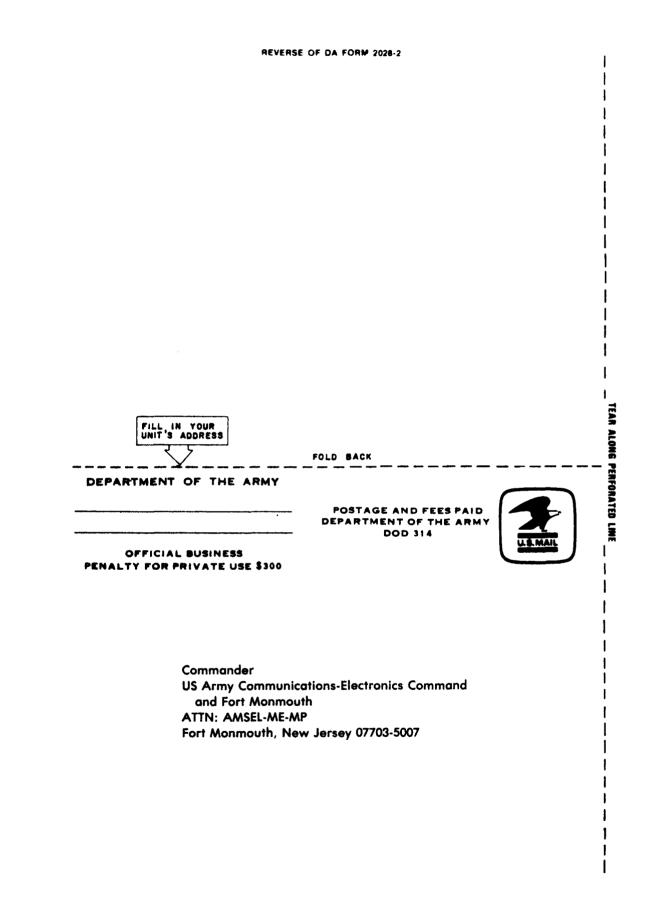


L'			DOWN THE	FROM: (PRINT YO	UR UNIT'S COMPLETE ADDRESS
		DOPE ABOUT FORM. CARE IT OUT, FO DROP IT IN 1	FULLY TEAR	DATE SENT	
PUBLICATIO	ON NUMBER		PUBLICATION DAT	E PUBLICATIO	N TITLE TELEPHONE SET
TM 1	11-5805-650	-20P	12 SEP 85	TA-838	B/TT AND TA-838A/TT
BE EXACT	PIN-POINT WH	T IN 11	IS SPACE TELL WHAT WHAT SHOULD BE DO		
PRINTED NAM	E GRADE OR TITLE AND	TELEPHONE NUMBER	SIG	N HERE	

REVERSE OF DA FORM 2028-2

.

Fort Monmouth, New Jersey 07703-5007

7	1"1				SOMETH	ING	WRONE WITH THIS PUBLICATION
		$\dot{\boldsymbol{x}}$	DOPE A FORM. (	BOUT I	OWN THE T ON THIS JLLY TEAR D IT AND		A: (PRINT YOUR UNIT'S COMPLETE ADDRESS
					E MAIL.	DATE	SENT
UBLICA					PUBLICATION DA		PUBLICATION TITLE TELEPHONE SET
					12 SEP 8	35	TA-838/TT AND TA-838A/TT
BE EXA PAGE	PARA- GRAPH	FIGURE	TABLE NO.		SPACE TELL WHA		
RINTED NA	ME GRADE OF	TITLE AND T		ABER	SI	GN HER	RE

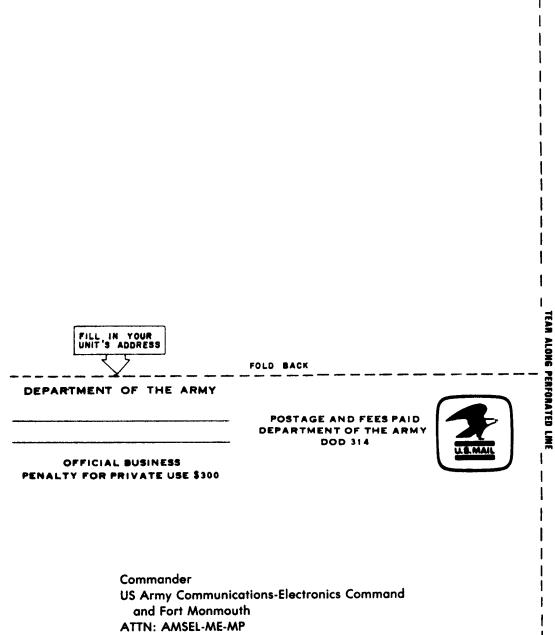

1

REVERSE OF DA FORM 2028-2

Fort Monmouth, New Jersey 07703-5007

By Order of the Secretary of the Army:

JOHN A. WICKHAM JR. General, United States Army Chief of Staff

Official:

DONALD J. DELANDRO Brigadier General, United States Army The Adjutant General

**DISTRIBUTION:** 

To be distributed in accordance with DA Form 12-36 literature requirements for TA-838/TT.

PIN: 058588-000