

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
CONVERTERS CV-2/TX (FSN 5815-243-4494),
CV-2A/TX (FSN 5815-498-8152), AND
CV-2C/TX (FSN 5815-503-2598)

Headquarters, Department of the Army, Washington, DC
28 September 1973

Current as of march 1973

Section		Paragraphs	Page
I.	INTRODUCTION		
	Scope	1-1	2
	General.....	1-2	2
	Explanation of columns	1-3	2
	Special information.....	1-4	4
	Location of repair parts.....	1-5	4
	Abbreviation(Not applicable)	1-6	4
	Reporting of equipment publication improvements	1-7	4
II.	PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III.	REPAIR PARTS LIST		6
IV.	SPECIAL TOO.S, TEST AND SUPPORT EQUIPMENT (Not applicable)		
V.	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		7

THIS PUBLICATION IS A COURTESY QUICK COPY FROM THE UNITED STATES ARMY PUBLICATIONS DISTRIBUTION CENTER, ST. LOUIS, MISSOURI, TO MEET YOUR NEEDS WHILE WE REPLENISH OUR REGULAR STOCK.

*This manual supersedes TM 11-5815-225-20P, 21 September 1962.

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the CV-2/TX, CV-2A/TX, and CV2C/TX. The PCCN for the equipment is GCMAAG for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. Prescribed Load Allowance (PLA)-Section II. Not applicable.

b. Repair Parts List-Section III. A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

c. Special Tools, Test and Support Equipment Section IV. Not applicable.

d. Index-Federal Stock Number and Reference Number cross-reference to Figure and Item Number-Section V A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists:

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source code. Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are-

Code	Explanation
PA	- Item procured and stocked for anticipated or known usage.
PB	- Item procured and stocked for insurance purposes because essentially dictates that a minimum quantity be available in the supply systems.
PC	- Item procured and stocked and which otherwise would be coded PA except that it is deteriorate in nature.
PD	- Support item, excluding support equipment. procured for initial issue or outfitting and stocked only for subsequent or additional

Code	Explanation
	initial issues or outfitting. Not subject to automatic replenishment.
PE	- Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	- Support equipment which will not be stocked but which *will be centrally procured on demand.
PG	- Item procured and stocked to provide for sustained support the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	- An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	- An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	- Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	- Item to be manufactured or fabricated at organizational level.
MF	- Item to be manufactured or fabricated at direct support maintenance level.
MH	- Item to be manufactured or fabricated at general support maintenance level.
MD	- Item to be manufactured or fabricated at depot maintenance level.
AO	- Item to be assembled at organizational level.
AF	- Item to be assembled at direct support maintenance level.
AH	- Item to be assembled at general support maintenance level.
AD	- Item to be assembled at depot maintenance level.
XA	- Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	- Item is not procured or stocked. If not available through salvage, requisition.
XC	- Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD	- Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows:

(a) Use (third position). The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

- F - Support item is removed, replaced, used at the direct support maintenance level.
- H - Support item is removed, replaced, used at the general support maintenance.
- D - Support items that are removed, replaced, used at depot only.

(b) Repair (fourth position). The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multiservice equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code:

Code	Application/Explanation
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	The lowest maintenance level capable of complete repair of the support item is direct support.
H	The lowest maintenance level capable of complete repair of the support item is general support.

Code	Application/Explanation
-------------	--------------------------------

- D - The lowest maintenance level capable of complete repair of the support item is the depot level.
- L - Repair restricted to designated Specialized Repair Activity.
- Z - Non-repairable. No repair is authorized.
- B - No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows

Code	Explanation
Z	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
F	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
H	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). <ul style="list-style-type: none"> b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes. c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. Quantity Incorporated in Unit. This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. 15-Day Organizational Maintenance Allowance.

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, NJ., 07703. Any changes approved will be reflected in a revision to the RPSTL.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other equipment.

g. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown in TM 11-2252 and TM 11-2252A.

(2) Item number. Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are-

Code	Used On
AB1	CV-2/TX
AB2	CV-2A/TX
AB3CV-2C/TX	

b. The following publications pertain to the equipment and its components:

- TM 11-2252 Converters CV-2/TX and CV-2A/TX.
- TM 11-2252A Converter CV-2C/TX
- TM 114021 Converter CV-2/TX, Repair Instructions.

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (sec V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec V) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec III) and locate the figure number (col 7a) and item number or reference designation (col 7b) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (sec III) until the item is located.

d. When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec III), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, NJ 07703.

(Next printed page is 6)

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION		
					(A)	(B)	(C)	(D)	(A)	(B)	
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.	
PAOFD5	995-162-6866	CABLE ASSEMBLY, POWER ELECTRICAL 2 CONO STRANDED 14AWG 14FT 20-2061 (65599)	NO-REF-DESIG..	EA	1	*	*	*	*	5	
PAOFD5	995-162-6854	CABLE ASSEMBLY, POWER ELECTRICAL 2 CONO STRANDED 14AWG 6FT SCC135810 (80063)	NO-REF-DESIG..	EA	1	*	*	*	*	5	
PAOZZ	5920-244-5150	CAP, ELECTRICAL 9435-1-2 (71400)	CAP FOR FUSEHOLDER...	EA	2	*	*	*	*		
PAOZZ	5920-244-5150	CAP, ELECTRICAL 9435-1-2 (71400)	CAP FOR FUSEHOLDER...	EA	REF	*	*	*	*		
PAOZZ	5960-188-8573	ELECTRON TUBE 003 (8134934)	V11..... AB1,AB2	EA	1	*	*	*	*	5	V11
PAOZZ	5960-188-8573	ELECTRON TUBE 003 (81349)	V7..... AB3	EA	1	*	*	*	*	20	V7
PAOZZ	5960-188-3568	ELECTRON TLBE 6E5 (81349)	V6..... AB1,AB2	EA	1	*	*	*	*	5	V6
PAOZZ	5960-188-3968	ELECTRON TLBE 6E5 (81349)	V8..... AB3	EA	1	*	*	*	*	20	V8
PAOZZ	5960-188-3575	ELECTRON TUBE 6SK7GT (81349)	V2.....	EA	1	*	*	*	*	5	V2
PAOZZ	5960-188-C926	ELECTRON TUBE 6X5WGT (81349)	V10..... AB1,AB2	EA	1	*	*	*	*	5	V10
PAOZZ	5960-1880926	ELECTRON TUBE 6X5WGT (81349)	V6..... AB3	EA	1	*	*	*	*	20	V6
PAOZZ	5960-100-6017	ELECTRON TUBE 7L7 (81349)	V4.....	EA	1	*	*	*	*	5	V4
PAOZZ	5960-235-9108	ELECTRON TUBE 7L7 (81349)	V1..... AB1,AB2	EA	6	*	*	*	*	5	V1
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V3..... AB1,AB2	EA	REF	*	*	*	*	5	V3
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V5..... AB1,AB2	EA	REF	*	*	*	*	5	V5
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V9..... AB1,AB2	EA	REF	*	*	*	*	5	V7
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V10..... AB1,AB2	EA	REF	*	*	*	*	5	V8
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V11..... AB1,AB2	EA	REF	*	*	*	*	9	V9
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V1..... AB3	EA	6	*	*	*	*	20	V1
PAOZZ	5960235-9108	ELECTRON TUBE 7N7 (81349)	V3..... A3	EA	REF	*	*	*	*	20	V3
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V5..... AB3	EA	REF	*	*	*	*	20	V5
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V9..... AB3	EA	REF	*	*	*	*	20	V9
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V10..... AB3	EA	REF	*	*	*	*	20	V10
PAOZZ	5960-235-9108	ELECTRON TUBE 7N7 (81349)	V11..... AB3	EA	REF	*	*	*	*	20	V11
PAOZZ	5923-050-0598	FUSE CARTRIDGE FO1G1ROOA (81349)	FU1 1 AMP 250 V MAX AB1,AB2	EA	1	*	*	*	*	5	FU1
PAOZZ	5920-050-0598	FUSE, CARTRIDGE FO1G1ROOA (81349)	F1 1 AMP 250 V MAX..... AB3	EA	1	*	*	*	*	20	F1
PACZZ	5920-012-0151	FUSE CARTRIDGE F04A15ROA (81349)	FU2 15 AMP 32 V MAX AB1,AB2	EA	1	*	*	*	*	5	FU2
PAOZZ	5920-012-0151	FUSE, CARTRIDGE F04A15ROA (81349)	F2 15 AMP 32 V MAX AB3	EA	1	*	*	*	*	20	F2
PAOZZ	5355-162-3105	KNOB RD/FLUTED EDGE FOR1/4 IN DIA..... SHAFT BLACK BAKELITE 1 1-8 X 0-703 S308-64BB40268 (75376)		EA	4	*	*	*	*		
PAOZZ	6240-057-2887	LAMP INCANDESCENT AMP 44 (199521)	P1 6-8 V 1-5 TO 2W 0-25 AB1,AB2	EA	1	*	*	*	*	2	P1
PAOZZ	6240-057-2887	LAMP,INCANDESCENT AMP 44 (99521)	E2 6-8 V 1-5 TO 2W0-25 AB3	EA	1	*	*	*	*	6	E2
PAOZZ	5960-128-3020	SHIELD, ELECTRON TUBE 40-REF-OESIG STRIAIGHT CYL SHAPE CLOSED TOP 2 1-2 X 1)-1 IN G1330A (2748)		EA	3	*	*	*	*		
PAOZZ	6130-237-7960	VIBRATOR NONSYNCHRONUS E1 INPUT 6 V DC 5 AMP OUTPUT 115 CYC FREQ 3 1-4 X 1 1-4 IN 629C (76149)	5..	EA	1	*	*	*	*	20	E1
PAOZZ	6130-237 7960	VIBRATOR, NONSYNCHRONUS V1B INPUT v1 6VDC AMP OUTPUT 115 CYC FREQ 3 1-X 1 1-41NI	5..	EA	1	*	*	*	*	5	V1B

**INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER
CROSS-REFERENCE TO FIGURE AND ITEM NUMBER**

STOCK NUMBER	FIG. NO.	ITEM NO.	STOCK NUMBER	FIG. NO.	ITEM NO.
5355-162-3105			5960-188-8573	5	V11
5920-012-0151	20	F2	5960-235-9108	5	V1
5920-012-0151	5	FU2	5960-235-9108	5	V3
5920-0500598	20	F1	5960-235-9108	5	V5
5920-050-0598	5	FU1	5960-235-9108	5	V7
5920-244-5150			5960-235-9108	5	V8
5920-244-5150			5960-235-9108	9	V9
5960-100-6017	5	V4	5960-235-9108	20	V10
5960-128-3820			5960-235-9108	20	V11
5960-188-0926	20	V6	5995-L62-6854	5	
5960-188-0926	5	V10	5995-162-6866	5	
5960-188-3575	5	V2	6130-237-T960	20	E1
5960-18S-3968	5	V6	6240-057-2887	6	E2
5960-188-3968	20	V8	6240-057-2887	2	P1
5960-18S-8573	20	V7			

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

Active Army	
USASA (2)	Instl (2) except
CNGB (1)	Ft Gordon (10)
ACSC-E (2)	FT Huachuca(10)
USAARENBD (2)	WSMR (2)
USAMB (10)	Ft Carson (10)
AMC (1)	Army Dep (2) except
FORSCOM (5)	LBAD (14)
ARADCOM (2)	SAAD (30)
ARADCOM Rgn (2)	TOAD (14)
OS Maj. Comd (4)	LEAD (7)
LOGCOMDS (5)	ATAD (10)
MICOM (2)	Gen Dep (2)
TECOM (2)	Sig Sec G Dep (2)
USASTRATCOM (4)	Sig Dep (5)
HISA (ECOM)(18)	Sig FLDMS(1)
MDW (1)	USAERDAA (1)
Armies (2)	USAERDAW (1)
Corps (2)	MAAG (1)
Svc Colleges (2)	USARMIS (1)
USASESS (5)	Ft Richardson (ECOM Ofc) (2)
USAADS (2)	WRAMC (1)
USAFAS (2)	Units org under fol TOE:
USAARMS (2)	11-158 (1)
USAIS (2)	29-134 (1)
USAES (2)	29-136 (1)
USAINTS (3)	

NG: State AG (3).

USAR: None.

For explanation of abbreviations used. see AR 31040.

* U.S. GOVERNMENT PRINTING OFFICE : 1983 0 - 381-302 (3277)

PIN.: 010041-000

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT... PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

