

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS FOR**

**RECEIVER-TRANSMITTER, RADIO RT-505/PRC-25
(NSN 5820-00-857-0934)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

MARCH 1979

TECHNICAL MANUAL }
No. 11-5820-497-20P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 30 March 1979

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
RECEIVER-TRANSMITTER, RADIO RT-505/PRC-25
(NSN 5820-00-857-0934)

Current as of 28 November 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Material Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

			Page	I l l u s Figure
S E C T I O N	I.	Introduction	1	
	II.	Repair parts list	5	
Group	06	Receiver-Transmitter RT-505/PRC-25	5	1
		0601 DC to DC converter module (A1) (no parts authorized)		
		0602 Power amplifier tank module (A2) (no parts authorized)		
		0603 First RF amplifier module (A3) (no parts authorized)		
		0604 Second RF amplifier module (A4) (no parts authorized)		
		0605 Receiver mixer module (A5) (no parts authorized)		
		0606 Transmitter intermediate power amplifier module (A6) (no parts authorized)		
		0607 Transmitter second RF amplifier module (A7) (no parts authorized)		
		0608 Transmitter first RF amplifier module (A8) (no parts authorized)		
		0609 Variable frequency oscillator module (A9) (no parts authorized)		
		0610 Interval oscillator module (A10) (no parts authorized)		
		0611 Frequency synthesizer system discriminator driver module (A11) (no parts authorized)		
		0612 Frequency synthesizer system second mixer module (A12) (no parts authorized)		
		0613 53-MC filter (A13) (no parts authorized)		
		0614 Frequency synthesizer system first mixer module (A14) (no parts authorized)		
		0615 1-MC spectrum generator module (A15) (no parts authorized)		
		0616 Voltage regulator module (A16) (no parts authorized)		
		0617 Phase comparator module (A17) (no parts authorized)		
		0618 Frequency synthesizer system IF amplifier module (A18) (no parts authorized)		
		0619 Quarter wave network module (A19) (no parts authorized)		
		0620 Sidestep oscillator module (A20) (no parts authorized)		
		0621 Receiver IF amplifier module (A21) (no parts authorized)		
		0622 Speech amplifier limiter module (A22) (no parts authorized)		
		0623 Tone generator module (A23) (no parts authorized)		
		0624 Tone squelch module (A24) (no parts authorized)		
		0625 Receiver audio amplifier module (A25) (no parts authorized)		

*This manual together with TM 11-5820-398-20P, 15 July 1977, supersedes so much of TM 11-5820-398-12, 17 November 1965, as pertains to repair parts and special tools list.

		Page	I l l u s Figure
Group	0626 Audio and control chassis assembly (A27) (no parts authorized)		
	0627 Decoupling, network assembly (A34) (no parts authorized)		
	0628 Synthesizer mother board assembly (A26) (no parts authorized)		
	0629 Power amplifier assembly (A29) (no parts authorized)		
	0630 R/T chassis assembly (A32) (no parts authorized)		
	0631 R/T wiring harness board (A33) (no parts authorized)		
	0632 Panel assembly (A30)	7	2,3
	063201 Antenna loading network module (A30A28) (no parts authorized)		
SECTION	III. Special tools list (not applicable)		
	IV. National stock number and part number index.....	10	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the RT-505/PRC-25. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-Item procured and stocked for anticipated or known usage.	
XD-A support item that is not stocked. When required, item will be procured through normal supply channels.	

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are

assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O-Support item is removed, replaced, used at the organizational level.	
(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:	

<i>Code</i>	<i>Application/Explanation</i>
D-The lowest maintenance level capable of complete repair of the support item is the depot level.	
Z-Nonreparable. No repair is authorized.	

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.	
D-Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.	

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if

required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. The following publication pertains to the RT-505/PRC-25 and its components:

TM 11-5820-398-12, Radio Set AN/PRC-25 (Including Receiver-Transmitter, Radio RT-505/PRC-25)

b. The illustrations in this manual are identical to those published in TM 11-5820-497-34P. Only those parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing; therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual.

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the item belongs.

(3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

 
(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)

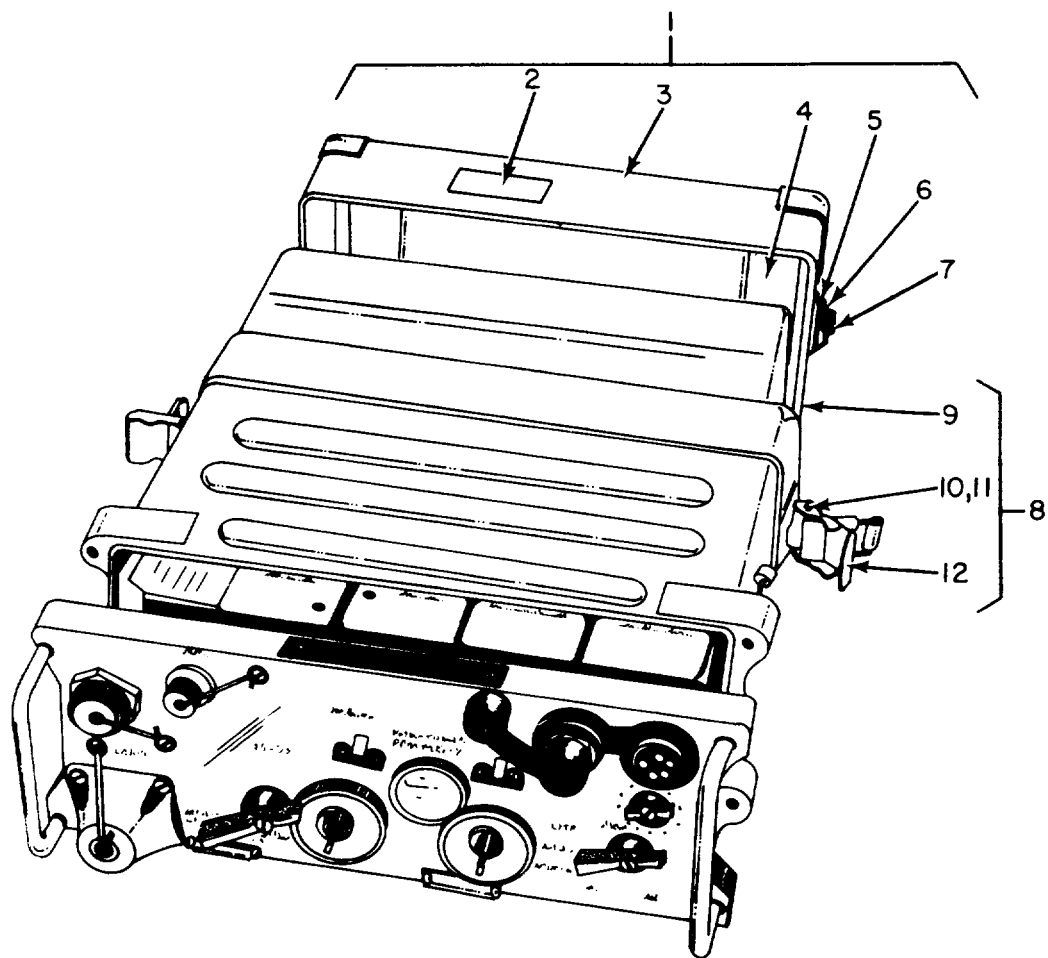

ELOYVOOI

Figure 1. Receiver-Transmitter RT-505/PRC-25.

SECTION II

(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	
ILLUSTRATION							QTY	
(a)	(b)		NATIONAL		DESCRIPTION		INC	
FIG	ITEM	SMR	STOCK	PART			IN	
NO.	NO.	CODE	NUMBER	NUMBER	FSCM	USABLE ON CODE	U/M	UNIT

GROUP 06 RECEIVER-TRANSMITTER RT-505/PRC-25

1	1	PAODD	5820-00-086-7148	CY2562PRC25	80058	BATTERYBOX	EA	1
1	8	PAODD	5820-00-973-1731	SMD447351	80063	CASE	EA	1

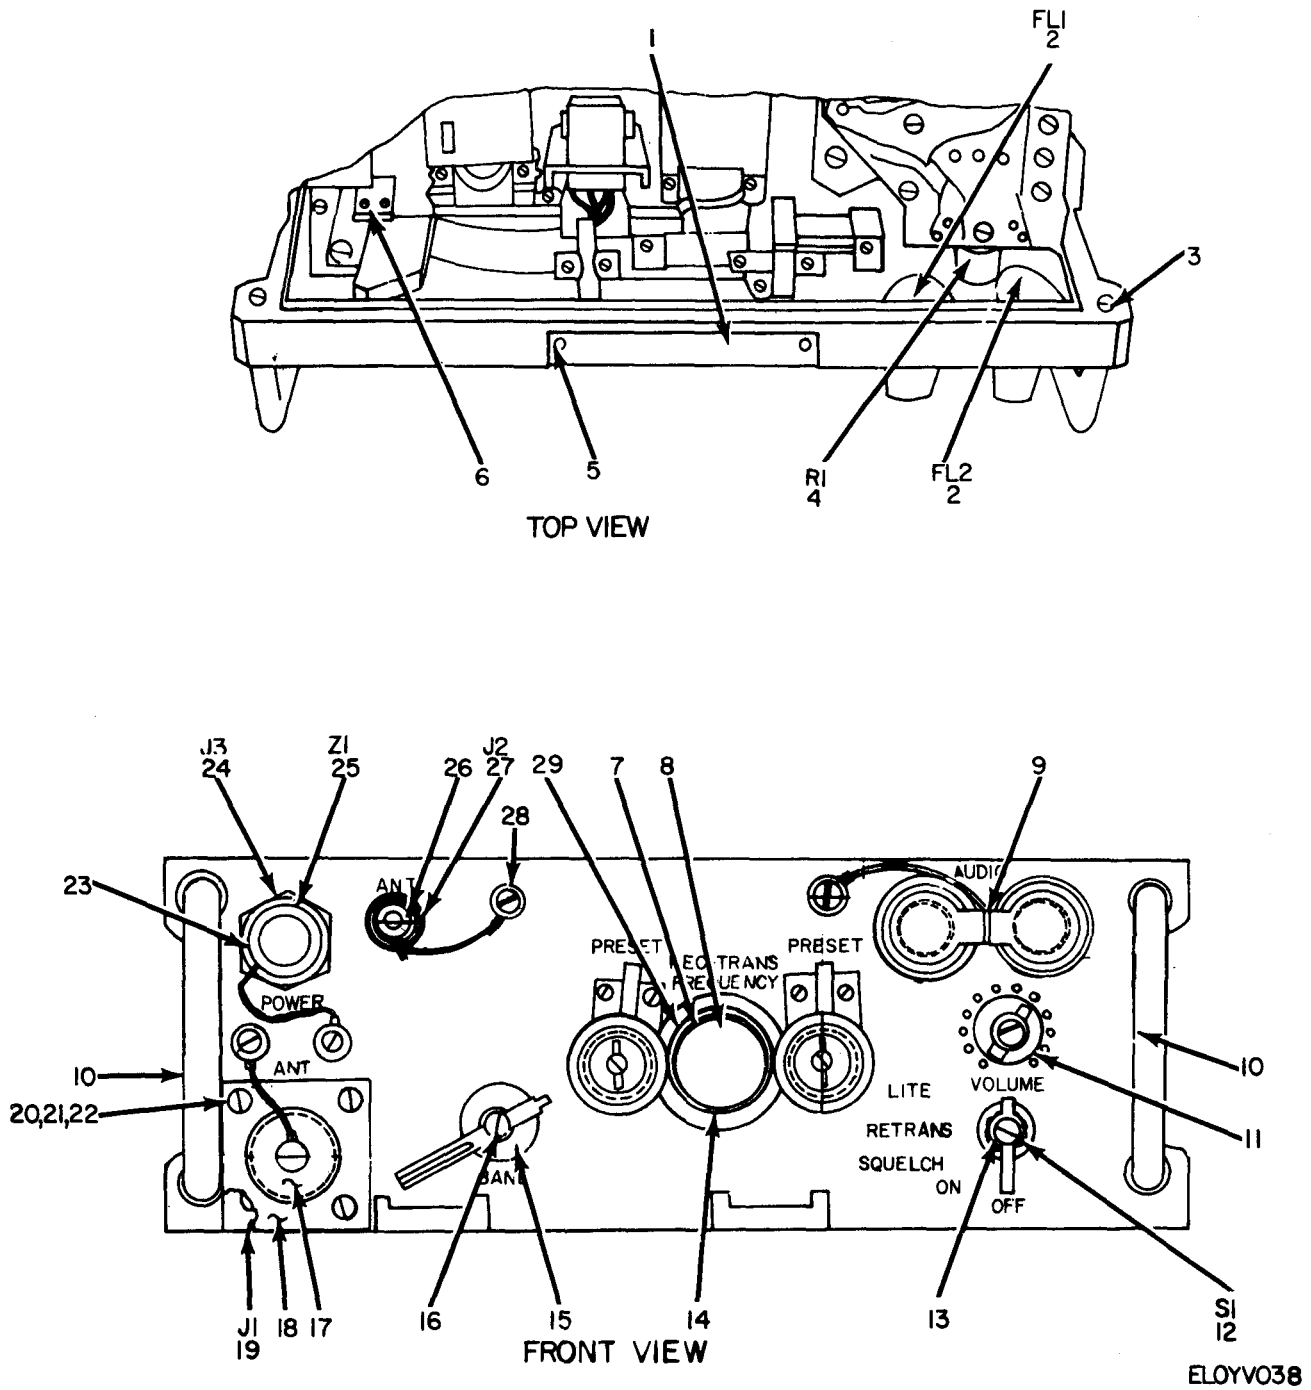 


Figure 2. Panel Assembly (A30).

SECTION II

(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	
ILLUSTRATION							QTY	
(a)	(b)		NATIONAL		DESCRIPTION		INC	
FIG	ITEM	SMR	STOCK	PART			IN	
NO.	NO.	CODE	NUMBER	NUMBER	FSCM	USABLE ON CODE	U\M	UNIT
GROUP 0632 PANEL ASSEMBLY (A30)								
2	9	PAOZZ	5935-00-973-1732	SMB47440	80063	COVER,ELECTRICAL	EA 1	
2	11	PAOZZ	5335-00-552-0451	MS91524-1	96906	KNOB	EA 1	
2	13	PAOZZ	5355-00-889-3424	SMC447052	80063	KNOB	EA 1	
2	15	PAOZZ	5355-00-889-3425	SMC447226	80063	KNOB	EA 1	
2	16	PAOZZ	5305-00-558-4889	MS35223-14	96906	SCREW,MACHINE	EA 1	
2	17	PAOZZ	5935-00-978-4357	SMC447403	80063	COVER,ELECTRICAL	EA 1	
2	25	PAOZZ	5935-00-973-1859	SM-C-447929	80063	CONNECTOR,PLU	EA 1	
2	26	PAOZZ	5935-00-973-1733	SMB447439	80063	COVER,ELECTRICAL	EA 1	

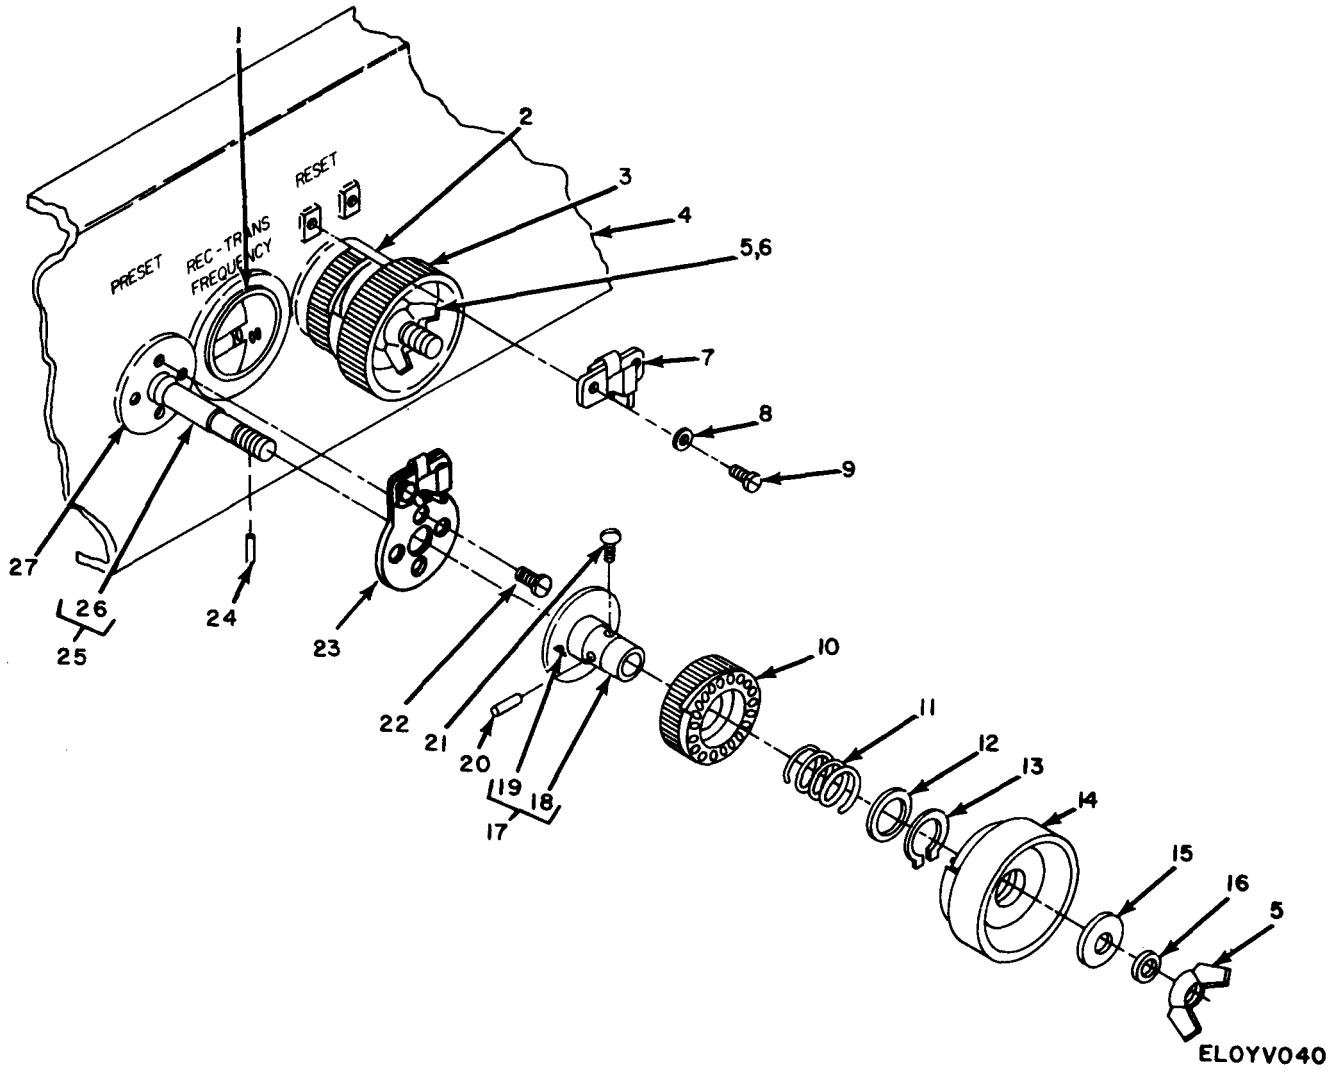 


Figure 3. Panel Assembly (A30), Knob Assembly.

SECTION II

(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	
ILLUSTRATION							QTY	
(a)	(b)		NATIONAL		DESCRIPTION		INC	
FIG	ITEM	SMR	STOCK	PART			IN	
NO.	NO.	CODE	NUMBER	NUMBER	FSCM	USABLE ON CODE	U\M	UNIT
3	2	PAOZZ	5355-00-930-0728	SMC47976-1	80063	KNOB	EA	1
3	3	PAOZZ	5355-00-951-5165	SMC447306	80063	KNOB	EA	2
3	5	XDOZZ	5310-00-973-3697	SMB447308	80063	NUT,PLAIN,WING	EA	2
3	6	XDOZZ	5310-00-889-2586	SMB447694-1	80063	WASHER,LOCK	EA	1
3	10	PAOZZ	5355-00-930-0729	SMC447976-2	80063	KNOB	EA	1
3	15	XDOZZ		SMB447107-5	80063	WASHER,FLAT	EA	2
3	16	XDOZZ	5310-00-889-2586	SMB447694-1	80063	WASHER,LOCK	EA	1

SECTION IV

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

NOTE: LATEST NATIONAL STOCK NUMBER AND PART NUMBER ASSIGNMENTS ARE INCLUDED AT END OF INDEX

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5820-00-086-7148	1	1	5355-00-951-51.5	3	3
5355-00-552-0451	2	11	5820-00-973-1731	1	8
5310-00-889-2586	3	6	5935-00-973-1732	2	9
5310-00-889-2586	3	16	5935-00-973-1733	2	26
5355-00-889-3424	2	13	5935-00-973-1859	2	25
5355-00-889-3425	2	15	5310-00-973-3697	3	5
5355-00-930-0728	3	2	5935-00-978-4357	2	17
5355-00-930-0729	3	10			

PART NUMBER	FSCM	FIG. NO.	ITEM NO.	PART NUMBER	FSCM	FIG. NO.	ITEM NO.
CY2562PRC25	80058	1	1	SMB447694-1	80063	3	16
MS91524-1	96906	2	11	SMC447052	80063	2	13
SM-C-447929	80063	2	25	SMC447226	80063	2	15
SMB447107-5	80063	3	15	SMC447306	80063	3	3
SMB447308	80063	3	5	SMC447403	80063	2	17
SMB447439	80063	2	26	SMC447976-1	80063	3	2
SMB447440	80063	2	9	SMC447976-2	80063	3	10
SMB447694-1	80063	3	6	SMD447351	80063	1	8

LATEST PART NUMBER ASSIGNMENTS

PART NUMBER	FSCM	FIG. NO.	ITEM NO.
MS35223-14	96906	2	16

LATEST NATIONAL STOCK NUMBER ASSIGNMENTS

STOCK NUMBER	FIG. NO.	ITEM NO.
5305-00-558-4889	2	16

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS



SOMETHING WRONG WITH THIS MANUAL?

THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)

Commander
Stateside Army Depot
ATTN: AMSTA-US
Stateside, N.J. 07703

DATE 10 July 1975

PUBLICATION NUMBER

TM 11-5840-340-20P

DATE

23 Jan 78

TITLE

Radar Set AN/PRC-76

BE EXACT... PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
----------	------------	------------	-----------

33

44

45

19

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

For item 2, change the NSN to read: 5835-00-134-9186.
Reason: Accuracy.

Identify the cover on the junction box (item no. 5).
Reason: It is a separate item and is not called out on figure 19.

Add the cover of the junction box as an item in the listing for figure 19.
Reason: Same as above.

TEAR ALONG DOTTED LINE

**S
A
M
E**

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SSG I. M. DeSpirito 999-1776

SIGN HERE:

SSG I. M. DeSpirito

DA FORM 2028-2
AUG 74

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander
US Army Communications and
Electronics Materiel Readiness Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

FOLD BACK

TEAR ALONG DOTTED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander
US Army Communications and
Electronics Materiel Readiness Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

FOLD BACK

TEAR ALONG DOTTED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander
US Army Communications and
Electronics Materiel Readiness Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

FOLD BACK

TEAR ALONG DOTTED LINE

By Order of the Secretary of the Army:

Official:

J. C. PENNINGTON
Major General, United States Army
The Adjutant General

BERNARD W. ROGERS
General, United States Army
Chief of Staff

Distribution:

To be distributed in accordance with DA Form 12-51, Organizational maintenance requirements for RT-505/PRC-25.

