# ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS FOR

# MODEM, DIGITAL DATA-INTERCONNECT FACILITY MD-920A/G (NSN 5820-00-155-8576)

TECHNICAL MANUAL

No. 11-5820-804-20P

TECHNICAL MANUAL

NAVELEX 0969-LP-169-4042

TECHNICAL ORDER

TO 31R5-2G-274-1

THE NAVY, AND THE AIR FORCE DEPARTMENTS OF THE ARMY, WASHINGTON, DC, 21August 1979

## ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS FOR

## MODEM, DIGITAL DATA-INTERCONNECT FACILITY MD-920A/G (NSN 5820-00-155-8576)

Current as of 24 January 1979

#### REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to prime ALC/MST.

For Navy, mail comments to the Commander, Naval Electronic Systems Command, Training and Publications Management Office, ELEX 04F3, P.O. Box 80337, San Diego, CA 92138.

In either case a reply will be furnished direct to you.

#### Table of Contents

		Page	Figure
SECTION	I . Introduction	1	
	II. Repair Parts List	5	
Group	0.0 Modem Digital Data-Interconnect Facility MD-920A/G	5	
1	01 Control Panel A1	9	2
SECTION	III. Special tolls list (Not applicable)		
	IV. National stock number and part number index	1 0	

Illus

## SECTION I INTRODUCTION

#### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the MD-920A/G. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

#### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

- a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.
- b. Section III. Special Tools List. Not applica-
- e. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.
- 3. Explanation of Columns
- a. Illustration. This column is divided as follows:
- (1) Figure number. Indicates the figure number of the illustration on which the item is shown.

- (2) **Item** number. The number **used** to identify item called out in the illustration.
- b. Source, Maintenance, and Recoverability erability (SMR) Codes.
- (1) Source code. Source codes indicate the manner of acquiring support item for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

PA-Item procured and **stocked** for **anticipated** or known usage.

XB-Item is not procured or stocked, If nut available through salvage, requisition.

#### NOTE

Cannibalization or salva**ge may be used** as a source of supply for **my items source** coded above except those coded XA and aircraft support items as restricted by **AR** 700-42.

- (2) **Maintenance** code. **Main**tenance codes are assigned **to indicate** the **levels** of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:
- (a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code Application/Explanation

O-Support item is removed, replaced, used at the



(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code Application/Explanation Z-Nonreparable. No repair is authorized.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

#### Recoverability

codes

Definition

- **Z—Nonreparable** item. When unserviceable, condemn and dispose at the level indicated in position 3.
- c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.
- d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

#### NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

- e. Federal Supp**ly** code for **Manufac**turer **(FSCM)** The FSC**M** is a g-digit numeric code **listed in** SB 708-42 **whi**ch is used to identify the manufacturer, distributor, or Government agency, **etc.**
- f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.
- g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance func-

tion. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc.). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

### 4. Special Information

a. The following publications pertain to the  $\mathbf{M}D$ -920A/G and its components :

**TM** :11-5820-804-12, Modem, Digital Data **MD**-**920/**G.

- b. The illustrations in this manual are identical to those published in TM 11-5820-804-34P. Only those parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing: therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual.
- c. National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published submit exception requisitions to: Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MM, Fort Monmouth,, NJ 07703 for the part required to support your equipment.

#### 5. How to Locate Repair Parts

- a. When National stock number or part number is unknown.
- (1) First. Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.
- (2) Second. Find the illustration covering the functional group to which the item **belongs.**

- (3) Third. Identify the item on the illustration and note the illustration figure and item number of the item.
- (4) Fourth. Using the Repair Partz Listing, find the figure and item number noted on the illustration.
- b. When National stock number or part number is known.
  - (1) First. Using the Index of National Stock
- Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.
- (2) Second. After finding the figure and item number, locate the figure and item number in the repair parts list.
- 6. Abbreviations

Not applicable.

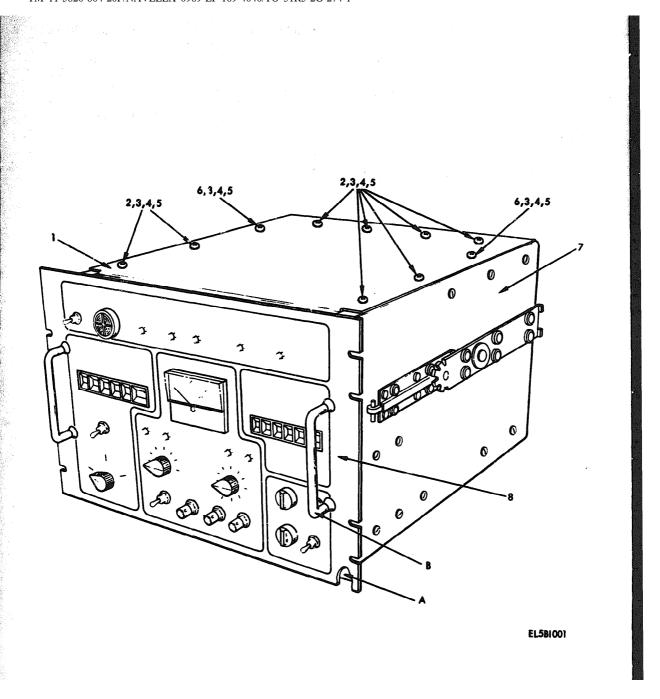


Figure 1. Modem Digital Data-Interconnect Facility MD-920A/G

#### TM 11-5820-804-20P/NAVELEX 0969-LP-169-4040/TO 31R5-2G-274-1

(1)	)	8	(3)	(4)	(5)	(4)	(7)	(6
LLUGTR	MORA			1		DESCRIPTION		aı
(65 F10 160.	(%) ITEM HO.	RMS BOOD	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	USABLE ON CODE	U/M	IN UN
						GREUP OU MODER DIGITAL DATA-INTERCONNECT FACILITY NO-920A/G		
1	a	REGER	5325-00-687-5200	95-11-553-19	94222	STUD, TURINA, R.PSTNR	EA	
ı.	3	X802Z		82-32-201-17	94222	MASHER: LOCK	EA	1
1	۱ ،	XBOZZ	5310-00-775-5245	02-44-101-39	94222	HASHER, RECESSED	EA	1
	,	1802Z	5360-00-924-8167	43-13-1-24	94222	SPR ING	EA	١
		REDZZ	4120-00-963-0221	82-11-280-16	94222	STUD-TURNUK FSTMR	EA	

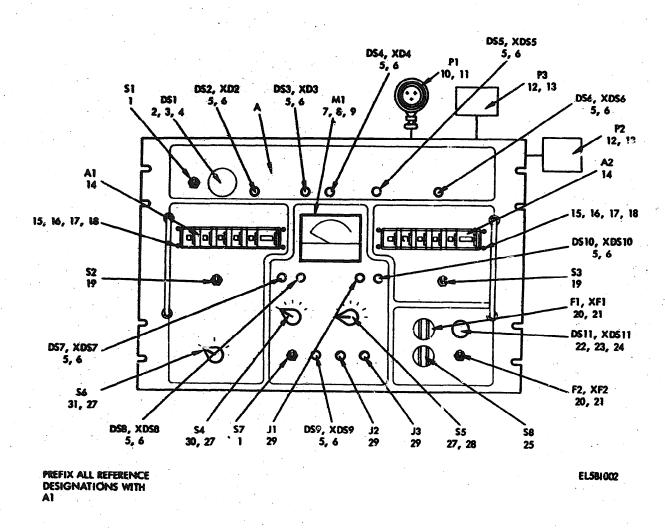



Figure 2. Control Pane, A1 (Sheet 1 of 2)

6

 

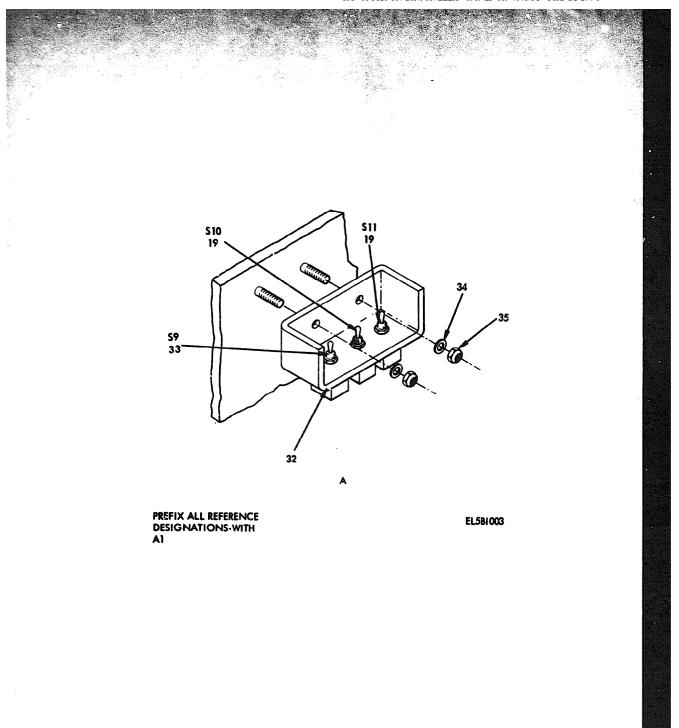



Figure 2. Control Panel, Al (Sheet 2 of 2)

#### SECTION II

(1)	) [	(20)	(3)	(4)	(6)	(9)	10	(6)
LUSTR			N. I. T. I.			DESCRIPTION		QTY
(E) (F) (H)	(ts) 17564 170.	8888 0008	NATIONAL STOCK NUMBER	PART	PECM	USABLE ON CODE	Uns	IN IN UNIT
					<b>†</b>	GROUP OI CONTROL PANEL AL		
2		PAGZZ	5930-00-683-2625	#\$24523-31	96906	SHITCH,TOGGLE	EA	
2	a	PAGZZ	6350-00-102-4210	SC-628	37942	SIGNAL, ELECTRONIC,	EA	
2	4	PAGLL	6240-00-344-8582	C093-RC8-0510	03797	LAMP, CARTRIDGE, SOL I	EΔ	
2	4	PADZZ	6210-00-421-1832	LH90/1	81349	LIGHY, INDICATOR	EA	
2	19	PAUZZ	5930-00-683-1629	M\$24523-23	96996	SHITCH, TOSGLE	EA	
2	20	PAGZZ		MDX-SA	71400	FUSE CARTRIDGE	BA.	
2	21	PAUZZ	3920-00-881-6584	FHL 1762	81349	FUSEHOLDER JEXTRACTO	EA	
z	22	PADAL	6240-00-682-3411	62A -	06804	LMP, G.Ou.	EA	
2	21	PAGEZ	6210-00-753-2270	LC14509	81349	LENS:LIGHT	₽A	
2	24	SSOAG	6210-00-437-2887	LH76/2	81340	LIGHT, INDICATOR	EA	
z	25	PAG4Z	5930-00-984-9883	4525307-222	96906	\$417CH,T058LE	EA	
2	27	150A9	5355-00-881-0722	M591520-1K46	96906	KND0	EA	
2	20	SSGAQ	5930-00-113-7642	44030-03-1-AJM	81073	5817 CH, AOT MAY	ĒΑ	
z	30	25024		44030-01-1-AJN	81073	SMITCH, ROTARY	ĒΔ	
2	31	SSOAR	5930-00-118-4665	44A40-02-1-3N	31073	SHITCH, ROTARY	ĒΔ	
2	33	25049	5930-00-789-6024	MS27407-1	96906	SHITCH, TOGGLE	EA	

TM 11-5820-804-20P/NAVELEX 0969-LP-169-4040/TO 31R5-2G-274-1

SECTION IV	NATIONAL STOCK	NUMBER AND	PART NUMBER INDEX			
STOCK NUMBER	Figure No.	NO.	STOCK NUMBER	FIGURE NO.		ITEM NO.
6350-00-102-4210 5930-00-113-7642 5930-00-118-4665 6240-00-344-8582 6210-00-421-1832 6210-00-437-2887 6240-00-682-3411 5930-00-683-1625 5930-00-683-1629	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	2 28 31 5 6 24 22 1	$\begin{array}{c} 5325 - 00687 - 5208 \\ 6210 - 00 - 753 - 2270 \\ 5310 - 00 - 775 - 5245 \\ 5930 - 00 - 789 - 6024 \\ 5355 - 00 - 881 - 0722 \\ 5920 - 00 - 881 - 6584 \\ 5360 - 00 - 924 - 8167 \\ 4120 - 00 - 963 - 0221 \\ 5930 - 00 - 984 - 9883 \end{array}$	1 2 2 2 2 1 1 2 2		2 23 4 33 2/ 21 5 6
PART NUMBER	FSCA	FIG. ITEM NO. NO.	PART NUMBER	FSCH	FIG.	ITEM NO.
82A C093-RCB-0510 FNL17G2 LC14CD3 LH76/2 LH90/1 MDX-5A MS24523-23 MS24523-31 MS25307-222 MS27407-1	08806 03797 81349 81349 81349 71400 96906 96906 96906	2 22 2 5 2 21 2 23 2 24 2 6 2 20 2 19 2 19 2 25 2 33	MS91528-1K48 SC-628 43-13-1-24 44A60-02-1-3N 44D30-01-1-AJN 44D30-03-1-AJN 82-11-220-16 82-11-280-16 82-32-201-17 82-46-101-39	96906 37942 94222 81073 81073 94222 94222 94222 94222	2 2 2 2 1 1 1 1 1	27 2 5 31 30 28 2 6 3

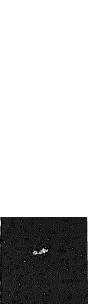



## SOMETHING WRONG 1171 THE HARVAL!

THEN. . . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL:

PROM (YOUR UNIT'S COMPLETE ADDRESS)

Commander
Statesid Army Depot
ATTN: AMSTA-US
Stateside, N.J. 07703
TE 10 July 1975

TM 11-5840-340-20P

23 Jan 78

Radar Set\_AN/PRC-76

IN	TT-30	:U-34U	-EUF		82 1870 LO	
BE EXACT PIN-POINT WHERE IT IS				IN THIS SPACE	e tell what is wad	300
PAGE	PARA	FIGURE	TABLE	e tany gha	HOULD 23 DOME ABO	UT IT:
HO.	GRAPH	NO.	NO.			
33			i i	For item	2, change the	NSN to read: 5835-00-131-9186.
			1	Reason:	Accuracy.	A a
					•	
44		19	i 1	Identify	the cover on	the junction box (item no. 5).
, ,		-	į į	Reason:	It is a separ	ate item and is not called out
					on figure 19.	
			1	·		
45			i	444 45-		action box as an item in the
47				MOG CHE	for figure 19	CACH OOK SS ST I SEN IN THE
				Tiscing	TOP TIEUTE 194	
				keason:	Same as above	•
		1				
		ļ	i i			
				1		
		ļ				<u> </u>
			į			
		l				
		l				
		1	Į i		•	
		l			•	
		l	ł			
		i	1	_		
		1		1		
	ł	1		<u> </u>		
				D		
	ŀ		G	7		•
	l	1		}		
	ŀ	i	ł	ĺ		j
	l	1	1	İ		
	l	ŀ	1	İ		
	l	l	1			
	1		1	l		
	1	i		i		
	1	1				
	l	i	l	1		
		1		l		
1		1	1	I		

DA . PORM 2028-2

SSG I. M. DeSpiritof

999-1776

P.R.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "ISMD," MAKE A CARBON COPY O. THIS AND GIVE IT TO YOUR HEADQUAITERS.

### RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS

## SOMETHING WRONG WITH THE MANUAL!

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT GUT, FOLD IT AND DROP IT IN THE MAIL!

PROM (YOUR UNIT'S COMPLETE ADDRESS)

178	
-----	--

DATE

21 Aug 79

TITLE MODEM, DIGITAL DATA-INTER-CONNECT FACILITY MD-920A/G

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DOME ABOUT IT: BE EXACT. . . PIN-POINT WHERE IT IS FIGURE TABLE P...GE TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER SIGN HERE:

DA . FORM 2028-Z

P.S. ~-IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL EXISTEES PENALTY FOR PRIVATE USE, \$360



tear along Dotted Live

Commander US Army Communications and Electronics Materiel Readiness Command ATTN: DRSEL-ME-MQ Fort Monmouth, New Jersey 07703

POLO BACK

#### RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS

## SOMETHING WRONG WITH THE MANUAL?

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)

DATE

PUBLICATION HUMBER TM 11-5820-804-20P

FICURE TABLE

TITLE MODEM, DIGITAL DATA-INTER CONNECT FACILITY MD-920A/G

21 Aug 79 BE EXACT. . PIN-POINT WHERE IT IS IM THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE BOME ABOUT IT:

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER SIGN HERE:

DA . FORM 2028-2

P.S. -- IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FOLD BACK

DEPARTMENT OF THE ARMY

oppigial eveniend PEHALTY FOR PRIVATE USE, 8000



Commander

US Army Communications and Electronics Materiel Readiness Command

ATTN: DRSEL-ME-MQ Fort Monmouth, New Jersey 07703

FOLD BACK

reverse of DA Porm 2020-2