

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST
BEACON SET, RADIO AN/GRN-6
FSN 5825-167-7983

Headquarters, Department of the Army, Washington, D.C.
5 December 1973

Current as of May 1973

		Paragraph	Page
Section	I. INTRODUCTION		
	Scope.....	1-1	2
	General.....	1-2	2
	Explanation of columns	1-3	2
	Special information	1-4	4
	Location of repair parts.....	1-5	4
	Abbreviations (Not applicable).....	1-6	4
	Reporting of equipment publication improvements	1-7	4
	II. PRESCRIBED LOAD ALLOWANCE (Not applicable)		
	III. REPAIR PARTS LIST.....		N/A
Group	0001. Beacon Set, Radio AN/GRN-6		6
	0002. Control Radio Beacon C-2235/GRN.....		6
	0003. Not applicable		
	0004. Transmitter, Radio T42/GRN.....		6
	0005. Not applicable		
	0006. Transmitter, power supply		7
	0007. Transmitter, rf		7
	0008. Tuner, Radio frequency TN-324/G		7
	IV. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
	V. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS- REFERENCE TO FIGURE AND ITEM NUMBER		

*This manual supersedes TM 11-5825-202-12P, 15 May 1959, including all changes.

**SECTION I
INTRODUCTION**

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the AN/GRN-6. The PCCN for the AN/GRN-6 is GANABE for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. *Prescribed Load Allowance(PLA)--Section II.* Not applicable.

b. *Repair Parts List--Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

c. *Special Tools, Test and Support Equipment--Section IV.* Not applicable.

d. *Index--Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number--Section V.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists-

a. Source, Maintenance, and Recoverability *Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are-

<i>Code</i>	<i>Explanation</i>
PA	Item procured and stocked for anticipate or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

<i>Code</i>	<i>Explanation</i>
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at direct support maintenance level.
MH	Item to be manufactured or fabricated at general support maintenance level.
MD	Item to be manufactured or fabricated at depot maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XC	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD	Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows-

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

F - Support item is removed, replaced, used at the direct support maintenance level.

H - Support item is removed, replaced, used at the general support maintenance.

D - Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code-

<i>Code</i>	<i>Application/Explanation</i>
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	The lowest maintenance level capable of complete repair of the support item is direct support.
H	The lowest maintenance level capable of complete repair of the support item is general support.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.

<i>Code</i>	<i>Application/Explanation</i>
L	Repair restricted to designated Specialized Repair Activity.

Z - Non-repairable. No repair is authorized.

B - No repair is authorized. The item may be re-conditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows-

<i>Code</i>	<i>Explanation</i>
Z	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
F	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
H	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).

b. *Federal Stock Number.* Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description.* Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 70842.

d. *Unit of Measure (U/M).* Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviations; e.g., ea, in, pr, etc., and is the basis

used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. *Quantity Incorporated in Unit.* This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. *15-Day Organizational Maintenance Allowance.*

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2 (2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL-MA-AN, Fort Monmouth, N.J., 07703. Any changes approved be reflected in a revision to the RPSTL.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE and other equipment.

g. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown in TM 11-5825-202-12 and TM 11-5825-202-35.

(2) *Item, number.* Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are-

<i>Code</i>	<i>Used on</i>
A7T	AN/GRN-6

b. The following publications pertain to the AN/GRN-6 and its components:

TM	11-5825-202-12	Organizational Maintenance Manual: Radio Beacon Set AN/GRN-6.
----	----------------	---

TM 11-5825-202-35 Direct Support, General Support, and Depot Maintenance Manual: Radio Beacon Set AN/GRN-6.

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (see V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (see V) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (see III) and locate the figure number (col 7a) and item number or reference designation (col 7b) as noted in the FSN index.

c. When the figure and item number or reference designation are known,, scrutinize columns 7a and 7b of the repair parts list (sec III) until the item is located.

d. When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (see III), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, ITS Army Electronics Command, ATTN: AMSEL-MA-AN, Fort Monmouth. N.J., 07703.

(Next printed page is 6.)

SECTION III

TM11-5825-202-20P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(A)	(B)	(C)	(D)	(A)	(B)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
PAOZZ	6240-538-8447	GROUP 0001 BEACON SET, RADIO AN/GRN-6 LAMP, FLOURESCENT I801 F20T12W (08108)	EA	2	*	*	*	*		I801
PAOZZ	6240-538-8447	LAMP, FLUORESCENT I802 F20T12W (803681)	EA	REF	*	*	*	*		I802
PAOZZ	5960-262-0218	GROUP 002 CONTROL RADIO BEACON C-2235/GRN ELECTRON TUBE V101 5Y3WGTA (8134)	EA	1	*	*	1*	*		V101
PAOZZ	5960-235-8215	ELECTRON TUBE V103 6C4W (81349)	EA	1	*	*	*	*		V103
PAOZZ	5960-262-0167	ELECTRON TUBE V102 12AT7WA (81349)	EA	1	*	*	*	*		V102
PAOZZ	5920-284-9220	FUSE, CARTRIDGE F101 F02G1ROOB (81349)	EA	1	*	*	*	*	2-2	F101
PAOZZ	5355-579-6390	KNOB 0102 90-3-2G (49956)	EA	2	*	*	*	*	51	0102
PAOZZ	5355-579-6390	KNOB 0103 90-3-2G (49956)	EA	REF	*	*	*	*		0103
PAOZZ	6240-155-8706	LAMP, INCANDESCENT I101 47 (08806)	EA	3	*	*	*	*	2-2	I101
PAOZZ	6240-155-8706	LAMP, INCANDESCENT I102 47 (08806)	EA	REF	*	*	*	*	2-2	I102
PAOZZ	6240-155-8706	LAMP, INCANDESCENT I103 47 (08806)	EA	REF	*	*	*	*	2-2	I103
PAOZZ	5340-497-8640	FASTENER 0986 MX379U (80058)	EA	4	*	*	*	*	1-6	0986
PAOZZ	5340-497-8640	FASTENER 0987 MX379U (80058)	EA	REF	*	*	*	*	1-6	987
PAOZZ	5340-497-8640	FASTENER 0988 MX379 (80058)	EA	REF	*	*	*	*	1-6	0988
PAOZZ	5340-497-8640	FASTENER 0989 MX379U (80058)	EA	REF	*	*	*	*	1-6	0989
PAOZZ	5820-224-4638	GUY PLATE 0-1001 MX378U (80058)	EA	3	*	*	*	*	1-6	
PAOZZ	5820-224-4638	GUY PLATE 0-1002 MX378U (80058)	EA	REF	*	*	*	*	1-6	
PAOZZ	5820-224-4638	GUY PLATE 0-1003 MX378U (80058)	EA	REF	*	*	*	*	1-6	
PAOZZ	5985-174-1980	MAST SECTION NO-REF-DESIG SCD76210 (80058)	EA	8	*	*	*	*	1-6	
PAOZZ	5985-636-2420	PLATE, ANTENNA MAST 0-1000 SCD76210 (80063)	EA	1	*	*	*	*	1-6	
PAOZZ	4030-187-5263	STAKE, GUY 0-1006 SCC34000 (80063)	EA	4	*	*	*	*	1-6	
PAOZZ	4030-187-5263	STAKE, GUY 0-1007 SCC34000 (80063)	EA	REF	*	*	*	*	1-6	
PAOZZ	4030-187-5263	STAKE, GUY 0-1008 SCC34000 (80063)	EA	REF	*	*	*	*	1-6	
PAOZZ	4030-187-5263	STAKE, GUY 0-1009 SCC34000 (80063)	EA	REF	*	*	*	*	1-6	
PAOZZ	5510-187-5267	STAKE, WOOD 0-1010 SCC22005 (80063)	EA	4	*	*	*	*		
PAOZZ	5510-187-5267	STAKE, WOOD 0-1011 SCC22005 (80063)	EA	REF	*	*	*	*		
PAOZZ	5510-187-5267	STAKE, WOOD 0-1012 SCC22005 (80063)	EA	REF	*	*	*	*		
PAOZZ	5510-187-5267	STAKE, WOOD 0-1013 SCC22005 (80063)	EA	REF	*	*	*	*		
PAOZZ	4030-291-9354	STAKE NO-REF-DESIG THESE STAKES ARE TO BE REQUISITIONED FOR ARCTIC USE ONLY GP112G (80058)	EA	18	*	*	*	*		
PAOZZ	5960-108-0252	GROUP 004 TRANSMITTER, RADIO T-642/GRN ELECTRON TUBE V1 3828 (81349)	EA	2	*	*	*	*		V1
PAOZZ	5960-108-0252	ELECTRON TUBE V2 3828 (81349)	EA	REF	*	*	*	*		V2
PAOZZ	5960-188-0921	GROUP 0005 TRANSMITTER MODULATOR SECTION ELECTRON TUBE V204 OA2WA (81349)	EA	4	*	*	*	*		V204
PAOZZ	5960-188-0921	ELECTRON TUBE V205 OA2WA (81349)	EA	REF	*	*	*	*		V205
PAOZZ	5960-188-0921	ELECTRON TUBE V206 OA2WA (81349)	EA	REF	*	*	*	*		V206
PAOZZ	5960-188-0921	ELECTRON TUBE V207 OA2WA (81349)	EA	REF	*	*	*	*		V207
PAOZZ	5960-188-0921	ELECTRON TUBE V208 4021 (81349)	EA	2	*	*	*	*		V208
PAOZZ	5960-188-0921	ELECTRON TUBE V209 4021 (81349)	EA	REF	*	*	*	*		V209
PAOZZ	5960-262-1703	ELECTRON TUBE V201 5R42GA (81349)	EA	3	*	*	*	*		V201

SECTION III

TM11-5825-202-20P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REF NUMBER & MFR CODE	(4) UNIT OF MEAS USABLE ON CODE	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(A)	(B)	(C)	(D)	(A)	(B)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
PAOZZ	5960-262-1703	ELECTRON TUBE V202 5R4WGA (81349)	EA	REF	*	*	*	*		V202
PAOZZ	5960-262-1703	ELECTRON TUBE V203 5R4WGA (81349)	EA	REF	*	*	*	*		V203
PAOZZ	5960-894-0130	ELECTRON TUBE V305 6AH6 (81349)	EA	1	*	*	*	*		V305
PAOZZ	5960-235-8215	ELECTRON TUBE V304 6C4W (81349)	EA	1	*	*	*	*		V304
PAOZZ	5960-262-0167	ELECTRON TUBE V301 12AT7WA (81349)	EA	1	*	*	*	*		V301
PAOZZ	5960-879-5078	ELECTRON TUBE V303 5726-6AL52 (81349)	EA	1	*	*	*	*		V303
PAOZZ	5960-262-0210	ELECTRON TUBE V302 5814A (81349)	EA	1	*	*	*	*		V302
PAOZZ	5355-324-6301	KNOB 0227 90-3-2G (44956)	EA	4	*	*	*	*		0227
PAOZZ	5355-324-6301	KNOB 0228 90-3-2G (44956)	EA	REF	*	*	*	*		0228
PAOZZ	5355-324-6301	KNOB 0229 90-3-2G (44956)	EA	REF	*	*	*	*		0229
PAOZZ	P355-324-6301	KNOB 0230 90-3-2G (44956)	EA	REF	*	*	*	*		0230
PAOZZ	5355-579-1210	GROUP 0008 TUNER, RADIO FREQUENCY TN-324/G KNOB 0231 MS91528-3F2B (96906)	EA	2	*	*	*	*		0231
PAOZZ	5355-579-1210	KNOB 0232 MS91528-3F2B (96906)	EA	REF	*	*	*	*		0232
PAOZZ	5920-281-0225	GROUP 0006 TRANSMITTER POWER SUPPLY SECTION FUSE, CARTRIDGE F1 F03G8ROOA (81349)	EA	1	*	*	*	*	2-1	F1
PAOZZ	5920-010-6652	FUSE, CARTRIDGE F2 F02G3ROOA (81349)	EA	1	*	*	*	*	2-1	F2
PAOZZ	6243-143-3049	LAMP, INCANDESCENT I3 6S6-115 (ZZZZZ)	EA	2	*	*	*	*		13
PAOZZ	5960-503-4880	GROUP 0007 TRANSMITTER RF SECTION ELECTRON TUBE V403 OAZ (81350)	EA	1	*	*	*	*		V403
PAOZZ	5960-166-7667	ELECTRON TUBE V506 6AH6 (81349)	EA	1	*	*	*	*		V506
PAOZZ	5960-188-3545	ELECTRON TUBE V501 5654-6AK52 (81349)	EA	2	*	*	*	*		V501
PAOZZ	5960-188-3545	ELECTRON TUBE V505 5654-6AK5W (81349)	EA	REF	*	*	*	*		V505
PAOZZ	5960-188-0806	ELECTRON TUBE V502 6BA7 (81349)	EA	2	*	*	*	*		V502
PAOZZ	5960-188-0806	ELECTRON TUBE V504 6BA7 (81349)	EA	REF	*	*	*	*		V504
PAOZZ	5960-235-8215	ELECTRON TUBE V503 6C42 (81349)	EA	1	*	*	*	*		V503
PAOZZ	5960-295-8464	ELECTRON TUBE V507 6CL6 (81349)	EA	1	*	*	*	*		V507
PAOZZ	5960-262-0161	ELECTRON TUBE V508 6L6WGB (81349)	EA	2	*	*	*	*		V508
PAOZZ	5960-262-0161	ELECTRON TUBE V509 6L6WGB (81349)	EA	REF	*	*	*	*		V509
PAOZZ	5960-235-9107	ELECTRON TUBE V3126 6SJ7 (81349)	EA	1	*	*	*	*		
PAOZZ	5960-275-2990	ELECTRON TUBE V402 5933 (81349)	EA	1	*	*	*	*		V402
PAOZZ	5355-685-3799	KNOB 0513 MS91528-4N2B (96906)	EA	1	*	*	*	*		513
PAOZZ	5355-656-1230	KNOB 0447 175-3-2G (49956)	EA	2	*	*	*	*		447
PAOZZ	5355-656-1230	KNOB 0514 175-3-2G (49956)	EA	REF	*	*	*	*		514
PAOZZ	5355-644-4086	KNOB 0448 225-6-2G (49956)	EA	2	*	*	*	*		448
PAOZZ	5355-644-4086	KNOB 0449 225-6-2G (49956)	EA	REF	*	*	*	*		449
PAOZZ	5830-564-7953	LEVER 0450 2117758-4 (64294)	EA	2	*	*	*	*		450
PAOZZ	5830-564-7953	LEVER 0451 2117759-4 (64294)	EA	REF	*	*	*	*		451
PAOZZ	6240-223-9100	LAMP, GLOW 1501 NE51 (24455)	EA	1	*	*	*	*		1501
PAOZZ	5830-564-7953	KNOB 0601 24117758-4 (64294)	EA	1	*	*	*	*		0601
PAOZZ	5355-584-4315	KNOB 0602 S310-64BBEF40290 (75376)	EA	1	*	*	*	*		0602

INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER
CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
4030-187-5263	1-6		5960-188-0921		V205
4030-291-9354			5960-188-0921		V206
5340-497-8640	1-6	0986	5960-188-0921		V207
5340-497-8640	1-6	0988	5960-188-0921		V208
5340-497-8640	1-6	0989	5960-188-0921		V209
5340-497-8640	1-6	987	5960-188-3545		V501
5355-324-6301		0227	5960-188-3545		V505
5355-324-6301		0228	5960-235-8215		V103
5355-324-6301		0229	5960-234-8215		V304
5355-324-6301		0230	5960-235-8215		V503
5355-579-1210		0231	5960-235-9107		
5355-579-1210		0232	5960-262-0161		V508
5355-579-6390		0103	5960-262-0161		V509
5355-579-6390	51	0102	5960-262-0167		V102
5355-584-4315		0602	5960-262-0167		V301
5355-644-4086		448	5960-262-0210		V302
5355-644-4086		449	5960-262-0218		V101
5355-656-1230		447	5960-262-1703		V201
5355-656-1230		514	5960-262-1703		V202
5355-685-3799		513	5960-262-1703		V203
5510-187-5267			5960-275-2990		V402
5820-224-4638	1-6		5960-295-8464		V507
5830-564-7953		0601	5960-503-4880		V403
5830-564-7953		450	5960-879-5078		V303
5830-564-7953		451	5960-894-0130		V305
5920-010-6652	2-1	F2	5985-174-1980	1-6	
5920-281-0225	2-1	F1	5985-636-2420	1-6	
5920-284-9220	2-2	F101	6240-143-3049		I3
5960-108-0252		V1	6240-155-8706	2-2	I101
5960-108-0252		V2	6240-155-8706	2-2	I102
5960-166-7567		V506	6240-155-8706	2-2	I103
5960-188-0806		V502	6240-223-9100		I501
5960-188-0806		V504	6240-538-8447		I801
5960-188-0921		V204	6240-538-8447		I802

REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.	REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.
F02G1ROOB	81349	2-2	F101	3828	81349		V1
402G1ROOA	81349	2-1	F2	3828	81349		V2
F03G8ROOA	81349	2-1	F1	4D21	81349		V208
F20T12W	08108		I801	4D21	81349		V209
F20T12W	80368		I802	47	08806	2-2	I101
GP112G	800578			47	08806	2-2	I102
MS91528-3F2B	96906	0231		47	08806	2-2	I103
MS91528-3F2B	96906	0232		5R4WGA	81349		V201
MS91528-4N2B	96906	513		5R4WGA	81349		V202
MX378U	80058	1-6		5R4WGA	81349		V203
MX379U	80058	1-6	0986	5Y3WGTA	81349		V101
MX379U	80058	1-6	0988	5654-6AK5W	81349		V501
MX379U	80058	1-6	0989	5654-6AK5W	81349		V505
MX379U	80058	1-6	987	5726-6AL5W	81349		V303
NE51	24455		I501	5814A	81349		V302
OA2WA	81349		V204	5933	81349		V402
OA2WA	81349		V205	6AH6	81349		V506
OA2WA	81349		V206	6BA7	81349		V502
SCB84299	80063	1-6		6BA7	81349		V504
SCC22005	80063			6CL6	81349		V507
SCC34000	80063	1-6		604W	81349		V103
SCD76210	80058	1-6		604W	81349		V304
S310-64BBFF40290	75376		0602	604W	81349		V503
OAZ	81350		V403	6L6WBG	81349		V508
12AT7WA	81349		V102	6L6WGB	81349		V509
12AT7WA	81349		V301	6SJ7	81349		
175-3-2G	49956		447	6S6-115	ZZZZZ		I3
175-3-2G	49956		514	90-3-2G	44956		0227
2117758-4	64294		450	90-3-2G	44956		0228
2117758-4	62494		451	90-3-2G	49956		0103
225-6-2G	49956		448	90-3-2G	49956		0229
225-6-2G	49956		449	90-3-2G	49956		0230
24117758-4	64294		0601	90-3-2G	49956	51	0102

By Order of the Secretary of the Army:

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Distribution:

To be distributed in accordance with DA Form 12-36 (qty rqr block No. 268) organizational maintenance requirements for AN/GRN-6.

GPO 885-694

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT... PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
----------	------------	------------	-----------

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

PIN: 028130-000