

**TECHNICAL BULLETIN**  
**OPERATOR'S LAPTOP GUIDE**  
for  
**JOINT NETWORK MANAGEMENT SYSTEM (JNMS)**  
**AN/USQ-194A (NSN 5895-01-559- 3552) (EIC: N/A)**

Dell, Inc., One Dell Way, Round Rock, TX 78682  
Contract # DAAB07-01-C-F404



**DISTRIBUTION STATEMENT A.** Approved for public release; distribution is unlimited.

©2007 Dell, Inc.

**HEADQUARTERS, DEPARTMENT OF THE ARMY**  
**15 MAY 2008**

---





# **5** SAFETY STEPS TO FOLLOW IF SOMEONE IS THE VICTIM OF ELECTRICAL SHOCK.

**1**

**DO NOT TRY TO PULL OR GRAB THE INDIVIDUAL.**

**2**

**IF POSSIBLE, TURN OFF THE ELECTRICAL POWER.**

**3**

**IF YOU CANNOT TURN OFF THE ELECTRICAL POWER, PULL, PUSH, OR LIFT THE PERSON TO SAFETY USING A WOODEN POLE OR A ROPE OR SOME OTHER INSULATING MATERIAL.**

**4**

**SEND FOR HELP AS SOON AS POSSIBLE.**

**5**

**AFTER THE INJURED PERSON IS FREE OF CONTACT WITH THE SOURCE OF ELECTRICAL SHOCK, MOVE THE PERSON A SHORT DISTANCE AWAY AND IMMEDIATELY START ARTIFICIAL RESUSCITATION.**

**FOR ARTIFICIAL RESPIRATION, REFER TO FM 4-25.11.**

**General handling guidelines for Panasonic 11.1v Lithium-ion Battery Pack**

**WARNINGS**

Do not be misled by the term "low voltage". Potentials as low as 50 volts may cause death under adverse conditions.

If Lithium is leaking from the battery pack and contacts your skin or clothing, immediately flush it thoroughly with running water. Otherwise, skin inflammation can occur.

For Artificial Respiration, refer to FM 4-25.11, First Aid for Soldiers.

Review the precautions in TB 385-4, Safety Requirements for Maintenance of Electrical and Electronic Equipment before attempting repairs or service of electronic equipment.

**CAUTIONS**

Do not disassemble or modify the battery pack. Opening the battery pack will void the warranty.

Do not puncture the cell or in any way breach the cell packaging. Intentionally damaging the battery pack will void the warranty.

Do not use a cell that appears to be damaged or deformed, is discolored or appears to have defects.

Keep the cells dry and away from water.

Avoid placing cells on metal surfaces. Avoid external short-circuiting of cell leads in general.

Do not apply excessive pressure to the main body of the cell.

Do not expose the cell to heat sources such as intense sunlight, near fire or a heater or in a vehicle in hot weather. Rapid heating or disrupted sealing can lead to lithium leakage, overheating, smoke emission, bursting, and/or ignition.

If the battery pack gives off an odor, generates excessive heat, becomes discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately remove it from the equipment and stop using it. Otherwise, the problematic battery pack can develop acid leakage, overheating, smoke emission, bursting, and/or ignition.

The battery pack incorporates built-in safety devices. Do not use in a location where static electricity (greater than the manufacturer's guarantee) may be present. Otherwise, the safety devices can be damaged possibly leading to lithium leakage, overheating, smoke emission, bursting and or ignition.

The guaranteed recharging temperature range is 0 to 40°C. A recharging operation outside this range can lead to lithium leakage and/or overheating of the battery pack, and may cause damage to it.

If you damage or irregularities when using the battery pack for the first time, return it to your supplier or vendor.

### **GENERAL WARNING AND CAUTION STATEMENTS**

#### **WARNING**

Operators should not perform any unauthorized modifications or maintenance. Maintenance is to be conducted by authorized personnel only. Report damaged equipment to maintenance personnel. Failure to comply may result in injury to personnel and/or equipment damage.

#### **WARNING**

The Situational Awareness (SA) data represented on the display is provided for assistance, and may not be in real-time, or completely represent all elements on the field. Displayed icons provide a general idea and location of objects (friendly and enemy). Over-dependence on the accuracy of the SA may cause miscalculations resulting in injury. This should be noted when performing missions. Failure to comply may result in injury to personnel.

#### **WARNING**

Sudden vehicle accelerations from operation in rough terrain, sudden stops or vehicle mishap may cause loose or damaged hardware to become a projectile. Ensure system components are properly secured. Internal projectiles could cause serious injury to personnel and can damage or destroy equipment. Failure to comply may result in injury to personnel and/or equipment damage.

**WARNING**

The internal display inverters operate at high voltages. Electrical shock may occur causing injury to personnel and/or death. Do not disassemble the Display Unit (DU). Failure to comply could result in injury to personnel.

**WARNING**

If Lithium Carbon Monofluoride Complimentary Metal-Oxide Semi-Conductor (CMOS) button-cell internal back-up batteries rupture, leaking electrolyte will cause irritation if it comes in contact with eyes or skin. Any areas of contact should be immediately washed with water to remove electrolytes. Dispose of batteries IAW your local servicing Defense Reutilization Material Office (DRMO). Failure to comply could result in injury to personnel or damage to the environment.

**WARNING**

If NiMH internal hold-up batteries rupture, leaking electrolyte will cause irritation if it comes in contact with eyes or skin. Any areas of contact should be immediately washed with water to remove electrolytes. Dispose of batteries IAW your local servicing Defense Reutilization Material Office (DRMO). Failure to comply could result in injury to personnel or damage to the environment.

**WARNING**

Processor Units with internal Light Emitting Diodes (LED) diagnostic displays contain 9-volt non-rechargeable lithium batteries located in battery trays. If batteries rupture leaking electrolyte will cause irritation if it comes in contact with eyes or skin. Any areas of contact should be immediately washed with water to remove electrolytes. Dispose of batteries IAW your local servicing Defense Reutilization Material Office (DRMO). Failure to comply could result in injury to personnel or damage to the environment.

**WARNING**

If Processor Unit (PU) batteries leak, remove batteries while wearing protective gloves and clean out the battery compartment with a slightly water-dampened cloth and dry thoroughly. Dispose of batteries IAW your local servicing Defense Reutilization Material Office (DRMO). Failure to comply could result in injury to personnel or damage to the environment.

**CAUTION**

Do not shutdown the computer power without first following software shutdown procedures. Failure to comply may cause loss of program data.

**CAUTION**

Keep batteries away from extreme temperatures. The battery pack will not function as an Uninterruptible Power Supply (UPS) when the temperature of the batteries is outside of the -4°F/-20°C to +131°F/+55°C range. Failure to do so may result in equipment damage.





**LIST OF EFFECTIVE PAGES/WORK PACKAGES**

NOTE: Zero in the "Change No." column indicates an original page or work package.

Dates of issue for original manual is:

Original            15 May 2008

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 232, CONSISTING OF THE FOLLOWING:

<b>Page</b>	<b>Change No</b>
Front Cover	0
Blank	0
a - e	0
f blank	0
i - iii	0
iv blank	0
1 -205	0
206 blank	0
Blank	0
Back Cover	0



Technical Bulletin  
TB 11-5895-1796-10-4

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
Washington, DC, 15 May 2008

**TECHNICAL BULLETIN**

**OPERATOR'S LAPTOP GUIDE**  
for  
**JOINT NETWORK MANAGEMENT SYSTEM (JNMS)**  
**AN/USQ-194A (NSN 5895-01-559-3552) (EIC: N/A)**

Dell, Inc., One Dell Way, Round Rock, TX 78682  
Contract # DAAB07-01-C-F404

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Reports, as applicable by the requiring Service, should be submitted as follows: Army - Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) located in the back of this manual, directly to: Commander, U.S. Army CECOM Life Cycle Management Command (LCMC) and Fort Monmouth, ATTN: AMSEL-LC-LEO-E-ED, Fort Monmouth, NJ 07703-5006. You may also send in your recommended changes via electronic mail or by fax. Our fax number is 732-532-1556, DSN 992-1556. Our e-mail address is [MONM-AMSELLEOPUBSCHG@conus.army.mil](mailto:MONM-AMSELLEOPUBSCHG@conus.army.mil). Our online web address for entering and submitting DA Form 2028s is <http://edm.monmouth.army.mil/pubs/2028.html>.

**DISTRIBUTION STATEMENT A.** Approved for public release; distribution is unlimited.

## TABLE OF CONTENTS

Warnings and Cautions .....	a
List of Effective Pages .....	A
How to Use This Manual .....	iii
Hyperlinks, Notes, Notices, and Cautions .....	1
Finding Information .....	3
Reinstalling Software .....	9
Troubleshooting .....	18
Getting Help .....	45
Cleaning Your Computer .....	79
Using a Battery .....	84
Specifications .....	92
Using Cards .....	104
Using Multimedia .....	109
About Your Computer .....	112
Using the Display .....	126
Using the Keyboard .....	132
Dell™ QuickSet .....	138
Securing Your Computer .....	139
Setting Up and Using Networks .....	151
Adding and Replacing Parts .....	162
System Setup Program .....	187
Glossary .....	191

### NOTE

If using paper copy of this manual, use the above Table of Contents to locate the information you are looking for. If using electronic (i.e., .pdf) copy of this manual, please use the hyperlinks on the top of Page 1 to quickly navigate to any of the above chapters.

## HOW TO USE THIS MANUAL

Spend a few minutes and look through this Technical Bulletin. You will find all the information you need to operate the AN/USQ-194A laptop for use with the Joint Network Management System (JNMS)

Please note this manual was converted from a Commercial Off The Shelf (COTS) manual that was originally function-based (written in html with hyperlinks) rather than page-based. Significant time and effort has been expended to reformat the manual into a page-based manual for the purpose of printing hard copies without disrupting the structure of the original.

However, since this manual will most likely primarily be used in electronic form, the hyperlink capability, as well as the function-based order of material, has been retained in a modified .pdf page-based format. A re-ordering of the material to conform to a traditional page-based structure would disrupt link integrity and necessitate a time-consuming effort to re-establish all hyperlinks.

As such, in addition to the traditional Table of Contents on page ii, the actual manual, with the order of information generated during conversion from .html (function-based) to .pdf (page-based) format, begins on Page 1 with hyperlinks to each chapter and glossary highlighted in blue text.

### TABLE OF CONTENTS

Refer to the Table of Contents to locate information. The Table of Contents lists each Chapter, showing subject and page numbers. In addition, hyperlinks to each chapter and glossary are highlighted in blue text at the top of Page 1.

### ABBREVIATIONS

For the sake of brevity, this manual makes use of abbreviations. Abbreviations are identified with the complete meaning at the first use and frequently thereafter. If you need a meaning of an abbreviation, it may be found in the Glossary located at the rear of this manual.

### CHAPTERS

The Chapter titles are self-explanatory. The Table of Contents shows each chapter covered in this manual by subject description. Chapter titles also appear as hyperlinks at the top of Page 1.

### WARNINGS, CAUTIONS, AND NOTES

Throughout this technical bulletin, Warnings, Cautions, and Notes are posted to alert the reader to special provisions and provide additional information concerning the operation of the laptop.

#### WARNING

Warnings denote conditions, practices, or procedures that could lead to personal injury or loss of life.

#### CAUTION

Cautions warn about conditions, practices, or procedures that could damage or destroy equipment or create a potential security problem.

#### NOTE

Notes are used to draw attention to information of importance, special interest, or information that aids job performance.

In addition to the standard Government Warnings provided on pages a through e, please see "Hyperlinks, Notes, Notices, and Cautions" on Page 1 for guidance on identifying these items throughout the body of this manual.



# Dell™ Latitude™ D830 User's Guide

[Finding Information](#)

[About Your Computer](#)

[Using a Battery](#)

[Using the Keyboard](#)

[Using Multimedia](#)

[Using the Display](#)

[Setting Up and Using Networks](#)

[Using Cards](#)

[Securing Your Computer](#)

[Troubleshooting](#)

[System Setup Program](#)

[Traveling With Your Computer](#)

[Reinstalling Software](#)

[Adding and Replacing Parts](#)

[Dell™ QuickSet](#)

[Specifications](#)

[Getting Help](#)

[Appendix - Cleaning Your Computer](#)

[Glossary](#)

---

## Notes, Notices, and Cautions



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.

## Abbreviations and Acronyms

For a complete list of abbreviations and acronyms, see [Glossary](#).

If you purchased a Dell™ n Series computer, any references in this document to Microsoft® Windows® operating systems are not applicable.

**Information in this document is subject to change without notice.  
© 2007 Dell Inc. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *Inspiron*, *Dell Precision*, *Dimension*, *OptiPlex*, *Latitude*, *PowerEdge*, *PowerVault*, *PowerApp*, *ExpressCharge*, *TravelLite*, *Strike Zone*, *Wi-Fi Catcher*, *XPS*, and *Dell OpenManage* are trademarks of Dell Inc.; *Intel* is a registered trademark and *Core* is a trademark of Intel Corporation; *Microsoft*, *Outlook*, and *Windows* are registered trademarks and *Windows Vista* and the *Windows Vista Start button* are trademarks of Microsoft Corporation; *Bluetooth* is a registered trademark owned by Bluetooth SIG, Inc. and is used by Dell under license; *EMC* is a registered trademark of EMC Corporation; *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model PP04X

April 2007 Rev. A00



[Back to Contents Page](#)

# Finding Information

## Dell™ Latitude™ D830 User's Guide



**NOTE:** Some features or media may be optional and may not ship with your computer. Some features or media may not be available in certain countries.



**NOTE:** Additional information may ship with your computer.

What Are You Looking For?	Find It Here
<ul style="list-style-type: none"> <li>• A diagnostic program for my computer</li> <li>• Drivers for my computer</li> <li>• My computer documentation</li> <li>• My device documentation</li> <li>• Notebook System Software (NSS)</li> </ul>	<p><b>Drivers and Utilities CD</b></p> <p><b>NOTE:</b> The <i>Drivers and Utilities</i> CD may be optional and may not ship with your computer.</p> <p>Documentation and drivers are already installed on your computer. You can use the CD to reinstall drivers (see <a href="#">Reinstalling Drivers and Utilities</a>), to run the Dell Diagnostics (see <a href="#">Dell Diagnostics</a>), or to access your documentation.</p> <div data-bbox="605 1268 1036 1675" data-label="Image"> </div> <p>Readme files may be included on your CD to provide last-minute updates about technical changes to your computer or advanced technical-reference material for technicians or experienced users.</p> <p><b>NOTE:</b> Drivers and documentation updates can be found at <b>support.dell.com</b>.</p>

- How to set up my computer
- Basic troubleshooting information
- How to run the Dell Diagnostics

### Quick Reference Guide

**NOTE:** This document may be optional and may not ship with your computer.




**NOTE:** This document is available as a PDF at [support.dell.com](http://support.dell.com).

- Warranty information
- Terms and Conditions (U.S. only)
- Safety instructions
- Regulatory information
- Ergonomics information
- End User License Agreement

### Dell™ Product Information Guide





<ul style="list-style-type: none"> <li>• Service Tag and Express Service Code</li> <li>• Microsoft Windows License Label</li> </ul>	<p><b>Service Tag and Microsoft® Windows® License</b></p> <p>These labels are located on your computer.</p>  <p>Enter the Express Service Code to direct your call when contacting Dell technical support.</p>
<ul style="list-style-type: none"> <li>• Solutions — Troubleshooting hints and tips, articles from technicians, and online courses, frequently asked questions</li> <li>• Community — Online discussion with other Dell customers</li> <li>• Upgrades — Upgrade information for components, such as memory, the hard drive, and the operating system</li> <li>• Customer Care — Contact information, service call and order status, warranty, and repair information</li> <li>• Service and support — Service call status and support history, service contract, online discussions with technical support</li> </ul>	<p><b>Dell Support Website — <a href="http://support.dell.com">support.dell.com</a></b></p> <p><b>NOTE:</b> Select your region or business segment to view the appropriate support site.</p> <p><b>NOTE:</b> Corporate, government, and education customers can also use the customized Dell Premier Support website at <b><a href="http://premier.support.dell.com">premier.support.dell.com</a></b>. The website may not be available in all regions.</p>


- Dell Technical Update Service — Proactive e-mail notification of software and hardware updates for your computer
- Reference — Computer documentation, details on my computer configuration, product specifications, and white papers
- Downloads — Certified drivers, patches, and software updates
- Notebook System Software (NSS)— If you reinstall the operating system for your computer, you should also reinstall the NSS utility. NSS provides critical updates for your operating system and support for Dell™ 3.5-inch USB floppy drives, Intel® processors, optical drives, and USB devices. NSS is necessary for correct operation of your Dell computer. The software automatically detects your computer and operating system and installs the updates appropriate for your configuration.

To download Notebook System Software:

1. Go to **support.dell.com**, select your region or business segment, and enter your Service Tag.
2. Select **Drivers & Downloads** and click **Go**.
3. Click your operating system and search for the keywords *Notebook System Software*.

**NOTE:** The **support.dell.com** user interface may vary depending on your selections.

<ul style="list-style-type: none"> <li>• Software upgrades and troubleshooting hints — Frequently asked questions, hot topics, and general health of your computing environment</li> </ul>	<p><b>Dell Support Utility</b></p> <p>The Dell Support Utility is an automated upgrade and notification system installed on your computer. This support provides real-time health scans of your computing environment, software updates, and relevant self-support information. Access the Dell Support Utility from the  icon in the taskbar. For more information, see <a href="#">Dell Support Utility</a>.</p>
<ul style="list-style-type: none"> <li>• How to use Windows XP and Windows Vista™</li> <li>• How to work with programs and files</li> <li>• How to personalize my desktop</li> </ul>	<p><b>Windows Help and Support Center</b></p> <ol style="list-style-type: none"> <li>1. Click <b>Start</b> or  → <b>Help and Support</b>.</li> <li>2. Type a word or phrase that describes your problem and click the arrow icon.</li> <li>3. Click the topic that describes your problem.</li> <li>4. Follow the instructions on the screen.</li> </ol>
<ul style="list-style-type: none"> <li>• Information on network activity, the Power Management Wizard, hotkeys, and other items controlled by Dell QuickSet.</li> </ul>	<p><b>Dell QuickSet Help</b></p> <p>To view <i>Dell QuickSet Help</i>, right-click the Quickset icon in the Microsoft® Windows® taskbar.</p> <p>For more information on Dell QuickSet, see <a href="#">Dell™ QuickSet</a>.</p>
<ul style="list-style-type: none"> <li>• How to reinstall my operating system</li> </ul>	<p><b>Operating System CD</b></p> <p><b>NOTE:</b> The <i>Operating System</i> CD may be optional and may not ship with your computer.</p> <p>The operating system is already installed on your computer. To reinstall your operating system, use the <i>Operating System</i> CD (see <a href="#">Reinstalling Windows</a>).</p> <p>After you reinstall your operating system, use the <i>Drivers and Utilities</i> CD to reinstall drivers for the devices that came with your computer.</p>

	 <p>Your operating system product key label is located on your computer.</p> <p><b>NOTE:</b> The color of your CD varies based on the operating system you ordered.</p>
<ul style="list-style-type: none"><li>• How to use Linux</li><li>• E-mail discussions with users of Dell Precision™ products and the Linux operating system</li><li>• Additional information regarding Linux and my Dell Precision computer</li></ul>	<p><b>Dell Supported Linux Sites</b></p> <ul style="list-style-type: none"><li>• <b>Linux.dell.com</b></li><li>• <b>Lists.us.dell.com/mailman/listinfo/linux-precision</b></li></ul>

[Back to Contents Page](#)

[Back to Contents Page](#)

# Reinstalling Software

## Dell™ Latitude™ D830 User's Guide

- [Drivers](#)
  - [Using the Hardware Troubleshooter Tool in Microsoft Windows XP and Windows Vista Operating Systems](#)
  - [Restoring Your Operating System](#)
- 

## Drivers

### What Is a Driver?

A driver is a program that controls a device such as a printer, mouse, or keyboard. All devices require a driver program.

A driver acts like a translator between the device and any other programs that use the device. Each device has its own set of specialized commands that only its driver recognizes.

Dell ships your computer to you with required drivers already installed—no further installation or configuration is needed.



**NOTICE:** The Drivers and Utilities CD may contain drivers for operating systems that are not on your computer. Ensure that you are installing software appropriate for your operating system.

Many drivers, such as the keyboard driver, come with your Microsoft® Windows® operating system. You may need to install drivers if you:

- Upgrade your operating system.
- Reinstall your operating system.
- Connect or install a new device.


### Identifying Drivers



If you experience a problem with any device, identify whether the driver is the source of your problem and, if necessary, update the driver.

## Microsoft Windows XP

1. Click **Start**→ **Control Panel**.
2. Under **Pick a Category**, click **Performance and Maintenance**.
3. Click **System**.
4. In the **System Properties** window, click the **Hardware** tab.
5. Click **Device Manager**.

## Microsoft Windows Vista


1. Click the Windows Vista Start button, , and right-click **Computer**.
2. Click **Properties**→ **Device Manager**

 **NOTE:**  The **User Account Control** window may appear. If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

Scroll down the list to see if any device has an exclamation point (a yellow circle with a [!]) on the device icon.

If an exclamation point is next to the device name, you may need to try [Reinstalling Drivers and Utilities](#).

## Reinstalling Drivers and Utilities

 **NOTICE:** The Dell Support website at [support.dell.com](http://support.dell.com) and your Drivers and Utilities CD provide approved drivers for Dell™ computers. If you install drivers obtained from other sources, your computer might not work correctly.

## Using Windows Device Driver Rollback


If a problem occurs on your computer after you install or update a driver, use Windows Device Driver Rollback to replace the driver with the previously installed version.



For Windows XP:

1. Click **Start** and right-click **My Computer**.
2. Click **Properties**→ **Hardware**→ **Device Manager**.
3. Right-click the device for which the new driver was installed and click **Properties**.
4. Click **Drivers**→ **Roll Back Driver**.

For Windows Vista:

1. Click the Windows Vista Start button, , and right-click **Computer**.
2. Click **Properties**→ **Device Manager**.



**NOTE:** The **User Account Control** window may appear. If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to enter the Device Manager.

3. Right-click the device for which the new driver was installed and click **Properties**.
4. Click **Drivers**→ **Roll Back Driver**.

If Device Driver Rollback does not resolve the problem, use [Using Microsoft Windows System Restore](#) to return your computer to the operating state that existed before you installed the new driver.

## Using the Drivers and Utilities CD

If using Device Driver Rollback or System Restore does not resolve the problem, then reinstall the driver from the *Drivers and Utilities* CD.

1. Save and close any open files, and exit any open programs.
2. Insert the *Drivers and Utilities* CD.

In most cases, the CD starts running automatically. If it does not, start Windows Explorer, click your CD drive directory to display the CD contents, and then double-click the **autorcd.exe** file. The first time that you run the CD, it might prompt you to install setup files. Click **OK**, and follow the instructions on the screen to continue.

3. From the **Language** drop-down menu in the toolbar, select your preferred language for the driver or utility (if available). A welcome screen appears.

4. Click **Next**.

The CD automatically scans your hardware to detect drivers and utilities used by your computer.

5. After the CD completes the hardware scan, you can also detect other drivers and utilities. Under **Search Criteria**, select the appropriate categories from the **System Model**, **Operating System**, and **Topic** drop-down menus.

A link or links appear(s) for the specific drivers and utilities used by your computer.

6. Click the link of a specific driver or utility to display information about the driver or utility that you want to install.
7. Click the **Install** button (if present) to begin installing the driver or utility. At the welcome screen, follow the screen prompts to complete the installation.

If no **Install** button is present, automatic installation is not an option. For installation instructions, either see the appropriate instructions in the following subsections, or click **Extract**, follow the extracting instructions, and then read the readme file.

If instructed to navigate to the driver files, click the CD directory on the driver information window to display the files associated with that driver.

## Manually Reinstalling Drivers


After extracting the driver files to your hard drive as described in the previous section:

*For Windows XP:*

1. Click **Start** and right-click **My Computer**.
2. Click **Properties**→ **Hardware**→ **Device Manager**.
3. Double-click the type of device for which you are installing the driver (for example, **Audio** or **Video**).
4. Double-click the name of the device for which you are installing the driver.
5. Click **Driver**→ **Update Driver**→ **Install from a list or specific location (Advanced)**→ **Next**.

6. Click **Browse** and browse to the location to which you previously copied the driver files.
7. When the name of the appropriate driver appears, click **Next**.
8. Click **Finish** and restart your computer.

*For Windows Vista:*

1. Click the Windows Vista Start button,  , and right-click **Computer**.
2. Click **Properties** → **Device Manager**.



**NOTE:** The **User Account Control** window may appear. If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to enter the Device Manager.

3. Double-click the type of device for which you are installing the driver (for example, **Audio** or **Video**).
4. Double-click the name of the device for which you are installing the driver.
5. Click **Driver** → **Update Driver** → **Browse my computer for driver software**.
6. Click **Browse** and browse to the location to which you previously copied the driver files.
7. When the name of the appropriate driver appears, click the name of the driver and then click **OK** → **Next**.
8. Click **Finish** and restart your computer.

---


## Using the Hardware Troubleshooter Tool in Microsoft Windows XP and Windows Vista Operating Systems

If a device is either not detected during the operating system setup or is detected but incorrectly configured, you can use the Hardware Troubleshooter to resolve the incompatibility.

For Windows XP:

1. Click **Start** → **Help and Support**.
2. Type **hardware troubleshooter** in the search field and press <Enter> to start the search.
3. In the **Fix a Problem** section, click **Hardware Troubleshooter**.
4. In the **Hardware Troubleshooter** list, select the option that best describes the problem and click **Next** to follow the remaining troubleshooting steps.

For Windows Vista:

1. Click the Windows Vista Start button  → **Help and Support**.
2. Type **hardware troubleshooter** in the search field and press <Enter> to start the search.
3. In the search results for **hardware troubleshooter**, select the option that best describes the problem and follow the remaining troubleshooting steps.

---



## Restoring Your Operating System

You can restore your operating system in the following ways:

- Microsoft® Windows® XP and Windows Vista™ System Restore returns your computer to an earlier operating state without affecting data files. Use System Restore as the first solution for restoring your operating system and preserving data files.
- If you received an *Operating System* CD with your computer, you can use it to restore your operating system. However, using the *Operating System* CD also deletes all data on the hard drive. Use the CD *only* if System Restore did not resolve your operating system problem.


## Using Microsoft Windows System Restore

The Microsoft Windows operating systems provides a System Restore option which allows you to return your computer to an earlier operating state (without affecting data files); if changes to the hardware, software, or other system settings have left the computer in an undesirable operating state. Any changes that System Restore makes to your computer are completely reversible.



-  **NOTICE:** Make regular backups of your data files. System Restore does not monitor your data files or recover them.
-  **NOTE:** The procedures in this document were written for the Windows default view, so they may not apply if you set your Dell™ computer to the Windows Classic view.

## Starting System Restore

*For Windows XP:*


-  **NOTICE:** Before you restore the computer to an earlier operating state, save and close any open files and exit any open programs. Do not alter, open, or delete any files or programs until the system restoration is complete.
1. Click **Start** → **All Programs** → **Accessories** → **System Tools** → **System Restore**.
  2. Click either **Restore my computer to an earlier time** or **Create a restore point**.
  3. Click **Next**. Follow the remaining onscreen prompts.

*For Windows Vista:*

1. Click the Windows Vista Start button  → **Help and Support**.
  2. In the search box type **System Restore** and press <Enter>.
-  **NOTE:** The **User Account Control** window may appear. If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.
3. Click **Next**. Follow the remaining onscreen prompts.

In the event System Restore did not resolve the issue, you may undo the last system restore. To undo the last system restore, see [Undoing the Last System Restore](#).


## Undoing the Last System Restore

-  **NOTICE:** Before you undo the last system restore, save and close all open files and exit any open programs. Do not alter, open, or delete any files or programs until the system restoration is complete.

*For Windows XP:*

1. Click **Start**→ **All Programs**→ **Accessories**→ **System Tools**→ **System Restore**.
2. Click **Undo my last restoration**→ **Next**.

*For Windows Vista:*

1. Click the Windows Vista Start button  → **Help and Support**.
2. In the search box type **System Restore** and press <Enter>.
3. Click **Undo my last restoration**→ **Next**.

## Enabling System Restore



**NOTE:** Windows Vista does not disable System Restore, regardless of available disk space. Therefore, the following steps apply to Windows XP only.


If you reinstall Windows XP with less than 200 MB of free hard-disk space available, System Restore is automatically disabled. To see if System Restore is enabled:

1. Click **Start**→ **Control Panel**→ **Performance and Maintenance**→ **System**→ **System Restore**.
2. Ensure that **Turn off System Restore** is unchecked.

## Using the Operating System CD


### Before You Begin

If you are considering reinstalling the Windows operating system to correct a problem with a newly installed driver, first try using Windows Device Driver Rollback. See [Using Windows Device Driver Rollback](#). If Device Driver Rollback does not resolve the problem, then use [System Restore](#) to return your operating system to the operating state it was in before you installed the new device driver. See [Using Microsoft Windows System Restore](#).

-  **NOTICE:** Before performing the installation, back up all data files on your primary hard drive. For conventional hard drive configurations, the primary hard drive is the first drive detected by the computer.


To reinstall Windows, you need the following items:

- Dell™ *Operating System* CD
- Dell *Drivers and Utilities* CD

-  **NOTE:** The Dell Drivers and Utilities CD contains drivers that were installed during assembly of the computer. Use the Dell Drivers and Utilities CD to load any required drivers. Depending on the region from where you ordered your computer, or whether you requested the CDs, the Dell Drivers and Utilities CD and Operating System CD may not ship with your computer.


## Reinstalling Windows


The reinstallation process can take 1 to 2 hours to complete. After you reinstall the operating system, you must also reinstall the device drivers, virus protection program, and other software.

-  **NOTICE:** The Operating System CD provides options for reinstalling Windows. The options can overwrite files and possibly affect programs installed on your hard drive. Therefore, do not reinstall Windows unless a Dell technical support representative instructs you to do so.

1. Save and close any open files and exit any open programs.
2. Insert the *Operating System* CD. Click **Exit** if the `Install Windows` message appears.
3. Restart the computer.

When the DELL logo appears, press <F12> immediately.

-  **NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft® Windows® desktop; then, shut down your computer and try again.

-  **NOTE:** The next steps change the boot sequence for one time only. On the next start-up, the computer boots according to the devices specified in the system setup program.

4. When the boot device list appears, highlight **CD/DVD/CD-RW Drive** and press <Enter>.
  5. Press any key to select **Boot from CD-ROM**.
  6. Follow the instructions on the screen to complete the installation.
- 

[Back to Contents Page](#)



[Back to Contents Page](#)

# Troubleshooting

## Dell™ Latitude™ D830 User's Guide

- [Dell Technical Update Service](#)
- [Dell Diagnostics](#)
- [Dell Support Utility](#)
- [Drive Problems](#)
- [E-Mail, Modem, and Internet Problems](#)
- [Error Messages](#)
- [IEEE 1394 Device Problems](#)
- [Keyboard Problems](#)
- [Lockups and Software Problems](#)
- [Memory Problems](#)
- [Network Problems](#)
- [PC Card or ExpressCard Problems](#)
- [Power Problems](#)
- [Printer Problems](#)
- [Scanner Problems](#)
- [Sound and Speaker Problems](#)
- [Touch Pad or Mouse Problems](#)
- [Video and Display Problems](#)

---

## Dell Technical Update Service

The Dell Technical Update service provides proactive e-mail notification of software and hardware updates for your computer. The service is free and can be customized for content, format, and how frequently you receive notifications.

To enroll for the Dell Technical Update service, go to **[support.dell.com/technicalupdate](http://support.dell.com/technicalupdate)**.

---

## Dell Diagnostics



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

## When to Use the Dell Diagnostics

If you experience a problem with your computer, run the Dell Diagnostics before you contact Dell for technical assistance.

It is recommended that you print these procedures before you begin.



**NOTICE:** The Dell Diagnostics works only on Dell™ computers.



**NOTE:** The Drivers and Utilities CD is optional and may not ship with your computer.

Enter the system setup program, review your computer's configuration information, and ensure that the device you want to test displays in the system setup program and is active.

Start the Dell Diagnostics from your hard drive or from the *Drivers and Utilities* CD.

## Starting the Dell Diagnostics From Your Hard Drive

The Dell Diagnostics is located on a hidden diagnostic utility partition on your hard drive.





**NOTE:** If your computer cannot display a screen image, contact Dell (see [Contacting Dell](#)).




**NOTE:** If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.

1. Ensure that the computer is connected to an electrical outlet that is known to be working properly.
2. Turn on (or restart) your computer.
3. Start the Dell Diagnostics in one of the following two ways:
  - a. When the DELL™ logo appears, press <F12> immediately. Select Diagnostics from the boot menu and press <Enter>.

-  **NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft® Windows® desktop; then, shut down your computer and try again.
-  **NOTE:** Before attempting option B, the computer must be powered down completely.

b. Press and hold the <Fn> key while powering the computer on.

-  **NOTE:** If you see a message stating that no diagnostics utility partition has been found, run the Dell Diagnostics from the *Drivers and Utilities CD*.

The computer runs the Pre-boot System Assessment (PSA), a series of initial tests of your system board, keyboard, display, memory, hard drive, etc.

- During the assessment, answer any questions that appear.
- If failures are detected during the Pre-boot System Assessment, write down the error code(s) and see [Contacting Dell](#).



If the Pre-boot System Assessment completes successfully, you will receive the message, "Booting Dell Diagnostic Utility Partition.Press any key to continue".

4. Press any key to start the Dell Diagnostics from the diagnostics utility partition on your hard drive.

## Starting the Dell Diagnostics From the Drivers and Utilities CD

1. Insert the *Drivers and Utilities CD*.
2. Shut down and restart the computer.

When the DELL logo appears, press <F12> immediately.

-  **NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft® Windows® desktop; then, shut down your computer and try again.
-  **NOTE:** The next steps change the boot sequence for one time only. On the next start-up, the computer boots according to the devices specified in the system setup program.

3. When the boot device list appears, highlight **CD/DVD/CD-RW** and press <Enter>.
4. Select the **Boot from CD-ROM** option from the menu that appears and press <Enter>.
5. Type 1 to start the *CD* menu and press <Enter> to proceed.
6. Select **Run the 32 Bit Dell Diagnostics** from the numbered list. If multiple versions are listed, select the version appropriate for your computer.
7. When the Dell Diagnostics **Main Menu** screen appears, select the test you want to run.

## Dell Diagnostics Main Menu

1. After the Dell Diagnostics loads and the **Main Menu** screen appears, click the button for the option you want.



**NOTE:** It is recommended that you select Test System to run a complete test on your computer.

Option	Function
Test Memory	Run the stand-alone memory test
Test System	Run System Diagnostics
Exit	Exit the Diagnostics

2. After you have selected the `Test System` option from the main menu, the following menu appears.



**NOTE:** It is recommended that you select Extended Test from the menu below to run a more thorough check of devices in the computer.

Option	Function
Express Test	Performs a quick test of devices in the system. This typically can take 10 to 20 minutes.
Extended Test	Performs a thorough check of devices in the system. This typically can take an hour or more.
Custom Test	Use to test a specific device or customize the tests to be run.
Symptom Tree	This option allows you to select tests based on a symptom of the problem you are having. This option lists the most common symptoms.

3. If a problem is encountered during a test, a message appears with an error code and a description of the problem. Write down the error code and problem description and contact Dell (see [Contacting Dell](#)).



**NOTE:** The Service Tag for your computer is located at the top of each test screen. If you contact Dell, technical support will ask for your Service Tag.


4. If you run a test from the `Custom Test` or `Symptom Tree` option, click the applicable tab described in the following table for more information.

Tab	Function
Results	Displays the results of the test and any error conditions encountered.
Errors	Displays error conditions encountered, error codes, and the problem description.
Help	Describes the test and may indicate requirements for running the test.


Configuration	<p>Displays your hardware configuration for the selected device.</p> <p>The Dell Diagnostics obtains configuration information for all devices from system setup, memory, and various internal tests, and it displays the information in the device list in the left pane of the screen. The device list may not display the names of all the components installed on your computer or all devices attached to your computer.</p>
Parameters	<p>Allows you to customize the test by changing the test settings.</p>

5. When the tests are complete, close the test screen to return to the **Main Menu** screen. To exit the Dell Diagnostics and restart the computer, close the **Main Menu** screen.
6. Remove the Dell *Drivers and Utilities* CD (if applicable).

## Dell Support Utility

The Dell Support Utility is installed on your computer and available from the Dell Support,  , icon on the taskbar or from the **Start** button. Use this support utility for self-support information, software updates, and health scans of your computing environment.

### Accessing the Dell Support Utility

Access the Dell Support Utility from the  icon on the taskbar or from the **Start** menu.


If the Dell Support icon does not appear in your taskbar:

1. Click **Start**→ **All Programs**→ **Dell Support**→ **Dell Support Settings**.
2. Ensure that the **Show icon on the taskbar** option is checked.




**NOTE:** If the Dell Support Utility is not available from the Start menu, go to [support.dell.com](http://support.dell.com) and download the software.

The Dell Support Utility is customized for your computing environment.


The  icon in the taskbar functions differently when you click, double-click, or right-click the icon.

## Clicking the Dell Support Icon

Click or right-click the  icon to perform the following tasks:

- Check your computing environment
- View the Dell Support Utility settings
- Access the help file for the Dell Support Utility
- View frequently asked questions
- Learn more about the Dell Support Utility
- Turn the Dell Support Utility off

## Double-Clicking the Dell Support Icon

Double-click the  icon to manually check your computing environment, view frequently asked questions, access the help file for the Dell Support Utility, and view Dell Support settings.

For more information about the Dell Support Utility, click the question mark (?) at the top of the **Dell™ Support** screen.

---

## Drive Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

Fill out the Diagnostics Checklist (see [Dell Diagnostics](#)) as you complete these checks.

### Ensure that Microsoft® Windows® recognizes the drive —

*In Windows XP:*

- Click **Start**→ **My Computer**.

*In Windows Vista:*

- Click the Windows Vista Start button  → **Computer**.

If the floppy, CD, or DVD drive, is not listed, perform a full scan with your antivirus software to check for and remove viruses. Viruses can sometimes prevent Windows from recognizing the drive.

### **Test the drive —**

- Insert another floppy disk, CD, or DVD to eliminate the possibility that the original one is defective.
- Insert a bootable floppy disk and restart the computer.

**Clean the drive or disk —** See [Cleaning Your Computer](#).

**Ensure that the CD is snapped onto the spindle**

**Check the cable connections**

**Check for hardware incompatibilities —** See [Using the Hardware Troubleshooter Tool in Microsoft Windows XP and Windows Vista Operating Systems](#).

**Run the Dell Diagnostics —** See [Dell Diagnostics](#).

## **CD and DVD drive problems**



**NOTE:** High-speed CD or DVD drive vibration is normal and may cause noise, which does not indicate a defect in the drive or the CD or DVD.



**NOTE:** Because of different regions worldwide and different disc formats, not all DVD titles work in all DVD drives.

## **Problems writing to a CD/DVD-RW drive**

**Close other programs —** The CD/DVD-RW drive must receive a steady stream of data when writing. If the stream is interrupted, an error occurs. Try closing all programs before you write to the CD/DVD-RW.



**Turn off standby mode in Windows before writing to a CD/DVD-RW disc**

— See [Standby Mode](#) or search for the keyword *standby* in the Windows Help and Support Center for information on power management modes.

**Change the write speed to a slower rate** — See the help files for your CD or DVD creation software.

**If you cannot eject the CD, CD-RW, DVD, or DVD+RW drive tray**

1. Ensure that the computer is turned off.
2. Straighten a paper clip and insert one end into the eject hole at the front of the drive; push firmly until the tray is partially ejected.
3. Gently pull out the tray until it stops.

**If you hear an unfamiliar scraping or grinding sound**

- Ensure that the sound is not caused by the program that is running.
- Ensure that the disk or disc is inserted properly.

**Hard drive problems**


**Allow the computer to cool before turning it on** — A hot hard drive may prevent the operating system from starting. Try allowing the computer to return to room temperature before turning it on.

**Run Check Disk —**

*For Windows XP:*

1. Click **Start** → **My Computer**.
2. Right-click **Local Disk C:**.
3. Click **Properties** → **Tools** → **Check Now**.
4. Click **Scan for and attempt recovery of bad sectors** → **Start**.

*For Windows Vista:*

1. Click the Windows Vista Start button  → **Computer**.
2. Right-click **Local Disk C:**.

3. Click **Properties**→ **Tools**→ **Check Now**.



**NOTE:** The **User Account Control** window may appear. If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

4. Click **Scan for and attempt recovery of bad sectors**→ **Start**.

---

## E-Mail, Modem, and Internet Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.



**NOTE:** Connect the modem to an analog telephone connector only. The modem does not operate while it is connected to a digital telephone network.

**Check the Microsoft Outlook® Express Security Settings** — If you cannot open your e-mail attachments:

1. In Outlook Express, click **Tools**→ **Options**→ **Security**.
2. Click **Do not allow attachments** to remove the checkmark.

### Check the telephone line connection

#### Check the telephone connector

#### Connect the modem directly to the telephone wall connector

#### Use a different telephone line —

- Verify that the telephone line is connected to the connector on the modem. (The connector has either a green label or a connector-shaped icon next to it.)
- Ensure that you insert the telephone line connector into the modem until it clicks.
- Disconnect the telephone line from the modem and connect it to a telephone. Listen for a dial tone.
- If you have other telephone devices sharing the line, such as an answering machine, fax machine, surge protector, or line splitter, bypass the devices and connect the modem directly to the telephone wall connector. If you are using a line that is 3 m (10 ft) or more in length, try a shorter one.

**Run the Modem Helper diagnostics** — Click **Start**→ **All Programs**→ **Modem Helper**. Follow the instructions on the screen to identify and resolve modem problems. (Modem Helper is not available on certain computers.)

### **Verify that the modem is communicating with Windows** —

1. Click **Start**→ **Control Panel**→ **Printers and Other Hardware**→ **Phone and Modem Options**→ **Modems**.
2. Click the COM port for your modem→ **Properties**→ **Diagnostics**→ **Query Modem** to verify that the modem is communicating with Windows.

If all commands receive responses, the modem is operating properly.

**Ensure that you are connected to the Internet** — Ensure that you have subscribed to an Internet provider. With the Outlook Express e-mail program open, click **File**. If **Work Offline** has a checkmark next to it, click the checkmark to remove it and connect to the Internet. For help, contact your Internet service provider.

**Scan the computer for spyware** — If you are experiencing slow computer performance, you frequently receive pop-up advertisements, or you are having problems connecting to the Internet, your computer might be infected with spyware. Use an anti-virus program that includes anti-spyware protection (your program may require an upgrade) to scan the computer and remove spyware. For more information, go to **support.dell.com** and search for the keyword *spyware*.

## **Error Messages**

Fill out the Diagnostics Checklist (see [Diagnostics Checklist](#)) as you complete these checks.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

If the message is not listed, see the documentation for the operating system or the program that was running when the message appeared.

**Auxiliary device failure** — The touch pad, track stick, or external mouse may be faulty. For an external mouse, check the cable connection. Enable the Pointing Device option in the system setup program. If the problem persists, contact Dell (see [Contacting Dell](#)).

## TB 11-5895-1796-10-4

**Bad command or file name** — Ensure that you have spelled the command correctly, put spaces in the proper place, and used the correct pathname.

**Cache disabled due to failure** — The primary cache internal to the microprocessor has failed. Contact Dell (see [Contacting Dell](#)).

**CD drive controller failure** — The CD drive does not respond to commands from the computer (see [Dell Support Utility](#)).

**Data error** — The hard drive cannot read the data (see [Dell Support Utility](#)).

**Decreasing available memory** — One or more memory modules may be faulty or improperly seated. Reinstall the memory modules and, if necessary, replace them (see [Memory](#)).

**Disk C: failed initialization** — The hard drive failed initialization. Run the hard drive tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Drive not ready** — The operation requires a hard drive in the bay before it can continue. Install a hard drive in the hard drive bay (see [Hard Drive](#)).

**Error reading PCMCIA card** — The computer cannot identify the PC Card. Reinsert the card or try another PC Card (see [Using Cards](#)).

**Extended memory size has changed** — The amount of memory recorded in NVRAM does not match the memory installed in the computer. Restart the computer. If the error appears again, contact Dell (see [Contacting Dell](#)).

**The file being copied is too large for the destination drive** — The file that you are trying to copy is too large to fit on the disk, or the disk is too full. Try copying the file to a different disk or use a larger capacity disk.

**A filename cannot contain any of the following characters: \ / : \* ? " < > |** — Do not use these characters in filenames.

**Gate A20 failure** — A memory module may be loose. Reinstall the memory modules and, if necessary, replace them (see [Memory](#)).

**General failure** — The operating system is unable to carry out the command. The message is usually followed by specific information—for example, `Printer out of paper`. Take the appropriate action.

**Hard-disk drive configuration error** — The computer cannot identify the drive type. Shut down the computer, remove the hard drive (see [Hard Drive](#)), and

boot the computer from a CD. Then shut down the computer, reinstall the hard drive, and restart the computer. Run the Hard-Disk Drive tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Hard-disk drive controller failure 0** — The hard drive does not respond to commands from the computer. Shut down the computer, remove the hard drive (see [Hard Drive](#)), and boot the computer from a CD. Then shut down the computer, reinstall the hard drive, and restart the computer. If the problem persists, try another drive. Run the Hard-Disk Drive tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Hard-disk drive failure** — The hard drive does not respond to commands from the computer. Shut down the computer, remove the hard drive (see [Hard Drive](#)), and boot the computer from a CD. Then shut down the computer, reinstall the hard drive, and restart the computer. If the problem persists, try another drive. Run the Hard-Disk Drive tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Hard-disk drive read failure** — The hard drive may be defective. Shut down the computer, remove the hard drive (see [Hard Drive](#)), and boot the computer from a CD. Then shut down the computer, reinstall the hard drive, and restart the computer. If the problem persists, try another drive. Run the Hard-Disk Drive tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Insert bootable media** — The operating system is trying to boot to a nonbootable CD. Insert a bootable CD.

**Invalid configuration information-please run System Setup Program** — The system configuration information does not match the hardware configuration. The message is most likely to occur after a memory module is installed. Correct the appropriate options in the system setup program (see [System Setup Program](#)).

**Keyboard clock line failure** — For external keyboards, check the cable connection. Run the Keyboard Controller test in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Keyboard controller failure** — For external keyboards, check the cable connection. Restart the computer, and avoid touching the keyboard or the mouse during the boot routine. Run the Keyboard Controller test in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Keyboard data line failure** — For external keyboards, check the cable connection. Run the Keyboard Controller test in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Keyboard stuck key failure** — For external keyboards or keypads, check the cable connection. Restart the computer, and avoid touching the keyboard or keys

## **TB 11-5895-1796-10-4**

during the boot routine. Run the Stuck Key test in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Memory address line failure at address, read value expecting value** — A memory module may be faulty or improperly seated. Reinstall the memory modules and, if necessary, replace them (see [Memory](#)).

**Memory allocation error** — The software you are attempting to run is conflicting with the operating system, another program, or a utility. Shut down the computer, wait 30 seconds, and then restart it. Try to run the program again. If the error message still appears, see the software documentation.

**Memory data line failure at address, read value expecting value** — A memory module may be faulty or improperly seated. Reinstall the memory modules (see [Memory](#)) and, if necessary, replace them.

**Memory double word logic failure at address, read value expecting value** — A memory module may be faulty or improperly seated. Reinstall the memory modules (see [Memory](#)) and, if necessary, replace them.

**Memory odd/even logic failure at address, read value expecting value** — A memory module may be faulty or improperly seated. Reinstall the memory modules (see [Memory](#)) and, if necessary, replace them.

**Memory write/read failure at address, read value expecting value** — A memory module may be faulty or improperly seated. Reinstall the memory modules (see [Memory](#)) and, if necessary, replace them.

**No boot device available** — The computer cannot find the hard drive. If the hard drive is your boot device, ensure that the drive is installed, properly seated, and partitioned as a boot device.

**No boot sector on hard drive** — The operating system may be corrupted. Contact Dell (see [Contacting Dell](#)).

**No timer tick interrupt** — A chip on the system board may be malfunctioning. Run the System Set tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Not enough memory or resources. Exit some programs and try again** — You have too many programs open. Close all windows and open the program that you want to use.

**Operating system not found** — Reinstall the hard drive (see [Hard Drive](#)). If the problem persists, contact Dell (see [Contacting Dell](#)).

**Optional ROM bad checksum** — The optional ROM apparently failed.

Dell (see [Contacting Dell](#)). A required .DLL file was not found.

The program that you are trying to open is missing an essential file. Remove and then reinstall the program.

1. Click **Start**→ **Control Panel**→ **Add or Remove Programs**.
2. Select the program you want to remove.
3. Click **Remove** or **Change/Remove** and follow the prompts on the screen.
4. See the program documentation for installation instructions.

**Sector not found** — The operating system cannot locate a sector on the hard drive. You may have a defective sector or corrupted FAT on the hard drive. Run the Windows error-checking utility to check the file structure on the hard drive. See the Help and Support Center for instructions. If a large number of sectors are defective, back up the data (if possible), and then reformat the hard drive.

**Seek error** — The operating system cannot find a specific track on the hard drive.

**Shutdown failure** — A chip on the system board may be malfunctioning. Run the System Set tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Time-of-day clock lost power** — System configuration settings are corrupted. Connect your computer to an electrical outlet to charge the battery. If the problem persists, try to restore the data by entering the system setup program. Then immediately exit the program. If the message reappears, contact Dell (see [Contacting Dell](#)).

**Time-of-day clock stopped** — The reserve battery that supports the system configuration settings may require recharging. Connect your computer to an electrical outlet to charge the battery. If the problem persists, contact Dell (see [Contacting Dell](#)).

**Time-of-day not set-please run the System Setup program** — The time or date stored in the system setup program does not match the system clock. Correct the settings for the **Date** and **Time** options (see [System Setup Program](#)).

**Timer chip counter 2 failed** — A chip on the system board may be malfunctioning. Run the System Set tests in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Unexpected interrupt in protected mode** — The keyboard controller may be malfunctioning, or a memory module may be loose. Run the System Memory tests and the Keyboard Controller test in the Dell Diagnostics (see [Dell Diagnostics](#)).

**x:\ is not accessible. The device is not ready** — Insert a disk into the drive and try again.

**Warning: Battery is critically low** — The battery is running out of charge. Replace the battery, or connect the computer to an electrical outlet. Otherwise, activate hibernate mode or shut down the computer.

---

## IEEE 1394 Device Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

**Ensure that the IEEE 1394 device is recognized by Windows —**

*For Windows XP:*

1. Click **Start** → **Control Panel**.
2. Under **Pick a Category**, click **Performance and Maintenance**.
3. Click **System**.
4. In the **System Properties** window, click the **Hardware** tab.
5. Click **Device Manager**.

*For Windows Vista:*

1. Click the Windows Vista Start button  → **Control Panel** → **System and Maintenance** → **Device Manager**.



**NOTE:** The **User Account Control** window may appear. If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

If your IEEE 1394 device is listed, Windows recognizes the device.

**If you have problems with an IEEE 1394 device** — If the device was provided by Dell, contact Dell (see [Contacting Dell](#)). If the device was provided by a different manufacturer, contact that manufacturer.

**Ensure that the IEEE 1394 device is properly inserted into the connector**



# Keyboard Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

Fill out the Diagnostics Checklist (see [Diagnostics Checklist](#)) as you perform the various checks.



**NOTE:** Use the integrated keyboard when running the Dell Diagnostics or the system setup program. When you attach an external keyboard, the integrated keyboard remains fully functional.

## External keyboard problems



**NOTE:** When you attach an external keyboard, the integrated keyboard remains fully functional.

**Check the keyboard cable —** Shut down the computer. Disconnect the keyboard cable and check it for damage, and firmly reconnect the cable.

If you are using a keyboard extension cable, disconnect it and connect the keyboard directly to the computer.

### Check the external keyboard —

1. Shut down the computer, wait 1 minute, and turn it on again.
2. Verify that the numbers, capitals, and scroll lock lights on the keyboard blink during the boot routine.
3. From the Windows desktop, click **Start**→ **All Programs**→ **Accessories**→ **Notepad**.
4. Type some characters on the external keyboard and verify that they appear on the display.

If you cannot verify these steps, you may have a defective external keyboard.

## To verify that the problem is with the external keyboard, check the integrated keyboard —

1. Shut down the computer.
2. Disconnect the external keyboard.
3. Turn on the computer.
4. From the Windows desktop, click **Start**→ **All Programs**→ **Accessories**→ **Notepad**.
5. Type some characters on the internal keyboard and verify that they appear on the display.

If the characters appear now but did not with the external keyboard, you may have a defective external keyboard. Contact Dell (see [Contacting Dell](#)).

**Run the keyboard diagnostics tests** — Run the PC-AT Compatible Keyboards tests in the Dell Diagnostics (see [Dell Diagnostics](#)). If the tests indicate a defective external keyboard, contact Dell (see [Contacting Dell](#)).

## Unexpected characters

**Disable the numeric keypad** — Press <Num Lk> to disable the numeric keypad if numbers are displayed instead of letters. Verify that the numbers lock light is not lit.

---

## Lockups and Software Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

### The computer does not start up

Ensure that the AC adapter is firmly connected to the computer and to the electrical outlet.

### The computer stops responding



**NOTICE:** You might lose data if you are unable to perform an operating system shutdown.



**NOTICE:** You might lose data if you are unable to perform an operating system shutdown.

**Turn the computer off** — If you are unable to get a response by pressing a key on your keyboard or moving your mouse, press and hold the power button for at least 8 to 10 seconds until the computer turns off. Then restart your computer.

## A program stops responding or crashes repeatedly



**NOTE:** Software usually includes installation instructions in its documentation or on a floppy disk or CD.

### End the program —

1. Press <Ctrl><Shift><Esc> simultaneously.
2. Click **Task Manager**→ click **Applications**.
3. Click the program that is no longer responding.
4. Click **End Task**.

**Check the software documentation** — If necessary, uninstall and then reinstall the program.

## A program is designed for an earlier Microsoft® Windows® operating system

**Run the Program Compatibility Wizard** — The Program Compatibility Wizard configures a program so it runs in an environment similar to non-Windows XP operating system environments.

1. Click **Start**→ **All Programs**→ **Accessories**→ **Program Compatibility Wizard**→ **Next**.
2. Follow the instructions on the screen.

## A solid blue screen appears

**Turn the computer off** — If you are unable to get a response by pressing a key on your keyboard or moving your mouse, press and hold the power button for at least 8 to 10 seconds until the computer turns off. Then restart your computer.

## Other software problems

**Check the software documentation or contact the software manufacturer for troubleshooting information —**

- Ensure that the program is compatible with the operating system installed on your computer.
- Ensure that your computer meets the minimum hardware requirements needed to run the software. See the software documentation for information.
- Ensure that the program is installed and configured properly.
- Verify that the device drivers do not conflict with the program.
- If necessary, uninstall and then reinstall the program.

**Back up your files immediately**

**Use a virus-scanning program to check the hard drive, floppy disks, or CDs**

**Save and close any open files or programs and shut down your computer through the Start menu**

**Scan the computer for spyware —** If you are experiencing slow computer performance, you frequently receive pop-up advertisements, or you are having problems connecting to the Internet, your computer might be infected with spyware. Use an anti-virus program that includes anti-spyware protection (your program may require an upgrade) to scan the computer and remove spyware. For more information, go to **support.dell.com** and search for the keyword *spyware*.

**Run the Dell Diagnostics —** See [Dell Diagnostics](#). If all tests run successfully, the error condition is related to a software problem.

---

## Memory Problems

Fill out the Diagnostics Checklist (see [Diagnostics Checklist](#)) as you complete these checks.



**CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.**

### If you receive an insufficient memory message —

- Save and close any open files and exit any open programs you are not using to see if that resolves the problem.
- See the software documentation for minimum memory requirements. If necessary, install additional memory (see [Memory](#)).
- Reseat the memory modules to ensure that your computer is successfully communicating with the memory (see [Memory](#)).
- Run the Dell Diagnostics (see [Dell Diagnostics](#)).

### If you experience other memory problems —

- Reseat the memory modules (see [Memory](#)) to ensure that your computer is successfully communicating with the memory.
- Ensure that you are following the memory installation guidelines (see [Memory](#)).
- Run the Dell Diagnostics (see [Dell Diagnostics](#)).

---

## Network Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

### General

**Check the network cable connector** — Ensure that the network cable is firmly inserted into both the network connector on the back of the computer and the network connector.

**Check the network lights on the network connector** — No light indicates that no network communication exists. Replace the network cable.

**Plug the A/C power adapter into the computer** — If batter power only, the QuickSet utility can disable the onboard network card to save battery life. For more information on the QuickSet utility, see [Dell™ QuickSet](#).

**Check your network settings** — Contact your network administrator or the

person who set up your network to verify that your network settings are correct and that the network is functioning.

For more information on the different types of networks, see [Setting Up and Using Networks](#).

---

## PC Card or ExpressCard Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

**Check the card** — Ensure that the card is properly inserted into the connector.

**Ensure that the card is recognized by Windows** — Double-click the **Safely Remove Hardware** icon in the Windows taskbar. Ensure that the card is listed.

**If you have problems with a Dell-provided Card** — Contact Dell (see [Contacting Dell](#)).

**If you have problems with a Card not provided by Dell** — Contact the PC Card manufacturer.

---

## Power Problems

Fill out the Diagnostics Checklist (see [Diagnostics Checklist](#)) as you complete these checks.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

**Check the power light** — When the power light is lit or blinking, the computer has power. If the power light is blinking, the computer is in standby mode—press the power button to exit standby mode. If the light is off, press the power button to turn on the computer.

**Charge the battery** — The battery charge may be depleted.

1. Reinstall the battery.

2. Use the AC adapter to connect the computer to an electrical outlet.
3. Turn on the computer.



**NOTE:** Battery operating time (the time the battery can hold a charge) decreases over time. Depending on how often the battery is used and the conditions under which it is used, you may need to purchase a new battery during the life of your computer.

**Check the battery status light** — If the battery status light flashes orange or is a steady orange the battery charge is low or depleted. Connect the computer to an electrical outlet.

If the battery status light flashes green and orange, the battery is too hot to charge. Shut down the computer, disconnect the computer from the electrical outlet, and then let the battery and computer cool to room temperature.

If the battery status light rapidly flashes orange, the battery may be defective. Contact Dell (see [Contacting Dell](#)).

**Check the battery temperature** — If the battery temperature is below 0° C (32° F), the computer will not start up.

**Test the electrical outlet** — Ensure that the electrical outlet is working by testing it with another device, such as a lamp.

**Check the AC adapter** — Check the AC adapter cable connections. If the AC adapter has a light, ensure that the light is on.

**Connect the computer directly to an electrical outlet** — Bypass power protection devices, power strips, and the extension cable to verify that the computer turns on.

**Eliminate possible interference** — Turn off nearby fans, fluorescent lights, halogen lamps, or other appliances.

**Adjust the power properties** — See [Configuring Power Management Settings](#).

**Reseat the memory modules** — If the computer power light turns on but the display remains blank, reinstall the memory modules (see [Memory](#)).

## Ensuring Sufficient Power for Your Computer

Your computer is designed to use a 65-W or 90-W AC adapter. However, for optimum system performance, you should always use a 90-W adapter.

Using less-powerful AC adapters, including the 65-W AC adapter, will cause you to receive a `WARNING` message.

## Docking Power Considerations

Due to the extra power consumption when a computer is docked to the Dell D/Dock, normal computer operation is not possible on battery power alone. Ensure that the AC adapter is connected to your computer when the computer is docked to the Dell D/Dock.

### Docking While the Computer Is Running

If a computer is connected to the Dell D/Dock or Dell D/Port while the computer is running, presence of the docking device is ignored until the AC adapter is connected to the computer.

### AC Power Loss While the Computer Is Docked

If a computer loses AC power while docked to the Dell D/Dock or Dell D/Port, the computer immediately goes into low-performance mode.

---

## Printer Problems

Fill out the Diagnostics Checklist (see [Diagnostics Checklist](#)) as you complete these checks.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.



**NOTE:** If you need technical assistance for your printer, contact the printer's manufacturer.

### Ensure that the printer is turned on

### Check the printer cable connections —

- See the printer documentation for cable connection information.
- Ensure that the printer cables are securely connected to the printer and the computer.



**Test the electrical outlet** — Ensure that the electrical outlet is working by testing it with another device, such as a lamp.

**Verify that the printer is recognized by Windows** —

1. Click **Start**→ **Control Panel**→ **Printers and Other Hardware**→ **View installed printers or fax printers**.
2. If the printer is listed, right-click the printer icon.
3. Click **Properties**→ **Ports**. For a parallel printer, ensure that the **Print to the following port(s):** setting is **LPT1 (Printer Port)**. For a USB printer, ensure that the **Print to the following port(s):** setting is **USB**.

**Reinstall the printer driver** — See the printer documentation for instructions.

## Scanner Problems



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.



**NOTE:** If you need technical assistance for your scanner, contact the scanner's manufacturer.

**Check the scanner documentation** — See the scanner documentation for setup and troubleshooting information.

**Unlock the scanner** — Ensure that your scanner is unlocked if it has a locking tab or button.

**Restart the computer and try the scanner again**

**Check the cable connections** —

- See the scanner documentation for cable connection information.
- Ensure that the scanner cables are securely connected to the scanner and the computer.

**Verify that the scanner is recognized by Microsoft Windows** —

Click **Start**→ **Control Panel**→ **Printers and Other Hardware**→ **Scanners and Cameras**.

If your scanner is listed, Windows recognizes the scanner.

**Reinstall the scanner driver** — See the scanner documentation for instructions.

---

## Sound and Speaker Problems

Fill out the Diagnostics Checklist (see [Diagnostics Checklist](#)) as you complete these checks.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

### No sound from integrated speakers

**Adjust the Windows volume control** — Double-click the speaker icon in the lower-right corner of your screen. Ensure that the volume is turned up and that the sound is not muted. Adjust the volume, bass, or treble controls to eliminate distortion.

**Reinstall the sound (audio) driver** — See [Reinstalling Drivers and Utilities](#).

### No sound from external speakers

**Ensure that the subwoofer and the speakers are turned on** — See the setup diagram supplied with the speakers. If your speakers have volume controls, adjust the volume, bass, or treble to eliminate distortion.

**Adjust the Windows volume control** — Click or double-click the speaker icon in the lower-right corner of your screen. Ensure that the volume is turned up and that the sound is not muted.

**Disconnect headphones from the headphone connector** — Sound from the speakers is automatically disabled when headphones are connected to the computer's front-panel headphone connector.

**Test the electrical outlet** — Ensure that the electrical outlet is working by testing it with another device, such as a lamp.

**Eliminate possible interference** — Turn off nearby fans, fluorescent lights, or halogen lamps to check for interference.

**Reinstall the audio driver** — See [Reinstalling Drivers and Utilities](#).

**Run the Dell Diagnostics** — See [Dell Diagnostics](#).



**NOTE:** The volume control in some MP3 players overrides the Windows volume setting. If you have been listening to MP3 songs, ensure that you did not turn the player volume down or off.

## No sound from headphones

**Check the headphone cable connection** — Ensure that the headphone cable is securely inserted into the headphone connector.

**Adjust the Windows volume control** — Click or double-click the speaker icon in the lower-right corner of your screen. Ensure that the volume is turned up and that the sound is not muted.

---

## Touch Pad or Mouse Problems

**Check the touch pad settings** —

1. Click **Start**→ **Control Panel**→ **Printers and Other Hardware**→ **Mouse**.
2. Try adjusting the settings.

**Check the mouse cable** — Shut down the computer. Disconnect the mouse cable, check it for damage, and firmly reconnect the cable.

If you are using a mouse extension cable, disconnect it and connect the mouse directly to the computer.

**To verify that the problem is with the mouse, check the touch pad** —

1. Shut down the computer.
2. Disconnect the mouse.
3. Turn on the computer.
4. At the Windows desktop, use the touch pad to move the cursor around, select an icon, and open it.

If the touch pad operates correctly, the mouse may be defective.

**Check the system setup program settings** — Verify that the system setup program lists the correct device for the pointing device option. (The computer automatically recognizes a USB mouse without making any setting adjustments.) For more information on using the system setup program, see [System Setup Program](#).

**Test the mouse controller** — To test the mouse controller (which affects pointer movement) and the operation of the touch pad or mouse buttons, run the Mouse test in the **Pointing Devices** test group in the Dell Diagnostics (see [Dell Diagnostics](#)).

**Reinstall the touch pad driver** — See [Reinstalling Drivers and Utilities](#).

---

## Video and Display Problems

Fill out the Diagnostics Checklist (see [Diagnostics Checklist](#)) as you complete these checks.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

### If the display is blank




**NOTE:** If you are using a program that requires a higher resolution than your computer supports, it is recommended that you attach an external monitor to your computer.

**Check the battery** — If you are using a battery to power your computer, the battery charge may be depleted. Connect the computer to an electrical outlet using the AC adapter, and turn on the computer.

**Test the electrical outlet** — Ensure that the electrical outlet is working by testing it with another device, such as a lamp.

**Check the AC adapter** — Check the AC adapter cable connections. If the AC adapter has a light, ensure that the light is on.

**Connect the computer directly to an electrical outlet** — Bypass power protection devices, power strips, and the extension cable to verify that the computer turns on.

**Adjust the power properties** — Search for the keyword *standby* in the Windows Help and Support Center. Click **Start** or  → **Help and Support**.

**Switch the video image** — If your computer is attached to an external monitor, press <Fn><F8> to switch the video image to the display.

## If the display is difficult to read

**Adjust the brightness** — Press <Fn> and the up- or down-arrow key.

**Move the external subwoofer away from the computer or monitor** — If your external speaker system includes a subwoofer, ensure that the subwoofer is at least 60 cm (2 ft) away from the computer or external monitor.

**Eliminate possible interference** — Turn off nearby fans, fluorescent lights, halogen lamps, or other appliances.

**Rotate the computer to face a different direction** — Eliminate sunlight glare, which can cause poor picture quality.

### Adjust the Windows display settings —

1. Click **Start** → **Control Panel** → **Appearance and Themes**.
2. Click the area you want to change or click the **Display** icon.
3. Try different settings for **Color quality** and **Screen resolution**.

**Run the Video diagnostics tests** — If no error message appears and you still have a display problem, but the display is not completely blank, run the **Video** device group in the Dell Diagnostics (see [Dell Diagnostics](#)). Then contact Dell (see [Contacting Dell](#)).

**See "Error Messages"** — If an error message appears, see [Error Messages](#).

## If only part of the display is readable

### Connect an external monitor —

1. Shut down your computer and connect an external monitor to the computer.
2. Turn on the computer and the monitor and adjust the monitor brightness and contrast controls.

**TB 11-5895-1796-10-4**

If the external monitor works, the computer display or video controller may be defective. Contact Dell (see [Contacting Dell](#)).

---

[Back to Contents Page](#)

[Back to Contents Page](#)

# Getting Help

## Dell™ Latitude™ D830 User's Guide

- [Obtaining Assistance](#)
  - [Problems With Your Order](#)
  - [Product Information](#)
  - [Returning Items for Warranty Repair or Credit](#)
  - [Before You Call](#)
  - [Contacting Dell](#)
- 

## Obtaining Assistance



**CAUTION:** If you need to remove the computer covers, first disconnect the computer power and modem cables from all electrical outlets.

1. Complete the procedures in [Troubleshooting](#).
2. Run the Dell Diagnostics (see [Dell Diagnostics](#)).
3. Make a copy of the [Diagnostics Checklist](#) and fill it out.
4. Use Dell's extensive suite of online services available at Dell Support (**support.dell.com**) for help with installation and troubleshooting procedures.
5. If the preceding steps have not resolved the problem, contact Dell (see [Contacting Dell](#)).



**NOTE:** Call support from a telephone near or at the computer so that a support representative can assist you with any necessary procedures.

**NOTE:** Dell's Express Service Code system may not be available in all countries.

## TB 11-5895-1796-10-4

When prompted by Dell's automated telephone system, enter your Express Service Code to route the call directly to the proper support personnel. If you do not have an Express Service Code, open the **Dell Accessories** folder, double-click the **Express Service Code** icon, and follow the directions.

For instructions on using the support service, see [Support Service](#).



**NOTE:** Some of the following services are not always available in all locations outside the continental U.S. Call your local Dell representative for information on availability ([Contacting Dell](#)).

## Online Services

You can access Dell Support at **support.dell.com**. Select your region on the **WELCOME TO DELL SUPPORT** page, and fill in the requested details to access help tools and information.

You can contact Dell electronically using the following addresses:

- World Wide Web

**www.dell.com/**

**www.dell.com/ap/** (Asian/Pacific countries only)

**www.dell.com/jp** (Japan only)

**www.euro.dell.com** (Europe only)

**www.dell.com/la/** (Latin American countries)

**www.dell.ca** (Canada only)

- Anonymous file transfer protocol (FTP)

**ftp.dell.com/**

Log in as user: `anonymous`, and use your e-mail address as your password.

- Electronic Support Service

`mobile_support@us.dell.com`

`support@us.dell.com`



apsupport@dell.com (Asian/Pacific countries only)

**support.jp.dell.com** (Japan only)

**support.euro.dell.com** (Europe only)

- Electronic Quote Service

apmarketing@dell.com (Asian/Pacific countries only)

sales\_canada@dell.com (Canada only)

## AutoTech Service

Dell's automated support service—AutoTech—provides recorded answers to the questions most frequently asked by Dell customers about their portable and desktop computers.

When you call AutoTech, use your touch-tone telephone to select the subjects that correspond to your questions.

The AutoTech service is available 24 hours a day, 7 days a week. You can also access this service through the support service. For the telephone number to call, see the contact numbers for your region.

## Automated Order-Status Service

To check on the status of any Dell™ products that you have ordered, you can go to **support.dell.com**, or you can call the automated order-status service. A recording prompts you for the information needed to locate and report on your order. For the telephone number to call, see the contact numbers for your region.

## Support Service

Dell's support service is available 24 hours a day, 7 days a week, to answer your questions about Dell hardware. Our support staff uses computer-based diagnostics to provide fast, accurate answers.

To contact Dell's support service, see [Obtaining Assistance](#) and then call the number for your country as listed in [Contacting Dell](#).

## Problems With Your Order

If you have a problem with your order, such as missing parts, wrong parts, or incorrect billing, contact Dell for customer assistance. Have your invoice or packing slip handy when you call. For the telephone number to call, see the contact numbers for your region.

---

## Product Information

If you need information about additional products available from Dell, or if you would like to place an order, visit the Dell website at **www.dell.com**. For the telephone number to call to speak to a sales specialist, see the contact numbers for your region (see [Contacting Dell](#)).

---

## Returning Items for Warranty Repair or Credit

Prepare all items being returned, whether for repair or credit, as follows:

1. Call Dell to obtain a Return Material Authorization Number, and write it clearly and prominently on the outside of the box.

For the telephone number to call, see the contact numbers for your region.

2. Include a copy of the invoice and a letter describing the reason for the return.
3. Include a copy of the [Diagnostics Checklist](#) indicating the tests you have run and any error messages reported by the Dell Diagnostics.
4. Include any accessories that belong with the item(s) being returned (power cables, software floppy disks, guides, and so on) if the return is for credit.
5. Pack the equipment to be returned in the original (or equivalent) packing materials.

You are responsible for paying shipping expenses. You are also responsible for insuring any product returned, and you assume the risk of loss during shipment to Dell. Collect On Delivery (C.O.D.) packages are not accepted.

Returns that are missing any of the preceding requirements will be refused at Dell's receiving dock and returned to you.

---

## Before You Call

**NOTE:** Have your Express Service Code ready when you call. The code helps Dell's automated-support telephone system direct your call more efficiently.

Remember to fill out the [Diagnostics Checklist](#). If possible, turn on your computer before you call Dell for assistance and call from a telephone at or near the computer. You may be asked to type some commands at the keyboard, relay detailed information during operations, or try other troubleshooting steps possible only at the computer itself. Ensure that the computer documentation is available.



**CAUTION:** Before working inside your computer, follow the safety instructions in your **Product Information Guide**.

<b>Diagnostics Checklist</b>
Name:
Date:
Address:
Phone number:
Service Tag (bar code on the back of the computer):
Express Service Code:
Return Material Authorization Number (if provided by Dell support technician):

Operating system and version:
Devices:
Expansion cards:
Are you connected to a network? Yes No
Network, version, and network adapter:
Programs and versions:
See your operating system documentation to determine the contents of the system's start-up files. If the computer is connected to a printer, print each file. Otherwise, record the contents of each file before calling Dell.
Error message, beep code, or diagnostic code:
Description of problem and troubleshooting procedures you performed:

---

## Contacting Dell

To contact Dell electronically, you can access the following websites:

- **www.dell.com**
- **support.dell.com** (support)
- **premiersupport.dell.com** (support for educational, government, healthcare, and medium/large business customers, including Premier, Platinum, and Gold customers)

For specific web addresses for your country, find the appropriate country section in the table below.



**NOTE:** Toll-free numbers are for use within the country for which they are listed.



**NOTE:** In certain countries, support specific to Dell XPS™ portable computers is available at a separate telephone number listed for participating countries. If you do not see a telephone number listed that is specific for XPS portable computers, you may contact Dell through the support number listed and your call will be routed appropriately.

When you need to contact Dell, use the electronic addresses, telephone numbers, and codes provided in the following table. If you need assistance in determining which codes to use, contact a local or an international operator.

<b>Country (City)</b> <b>International Access Code</b> <b>Country Code</b> <b>City Code</b>	<b>Department Name or Service Area,</b> <b>Website and E-Mail Address</b>	<b>Area Codes, Local Numbers, and Toll-Free Numbers</b>
<b>Anguilla</b>	General Support	toll-free: 800-335-0031
<b>Antigua and Barbuda</b>	General Support	1-800-805-5924
<b>Argentina (Buenos Aires)</b>  International Access Code: <b>00</b>  Country Code: <b>54</b>  City Code: <b>11</b>	Website: <b>www.dell.com.ar</b>	
	E-mail: us_latin_services@dell.com	
	E-mail for desktop and portable computers: la-techsupport@dell.com	
	E-mail for servers and EMC® storage products: la_enterprise@dell.com	
	Customer Care	toll-free: 0-800-444-0730

	Tech Support	toll-free: 0-800-444-0733
	Tech Support Services	toll-free: 0-800-444-0724
	Sales	0-810-444-3355
<b>Aruba</b>	General Support	toll-free: 800-1578
<b>Australia (Sydney)</b>  International Access Code: <b>0011</b>  Country Code: <b>61</b>  City Code: <b>2</b>	E-mail (Australia): au_tech_support@dell.com	
	E-mail Customer Care (Australia and New Zealand): apcustserv@dell.com	
	Home and Small Business	1-300-655-533
	Government and Business	toll-free: 1-800-633-559
	Preferred Accounts Division (PAD)	toll-free: 1-800-060-889
	Customer Care (after sales)	toll-free 1-333-55 (option 3)
	Support (portables and desktops)	toll-free: 1-300-655-533
	Support (servers and workstations)	toll-free: 1-800-733-314
	Corporate Sales	toll-free: 1-800-808-385

	Transaction Sales	toll-free: 1-800-808-312
	Fax	toll-free: 1-800-818-341
<p><b>Austria (Vienna)</b></p> <p>International Access Code: <b>900</b></p> <p>Country Code: <b>43</b></p> <p>City Code: <b>1</b></p>	Website: <b>support.euro.dell.com</b>	
	E-mail: tech_support_central_europe@dell.com	
	Home/Small Business Sales	0820 240 530 00
	Home/Small Business Fax	0820 240 530 49
	Home/Small Business Customer Care	0820 240 530 14
	Preferred Accounts/Corporate Customer Care	0820 240 530 16
	Support for XPS portable computers only	0820 240 530 81
	Home/Small Business Support for all other Dell computers	0820 240 530 14
	Preferred Accounts/Corporate Support	0660 8779
	Switchboard	0820 240 530 00
<b>Bahamas</b>	General Support	toll-free: 1-866-278-6818

<b>Barbados</b>	General Support	1-800-534-3066
<b>Belgium (Brussels)</b>  International Access Code: <b>00</b>  Country Code: <b>32</b>  City Code: <b>2</b>	Website: <b>support.euro.dell.com</b>	
	E-mail for French-speaking Customers: <b>support.euro.dell.com/be/fr/emaildell/</b>	
	Support for XPS portable computers only	02 481 92 96
	Support for all other Dell computers	02 481 92 88
	Support Fax	02 481 92 95
	Customer Care	02 713 15 65
	Corporate Sales	02 481 91 00
	Fax	02 481 92 99
	Switchboard	02 481 91 00
<b>Bermuda</b>	General Support	1-800-342-0671
<b>Bolivia</b>	General Support	toll-free: 800-10-0238
<b>Brazil</b>  International Access Code: <b>00</b>  Country Code: <b>55</b> <b>58</b>	Website: <b>www.dell.com/br</b>	
	Customer Support, Support	0800 90 3355
	Support Fax	51 481 5470



City Code: <b>51</b>	Customer Care Fax	51 481 5480
	Sales	0800 90 3390
<b>British Virgin Islands</b>	General Support	toll-free: 1-866-278-6820
<b>Brunei</b>  Country Code: <b>673</b>	Customer Support (Penang, Malaysia)	604 633 4966
	Customer Care (Penang, Malaysia)	604 633 4888
	Transaction Sales (Penang, Malaysia)	604 633 4955
<b>Canada (North York, Ontario)</b>  International Access Code: <b>011</b>	Online Order Status: <b>www.dell.ca/ostatus</b>	
	AutoTech (automated support)	toll-free: 1-800-247-9362
	Customer Care (Home Sales/Small Business)	toll-free: 1-800-847-4096
	Customer Care (med./large business, government)	toll-free: 1-800-326-9463
	Support (Home Sales/Small Business)	toll-free: 1-800-847-4096
	Support (med./large bus., government)	toll-free: 1-800-387-5757
	Support (printers, projectors, televisions, handhelds, digital jukebox, and wireless)	1-877-335-5767
		<b>59</b>

	Sales (Home Sales/Small Business)	toll-free: 1-800-387-5752
	Sales (med./large bus., government)	toll-free: 1-800-387-5755
	Spare Parts Sales & Extended Service Sales	1 866 440 3355
<b>Cayman Islands</b>	General Support	1-800-805-7541
<b>Chile (Santiago)</b> Country Code: <b>56</b> City Code: <b>2</b>	Sales, Customer Support, and Support	toll-free: 1230-020-4823
	Support website: <b>support.dell.com.cn</b>	
	Support E-mail: cn_support@dell.com	
	Customer Care E-mail: customer_cn@dell.com	
	Support Fax	592 818 1350
	Support (Dell™ Dimension™ and Inspiron)	toll-free: 800 858 2969
	Support (OptiPlex™, Latitude™, and Dell Precision™)	toll-free: 800 858 0950
	Support (servers and storage)	toll-free: 800 858 0960

**China (Xiamen)**

Country Code: **86**

City Code: **592**

Support (projectors, PDAs, switches, routers, and so on)	toll-free: 800 858 2920
Support (printers)	toll-free: 800 858 2311
Customer Care	toll-free: 800 858 2060
Customer Care Fax	592 818 1308
Home and Small Business	toll-free: 800 858 2222
Preferred Accounts Division	toll-free: 800 858 2557
Large Corporate Accounts GCP	toll-free: 800 858 2055
Large Corporate Accounts Key Accounts	toll-free: 800 858 2628
Large Corporate Accounts North	toll-free: 800 858 2999
Large Corporate Accounts North Government and Education	toll-free: 800 858 2955
Large Corporate Accounts East	toll-free: 800 858 2020
Large Corporate Accounts East Government and Education	toll-free: 800 858 2669

	Large Corporate Accounts Queue Team	toll-free: 800 858 2572
	Large Corporate Accounts South	toll-free: 800 858 2355
	Large Corporate Accounts West	toll-free: 800 858 2811
	Large Corporate Accounts Spare Parts	toll-free: 800 858 2621
<b>Colombia</b>	General Support	980-9-15-3978
<b>Costa Rica</b>	General Support	0800-012-0435
<b>Czech Republic (Prague)</b>  International Access Code: <b>00</b>  Country Code: <b>420</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: czech_dell@dell.com	
	Support	22537 2727
	Customer Care	22537 2707
	Fax	22537 2714
	Tech Fax	22537 2728
	Switchboard	22537 2711
	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/dk/da/emailldell/</b>	

<b>Denmark (Copenhagen)</b>  International Access Code: <b>00</b>  Country Code: <b>45</b>	Support for XPS portable computers only	7010 0074
	Support for all other Dell computers	7023 0182
	Customer Care (Relational)	7023 0184
	Home/Small Business Customer Care	3287 5505
	Switchboard (Relational)	3287 1200
	Switchboard Fax (Relational)	3287 1201
	Switchboard (Home/Small Business)	3287 5000
	Switchboard Fax (Home/Small Business)	3287 5001
<b>Dominica</b>	General Support	toll-free: 1-866-278-6821
<b>Dominican Republic</b>	General Support	1-800-148-0530
<b>Ecuador</b>	General Support	toll-free: 999-119
<b>El Salvador</b>	General Support	01-899-753-0777
<b>Finland (Helsinki)</b>  International Access Code: <b>990</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/fi/fi/emaildell/</b>	
	Support	09 253 313 60

Country Code: <b>358</b>	Customer Care	09 253 313 38
City Code: <b>9</b>	Fax	09 253 313 99
	Switchboard	09 253 313 00
<b>France (Paris) (Montpellier)</b>  International Access Code: <b>00</b>  Country Code: <b>33</b>  City Codes: <b>(1) (4)</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/ fr/fr/emaildell/</b>	
	<b>Home and Small Business</b>	
	Support for XPS portable computers only	0825 387 129
	Support for all other Dell computers	0825 387 270
	Customer Care	0825 823 833
	Switchboard	0825 004 700
	Switchboard (calls from outside of France)	04 99 75 40 00
	Sales	0825 004 700
	Fax	0825 004 701
	Fax (calls from outside of France)	04 99 75 40 01
	<b>Corporate</b>	

	Support	0825 004 719
	Customer Care	0825 338 339
	Switchboard	01 55 94 71 00
	Sales	01 55 94 71 00
	Fax	01 55 94 71 01
<b>Germany (Langen)</b>  International Access Code: <b>00</b>  Country Code: <b>49</b>  City Code: <b>6103</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: tech_support_central_europe@dell.com	
	Support for XPS portable computers only	06103 766-7222
	Support for all other Dell computers	06103 766-7200
	Home/Small Business Customer Care	0180-5-224400
	Global Segment Customer Care	06103 766-9570
	Preferred Accounts Customer Care	06103 766-9420
	Large Accounts Customer Care	06103 766-9560
	Public Accounts Customer Care	06103 766-9555
	Switchboard	06103 766-7000

<b>Greece</b>  International Access Code: <b>00</b>  Country Code: <b>30</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/gr/en/emaiddell/</b>	
	Support	00800-44 14 95 18
	Gold Service Support	00800-44 14 00 83
	Switchboard	2108129810
	Gold Service Switchboard	2108129811
	Sales	2108129800
	Fax	2108129812
<b>Grenada</b>	General Support	toll-free: 1-866-540-3355
<b>Guatemala</b>	General Support	1-800-999-0136
<b>Guyana</b>	General Support	toll-free: 1-877-270-4609
<b>Hong Kong</b>  <b>66</b>	Website: <b>support.ap.dell.com</b>	
	Support E-mail: <b>apsupport@dell.com</b>	
	Support (Dimension and Inspiron)	2969 3188
	Support (OptiPlex, Latitude, and Dell Precision)	2969 3191



International Access Code: <b>001</b>  Country Code: <b>852</b>	Support (PowerApp™, PowerEdge™, PowerConnect™, and PowerVault™)	2969 3196
	Customer Care	3416 0910
	Large Corporate Accounts	3416 0907
	Global Customer Programs	3416 0908
	Medium Business Division	3416 0912
	Home and Small Business Division	2969 3105
<b>India</b>	E-mail: india_support_desktop@dell.com india_support_notebook@dell.com india_support_Server@dell.com	
	Support	1600338045  and 1600448046
	Sales (Large Corporate Accounts)	1600 33 8044
	Sales (Home and Small Business)	1600 33 8046
	Website: <b>support.euro.dell.com</b>	
	E-mail: dell_direct_support@dell.com	
	Support for XPS portable computers only	1850 200 722

<b>Ireland (Cherrywood)</b>  International Access Code: <b>16</b>  Country Code: <b>353</b>  City Code: <b>1</b>	Support for all other Dell computers	1850 543 543
	U.K. Support (dial within U.K. only)	0870 908 0800
	Home User Customer Care	01 204 4014
	Small Business Customer Care	01 204 4014
	U.K. Customer Care (dial within U. K. only)	0870 906 0010
	Corporate Customer Care	1850 200 982
	Corporate Customer Care (dial within U.K. only)	0870 907 4499
	Ireland Sales	01 204 4444
	U.K. Sales (dial within U.K. only)	0870 907 4000
	Fax/Sales Fax	01 204 0103
	Switchboard	01 204 4444
<b>Italy (Milan)</b> <b>68</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/ it/it/emaildell/</b>	
	<b>Home and Small Business</b>	
	Support	02 577 826 90

International Access Code: <b>00</b>  Country Code: <b>39</b>  City Code: <b>02</b>	Customer Care	02 696 821 14
	Fax	02 696 821 13
	Switchboard	02 696 821 12
	<b>Corporate</b>	
	Support	02 577 826 90
	Customer Care	02 577 825 55
	Fax	02 575 035 30
	Switchboard	02 577 821
<b>Jamaica</b>	General Support (dial from within Jamaica only)	1-800-682-3639
	Website: <b>support.jp.dell.com</b>	
	Support (servers)	toll-free: 0120-198-498
	Support outside of Japan (servers)	81-44-556-4162
	Support (Dimension and Inspiron)	toll-free: 0120-198-226
	Support outside of Japan (Dimension and Inspiron)	81-44-520-1435
	Support (Dell Precision, OptiPlex, and Latitude)	toll-free:0120-198-433
		<b>69</b>

<p><b>Japan (Kawasaki)</b></p> <p>International Access Code: <b>001</b></p> <p>Country Code: <b>81</b></p> <p>City Code: <b>44</b></p>	Support outside of Japan (Dell Precision, OptiPlex, and Latitude)	81-44-556-3894
	Support (PDAs, projectors, printers, routers)	toll-free: 0120-981-690
	Support outside of Japan (PDAs, projectors, printers, routers)	81-44-556-3468
	Faxbox Service	044-556-3490
	24-Hour Automated Order Service	044-556-3801
	Customer Care	044-556-4240
	Business Sales Division (up to 400 employees)	044-556-1465
	Preferred Accounts Division Sales (over 400 employees)	044-556-3433
	Large Corporate Accounts Sales (over 3500 employees)	044-556-3430
	Public Sales (government agencies, educational institutions, and medical institutions)	044-556-1469
	Global Segment Japan	044-556-3469
	Individual User	044-556-1760
	Switchboard	044-556-4300
<b>70</b>	E-mail: <a href="mailto:krsupport@dell.com">krsupport@dell.com</a>	

<b>Korea (Seoul)</b>  International Access Code: <b>001</b>  Country Code: <b>82</b>  City Code: <b>2</b>	Support	toll-free: 080-200-3800
	Support (Dimension, PDA, Electronics and Accessories)	toll-free: 080-200-3801
	Sales	toll-free: 080-200-3600
	Fax	2194-6202
	Switchboard	2194-6000
<b>Latin America</b>	Customer Support (Austin, Texas, U.S.A.)	512 728-4093
	Customer Service (Austin, Texas, U.S.A.)	512 728-3619
	Fax (Support and Customer Service) (Austin, Texas, U.S.A.)	512 728-3883
	Sales (Austin, Texas, U.S.A.)	512 728-4397
	SalesFax (Austin, Texas, U.S.A.)	512 728-4600 or 512 728-3772
<b>Luxembourg</b>  International Access Code: <b>00</b>  Country Code: <b>352</b>	Website: <b>support.euro.dell.com</b>	
	Support	342 08 08 075
	Home/Small Business Sales	+32 (0)2 713 15 96
	Corporate Sales	26 25 77 81

	Customer Care	+32 (0)2 481 91 19
	Fax	26 25 77 82
<b>Macao</b>  Country Code: <b>853</b>	Support	toll-free: 0800 105
	Customer Service (Xiamen, China)	34 160 910
	Transaction Sales (Xiamen, China)	29 693 115
<b>Malaysia (Penang)</b>  International Access Code: <b>00</b>  Country Code: <b>60</b>  City Code: <b>4</b>	Website: <b>support.ap.dell.com</b>	
	Support (Dell Precision, OptiPlex, and Latitude)	toll-free: 1 800 880 193
	Support (Dimension, Inspiron, and Electronics and Accessories)	toll-free: 1 800 881 306
	Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)	toll-free: 1800 881 386
	Customer Care	toll-free: 1800 881 306 (option 6)
	Transaction Sales	toll-free: 1 800 888 202
	Corporate Sales	toll-free: 1 800 888 213
<b>Mexico</b> 72	Customer Support	001-877-384-8979 or 001-877-269-3383

International Access Code: <b>00</b>  Country Code: <b>52</b>	Sales	50-81-8800  or 01-800-888-3355
	Customer Service	001-877-384-8979  or 001-877-269-3383
	Main	50-81-8800  or 01-800-888-3355
<b>Montserrat</b>	General Support	toll-free: 1-866-278-6822
<b>Netherlands Antilles</b>	General Support	001-800-882-1519
<b>Netherlands (Amsterdam)</b>  International Access Code: <b>00</b>  Country Code: <b>31</b>  City Code: <b>20</b>	Website: <b>support.euro.dell.com</b>	
	Support for XPS portable computers only	020 674 45 94
	Support for all other Dell computers	020 674 45 00
	Support Fax	020 674 47 66
	Home/Small Business Customer Care	020 674 42 00
	Relational Customer Care	020 674 4325
	Home/Small Business Sales	020 674 55 00
Relational Sales	020 674 50 00	

	Home/Small Business Sales Fax	020 674 47 75
	Relational Sales Fax	020 674 47 50
	Switchboard	020 674 50 00
	Switchboard Fax	020 674 47 50
<b>New Zealand</b>  International Access Code: <b>00</b>  Country Code: <b>64</b>	E-mail (New Zealand): nz_tech_support@dell.com	
	E-mail Customer Care (Australia and New Zealand): apcustserv@dell.com	
	Customer Care	toll-free: 0800-289- 335 (option 3)
	Support (for desktop and portable computers)	toll- free: 0800 446 255
	Support (for servers and workstations)	toll-free: 0800 443 563
	Home and Small Business	0800 446 255
	Government and Business	0800 444 617
	Sales	0800 441 567
	Fax	0800 441 566
<b>Nicaragua</b>	General Support	001-800-220-1006
<b>74</b>	Website: <b>support.euro.dell.com</b>	



<b>Norway (Lysaker)</b>  International Access Code: <b>00</b>  Country Code: <b>47</b>	E-mail: <b>support.euro.dell.com/ no/no/emaiddell/</b>	
	Support for XPS portable computers only	815 35 043
	Support for all other Dell products	671 16882
	Relational Customer Care	671 17575
	Home/Small Business Customer Care	23162298
	Switchboard	671 16800
	Fax Switchboard	671 16865
<b>Panama</b>	General Support	001-800-507-0962
<b>Peru</b>	General Support	0800-50-669
<b>Poland (Warsaw)</b>  International Access Code: <b>011</b>  Country Code: <b>48</b>  City Code: <b>22</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: pl_support_tech@dell.com	
	Customer Service Phone	57 95 700
	Customer Care	57 95 999
	Sales	57 95 999
	Customer Service Fax	57 95 806
		<b>75</b>

	Reception Desk Fax	57 95 998
	Switchboard	57 95 999
<b>Portugal</b>  International Access Code: <b>00</b>  Country Code: <b>351</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/pt/en/emaiddell/</b>	
	Support	707200149
	Customer Care	800 300 413
	Sales	800 300 410 or 800 300 411 or 800 300 412 or 21 422 07 10
	Fax	21 424 01 12
<b>Puerto Rico</b>	General Support	1-800-805-7545
<b>St. Kitts and Nevis</b>	General Support	toll-free: 1-877-441-4731
<b>St. Lucia</b>	General Support	1-800-882-1521
<b>St. Vincent and the Grenadines</b>	General Support	toll-free: 1-877-270-4609
<b>Singapore</b> 76	Website: <b>support.ap.dell.com</b>	
	Support (Dimension, Inspiron, and Electronics and Accessories)	toll-free: 1800 394 7430

<p><b>(Singapore)</b></p> <p>International Access Code: <b>005</b></p> <p>Country Code: <b>65</b></p>	Support (OptiPlex, Latitude, and Dell Precision)	toll-free: 1800 394 7488
	Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)	toll-free: 1800 394 7478
	Customer Care	toll-free: 1 800 394 7430 (option 6)
	Transaction Sales	toll-free: 1 800 394 7412
	Corporate Sales	toll-free: 1 800 394 7419
<p><b>Slovakia (Prague)</b></p> <p>International Access Code: <b>00</b></p> <p>Country Code: <b>421</b></p>	Website: <b>support.euro.dell.com</b>	
	E-mail: czech_dell@dell.com	
	Support	02 5441 5727
	Customer Care	420 22537 2707
	Fax	02 5441 8328
	Tech Fax	02 5441 8328
	Switchboard (Sales)	02 5441 7585
<p><b>South Africa (Johannesburg)</b></p>	Website: <b>support.euro.dell.com</b>	
	E-mail: dell_za_support@dell.com	
	Gold Queue	011 709 7713

**TB 11-5895-1796-10-4**

International Access Code: <b>09/091</b> Country Code: <b>27</b> City Code: <b>11</b>	Support	011 709 7710
	Customer Care	011 709 7707
	Sales	011 709 7700
	Fax	011 706 0495
	Switchboard	011 709 7700
<b>Southeast Asian and Pacific Countries</b>	Customer Support, Customer Service, and Sales (Penang, Malaysia)	604 633 4810
<b>Spain (Madrid)</b> International Access Code: <b>00</b> Country Code: <b>34</b> City Code: <b>91</b>	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/es/es/emaildell/</b>	
	<b>Home and Small Business</b>	
	Support	902 100 130
	Customer Care	902 118 540
	Sales	902 118 541
	Switchboard	902 118 541
	Fax	902 118 539
<b>Corporate</b>		
<b>78</b>		

	Support	902 100 130
	Customer Care	902 115 236
	Switchboard	91 722 92 00
	Fax	91 722 95 83
<p><b>Sweden (Upplands Vasby)</b></p> <p>International Access Code: <b>00</b></p> <p>Country Code: <b>46</b></p> <p>City Code: <b>8</b></p>	Website: <b>support.euro.dell.com</b>	
	E-mail: <b>support.euro.dell.com/ se/sv/emaildell/</b>	
	Support for XPS portable computers only	0771 340 340
	Support for all other Dell products	08 590 05 199
	Relational Customer Care	08 590 05 642
	Home/Small Business Customer Care	08 587 70 527
	Employee Purchase Program (EPP) Support	20 140 14 44
	Support Fax	08 590 05 594
	Sales	08 590 05 185
	Website: <b>support.euro.dell.com</b>	
	E-mail: Tech_support_central_Europe@dell. com	

<p><b>Switzerland (Geneva)</b></p> <p>International Access Code: <b>00</b></p> <p>Country Code: <b>41</b></p> <p>City Code: <b>22</b></p>	<p>E-mail for French-speaking HSB and Corporate Customers: <b>support.euro.dell.com/ch/fr/emaiddell/</b></p>	
	<p>Support for XPS portable computers only</p>	<p>0848 33 88 57</p>
	<p>Support (Home and Small Business) for all other Dell products</p>	<p>0844 811 411</p>
	<p>Support (Corporate)</p>	<p>0844 822 844</p>
	<p>Customer Care (Home and Small Business)</p>	<p>0848 802 202</p>
	<p>Customer Care (Corporate)</p>	<p>0848 821 721</p>
	<p>Fax</p>	<p>022 799 01 90</p>
	<p>Switchboard</p>	<p>022 799 01 01</p>
<p><b>Taiwan</b></p> <p>International Access Code: <b>002</b></p> <p>Country Code: <b>886</b></p>	<p>Website: <b>support.ap.dell.com</b></p>	
	<p>E-mail: ap_support@dell.com</p>	
	<p>Support (OptiPlex, Latitude, Inspiron, Dimension, and Electronics and Accessories)</p>	<p>toll-free: 00801 86 1011</p>
	<p>Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)</p>	<p>toll-free: 00801 60 1256</p>
	<p>Customer Care</p>	<p>toll-free: 00801 60 1250 (option 5)</p>
<p><b>80</b></p>		

	Transaction Sales	toll-free: 00801 65 1228
	Corporate Sales	toll-free: 00801 651 227
<b>Thailand</b>  International Access Code: <b>001</b>  Country Code: <b>66</b>	Website: <b>support.ap.dell.com</b>	
	Support (OptiPlex, Latitude, and Dell Precision)	toll-free: 1800 0060 07
	Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)	toll-free: 1800 0600 09
	Customer Care	toll-free: 1800 006 007 (option 7)
	Corporate Sales	toll-free: 1800 006 009
	Transaction Sales	toll-free: 1800 006 006
<b>Trinidad/ Tobago</b>	General Support	1-800-805-8035
<b>Turks and Caicos Islands</b>	General Support	toll-free: 1-866-540-3355
	Website: <b>support.euro.dell.com</b>	
	Customer Care website: <b>support.euro.dell.com/uk/en/ECare/Form/Home.asp</b>	

<p><b>U.K. (Bracknell)</b></p> <p>International Access Code: <b>00</b></p> <p>Country Code: <b>44</b></p> <p>City Code: <b>1344</b></p>	E-mail: dell_direct_support@dell.com	
	Support (Corporate/Preferred Accounts/PAD [1000+ employees])	0870 908 0500
	Support for XPS portable computers only	0870 366 4180
	Support (direct and general) for all other products	0870 908 0800
	Global Accounts Customer Care	01344 373 186
	Home and Small Business Customer Care	0870 906 0010
	Corporate Customer Care	01344 373 185
	Preferred Accounts (500–5000 employees) Customer Care	0870 906 0010
	Central Government Customer Care	01344 373 193
	Local Government & Education Customer Care	01344 373 199
	Health Customer Care	01344 373 194
	Home and Small Business Sales	0870 907 4000
	Corporate/Public Sector Sales	01344 860 456
	Home and Small Business Fax	0870 907 4006



<b>Uruguay</b>	General Support	toll-free: 000-413-598-2521	
	Automated Order-Status Service	toll-free: 1-800-433-9014	
	AutoTech (portable and desktop computers)	toll-free: 1-800-247-9362	
	Support (Dell TV, Printers, and Projectors) for Relationship customers	toll-free 1-877-459-7298	
	<b>Consumer</b> (Home and Home Office) Support for all other Dell products	toll-free: 1-800-624-9896	
	Customer Service	toll-free: 1-800-624-9897	
	DellNet™ Service and Support	toll-free: 1-877-Dellnet  (1-877-335-5638)	
	Employee Purchase Program (EPP) Customers	toll-free: 1-800-695-8133	
	Financial Services website: <b>www.dellfinancialservices.com</b>		
	Financial Services (lease/loans)	toll-free: 1-877-577-3355	
	Financial Services (Dell Preferred Accounts [DPA])	toll-free: 1-800-283-2210	
<b>Business</b>		<b>83</b>	

**U.S.A. (Austin, Texas)**

International  
Access Code:  
**011**

Country Code: **1**

Customer Service and Support	toll-free: 1-800-456-3355
Employee Purchase Program (EPP) Customers	toll-free: 1-800-695-8133
Printers and Projectors Support	toll-free: 1-877-459-7298
<b>Public</b> (government, education, and healthcare)	
Customer Service and Support	toll-free: 1-800-456-3355
Employee Purchase Program (EPP) Customers	toll-free: 1-800-695-8133
Dell Sales	toll-free: 1-800-289-3355  or toll-free: 1-800-879-3355
Dell Outlet Store (Dell refurbished computers)	toll-free: 1-888-798-7561
Software and Peripherals Sales	toll-free: 1-800-671-3355
Spare Parts Sales	toll-free: 1-800-357-3355
Extended Service and Warranty Sales	toll-free: 1-800-247-4618
Fax	toll-free: 1-800-727-8320

	Dell Services for the Deaf, Hard-of-Hearing, or Speech-Impaired	toll-free: 1-877-DELLTTY  (1-877-335-5889)
<b>U.S. Virgin Islands</b>	General Support	1-877-673-3355
<b>Venezuela</b>	General Support	8001-3605

---

[Back to Contents Page](#)

# Appendix

## Dell™ Latitude™ D830 User's Guide

- [Cleaning Your Computer](#)
  - [Macrovision Product Notice](#)
  - [FCC Notice \(U.S. Only\)](#)
- 

## Cleaning Your Computer



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

## Computer, Keyboard, and Display



**CAUTION:** Before you clean your computer, disconnect the computer from the electrical outlet and remove any installed batteries. Clean your computer with a soft cloth dampened with water. Do not use liquid or aerosol cleaners, which may contain flammable substances.

- Use a can of compressed air to remove dust from between the keys on the keyboard.



**NOTICE:** To avoid damaging the computer or display, do not spray cleaning solution directly onto the display. Only use products specifically designed for cleaning displays, and follow the instructions that are included with the product.

- Moisten a soft, lint-free cloth with either water or a display cleaner, and wipe the display until it is clean.



**NOTICE:** To prevent damage to the antiglare coating, do not wipe the display with soap or alcohol.

- Moisten a soft, lint-free cloth with water and wipe the computer and keyboard. Do not allow water from the cloth to seep between the touch pad and the surrounding palm rest.
- To clean your monitor screen, lightly dampen a soft, clean cloth with water. You can also use a special screen-cleaning tissue or solution suitable for the monitor's antistatic coating.
- Wipe the keyboard, computer, and monitor plastics with a soft cleaning cloth moistened with a solution of three parts water and one part dishwashing detergent.

Do not soak the cloth or let water drip inside your computer or keyboard.

## Touch Pad

1. Shut down your computer.
2. Disconnect any attached devices from the computer and from their electrical outlets.
3. Remove any installed batteries (see [Replacing the Battery](#)).
4. Moisten a soft, lint-free cloth with water, and wipe it gently across the surface of the touch pad. Do not allow water from the cloth to seep between the touch pad and the surrounding palm rest.

## Mouse



**NOTICE:** Disconnect the mouse from the computer before cleaning the mouse

If your screen cursor skips or moves abnormally, clean the mouse.

## Cleaning a Non-Optical Mouse

1. Clean the outside casing of the mouse with a cloth moistened with a mild cleaning solution.
2. Turn the retainer ring on the underside of your mouse counterclockwise, and then remove the ball.
3. Wipe the ball with a clean, lint-free cloth.
4. Blow carefully into the ball cage or use a can of compressed air to dislodge dust and lint.
5. If the rollers inside the ball cage are dirty, clean the rollers with a cotton swab moistened lightly with isopropyl alcohol.


## TB 11-5895-1796-10-4

6. Recenter the rollers in their channels if they are misaligned. Ensure that fluff from the swab is not left on the rollers.
7. Replace the ball and retainer ring, and turn the retainer ring clockwise until it clicks into place.

## Cleaning an Optical Mouse


Clean the outside casing of the mouse with a cloth moistened with a mild cleaning solution.

## Floppy Drive

-  **NOTICE:** Do not attempt to clean drive heads with a swab. You might accidentally misalign the heads which prevents the drive from operating.


Clean your floppy drive using a commercially available cleaning kit. These kits contain pretreated floppies to remove contaminants that accumulate during normal operation.

## CDs and DVDs

-  **NOTICE:** Always use compressed air to clean the lens in the CD/DVD drive, and follow the instructions that come with the compressed-air product. Never touch the lens in the drive.

If you notice problems, such as skipping, with the playback quality of your CDs or DVDs, try cleaning the discs.

1. Hold the disc by its outer edge. You can also touch the inside edge of the center hole.

-  **NOTICE:** To avoid damaging the surface, do not wipe in a circular motion around the disc.

2. With a soft, lint-free cloth, gently wipe the bottom of the disc (the unlabeled side) in a straight line from the center to the outer edge of the disc.

For stubborn dirt, try using water or a diluted solution of water and mild soap. You can also purchase commercial products that clean discs and provide some protection from dust, fingerprints, and scratches. Cleaning products for CDs are also safe to use on DVDs.

---

## Macrovision Product Notice

This product incorporates copyright protection technology that is protected by U. S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

---

## FCC Notice (U.S. Only)

### FCC Class B

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.



**NOTICE:** The FCC regulations provide that changes or modifications not expressly approved by Dell Inc. could void your authority to operate this equipment.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Relocate the system with respect to the receiver.

**TB 11-5895-1796-10-4**

- Move the system away from the receiver.
- Plug the system into a different outlet so that the system and the receiver are on different branch circuits.

If necessary, consult a representative of Dell Inc. or an experienced radio/television technician for additional suggestions.

The following information is provided on the device or devices covered in this document in compliance with the FCC regulations:

Product name:	Dell™ Latitude™ D830
Model number:	PP04X
Company name:	Dell Inc. Worldwide Regulatory Compliance & Environmental Affairs One Dell Way Round Rock, TX 78682 USA 512-338-4400

---

[Back to Contents Page](#)



[Back to Contents Page](#)

# Using a Battery

## Dell™ Latitude™ D830 User's Guide

- [Battery Performance](#)
  - [Checking the Battery Charge](#)
  - [Conserving Battery Power](#)
  - [Power Management Modes](#)
  - [Configuring Power Management Settings](#)
  - [Charging the Battery](#)
  - [Replacing the Battery](#)
  - [Storing a Battery](#)
- 

## Battery Performance



**NOTE:** For information about the Dell warranty for your computer, see the Product Information Guide or separate paper warranty document that shipped with your computer.

For optimal computer performance and to help preserve BIOS settings, operate your Dell™ portable computer with the main battery installed at all times. One battery is supplied as standard equipment in the battery bay.



**NOTE:** Because the battery may not be fully charged, use the AC adapter to connect your new computer to an electrical outlet the first time you use the computer. For best results, operate the computer with the AC adapter until the battery is fully charged. To view battery charge status, access the Control Panel→ Power Options, and then click the Power Meter tab.



**NOTE:** Battery operating time (the time the battery can hold a charge) decreases over time. Depending on how often the battery is used and the conditions under which it is used, you may need to purchase a new battery during the life of your computer.

Battery operating time varies depending on operating conditions. You can install an optional second battery in the media bay to significantly increase operating time.

Operating time is significantly reduced when you perform operations including, but not limited to, the following:

- Using optical drives
- Using wireless communications devices, PC Cards, ExpressCards, media memory cards, or USB devices
- Using high-brightness display settings, 3D screen savers, or other power-intensive programs such as 3D games
- Running the computer in maximum performance mode (see [Configuring Power Management Settings](#))

## TB 11-5895-1796-10-4



**NOTE:** It is recommended that you connect your computer to an electrical outlet when writing to a CD or DVD.

You can check the battery charge before you insert the battery into the computer (see [Checking the Battery Charge](#)). You can also set power management options to alert you when the battery charge is low (see [Configuring Power Management Settings](#)).



**CAUTION:** Using an incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell. The lithium ion battery is designed to work with your Dell computer. Do not use a battery from other computers with your computer.



**CAUTION:** Do not dispose of batteries with household waste. When your battery no longer holds a charge, call your local waste disposal or environmental agency for advice on disposing of a lithium-ion battery. See "Battery Disposal" in the Product Information Guide.



**CAUTION:** Misuse of the battery may increase the risk of fire or chemical burn. Do not puncture, incinerate, disassemble, or expose the battery to temperatures above 65°C (149°F). Keep the battery away from children. Handle damaged or leaking batteries with extreme care. Damaged batteries may leak and cause personal injury or equipment damage.

---

## Checking the Battery Charge

The Dell QuickSet Battery Meter, the Microsoft Windows **Power Meter** window and  icon, the


battery charge gauge and health gauge, and the low-battery warning provide information on the battery charge.


### Dell™ QuickSet Battery Meter

If Dell QuickSet is installed, press <Fn><F3> to display the QuickSet Battery Meter. The Battery Meter displays status, battery health, charge level, and charge completion time for the battery in your computer.

For more information about QuickSet, click the QuickSet icon in the Microsoft® Windows® taskbar, and click **Help**.

### Microsoft® Windows® Power Meter

The Windows Power Meter indicates the remaining battery charge. To check the Power Meter, double-click the  icon on the taskbar.

If the computer is connected to an electrical outlet, a  icon appears.

### Charge Gauge

By either pressing once or *pressing and holding* the status button on the charge gauge on the battery, you can check:

- Battery charge (check by pressing and *releasing* the status button)
- Battery health (check by pressing and *holding* the status button)

The battery operating time is largely determined by the number of times it is charged. After hundreds of charge and discharge cycles, batteries lose some charge capacity—or battery health. That is, a battery can show a status of "charged" but maintain a reduced charge capacity (health).

## Check the Battery Charge

To check the battery charge, *press and release* the status button on the battery charge gauge to illuminate the charge-level lights. Each light represents approximately 20 percent of the total battery charge. For example, if the battery has 80 percent of its charge remaining, four of the lights are on. If no lights appear, the battery has no charge.

## Check the Battery Health



**NOTE:** You can check battery health in one of two ways: by using the charge gauge on the battery as described below and by using the Battery Meter in Dell QuickSet. For information about QuickSet, right-click the QuickSet icon in the Microsoft® Windows® taskbar, and click Help.

To check the battery health using the charge gauge, *press and hold* the status button on the battery charge gauge for at least 3 seconds. If no lights appear, the battery is in good condition, and more than 80 percent of its original charge capacity remains. Each light represents incremental degradation. If five lights appear, less than 60 percent of the charge capacity remains, and you should consider replacing the battery. See [Specifications](#) for more information about the battery operating time.

## Low-Battery Warning



**NOTICE:** To avoid losing or corrupting data, save your work immediately after a low-battery warning. Then connect the computer to an electrical outlet. If the battery runs completely out of power, hibernate mode begins automatically.

By default, a pop-up window warns you when the battery charge is approximately 90 percent depleted. You can change the settings for the battery alarms in QuickSet or the **Power Options Properties** window. See [Configuring Power Management Settings](#) for information about accessing QuickSet or the **Power Options Properties** window.

---

## Conserving Battery Power

Perform the following actions to conserve battery power:

- Connect the computer to an electrical outlet when possible because battery life is largely determined by the number of times the battery is used and recharged.
- Place the computer in standby mode or hibernate mode when you leave the computer unattended for long periods of time (see [Power Management Modes](#)).
- Use the Power Management Wizard to select options to optimize your computer's power usage. These options can also be set to change when you press the power button, close the display, or press <Fn><Esc>.



**NOTE:** See [Power Management Modes](#) for more information on conserving battery power.

---

## Power Management Modes

### Standby Mode

Standby mode conserves power by turning off the display and the hard drive after a predetermined period of inactivity (a time-out). When the computer exits standby mode, it returns to the same operating state it was in before entering standby mode.



**NOTICE:** If your computer loses AC and battery power while in standby mode, it may lose data.

To enter standby mode:

- Click **Start**→**Shut Down**→**Stand by**.

or

- Depending on how you set the power management options in the **Power Options Properties** window or the QuickSet Power Management Wizard, use one of the following methods:
  - Press the power button.
  - Close the display.
  - Press <Fn><Esc>.

To exit standby mode, press the power button or open the display depending on how you set the power management options. You cannot make the computer exit standby mode by pressing a key or touching the touch pad or track stick.

### Hibernate Mode

Hibernate mode conserves power by copying system data to a reserved area on the hard drive and then completely turning off the computer. When the computer exits hibernate mode, it returns to the same operating state it was in before entering hibernate mode.



**NOTICE:** You cannot remove devices or undock your computer while your computer is in hibernate mode.

Your computer enters hibernate mode if the battery charge level becomes critically low.

To manually enter hibernate mode:

- Click **Start**→**Turn off computer**, press and hold <Shift>, and then click **Hibernate**.

or

- Depending on how you set the power management options in the **Power Options Properties**

window or the QuickSet Power Management Wizard, use one of the following methods to enter hibernate mode:

- Press the power button.
- Close the display.
- Press <Fn><Esc>.



**NOTE:** Some PC Cards or ExpressCards may not operate correctly after the computer exits hibernate mode. Remove and reinsert the card (see [Installing a PC Card or ExpressCard](#)), or simply restart (reboot) your computer.

To exit hibernate mode, press the power button. The computer may take a short time to exit hibernate mode. You cannot make the computer exit hibernate mode by pressing a key or touching the touch pad or track stick. For more information on hibernate mode, see the documentation that came with your operating system.

## Configuring Power Management Settings

You can use the QuickSet Power Management Wizard or Windows Power Options Properties to configure the power management settings on your computer.

- To access the QuickSet Power Management Wizard, double-click the QuickSet icon in the Microsoft® Windows® taskbar. For more information about QuickSet, click the **Help** button in the Power Management Wizard.
- To access the **Power Options Properties** window, click the **Start** button→ **Control Panel**→ **Performance and Maintenance**→ **Power Options**. For information on any field in the **Power Options Properties** window, click the question mark icon on the title bar and then click on the area where you need information.

## Charging the Battery



**NOTE:** With Dell™ ExpressCharge™, when the computer is turned off, the AC adapter charges a completely discharged battery to 80 percent in about 1 hour and to 100 percent in approximately 2 hours. Charge time is longer with the computer turned on. You can leave the battery in the computer for as long as you like. The battery's internal circuitry prevents the battery from overcharging.


When you connect the computer to an electrical outlet or install a battery while the computer is connected to an electrical outlet, the computer checks the battery charge and temperature. If necessary, the AC adapter then charges the battery and maintains the battery charge.


If the battery is hot from being used in your computer or being in a hot environment, the battery may not charge when you connect the computer to an electrical outlet.


The battery is too hot to start charging if the  light flashes alternately green and orange. Disconnect the computer from the electrical outlet and allow the computer and the battery to cool to room temperature. Then connect the computer to an electrical outlet to continue charging the battery.

For more information about resolving problems with a battery, see [Power Problems](#).

## Replacing the Battery

 **CAUTION:** Before performing these procedures, turn off the computer, disconnect the AC adapter from the electrical outlet and the computer, disconnect the modem from the wall connector and computer, and remove any other external cables from the computer.


 **CAUTION:** Using an incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell. The battery is designed to work with your Dell™ computer. Do not use a battery from other computers with your computer.

 **NOTICE:** You must remove all external cables from the computer to avoid possible connector damage.

For information about replacing the second battery, which is located in the media bay, see [Using Multimedia](#).

To remove the battery:

1. If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.
2. Ensure that the computer is turned off.
3. Slide the battery-bay latch release on the bottom of the computer until the release clicks.
4. Using the tab on the battery, lift the battery out of the computer.

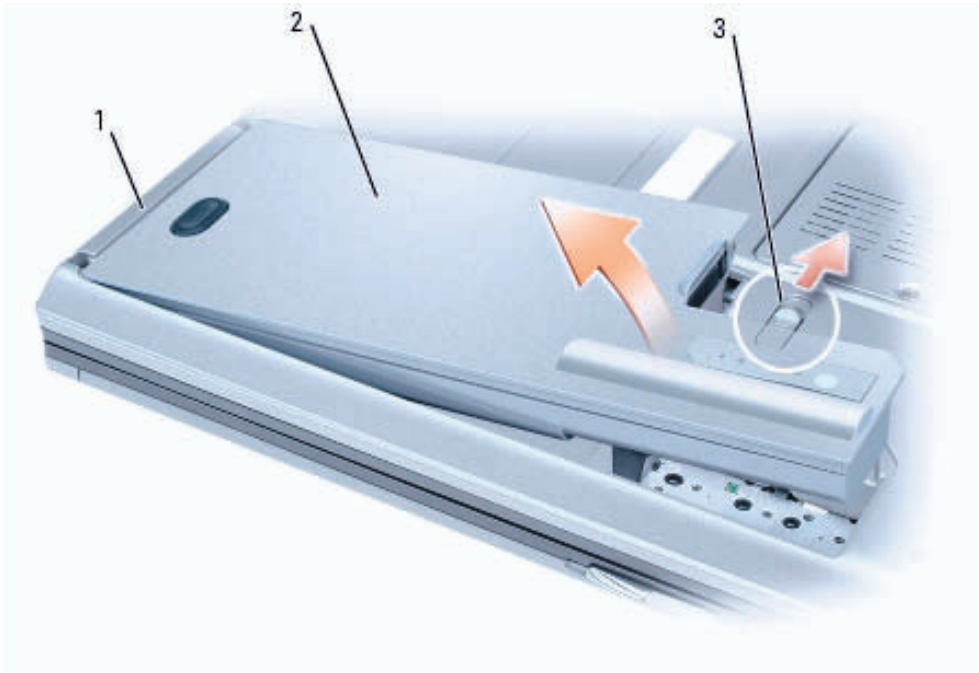

1	battery tab	2	battery	3	battery-bay latch release
---	-------------	---	---------	---	---------------------------

To replace the battery, place the battery in the bay and press down until the battery-bay latch release clicks.

## Storing a Battery

Remove the battery when you store your computer for an extended period of time. A battery discharges during prolonged storage. After a long storage period, recharge the battery fully before you use it (see [Charging the Battery](#)).

---

[Back to Contents Page](#)

# Specifications

## Dell™ Latitude™ D830 User's Guide

<b>Processor</b>	
Processor type	Intel® Core™ Duo processor
L1 cache	64 KB (internal)
L2 cache	2 MB (on die)
External bus frequency	800 MHz

<b>System Information</b>	
System chipset	Intel 945GM and 945PM
Data bus width	64 bits
DRAM bus width	64 bits
Processor address bus width	36 bits
Graphics bus	internal



<b>PC Card</b>	
CardBus controller	OZ711
PC Card connector	one (supports one Type I or Type II card)
Cards supported	3.3 V and 5 V
PC Card connector size	80 pins
Data width (maximum)	PCMCIA 16 bits CardBus 32 bits

<b>Smart Card</b>	
Read/write capabilities	reads and writes to all ISO 7816 1/2/3/4 microprocessor cards (T=0, T=1)
Cards supported	3 V and 5 V
Program technology supported	Java cards
Interface speed	9600-115,200 BPS
EMV level	level 1 certified
WHQL certification	PC/SC
Compatibility	compatible within a PKI environment

**TB 11-5895-1796-10-4**

Insert/eject cycles	certified for up to 100,000 cycles
---------------------	------------------------------------

<b>Memory</b>	
Memory module connector	two user-accessible SODIMM sockets
Memory module capacities	256 MB, 512 MB, 1 GB, and 2 GB
Memory type	533/667 DDRII SDRAM
Minimum memory	512 MB
Maximum memory	4 GB

<b>Ports and Connectors</b>	
Serial	9-pin connector; 16550C-compatible, 16-byte buffer connector
Video	15-hole connector
Audio	microphone miniconnector; stereo headphones/speakers miniconnector
USB	three 4-pin USB 2.0-compliant connectors
IEEE 1394	
<b>100</b>	

S-video TV-out	7-pin mini-DIN connector (optional S-video to composite video adapter cable)
Modem	RJ-11 support
Network adapter	RJ-45 port
D-Dock	standard D-dock connector for devices such as D-Docks advanced port replicators and expansion stations

<b>Communications</b>	
Modem:	
Type	v.92 56K MDC
Controller	softmodem
Interface	Intel HDA bus
Network adapter	1-GB Ethernet LAN on system board
Wireless	internal WLAN, WWAN, and Bluetooth® wireless support (if optional cards are purchased)

<b>Video</b>

Video type	integrated on system board or discrete graphics on system board
Video controller	<p>discrete graphic solutions: nVIDIA Quadro NVS 135M or nVIDIA Quadro NVS 140M</p> <p>integrated graphics solution: Intel GM965</p>
Video memory	<p>discrete graphic solutions:</p> <ul style="list-style-type: none"> <li>• nVIDIA Quadro NVS 135M — 128 MB of video memory (dedicated) at &lt;512 MB of system memory, or 256 MB of video memory (dedicated plus shared) &gt;= 1 GB of system memory</li> <li>• nVIDIA Quadro NVS 140M — 256 MB of video memory (dedicated) at &lt;512 MB of system memory, or 512 MB of video memory (dedicated plus shared) &gt;= 1 GB of system memory</li> </ul> <p>integrated graphics solution:</p> <ul style="list-style-type: none"> <li>• 512 MB of system memory — Maximum video memory is 128 MB</li> <li>• 1 GB of system memory — Maximum video</li> </ul>

	memory is 256 MB <ul style="list-style-type: none"> <li>• 2 GB of system memory — Maximum video memory is 384 MB</li> </ul>
LCD interface	LVDS
TV support	NTSC or PAL in S-video and composite modes

<b>Audio</b>	
Audio type	High Definition Audio (Soft Audio)
Audio controller	SigmaTel STAC9205
Stereo conversion	24-bit (stereo digital-to-analog); 24-bit (stereo analog-to-digital)
Interfaces:	
Internal	PCI bus/HDA
External	microphone miniconnector; stereo headphones/speakers miniconnector
Speaker	two 4-ohm speakers
Internal speaker amplifier	2-W channel into 4 ohms

Volume controls	keyboard shortcuts or program menus
-----------------	-------------------------------------

<b>Display</b>	
Type (active-matrix TFT)	WXGA, WSXGA+, or WUXGA
Dimensions:	
Height	207.0 mm max (8.15 inches)
Width	331.2 mm (12.94 inches)
Diagonal	390.57 mm (15.4 inches)
Operating angle	0° (closed) to 180°
Viewing angles:	
WXGA horizontal	40/40°
WXGA vertical	10/30°
WSXGA+ horizontal	65/65°
WSXGA+ vertical	50/50°
WUXGA horizontal	65/65°
WUXGA vertical	50/50°
<b>104</b>	

Pixel pitch:	
WXGA	0.2588 (15.4-inch display)
WSXGA+	0.1971 (15.4-inch display)
WUXGA	0.1725 (15.4-inch display)
Power consumption (panel with backlight) (typical):	
WXGA	5.0 W (maximum)
WSXGA+	5.5 W (maximum)
WUXGA	6.0 W (maximum)
Controls	brightness can be controlled through keyboard shortcuts

<b>Keyboard</b>	
Number of keys	87 (U.S. and Canada); 88 (Europe); 91 (Japan)
Key travel	2.7 mm $\pm$ 0.3 mm (0.11 inch $\pm$ 0.016 inch)
Key spacing	19.05 mm $\pm$ 0.3 mm (0.75 inch $\pm$ 0.012 inch)
Layout	QWERTY/AZERTY/Kanji

<b>Touch Pad</b>	
X/Y position resolution (graphics table mode)	240 cpi
Size:	
Width	64.88-mm (2.55-inch) sensor-active area
Height	48.88-mm (1.92-inch) rectangle

<b>Track Stick</b>	
X/Y position resolution (graphics table mode)	250 count/sec @ 100 gf
Size	protrudes 0.5 mm higher than surrounding keycaps

<b>Battery</b>	
Type:	
9-cell lithium-ion battery	85 WHr
6-cell lithium-ion battery	56 WHr
Dimensions:	



Depth	77.2 mm (3.08 inches)
Height	20.0 mm (0.80 inch)
Width	187.03 mm (7.48 inches)
Weight:	
9-cell lithium-ion battery	0.485 kg (1.07 lb) (typical)
6-cell lithium-ion battery	0.355 kg (0.783 lb) (typical)
Voltage	11.1 VDC
Operating time	varies depending on operating conditions and can be significantly reduced under certain power-intensive conditions (see Battery Performance for more information)
Life span (approximate)	500 discharge/charge cycles
Temperature range:	
Operating	0° to 35°C (32° to 95°F)
Storage	-40° to 65°C (-40° to 149°F)

<b>AC Adapter</b>	
Input voltage	100–240 VAC
Input current (maximum)	1.5 A
Input frequency	50–60 Hz
Output current	4.62 A
Output power	90 W
Rated output voltage	19.5 VDC
Dimensions:	
Height	27.94 mm (1.1 inches)
Width	58.42 mm (2.3 inches)
Depth	133.85 mm (5.25 inches)
Weight (with cables)	0.4 kg (0.9 lb)
Temperature range:	
Operating	0° to 35°C (32° to 95°F)
Storage	-40° to 65°C (-40° to 149°F)

Height	35.3 mm (1.4 inches)
Width	361 mm (14.2 inches)
Depth	262.6 mm (10.3 inches)
Weight	approximately 6.1 lb, depending on configuration

<b>Environmental</b>	
Temperature range:	
Operating	0° to 35°C (32° to 95°F)
Storage	-40° to 65°C (-40° to 149°F)
Relative humidity (maximum):	
Operating	10% to 90% (noncondensing)
Storage	5% to 95% (noncondensing)
Maximum vibration (using a random-vibration spectrum that simulates user environment):	
Operating	0.66 GRMS

**TB 11-5895-1796-10-4**

Storage	1.30 GRMS
Maximum shock (measured with hard drive in head-parked position and a 2-ms half- sine pulse):	
Operating	122 G
Storage	163 G
Altitude (maximum):	
Operating	-15.2 to 3048 m (-50 to 10,000 ft)
Storage	-15.2 to 10,668 m (-50 to 35,000 ft)

---

[Back to Contents Page](#)

[Back to Contents Page](#)

# Using Cards

## Dell™ Latitude™ D830 User's Guide

- [Card Types](#)
  - [Card Blanks](#)
  - [Extended Cards](#)
  - [Installing a PC Card or ExpressCard](#)
  - [Removing a Card or Blank](#)
- 

## Card Types

See [Specifications](#) for information on supported card types.



**NOTE:** A PC Card is not a bootable device.

The PC Card slot has one connector that supports a single Type I or Type II card. The PC Card slot supports CardBus technology and extended PC Cards. "Type" of card refers to its thickness, not its functionality.

The ExpressCard slot has one connector that supports 54-mm cards. The slot also supports adapters for 34-mm cards.

---

## Card Blanks

Your computer shipped with a plastic blank installed in the card slots. Blanks protect unused slots from dust and other particles. Save the blank for use when no PC Card is installed in the slot; blanks from other computers may not fit your computer.

To remove the blank, see [Removing a Card or Blank](#).

## Extended Cards

An extended card (for example, a wireless network adapter) is longer than a standard card and extends outside the computer. Follow these precautions when using extended PC or ExpressCards:

- Protect the exposed end of an installed card. Striking the end of the card can damage the system board.
  - Always remove an extended card before you pack the computer in its carrying case.
- 

## Installing a PC Card or ExpressCard

You can install a PC Card or ExpressCard in the computer while the computer is running. The computer automatically detects the card.

Cards are generally marked with a symbol (such as a triangle or an arrow) to indicate which end to insert into the slot. The cards are keyed to prevent incorrect insertion. If card orientation is not clear, see the documentation that came with the card.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

### PC Card

1. Hold the card with its orientation symbol pointing into the slot and the top side of the card facing up. The latch may need to be in the "in" position before you insert the card.
2. Slide the card into the slot until the card is completely seated in its connector.

If you encounter too much resistance, do not force the card. Check the card orientation and try again.



The computer recognizes most cards and automatically loads the appropriate device driver. If the configuration program tells you to load the manufacturer's drivers, use the floppy disk or CD that came with the PC Card.

## ExpressCard


1. Hold the card with its orientation symbol pointing into the slot and the top side of the card facing up. The latch may need to be in the "in" position before you insert the card.
2. Slide the card into the slot until the card is completely seated in its connector.

If you encounter too much resistance, do not force the card. Check the card orientation and try again.



The computer recognizes most cards and automatically loads the appropriate device driver. If the configuration program tells you to load the manufacturer's drivers, use the floppy disk or CD that came with the card.

If you have an adapter, such as the one shown below, you can use 34-mm ExpressCards in the PC Card slot. For information about using the PC Card slot, see [PC Card](#).

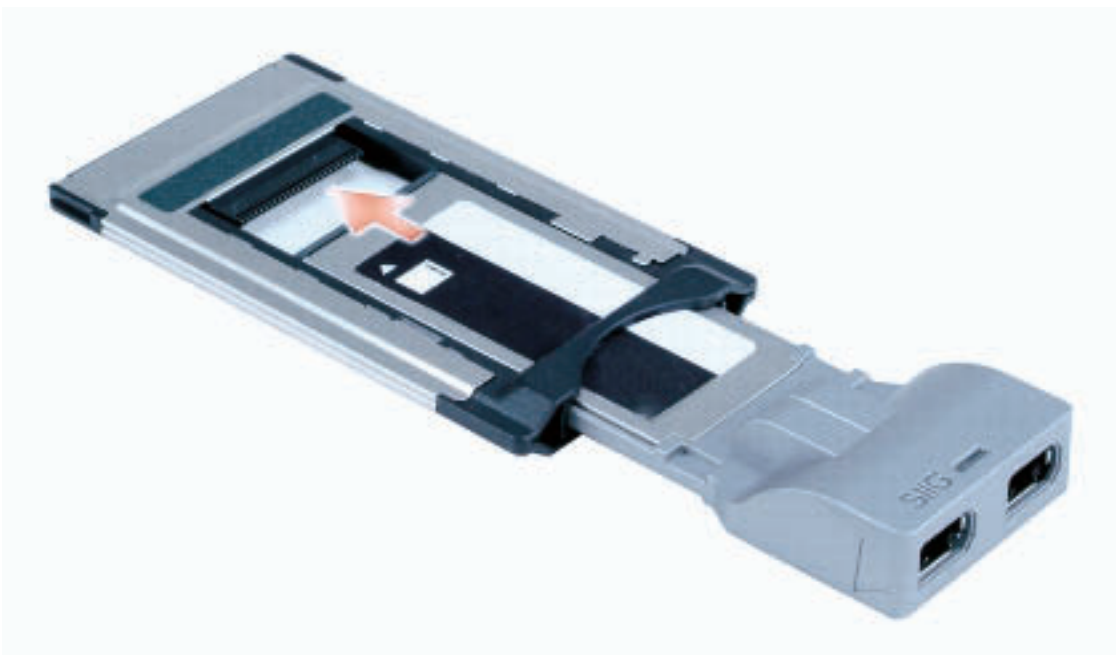




## Removing a Card or Blank



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in your Product Information Guide.



**NOTICE:** Click the  icon (in the taskbar) to select a card and stop it from functioning before you remove it from the computer. If you do not stop the card in the configuration utility, you could lose data. Do not attempt to eject a card by pulling its cable, if one is attached.

Press the latch and remove the card or blank. For some latches, you must press the latch twice: once to pop the latch out, and then a second time to pop the card out.

---


[Back to Contents Page](#)


# Using Multimedia

## Dell™ Latitude™ D830 User's Guide

- [Playing CDs or DVDs](#)
  - [Adjusting the Volume](#)
  - [Adjusting the Picture](#)
- 

## Playing CDs or DVDs

 **NOTICE:** Do not press down on the CD or DVD tray when you open or close it. Keep the tray closed when you are not using the drive.

 **NOTICE:** Do not move the computer while playing CDs or DVDs.

1. Press the eject button on the front of the drive.
2. Pull out the tray.



3. Place the disc, label side up, in the center of the tray and snap the disc onto the spindle.



**NOTE:** If you use a module that shipped with another computer, you need to install the drivers and software necessary to play DVDs or write data. For more information, see the Drivers and Utilities CD (the Drivers and Utilities CD is optional and may not be available for your computer or in certain countries).

4. Push the tray back into the drive.

To format CDs for storing data, to create music CDs, or to copy CDs, see the CD software that came with your computer.



**NOTE:** Ensure that you follow all copyright laws when you create CDs.

---

## Adjusting the Volume



**NOTE:** When the speakers are muted, you do not hear the CD or DVD playing.

## Volume Control Window

1. Click the **Start** button, point to **All Programs (or Programs)**→ **Accessories**→ **Entertainment (or Multimedia)**, and then click **Volume Control**.
2. In the **Volume Control** window, click and drag the bar in the **Volume Control** column and slide it up or down to increase or decrease the volume.

For more information on volume control options, click **Help** in the **Volume Control** window.

## Volume Control Buttons

You can adjust the volume with the volume control buttons on your computer. See [volume control buttons](#).

---

## Adjusting the Picture

If an error message notifies you that the current resolution and color depth are using too much memory and preventing DVD playback, adjust the display properties.

1. Click **Start**→ **Control Panel**→ **Display**.
  2. Click **Settings** and click and drag the bar in **Screen resolution** to change the setting to **1024 by 768 pixels**.
  3. Click the drop-down menu under **Color quality**→ **Medium (16 bit)**→ **OK**.
- 

[Back to Contents Page](#)

[Back to Contents Page](#)


# About Your Computer

## Dell™ Latitude™ D830 User's Guide

- [Front View](#)
- [Left Side View](#)
- [Right Side View](#)
- [Back View](#)
- [Bottom View](#)

---

## Front View

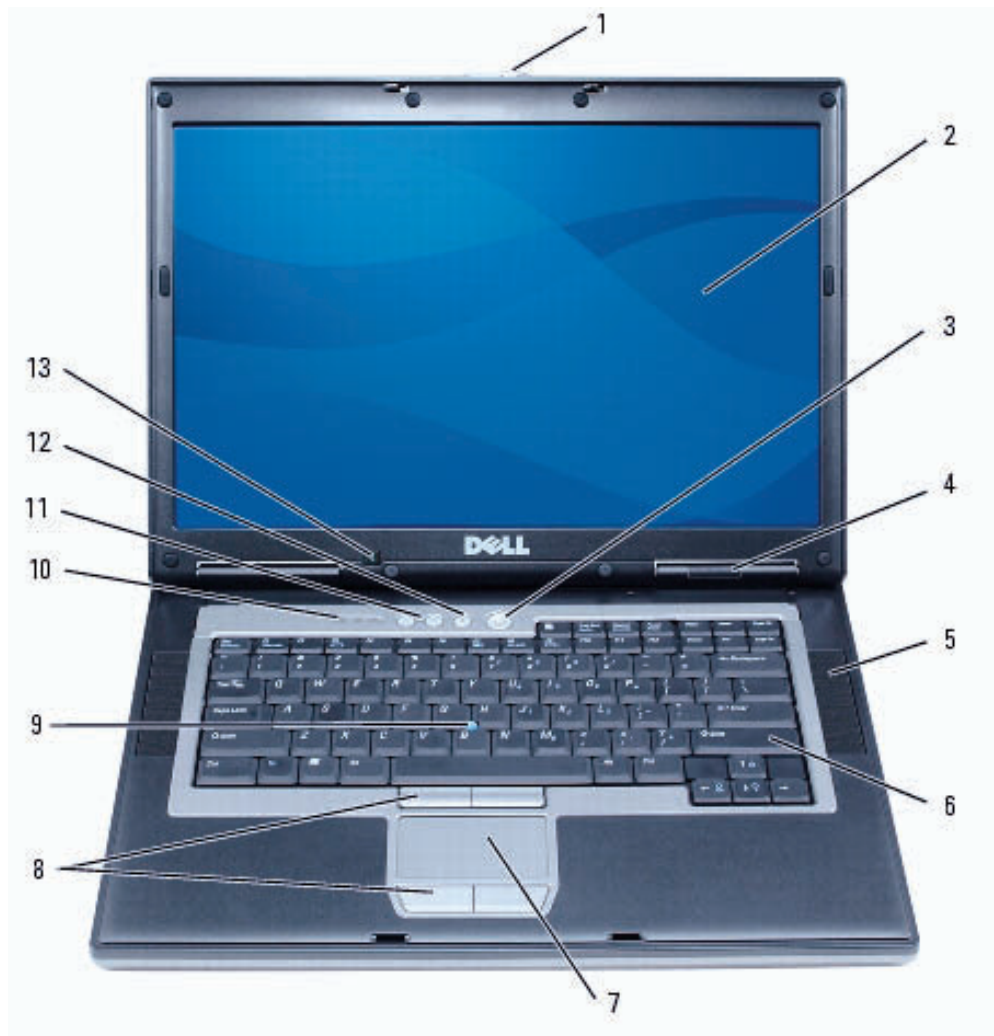

1	<a href="#">display latch</a>	2	<a href="#">display</a>	3	<a href="#">power button</a>
4	<a href="#">device status lights</a>	5	<a href="#">speakers (2)</a>	6	<a href="#">keyboard</a>
7	<a href="#">touch pad</a>	8	<a href="#">touch pad/track stick buttons</a>	9	<a href="#">track stick</a>
10	<a href="#">keyboard status lights</a>	11	<a href="#">volume control buttons</a>	12	<a href="#">mute button</a>
13	<a href="#">ambient light sensor</a>				

**display latch** — Keeps the display closed.


**display** — For more information about your display, see [Using the Display](#).







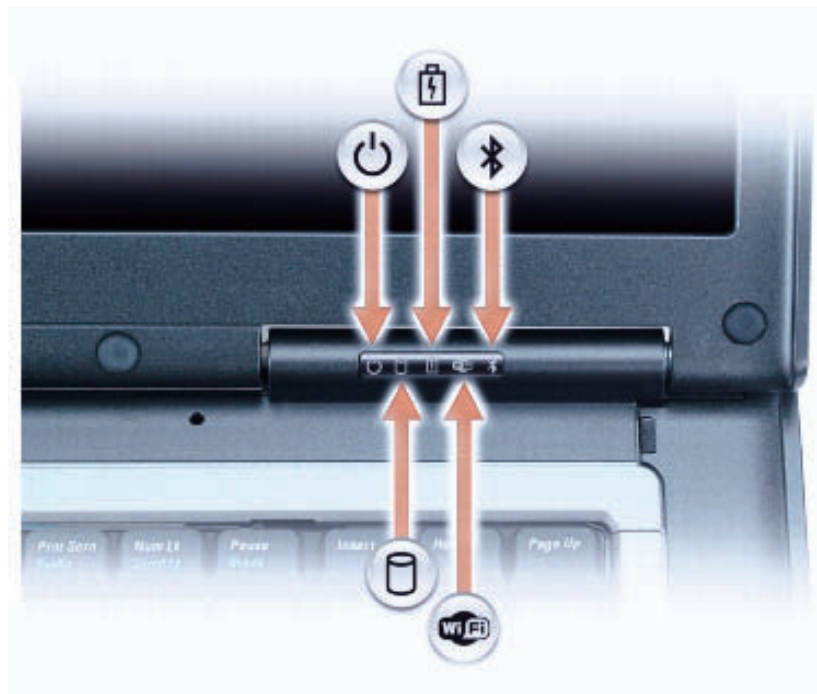

**power button** — Press the power button to turn on the computer or exit a power management mode (see [Power Management Modes](#)).

**NOTICE:** To avoid losing data, turn off your computer by performing a Microsoft® Windows® operating system shutdown rather than by pressing the power button.

If the computer stops responding, press and hold the power button until the computer turns off completely (which may take several seconds).

**device status lights**



	Turns on when you turn on the computer and blinks when the computer is in a power management mode.
	Turns on when the computer reads or writes data.   <b>NOTICE:</b> To avoid loss of data, never turn off the computer while the  light is flashing.
	Turns on steadily or blinks to indicate battery charge status.
	Turns on when wireless devices are enabled. To enable or disable WiFi, use the wireless switch on the left side of the computer.
	Turns on when Bluetooth® wireless technology is enabled. To enable or disable Bluetooth wireless technology, use the wireless switch on the left side of the computer.  <b>NOTE:</b> Bluetooth wireless technology is an optional feature on your computer, so the  icon turns on only if you ordered Bluetooth wireless technology with your computer. For more information, see the documentation that came with your Bluetooth wireless technology.

If the computer is connected to an electrical outlet, the  light operates as follows:

- Solid green: The battery is charging.
- Flashing green: The battery is almost fully charged.
- Off: The battery is adequately charged (or external power is not available to charge the battery).

If the computer is running on a battery, the  light operates as follows:

- Off: The battery is adequately charged (or the computer is turned off).
- Flashing orange: The battery charge is low.
- Solid orange: The battery charge is critically low.

**speaker** — To adjust the volume of the integrated speaker, press the volume control buttons or mute button.

**keyboard** — The keyboard includes a numeric keypad as well as the Windows logo key. For information on supported keyboard shortcuts, see [Numeric Keypad](#).

**touch pad** — Provides the functionality of a mouse. See [Touch Pad](#) for more information.

**touch pad/track stick buttons** — Provide the functionality of a mouse. See [Touch Pad](#) for more information.


**track stick** —

Provides the functionality of a mouse (see [Customizing the Touch Pad and Track Stick](#)).




**fingerprint reader (optional) —**

Helps to keep your Dell™ computer secure. When you slide your finger over the reader, it uses your unique fingerprint to authenticate your user identity. For information on how to activate and use the security management software that controls the fingerprint reader, see [Securing Your Computer](#).

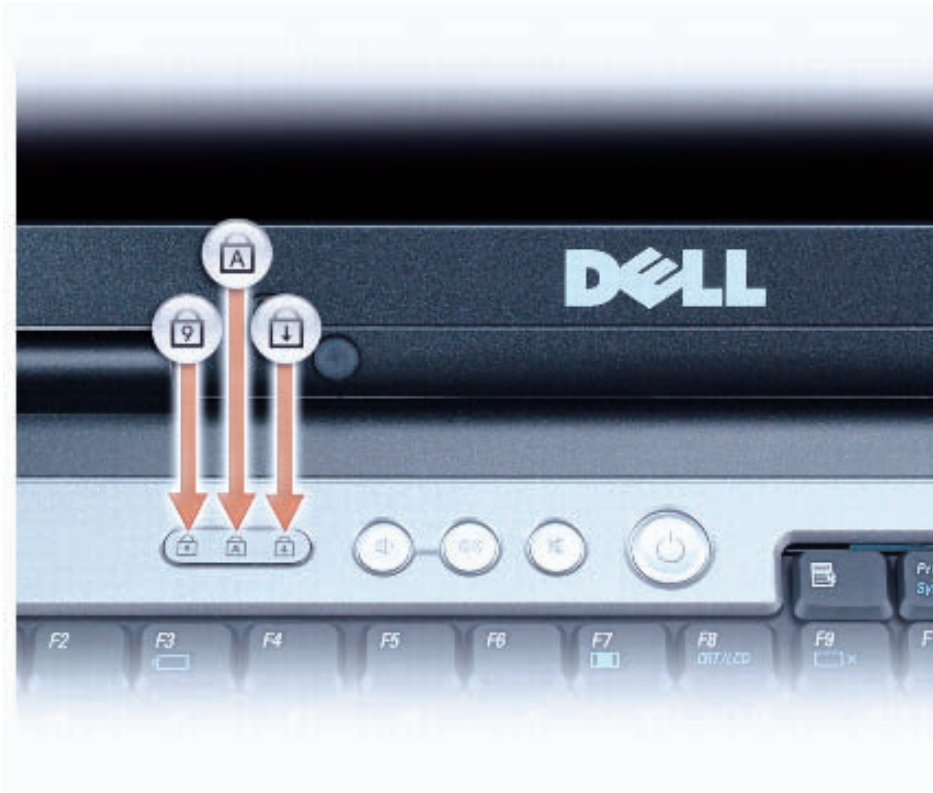**keyboard status lights**



The green lights located above the keyboard indicate the following:

	Turns on when the numeric keypad is enabled.
	Turns on when the uppercase letter function is enabled.
	Turns on when the scroll lock function is enabled.

**volume control buttons —** Press these buttons to adjust the speaker volume.


**mute button —** Press this button to turn off the speakers.

**ambient light sensor —**

Helps to control display brightness. For more information, see [Using the Ambient Light Sensor](#).



## Left Side View

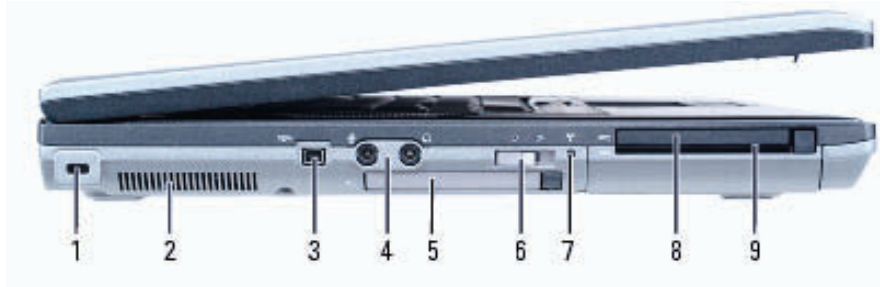

1	<a href="#">security cable slot</a>	2	<a href="#">air vents</a>	3	<a href="#">IEEE 1394 connector</a>
4	<a href="#">audio connectors</a>	5	<a href="#">ExpressCard slot</a>	6	<a href="#">wireless switch</a>
7	<a href="#">Wi-Fi Catcher™ light</a>	8	<a href="#">PC Card slot</a>	9	<a href="#">smart card slot</a>

**security cable slot** — Lets you attach a commercially available antitheft device to the computer. For more information, see [Security Cable Lock](#).



**NOTICE:** Before you buy an antitheft device, ensure that it will work with the security cable slot.

**air vents** — The computer uses an internal fan to create airflow through the vents, which prevents the computer from overheating.





**CAUTION:** Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your Dell™ computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire.

**NOTE:** The computer turns on the fan when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.

**IEEE 1394 connector** — Connects devices supporting IEEE 1394 high-speed transfer rates, such as some digital video cameras.

**audio connectors**


Attach headphones to the  connector.
Attach a microphone to the  connector.



**ExpressCard slot** — Supports 34- and 54-mm PCI ExpressCards or USB-based ExpressCards (see [Using Cards](#)).

**wireless switch** — Turns on/off wireless devices such as WiFi and internal cards with Bluetooth wireless technology and scans for WiFi networks. For more information about scanning for wireless networks, see [Dell™ Wi-Fi Catcher™ Network Locator](#).

**NOTE:** The wireless switch does not detect Mobile Broadband networks or networks that use internal cards with Bluetooth technology.

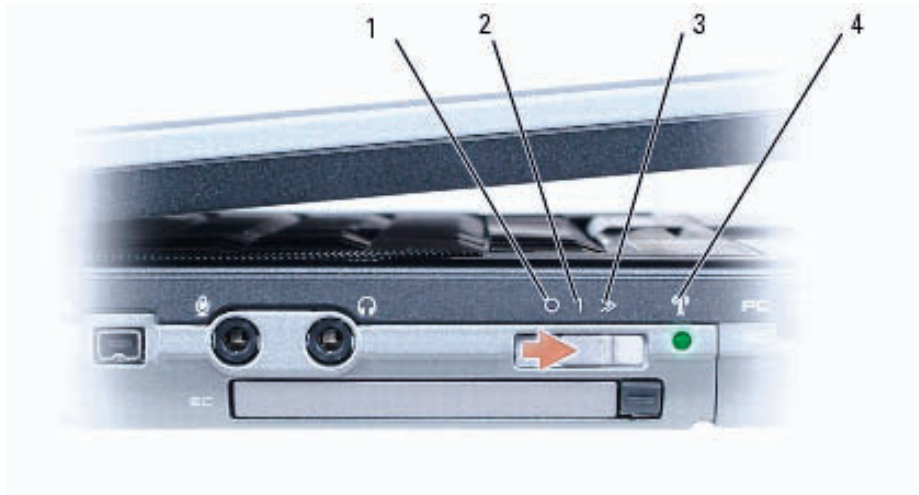

1	"off" position	2	"on" position	3	"momentary" position
4	<a href="#">Wi-Fi Catcher light</a>				

**wireless switch positions**

"off"	Disables wireless devices.
"on"	Enables wireless devices.
"momentary"	Scans for WiFi networks. See <a href="#">Dell™ Wi-Fi Catcher™ Network Locator</a> for more information.

**Wi-Fi Catcher™ light** — The light operates as follows:

- Flashing green: Searching for networks
- Solid green: Strong network found
- Solid yellow: Weak network found
- Flashing yellow: Error
- Off: No signal found

**PC Card slot** — Supports one PC Card, such as a modem or network adapter. The computer ships with a blank installed in the slot to prevent dust particles from entering the computer. For more information, see [Using Cards](#).

**smart card slot** — Supports one smart card (see [Smart Cards](#)).


## Right Side View



1	<a href="#">media bay</a>	2	<a href="#">USB connectors</a> (2)
---	---------------------------	---	------------------------------------


**media bay** — Supports a floppy drive, optical drives, a second battery, or a second hard drive (see [Using Multimedia](#)).

### USB connectors

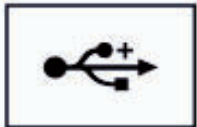	Connect USB devices, such as a mouse, keyboard, or printer.
---	---

## Back View


**⚠ CAUTION:** Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire.

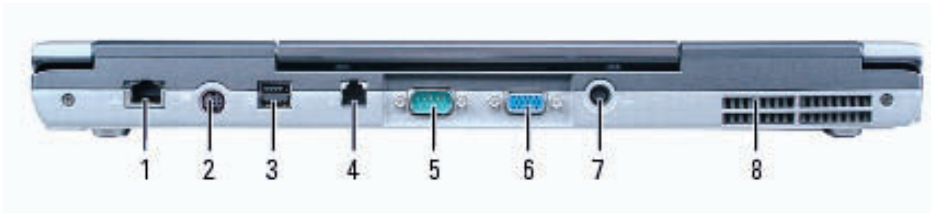

1	<a href="#">network connector (RJ-45)</a>	2	<a href="#">S-video TV-out connector</a>	3	<a href="#">powered USB connector</a>
4	<a href="#">modem connector (RJ-11)</a>	5	<a href="#">serial connector</a>	6	<a href="#">video connector</a>
7	<a href="#">AC adapter connector</a>	8	<a href="#">air vents</a>		

### network connector (RJ-45)

**➡ NOTICE:** The network connector is slightly larger than the modem connector. To avoid damaging the computer, do not plug a telephone line into the network connector.

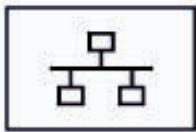

Connects the computer to a network. The two lights next to the connector indicate status and activity for wired network connections.


For information on using the network adapter, see the device user's guide supplied with your computer (see [Connecting a Network or Broadband Modem Cable](#)).

### S-video TV-out connector




Connects your computer to a TV. Also connects digital audio-capable devices using the TV/digital audio adapter cable.


### powered USB 2.0 connector

	<p>Connects USB 2.0 compliant devices, such as a mouse, keyboard, or printer. Can also be used for peripherals that require more than 5 V of power.</p>
---	---


**modem connector (RJ-11)**

	<p>Connects the telephone line to the modem connector (if you ordered the optional internal modem).</p>
	<p>For information on using the modem, see the online modem documentation supplied with your computer (see <a href="#">Finding Information</a>).</p>

**serial connector**

	<p>Connects serial devices, such as a mouse or handheld device.</p>
---	---

**video connector**

	<p>Connects video devices, such as a monitor.</p>
---	---

**AC adapter connector** — Connects an AC adapter to the computer.



The AC adapter converts AC power to the DC power required by the computer. You can connect the AC adapter with your computer turned either on or off.

**CAUTION:** The AC adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to the power strip or electrical outlet may cause fire or equipment damage.

**NOTICE:** When you disconnect the AC adapter cable from the computer, grasp the connector, not the cable itself, and pull firmly but gently to avoid damaging the cable. When you wrap the AC adapter cable, ensure that you follow the angle of the connector on the AC adapter to avoid damaging the cable.


**air vents** — The computer uses an internal fan to create airflow through the vents, which prevents the computer from overheating.

**NOTE:** The computer turns on the fan when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.

**CAUTION:** Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire.

---

## Bottom View

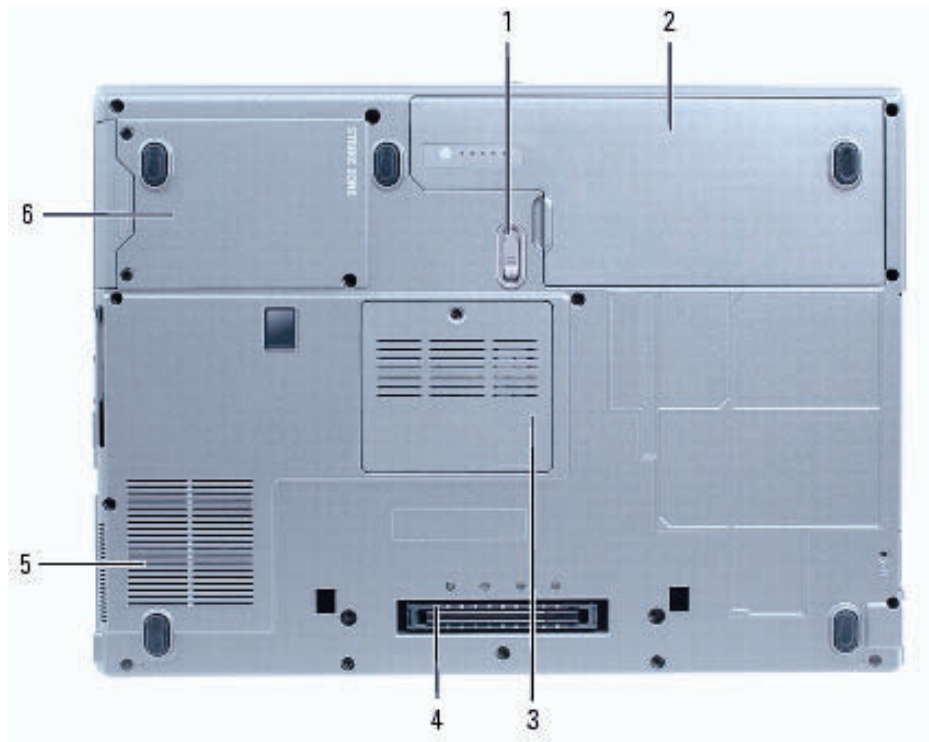

1	<a href="#">battery-bay latch release</a>	2	<a href="#">battery</a>	3	<a href="#">memory module cover</a>
4	<a href="#">docking-device connector</a>	5	<a href="#">fan air vents</a>	6	<a href="#">hard drive</a>

**battery-bay latch release** — Releases the battery. See [Replacing the Battery](#) for instructions.

**battery** — When a battery is installed, you can use the computer without connecting the computer to an electrical outlet (see [Using a Battery](#)).

**memory module cover** — Covers the compartment that contains the second memory module (see [Memory](#)).

**docking-device connector** — Lets you attach your computer to the Media Base or other docking device. See the Dell documentation that came with your docking device for more information.

**fan air vents** — The computer uses an internal fan to create airflow through the fan air vents, which prevents the computer from overheating.



**NOTE:** The computer turns on the fan when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.



**CAUTION:** Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire.

**hard drive** — Stores software and data.

---

[Back to Contents Page](#)

# Using the Display

## Dell™ Latitude™ D830 User's Guide

- [Adjusting Brightness](#)
  - [Switching the Video Image From Your Computer Display to a Projector](#)
  - [Making Images and Text Look Bigger or Sharper on the Screen: Setting Display Resolution and Refresh Rate](#)
  - [Using an External Monitor Simultaneously as an Extension of Your Computer Display](#)
  - [Using an External Monitor as Your Primary Display: Swapping Primary and Secondary Displays](#)
  - [Using the Ambient Light Sensor](#)
- 

## Adjusting Brightness

When a Dell™ computer is running on battery power, you can conserve power by setting the display brightness to the lowest comfortable setting by pressing <Fn> and the up- or down-arrow key on the keyboard.



**NOTE:** Brightness key combinations only affect the display on your portable computer, not monitors or projectors that you attach to your portable computer or docking device. If your computer is connected to an external monitor and you try to change the brightness level, the Brightness Meter may appear, but the brightness level on the external device does not change.

You can press the following keys to adjust display brightness:

- Press <Fn> and the up-arrow key to increase brightness on the integrated display only (not on an external monitor).
  - Press <Fn> and the down-arrow key to decrease brightness on the integrated display only (not on an external monitor).
- 

## Switching the Video Image From Your Computer Display to a Projector


When you start the computer with an external device (such as an external monitor or projector) attached and turned on, the image may appear on either the computer display or the external device.

Press <Fn><F8> to switch the video image between the display only, the external device only, or the display and the external device simultaneously.


---



## Making Images and Text Look Bigger or Sharper on the Screen: Setting Display Resolution and Refresh Rate

 **NOTE:** If you change the display resolution from the current settings, the image may appear blurry or text may be hard to read if you change the resolution to one not supported by your computer and display. Before you change any of the display settings, make a note of the current settings so you can change back to the previous settings if you need to.

You can enhance the legibility of text and change the appearance of images on the screen by adjusting display resolution. As you increase resolution, items appear smaller on the screen. In contrast, lower resolution causes text and images to appear larger and can benefit people with vision impairments. To display a program at a specific resolution, both the video card and the display must support the program, and the necessary video drivers must be installed.


 **NOTE:** Use only the Dell-installed video drivers, which are designed to offer the best performance with your Dell-installed operating system.

If you choose a resolution or color palette that is higher than the display supports, the settings adjust automatically to the closest supported values.


To set the display resolution and refresh rate for your display, perform the steps in the following section that corresponds to the operating system your computer is using.

### Microsoft® Windows® XP

1. Click **Start** → **Settings** → **Control Panel**.
2. Under **Pick a category**, click **Appearance and Themes**.
3. Under **Pick a task...**, click the area you want to change, or under **or pick a Control Panel icon**, click **Display**.
4. In the **Display Properties** window, click the **Settings** tab.
5. Try different settings for **Color quality** and **Screen resolution**.

 **NOTE:** As the resolution increases, icons and text appear smaller on the screen.

### Windows Vista™

1. Click the Windows Vista Start button  → **Control Panel**.
2. Under **Appearance and Personalization**, click **Adjust screen resolution**.
3. In the **Display Settings** window, under **Resolution**, slide the slide bar to the left/right to decrease/increase the screen resolution.
4. Click **How do I get the best display?** for further instructions.

If the video resolution setting is higher than that supported by the display, the computer enters pan mode. In pan mode, the entire video image cannot be displayed at one time, and the taskbar that usually appears at the bottom of the desktop may no longer be visible. To view the parts of the video image that are not visible, you can use the touch pad or track stick to "pan" (or *move*) the image up, down, left, and right.



**NOTICE:** You can damage an external monitor by using an unsupported refresh rate. Before adjusting the refresh rate on an external monitor, see the user's guide for the monitor.

---

## Using an External Monitor Simultaneously as an Extension of Your Computer Display

You can attach an external monitor or projector to your computer and use it as an extension of your display (known as "dual independent display" or "extended desktop" mode). This mode allows you to use both screens independently and drag objects from one screen to the other, effectively doubling the amount of viewable work space.

To use extended desktop mode, perform the steps in the following section that corresponds to the operating system your computer is using.

### Microsoft® Windows® XP

1. Connect the external monitor, TV, or projector to the computer.
2. Click **Start**→ **Settings**→ **Control Panel**.
3. Under **Pick a category**, click **Appearance and Themes**.
4. Under **Pick a task...**, click the area you want to change, or under **or pick a Control Panel icon**, click **Display**.
5. In the **Display Properties** window, click the **Settings** tab.



**NOTE:** If you choose a resolution or color palette that is higher than the display supports, the settings adjust automatically to the closest supported values. For more information, see your operating system documentation.


6. Click the monitor 2 icon, click the **Extend my Windows desktop...** check box, and then click **Apply**.
7. Change **Screen Area** to the appropriate sizes for both displays and click **Apply**.
8. If prompted to restart the computer, click **Apply the new color setting without restarting** and click **OK**.
9. If prompted, click **OK** to resize your desktop.
10. If prompted, click **Yes** to keep the settings.
11. Click **OK** to close the **Display Properties** window.

To disable dual independent display mode:

1. Click the **Settings** tab in the **Display Properties** window.
2. Click the monitor 2 icon, uncheck the **Extend my Windows desktop onto this monitor** option, and then click **Apply**.

If necessary, press <Fn><F8> to bring the screen image back to the computer display.

## Windows Vista™

1. Click the Windows Vista Start button, , and click **Control Panel**.
2. Under **Appearance and Personalization**, click **Adjust screen resolution**.
3. In the **Display Settings** window, click the monitor 2 icon, click the **Extend the desktop onto this monitor** check box, and then click **Apply**.
4. Click **OK** to close the **Display Settings** window.

To disable extended desktop mode:

1. In the **Display Settings** window, click the **Settings** tab.
2. Click the monitor 2 icon, uncheck the **Extend the desktop onto this monitor** option, and then click **Apply**.


## Using an External Monitor as Your Primary Display: Swapping Primary and Secondary Displays

To swap your primary and secondary display designations (for example, to use your external monitor as your primary display after docking), perform the steps in the following section that corresponds to the operating system your computer is using.

### Microsoft® Windows® XP

1. Click the **Start** button and click **Control Panel**.
2. Under **Pick a category**, click **Appearance and Themes**.
3. Under **Pick a task...**, click the area you want to change, or under **or pick a Control Panel icon**, click **Display**.
4. Click the **Settings** tab→ **Advanced**→ **Displays** tab.


## Windows Vista™

1. Click the Windows Vista Start button, , and click **Control Panel**.
2. Under **Appearance and Personalization**, click **Adjust screen resolution**.
3. In the **Display Settings** window, click the monitor 2 icon, click the **This is my main monitor** check box, and then click **Apply**.
4. Click **OK** to close the **Display Settings** window.

## Using the Ambient Light Sensor

The ambient light sensor is located on the front of the computer display. The sensor detects available environmental light and automatically increases or decreases the display backlighting to compensate for low-light and high-light environments.

You can enable or disable the ambient light sensor feature by pressing the <Fn> and left-arrow key combination.


 **NOTE:** Do not cover the ambient light sensor with any adhesive labels. If covered up, the sensor—when enabled—automatically sets the display brightness to the minimum level.




1	ambient light sensor
---	----------------------

The ambient light sensor is disabled when your computer is shipped to you. If you enable the sensor and then use any of the display brightness key combinations, the sensor is disabled and the display brightness is increased or decreased accordingly.

Dell™ QuickSet allows you to enable or disable the ambient light sensor feature. You can also adjust maximum and minimum brightness settings that are activated when you enable the ambient light sensor feature. For more information about QuickSet, right-click the QuickSet icon in the taskbar, and click **Help**.

 **NOTE:** Rebooting the computer returns the ambient light sensor to the setting (either enabled or disabled) as it was before it was adjusted.

 **NOTE:** The ambient light sensor adjusts the display backlighting on your portable computer only. It does not control the brightness on any external monitors or projectors.

[Back to Contents Page](#)

# Using the Keyboard


## Dell™ Latitude™ D830 User's Guide

- [Numeric Keypad](#)
  - [Key Combinations](#)
  - [Touch Pad](#)
  - [Changing the Track Stick Cap](#)
- 

## Numeric Keypad



The numeric keypad functions like the numeric keypad on an external keyboard. Each key on the keypad has multiple functions. The keypad numbers and symbols are marked in blue on the right of the keypad keys. To type a number or symbol, hold down <Fn> and press the desired key.

- To enable the keypad, press <Num Lk>. The  light indicates that the keypad is active.
- To disable the keypad, press <Num Lk> again.

## Key Combinations

### System Functions

<Ctrl><Shift><Esc>	Opens the <b>Task Manager</b> window
--------------------	--------------------------------------

### Battery

<Fn><F3>	Displays the Dell™ QuickSet Battery Meter
----------	---

### Display Functions


<Fn><F7>	Scales between widescreen and standard aspect ratio video resolutions.
<Fn><F8>	Switches the video image to the next display option. The options include the integrated display, an external monitor, and both displays simultaneously.
<Fn> and left-arrow key	Activates the ambient light sensor, which controls brightness of the display based on light level in the current environment.
<Fn> and up-arrow key	Increases brightness on the integrated display only (not on an external monitor).
<Fn> and down-arrow key	Decreases brightness on the integrated display only (not on an external monitor).

### Power Management

<Fn><Esc>	Activates a power management mode. You can reprogram this keyboard shortcut to activate a different power management mode using the <b>Advanced</b> tab in the <b>Power Options Properties</b> window (see <a href="#">Configuring Power Management Settings</a> ).
<Fn><F1>	Puts the computer into hibernate mode. Dell QuickSet is required (see <a href="#">Dell™ QuickSet</a> ).


## Microsoft® Windows® Logo Key Functions

Windows logo key and <m>	Minimizes all open windows.
Windows logo key and <Shift><m>	Restores all minimized windows. This key combination functions as a toggle to restore minimized windows following the use of the Windows logo key and <m> key combination.
Windows logo key and <e>	Runs Windows Explorer.
Windows logo key and <r>	Opens the <b>Run</b> dialog box.
Windows logo key and <f>	Opens the <b>Search Results</b> dialog box.
Windows logo key and <Ctrl><f>	Opens the <b>Search Results-Computer</b> dialog box (if the computer is connected to a network).
Windows logo key and <Pause>	Opens the <b>System Properties</b> dialog box.

To adjust keyboard operation, such as the character repeat rate, click → **Control Panel** → **Printers and Other Hardware** → **Keyboard**. For information about the Control Panel, see the Windows Help and Support Center (click the **Start** button or the Windows Vista™ Start button  → **Help and Support**).

## Touch Pad

The touch pad detects the pressure and movement of your finger to allow you to move the cursor on the display. Use the touch pad and touch pad buttons as you would use a mouse.

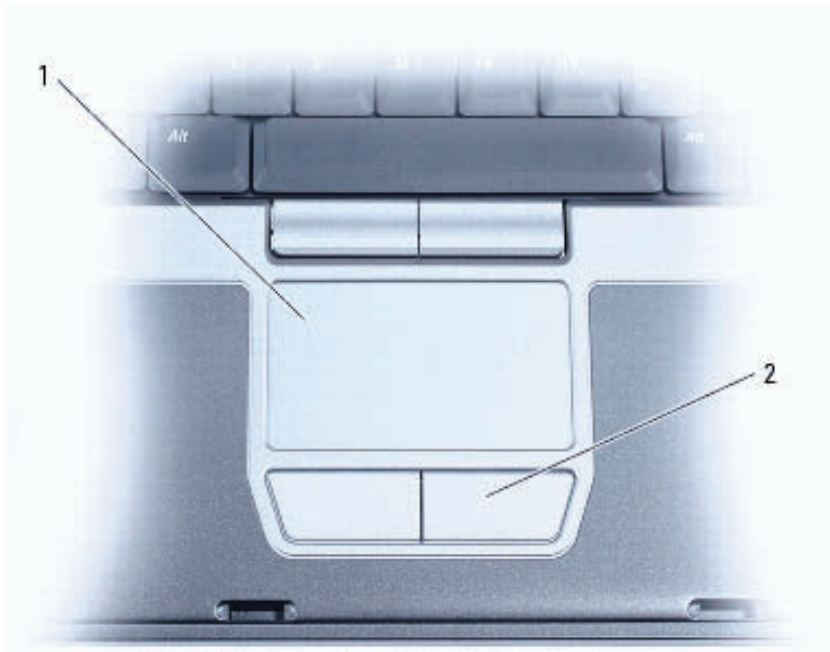

1	touch pad	2	touch pad buttons
---	-----------	---	-------------------



**NOTE:** If you ordered the optional fingerprint reader with your computer, the reader is located between the touch pad buttons.


- To move the cursor, lightly slide your finger over the touch pad.
- To select an object, lightly tap once on the surface of the touch pad or use your thumb to press the left touch-pad button.
- To select and move (or drag) an object, position the cursor on the object and tap twice on the touch pad. On the second tap, leave your finger on the touch pad and move the selected object by sliding your finger over the surface.
- To double-click an object, position the cursor on the object and tap twice on the touch pad or use your thumb to press the left touch-pad button twice.

You can also use the track stick to move the cursor. Press the track stick left, right, up, or down to change the direction of the cursor on the display. Use the track stick and track stick buttons as you would use a mouse.



## Customizing the Touch Pad and Track Stick

You can use the **Mouse Properties** window to disable the touch pad and track stick or adjust their settings.


1. Click **Control Panel** → **Mouse**. For information about the Control Panel, see the Windows Help and Support Center. Click the **Start** button or the Windows Vista™ Start button  → **Help and Support**.
2. In the **Mouse Properties** window:
  - Click **Device Select** to disable the touch pad and track stick.
  - Click **Touch Pad** to adjust touch pad and track stick settings.
3. Click **OK** to save the settings and close the window.

## Changing the Track Stick Cap

You can replace your track stick cap if it wears down from prolonged use or if you prefer a different color. You can purchase additional caps by visiting the Dell website at [www.dell.com](http://www.dell.com).



1. Pull the cap off the track stick.
2. Align the new cap over the square track-stick post and gently press the cap down onto the post.

 **NOTICE:** The track stick can damage the display if it is not properly seated on the post.

3. Test the track stick to ensure that the cap is seated properly.

# Dell™ QuickSet

## Dell™ Latitude™ D830 User's Guide

Dell™ QuickSet provides you with easy access to configure or view the following types of settings:

- Network connectivity
- Power management
- Display
- System information

Depending on what you want to do in Dell™ QuickSet, you can start it by either *clicking*, *double-clicking*, or *right-clicking* the QuickSet icon in the Microsoft® Windows® taskbar. The taskbar is located in the lower-right corner of your screen.

For more information about QuickSet, right-click the QuickSet icon and select **Help**.

[Back to Contents Page](#)

# Securing Your Computer

## Dell™ Latitude™ D830 User's Guide

- [Security Cable Lock](#)
- [Smart Cards](#)
- [Passwords](#)
- [Trusted Platform Module \(TPM\)](#)
- [Security Management Software](#)
- [Computer Tracking Software](#)
- [If Your Computer Is Lost or Stolen](#)



**NOTE:** For information on how to secure your computer while traveling, see [Traveling With Your Computer](#).

---

## Security Cable Lock



**NOTE:** Your computer does not ship with a security cable lock.

A security cable lock is a commercially available antitheft device. To use the lock, attach it to the security cable slot on your Dell™ computer. For more information, see the instructions included with the device.



**NOTICE:** Before you buy an antitheft device, ensure that it will work with the security cable slot on your computer.



## Smart Cards

### About Smart Cards


Smart cards are portable credit-card shaped devices with internal integrated circuits. The top surface of the smart card usually contains an embedded processor under the gold contact pad. The combination of the small size and integrated circuits make smart cards valuable tools for security, data storage, and special programs. Using smart cards can improve system security by combining something a user has (the smart card) with something only the user should know (a PIN) to provide more secure user-authentication than passwords alone.

### Installing a Smart Card

You can install a smart card in the computer while the computer is running. The computer automatically detects the card.

To install a smart card:

1. Hold the card so that the gold contact pad is facing upward and pointing toward the smart card slot.

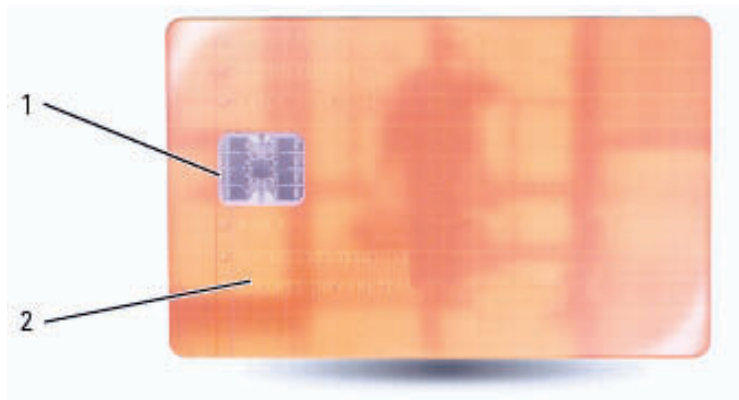


1	gold contact pad	2	smart card (top)
---	------------------	---	------------------

2. Slide the smart card into the smart card slot until the card is completely seated in its connector. The smart card protrudes approximately .5 inch from the slot. The smart card slot is located below the PC Card slot.

If you encounter too much resistance, do not force the card. Check the card orientation and try again.





## Passwords

 **NOTE:** Passwords are disabled when you receive your computer.

A primary (or system) password, an administrator password, and a hard drive password all prevent unauthorized access to your computer in different ways. The following table identifies types and features of passwords available on your computer.

Type of Password	Features
Primary/System	<ul style="list-style-type: none"> <li>Protects the computer from unauthorized access</li> </ul>
Administrator	<ul style="list-style-type: none"> <li>Gives system administrators or service technicians access to computers for repair or reconfiguration</li> <li>Allows you to restrict access to system setup in the same way a primary password restricts access to the computer</li> <li>Can be used instead of the primary password</li> </ul>
Hard drive	<ul style="list-style-type: none"> <li>Helps protect the data on your hard drive or external hard drive (if one is being used) from unauthorized access</li> </ul>

 **NOTE:** Some hard drives do not support hard drive passwords.

 **NOTICE:** Passwords provide a high level of security for data in your computer or hard drive. However, they are not foolproof. If you require more security, obtain and use additional forms of protection, such as smart cards, data encryption programs, or PC Cards with encryption features.

If you forget any of your passwords, contact your system administrator or contact Dell (see [Contacting Dell](#)). For your protection, Dell support staff will ask you for proof of your identity to ensure that only an authorized person can use the computer.



**NOTE:** Dell OpenManage™ Client Instrumentation version 7.3 or later must be installed on the computer for system administrators to assign passwords remotely.

## Using a Primary/System Password

The primary (system) password allows you to protect the computer from unauthorized access.

Access **User Accounts** from the Control Panel to create user accounts and add or change passwords. After assigning a primary password, you must enter it each time you turn on your computer.

If you do not enter a password within 2 minutes, the computer returns to its previous operating state.



**NOTICE:** If you disable the administrator password, the primary password is also disabled.

If you have assigned an administrator password, you can use it instead of the primary password. The computer does not specifically prompt you for the administrator password.

## Using an Administrator Password

The administrator password is designed to give system administrators or service technicians access to computers for repair or reconfiguration. The administrators or technicians can assign identical administrator passwords to groups of computers, allowing you to assign a unique primary password.

To set or change administrator passwords, access **User Accounts** from the Control Panel.

When you set an administrator password, the **Configure Setup** option becomes available in the system setup program. The **Configure Setup** option allows you to restrict access to system setup in the same way that a primary password restricts access to the computer.

The administrator password can be used instead of the primary password. Whenever you are prompted to enter the primary password, you can enter the administrator password.



**NOTICE:** If you disable the administrator password, the primary password is also disabled.



**NOTE:** The administrator password provides access to the computer, but it does not provide access to the hard drive when a hard drive password is assigned.

If you forget the primary password and do not have an administrator password assigned, or if you have both a primary and an administrator password assigned but forget them both, contact your system administrator or contact Dell (see [Contacting Dell](#)).

## Using a Hard Drive Password

The hard drive password helps protect the data on your hard drive from unauthorized access. You can also assign a password for an external hard drive (if one is being used) that can be the same as or different from the password for the primary hard drive.

After assigning a hard drive password, you must enter it each time you turn on the computer and each time you restore the computer to normal operation from standby mode.

If the hard drive password is enabled, you must enter it each time you turn on the computer: A message appears asking for the hard drive password.

To continue, enter your password (with no more than eight characters) and press <Enter>.

If you do not enter a password within 2 minutes, the computer returns to its previous operating state.

If you enter the wrong password, a message tells you that the password is invalid. Press <Enter> to try again.

If you do not enter the correct password in three attempts, the computer tries to start from another bootable device if the **Boot First Device** option in the system setup program is set to allow start-up from another device. If the **Boot First Device** option is not set to allow the computer to start from another device, the computer returns to the operating state it was in when you turned it on.

If the hard drive password, the external hard-drive password, and the primary password are the same, the computer prompts you only for the primary password. If the hard drive password is different from the primary password, the computer prompts you for both. Two different passwords provide greater security.



**NOTE:** The administrator password provides access to the computer, but it does not provide access to the hard drive when a hard drive password is assigned.

If the administrative password is installed when the user creates the primary hard disk password, then the administrative password can be used in place of the primary hard disk password. This feature allows an administrator to unlock password-protected hard disks as long as an administrative password is installed before deploying the computers.

There are two behaviors associated with this feature that help to preserve the integrity of the hard disk's password:

- The administrative password will only work to unlock a hard disk on the computer on which the hard disk password was created. This means a password-protected hard disk can not be removed from one computer, placed in a second computer and be unlocked using the administrative password on the second computer.
- Installing an administrative password on a computer after the hard disk password has been created will not enable unlocking of the hard disk using the administrative password.

---

## Trusted Platform Module (TPM)



**NOTE:** The TPM feature supports encryption only if the operating system supports TPM. For more information, see the TPM software documentation and the help files that came with the software.

TPM is a hardware-based security feature that can be used to create and manage computer-generated encryption keys. When combined with security software, the TPM enhances existing network and computer security by enabling features such as file protection capabilities and protected e-mail. The TPM feature is enabled through a system setup option.



**NOTICE:** To secure your TPM data and encryption keys, follow the backup procedures documented in the Archive and Restore section of the EMBASSY Security Center help file. In the event of these backups being incomplete, lost, or damaged, Dell will be unable to assist in the recovery of encrypted data.

## Enabling the TPM Feature

1. Enable the TPM software:
  - a. Restart the computer and press <F2> during the Power On Self Test to enter the system setup program.
  - b. Select **Security**→**TPM Security** and press <Enter>.
  - c. Under **TPM Security**, select **On**.
  - d. Press <Esc> to exit the setup program.
  - e. If prompted, click **Save/Exit**.
2. Activate the TPM setup program:
  - a. Restart the computer and press <F2> during the Power On Self Test to enter the system setup program.
  - b. Select **Security**→**TPM Activation** and press <Enter>.
  - c. Under **TPM Activation**, select **Activate** and press <Enter>.



**NOTE:** You only need to activate TPM once.

- d. Once the process is complete, the computer either restarts automatically or prompts you to restart your computer.

---

## Security Management Software

The security management software is designed to utilize four different features to help you secure your computer:

- Log-in management
- Pre-boot authentication (using a fingerprint reader, smart card, or password)
- Encryption
- Private information management

For information about how to use the software and the different security features, see the *Getting Started Guide* for the software:


Click **Start**→**All Programs**→**Wave Systems Corp**→**Getting Started Guide**.


---

## Computer Tracking Software

Computer tracking software may enable you to locate your computer if it is lost or stolen. The software is optional and may be purchased when you order your Dell™ computer, or you can contact your Dell sales representative for information about this security feature.




 **NOTE:** Computer tracking software may not be available in certain countries.

 **NOTE:** If you have computer tracking software and your computer is lost or stolen, you must contact the company that provides the tracking service to report the missing computer.

---

## If Your Computer Is Lost or Stolen

- Call a law enforcement agency to report the lost or stolen computer. Include the Service Tag in your description of the computer. Ask that a case number be assigned and write down the number, along with the name, address, and phone number of the law enforcement agency. If possible, obtain the name of the investigating officer.

 **NOTE:** If you know where the computer was lost or stolen, call a law enforcement agency in that area. If you do not know, call a law enforcement agency where you live.

- If the computer belongs to a company, notify the security office of the company.
- Contact Dell customer service to report the missing computer. Provide the computer Service Tag, the case number, and the name, address, and phone number of the law enforcement agency to which you reported the missing computer. If possible, give the name of the investigating officer.

The Dell customer service representative will log your report under the computer Service Tag and record the computer as missing or stolen. If someone calls Dell for technical assistance and gives your Service Tag, the computer is identified automatically as missing or stolen. The representative will attempt to get the phone number and address of the caller. Dell will then contact the law enforcement agency to which you reported the missing computer.

---

[Back to Contents Page](#)

[Back to Contents Page](#)

# Traveling With Your Computer

## Dell™ Latitude™ D830 User's Guide


- [Identifying Your Computer](#)
  - [Packing the Computer](#)
  - [Travel Tips](#)
- 

## Identifying Your Computer


- Attach a name tag or business card to the computer.
  - Write down your Service Tag and store it in a safe place away from the computer or carrying case. Use the Service Tag if you need to report a loss or theft to law enforcement officials and to Dell.
  - Create a file on the Microsoft® Windows® desktop called **if\_found**. Place information such as your name, address, and phone number in this file.
  - Contact your credit card company and ask if it offers coded identification tags.
- 

## Packing the Computer

- Remove any external devices attached to the computer and store them in a safe place. Remove any cables attached to installed PC Cards, and remove any extended PC Cards (see [Removing a Card or Blank](#)).
- To make the computer as light as possible, replace any devices installed in the module bay with the Dell TravelLite™ module.
- Fully charge the main battery and any spare batteries that you plan to carry with you.
- Shut down the computer.
- Disconnect the AC adapter.

 **NOTICE:** When the display is closed, extraneous items on the keyboard or palm rest could damage the display.


- Remove any extraneous items, such as paper clips, pens, and paper, from the keyboard and palm rest and close the display.
- Use the optional Dell™ carrying case to pack the computer and its accessories together safely.
- Avoid packing the computer with items such as shaving cream, colognes, perfumes, or food.


 **NOTICE:** If the computer has been exposed to extreme temperatures, allow it to acclimate to room temperature for 1 hour before turning it on.

- Protect the computer, the batteries, and the hard drive from hazards such as extreme temperatures and overexposure to sunlight, dirt, dust, or liquids.
- Pack the computer so that it does not slide around in the trunk of your car or in an overhead storage compartment.

---

## Travel Tips

 **NOTICE:** Do not move the computer while using the optical drive to prevent loss of data.

 **NOTICE:** Do not check the computer as baggage.

- Consider changing your power management options to maximize battery operating time (see [Configuring Power Management Settings](#)).
- If you are traveling internationally, carry proof of ownership—or of your right to use the computer if it is company-owned—to speed your passage through customs. Investigate the customs regulations of the countries you plan to visit, and consider acquiring an international carnet (also known as a *merchandise passport*) from your government.
- Find out what type of electrical outlets are used in the countries you will visit, and have appropriate power adapters.
- Check with your credit card company for information about the kinds of emergency travel assistance it offers to users of portable computers.

## Traveling by Air



**NOTICE:** Do not walk the computer through a metal detector. Send the computer through an X-ray machine or have it hand-inspected.

- Ensure that you have a charged battery available in case you are asked to turn on the computer.
- Prior to entering the airplane, verify that using a computer is permitted. Some airlines forbid the use of electronic devices during flight. All airlines forbid the use of electronic devices during takeoff and landing.

---

[Back to Contents Page](#)

[Back to Contents Page](#)

# Setting Up and Using Networks

## Dell™ Latitude™ D830 User's Guide

- [Connecting a Network or Broadband Modem Cable](#)
  - [Setting Up a Network in Microsoft Windows XP](#)
  - [Setting Up a Network in Microsoft Windows Vista](#)
  - [Wireless Local Area Network \(WLAN\)](#)
  - [Mobile Broadband or Wireless Wide Area Network \(WWAN\)](#)
  - [Dell™ Wi-Fi Catcher™ Network Locator](#)
  - [Internet Connection Firewall](#)
- 

## Connecting a Network or Broadband Modem Cable

Before you connect your computer to a network, the computer must have a network adapter installed and a network cable connected to it.

1. Connect the network cable to the network adapter connector on the back of your computer.




**NOTE:** Insert the cable connector until it clicks into place, and then gently pull the cable to ensure that it is securely attached.

2. Connect the other end of the network cable to a network connection device or a network wall connector.



**NOTE:** Do not use a network cable with a telephone wall connector.

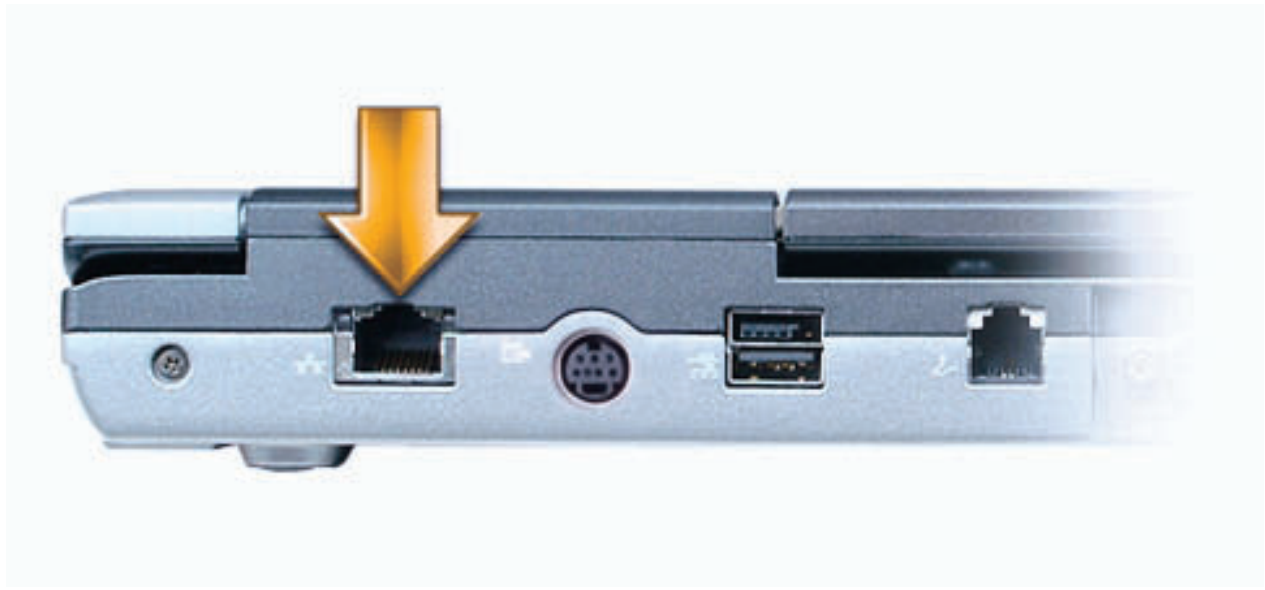

## Setting Up a Network in Microsoft Windows XP

1. Click **Start**→ **All Programs**→ **Accessories**→ **Communications**→ **Network Setup Wizard**→ **Next**→ **Checklist for creating a network**.




**NOTE:** Selecting the connection method labeled **This computer connects directly to the Internet** enables the integrated firewall provided with Windows XP Service Pack 2 (SP2).

2. Complete the checklist.
3. Return to the Network Setup Wizard and follow the instructions in the wizard.

---

## Setting Up a Network in Microsoft Windows Vista

1. Click the Windows Vista Start button  → **Connect To**→ **Set up a connection or network**.
2. Select an option under **Choose a connection option**.
3. Click **Next**, and then follow the instructions in the wizard.

# Wireless Local Area Network (WLAN)

A WLAN is a series of interconnected computers that communicate with each other over the air waves rather than through a network cable connected to each computer. In a WLAN, a radio communications device called an access point or wireless router connects network computers and provides Internet, or network, access. The access point or wireless router and the wireless network card in the computer communicate by broadcasting data from their antennas over the air waves.

## What You Need to Establish a WLAN Connection

Before you can set up a WLAN, you need:

- High-speed (broadband) Internet access (such as cable or DSL)
- A broadband modem that is connected and working
- A wireless router or access point
- A wireless network card for each computer that you want to connect to your WLAN
- A network cable with the network (RJ-45) connector

## Checking Your Wireless Network Card

Depending on what you selected when you purchased your computer, the computer has a variety of configurations. To confirm that your computer has a wireless network card and to determine the type of card, use one of the following:

- The **Start** button and the **Connect To** option
- Your original computer invoice

### Start Button and Connect To Option

*In Microsoft Windows XP*, click **Start** → **Connect To** → **Show all connections**.

*In Microsoft Windows Vista*, click  → **Connect To** → **View network computers and devices**.

If Wireless Network Connection does not appear under LAN or High-Speed Internet, you may not have a wireless network card.

If Wireless Network Connection appears, you have a wireless network card. To view detailed information about the wireless network card:

1. Right-click **Wireless Network Connection**.
2. Click **Properties**.

The **Wireless Network Connection Properties** window appears. The wireless network card's name and model number are listed on the **General** tab.




**NOTE:** If your computer is set to the Classic Start menu option, you can view network connections by clicking Start→ Settings→ Network Connections. If Wireless Network Connection does not appear, you may not have a wireless network card.

## The Order Confirmation for Your Computer

The order confirmation that you received when you ordered your computer lists the hardware and software that shipped with your computer.

## Setting Up a New WLAN Using a Wireless Router and a Broadband Modem

1. Contact your Internet service provider (ISP) to obtain specific information about the connection requirements for your broadband modem.
2. Ensure that you have wired Internet access through your broadband modem before you attempt to set up a wireless Internet connection (see [Connecting a Network or Broadband Modem Cable](#)).
3. Install any software required for your wireless router. Your wireless router may have been shipped with an installation CD. Installation CDs usually contain installation and troubleshooting information. Install the required software according to the instructions provided by the router manufacturer.
4. Shut down your computer and any other wireless-enabled computers in the vicinity through the **Start** or  menu.
5. Disconnect your broadband modem power cable from the electrical outlet.
6. Disconnect the network cable from the computer and the modem.
7. Disconnect the AC adapter cable from your wireless router to ensure that there is no power connected to the router.





**NOTE:** Wait for a minimum of 5 minutes after disconnecting your broadband modem before you continue with the network setup.

8. Insert a network cable into the network (RJ-45) connector on the unpowered broadband modem.
9. Connect the other end of the network cable into the Internet network (RJ-45) connector on the unpowered wireless router.
10. Ensure that no network or USB cables, other than the network cable connecting the modem and the wireless router, are connected to the broadband modem.



**NOTE:** Restart your wireless equipment in the order described below to prevent a potential connection failure.

11. Turn on *only* your broadband modem and wait for at least 2 minutes for the broadband modem to stabilize. After 2 minutes, proceed to [step 12](#).
12. Turn on your wireless router and wait for at least 2 minutes for the wireless router to stabilize. After 2 minutes, proceed to the [step 13](#).
13. Start your computer and wait until the boot process completes.
14. See the documentation that came with your wireless router to do the following in order to set up the wireless router:
  - Establish communication between your computer and your wireless router.
  - Configure your wireless router to communicate with your broadband router.
  - Find out your wireless router's broadcast name. The technical term for the name of your router's broadcast name is Service Set Identifier (SSID) or network name.
15. If necessary, configure your wireless network card to connect to the wireless network (see [Connecting to a WLAN](#)).

## Connecting to a WLAN



**NOTE:** Before you connect to a WLAN, ensure that you have followed the instructions in [Wireless Local Area Network \(WLAN\)](#).



**NOTE:** The following networking instructions do not apply to internal cards with Bluetooth® wireless technology or cellular products.

This section provides general procedures for connecting to a network using wireless technology. Specific network names and configuration details vary.

See [Wireless Local Area Network \(WLAN\)](#) for more information about how to prepare for connecting your computer to a WLAN.

Your wireless network card requires specific software and drivers for connecting to a network. The software is already installed.



**NOTE:** If the software is removed or corrupted, follow the instructions in the user documentation for your wireless network card. Verify the type of wireless network card installed in your computer and then search for that name on the Dell Support website at [support.dell.com](http://support.dell.com). For information on the type of wireless network card that is installed in your computer, see [Checking Your Wireless Network Card](#).

## Determining the Wireless Network Device Manager

Depending on the software installed on your computer, different wireless configuration utilities may manage your network devices:

- Your wireless network card's client utility
- The Windows XP or Windows Vista operating system


To determine which wireless configuration utility is managing your wireless network card in Windows XP:

1. Click **Start** → **Settings** → **Control Panel** → **Network Connections**.
2. Right-click the **Wireless Network Connection** icon, and then click **View Available Wireless Networks**.


If the **Choose a wireless network** window states **Windows cannot configure this connection**, the wireless network card's client utility is managing the wireless network card.

If the **Choose a wireless network** window states **Click an item in the list below to connect to a wireless network in range or to get more information**, the Windows XP operating system is managing the wireless network card.

To determine which wireless configuration utility is managing your wireless network card in Windows Vista:

1. Click the Windows Vista Start button  → **Connect To** → **Manage wireless networks**.
2. Double-click a profile to open the wireless network properties screen.

For specific information about the wireless configuration utility installed on your computer, see your wireless network documentation in the Windows Help and

Support Center. Click the **Start** button or the Windows Vista™ Start button  → **Help and Support**.

## Completing the Connection to the WLAN

When you turn on your computer and a network (for which your computer is not configured) is detected in the area, a pop-up appears near the network icon in the notification area (in the lower-right corner of the Windows desktop).

Follow the instructions provided in any utility prompts that appear on your screen.

Once you have configured your computer for the wireless network that you selected, another pop-up notifies you that your computer is connected to that network.

Thereafter, whenever you log on to your computer within the range of the wireless network that you selected, the same pop-up notifies you of the wireless network connection.



**NOTE:** If you select a secure network, you must enter a WEP or WPA key when prompted. Network security settings are unique to your network. Dell cannot provide this information.



**NOTE:** Your computer can take up to 1 minute to connect to the network.

## Monitoring the Status of Wireless Network Connections Through Dell™ QuickSet

The wireless activity indicator provides you with an easy way to monitor the status of your computer's wireless devices. To turn the wireless activity indicator on or off, click the QuickSet icon in the taskbar and select **Hotkey Popups**. If **Wireless Activity Indicator Off** is not checked, the indicator is on. If **Wireless Activity Indicator Off** is checked, the indicator is off.

The wireless activity indicator displays whether your computer's integrated wireless devices are enabled or disabled. When you turn the wireless networking function on or off, the wireless activity indicator changes to display the status.

For more information about the Dell QuickSet wireless activity indicator, right-click the QuickSet icon in the taskbar and select **Help** (see [Dell™ QuickSet](#)).

## Mobile Broadband or Wireless Wide Area Network (WWAN)

Much like a WLAN, a Mobile Broadband network (also known as a WWAN) is a series of interconnected computers that communicate with each other through wireless technology. However, a Mobile Broadband network uses cellular technology and therefore provides Internet access in the same varied locations from which cellular telephone service is available. Your computer can maintain the Mobile Broadband network connection regardless of its physical location, as long as the computer remains in the service area of your cellular service provider.



**NOTE:** Even if you are able to make a call from your cellular phone in a specific geographical location, that location may not necessarily be within a cellular-data coverage zone.

## What You Need to Establish a Mobile Broadband Network Connection



**NOTE:** Depending on your computer, you can use either a Mobile Broadband ExpressCard or Mini-Card, but not both, to establish a Mobile Broadband network connection.

To set up a Mobile Broadband network connection, you need:

- A Mobile Broadband ExpressCard or Mini-Card (depending on your computer's configuration). For instructions on using ExpressCards, see [Using Cards](#).
- An activated Mobile Broadband ExpressCard or activated Subscriber Identity Module (SIM) for your service provider
- The Dell Mobile Broadband Card Utility (already installed on your computer if you purchased the card when you purchased your computer, or on the CD that accompanied your card if purchased separately from your computer)

If the utility is corrupted or deleted from your computer, see the Dell Mobile Broadband Card Utility user's guide for instructions. The user's guide is available through the Windows Help and Support Center (or on the CD that accompanied your card if you purchased it separately from your computer). To access the Help and Support Center, see [Windows Help and Support Center](#).

## Checking Your Mobile Broadband Card

Depending on what you selected when you purchased your computer, the computer has a variety of configurations. To determine your computer configuration, see one of the following:

- Your order confirmation
- Microsoft Windows Help and Support Center

To check your Mobile Broadband card in the Windows Help and Support Center:

1. Click **Start**→ **Help and Support**→ **Use Tools to view your computer information and diagnose problems**.
2. Under **Tools**, click **My Computer Information**→ **Find information about the hardware installed on this computer**.

On the **My Computer Information - Hardware** screen, you can view the type of Mobile Broadband card installed in your computer as well as other hardware components.




**NOTE:** The Mobile Broadband card is listed under Modems.

## Connecting to a Mobile Broadband Network




**NOTE:** These instructions only apply to Mobile Broadband ExpressCards or Mini-Cards. They do not apply to internal cards with wireless technology.



**NOTE:** Before you connect to the Internet, you must activate Mobile Broadband service through your cellular service provider. For instructions and for additional information about using the Dell Mobile Broadband Card Utility, see the user's guide available through the Windows Help and Support Center. To access the Help and Support Center, click Start or  → Help and Support. The user's guide is also available on the Dell Support website at [support.dell.com](http://support.dell.com) and on the CD included with your Mobile Broadband card if you purchased the card separately from your computer.

Use the Dell Mobile Broadband Card Utility to establish and manage a Mobile Broadband network connection to the Internet:

1. Click the Dell Mobile Broadband Card Utility icon,  , in the Windows taskbar, to run the utility.
2. Click **Connect**.



**NOTE:** The **Connect** button changes to the **Disconnect** button.

3. Follow the instructions on the screen to manage the network connection with the utility.

Or

1. Click **Start**→**All Programs**→**Dell Wireless**.
2. Click **Dell Wireless Broadband** and follow the instructions on the screen.

## Enabling/Disabling the Dell Mobile Broadband Network Card



**NOTE:** If you are unable to connect to a Mobile Broadband network, ensure that you have all the components for establishing a Mobile Broadband connection (see [What You Need to Establish a Mobile Broadband Network Connection](#)), and then verify that your Mobile Broadband card is enabled by verifying the setting of the wireless switch.

You can turn your Mobile Broadband card on and off using the wireless switch on your computer.

You can turn your computer's wireless devices on and off with the wireless switch on the left side of the computer (see [Left Side View](#)).

If the switch is in the "on" position, move the switch to the "off" position to disable the switch and the Mobile Broadband card. If the switch is in the "off" position, move the switch to the "on" position to enable the switch and the Dell Mobile Broadband card. For information about the wireless switch positions, see [wireless switch](#).

To monitor the status of your wireless device, see [Monitoring the Status of Wireless Network Connections Through Dell™ QuickSet](#).

# Managing Your Network Settings Through the Dell QuickSet Location Profiler

The QuickSet Location Profiler helps you manage network settings that

correspond to your computer's physical location. It includes two categories of profile settings:

- **Location Profile Settings**
- **General Mobility Settings**

You can use **Location Profile Settings** to create profiles for accessing the the Internet with your computer in your office, home, or other public places with Internet services. **General Mobility Settings allows you to change the way** network connections are handled. The profiles consist of different network settings and equipment that you need when using your computer in different locations.

For information about Dell QuickSet, see [Dell™ QuickSet](#).

## Dell™ Wi-Fi Catcher™ Network Locator

The wireless switch on your Dell computer uses the Dell Wi-Fi Catcher™ Network Locator to scan specifically for WiFi wireless local area networks (LAN) in your vicinity.



**NOTE:** For more information about the wireless switch, see [wireless switch](#).

To scan for WiFi wireless LAN, slide and hold the switch in the "momentary" position for a few seconds. The Wi-Fi Catcher Network Locator functions regardless of whether your computer is turned on or off, in hibernate mode, or in standby mode, as long as the switch is configured through QuickSet or the BIOS (system setup program) to control WiFi network connections.


Because the Wi-Fi Catcher Network Locator is disabled and not configured for use when your computer is shipped to you, you must first use Dell QuickSet to enable and configure the switch to control WiFi network connections.

For more information on the Wi-Fi Catcher Network Locator and to enable the feature through QuickSet, see the *Dell QuickSet Help*. To access the *Help* file, right-click the Quickset icon in the taskbar.

## Internet Connection Firewall

The Internet Connection Firewall provides basic protection from unauthorized access to the computer while the computer is connected to the Internet. The firewall is automatically enabled when you run the Network Setup Wizard. When the firewall is enabled for a network connection, the firewall icon appears with a red background in the **Network Connections** section of the Control Panel.

Note that enabling the Internet Connection Firewall does not reduce the need for virus-checking software.

For more information, see the Help and Support Center for the Microsoft® Windows® XP operating system. To access the Help and Support Center, click the **Start** button or the Windows Vista™ Start button  → **Help and Support**.

[Back to Contents Page](#)



[Back to Contents Page](#)

# Adding and Replacing Parts

## Dell™ Latitude™ D830 User's Guide

- [Before You Begin](#)
  - [Subscriber Identity Module \(SIM\) Card](#)
  - [Hard Drive](#)
  - [Wireless Cards](#)
  - [Media Bay](#)
  - [FCM \(Flash Cache Module\)](#)
  - [Hinge Cover](#)
  - [Internal Card With Bluetooth® Wireless Technology](#)
  - [Keyboard](#)
  - [Coin-Cell Battery](#)
  - [Memory](#)
- 

## Before You Begin

This chapter provides procedures for removing and installing the components in your computer. Unless otherwise noted, each procedure assumes that the following conditions exist:

- You have performed the steps in [Turning Off Your Computer](#) and [Before Working Inside Your Computer](#).
- You have read the safety information in your Dell™ *Product Information Guide*.



## Recommended Tools

The procedures in this document may require the following tools:

- Small flat-blade screwdriver
- Phillips screwdriver
- Small plastic scribe
- Flash BIOS update program (see the Dell Support website at [support.dell.com](http://support.dell.com))

## Turning Off Your Computer



**NOTICE:** To avoid losing data, save and close any open files and exit any open programs before you turn off your computer.

1. Shut down the operating system:
  - a. Save and close any open files, exit any open programs, and click **Start**→ **Shut Down**.
  - b. Select **Shut down**→ **OK**.

The computer turns off after the operating system shutdown process finishes.

2. Ensure that the computer and any attached devices are turned off. If your computer and attached devices did not automatically turn off when you shut down your operating system, turn them off now by pressing and holding the power button for 4 seconds.

## Before Working Inside Your Computer

Use the following safety guidelines to help protect your computer from potential damage and to help ensure your own personal safety.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.



**CAUTION:** Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket. Hold a component such as a processor by its edges, not by its pins.



**NOTICE:** Only a certified service technician should perform repairs on your computer. Damage due to servicing that is not authorized by Dell is not covered by your warranty.



**NOTICE:** When you disconnect a cable, pull on its connector or on its pull-tab, not on the cable itself. Some cables have a connector with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before you disconnect the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before you connect a cable, ensure that both connectors are correctly oriented and aligned.



**NOTICE:** To avoid damaging the computer, perform the following steps before you begin working inside the computer.

1. Ensure that the work surface is flat and clean to prevent the computer cover from being scratched.
2. Turn off your computer (see [Turning Off Your Computer](#)).



**NOTICE:** To disconnect a network cable, first unplug the cable from your computer and then unplug it from the network wall connector.

3. Disconnect any telephone or network cables from the computer.
4. Disconnect your computer and all attached devices from their electrical outlets.



**NOTICE:** To avoid damaging the system board, you must remove the main battery before you service the computer.

5. Remove the battery (see [Replacing the Battery](#)).
6. Press the power button to ground the system board.
7. Remove any installed ExpressCards or PC Cards (see [Removing a Card or Blank](#)).

---

## Hard Drive



**CAUTION:** If you remove the hard drive from the computer when the drive is hot, do not touch the metal housing of the hard drive.

**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.


**NOTICE:** To prevent data loss, turn off your computer before removing the hard drive. Do not remove the hard drive while the computer is turned on, in standby mode, or in hibernate mode.

**NOTICE:** Hard drives are extremely fragile; even a slight bump can damage the drive.

**NOTE:** Dell does not guarantee compatibility or provide support for hard drives from sources other than Dell.

**NOTE:** If you are installing a hard drive from a source other than Dell, you need to install an operating system, drivers, and utilities on the new hard drive.

1. Follow the procedures in [Before You Begin](#).
2. Turn the computer upside-down, and remove the two screws that secure the hard drive carrier to the chassis.

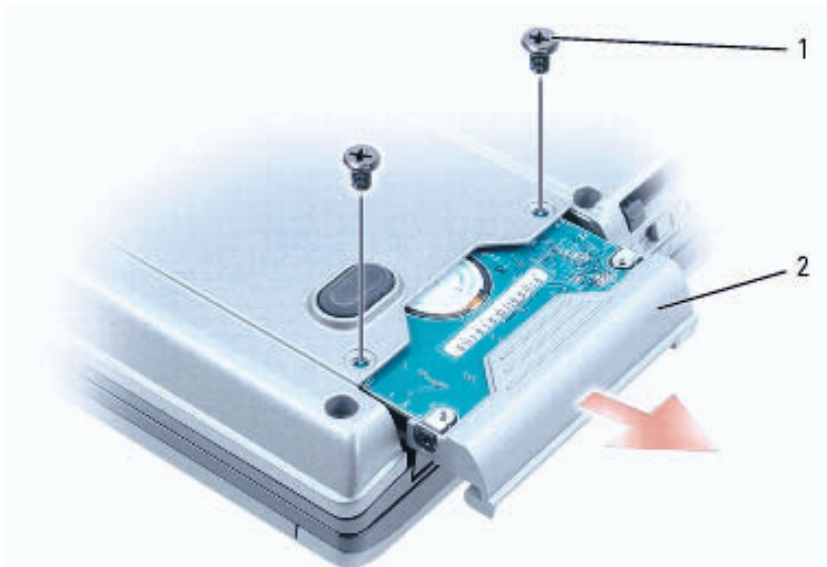

1	screws (2)	2	hard drive
---	------------	---	------------

**NOTICE:** When the hard drive is not in the computer, store it in protective antistatic packaging. See "Protecting Against Electrostatic Discharge" in the Product Information Guide.

3. Slide the hard drive carrier out of the computer.
4. Remove the new drive from its packaging.

Save the original packaging for storing or shipping the hard drive.


**NOTICE:** Use firm and even pressure to slide the drive into place. If you use excessive force, you may damage the connector.

5. Slide the new hard drive into the bay and into the connector until it is fully seated.
6. Replace the screws.

7. Install the operating system for your computer (see [Restoring Your Operating System](#)).
8. Install the drivers and utilities for your computer (see [Reinstalling Drivers and Utilities](#)).

## Returning a Hard Drive to Dell

Return your old hard drive to Dell in its original or comparable foam packaging. Otherwise, the hard drive may be damaged in transit.

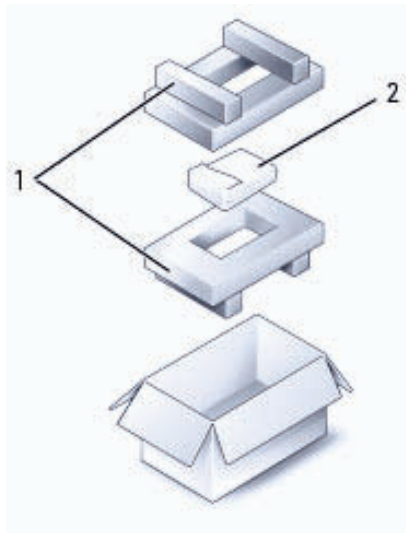

1	foam packaging	2	hard drive
---	----------------	---	------------

## Media Bay




**NOTE:** If the device security screw is not present, you can remove and install devices while the computer is running and connected to a docking device (docked).

## Removing the Device Security Screw


If present, you must remove the device security screw before you remove the device:


1. Save and close any open files, exit any open programs, and shut down the computer.
2. If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.
3. Close the display and turn the computer upside-down.
4. Use a #1 Phillips screwdriver to remove the device security screw from the bottom of the computer.

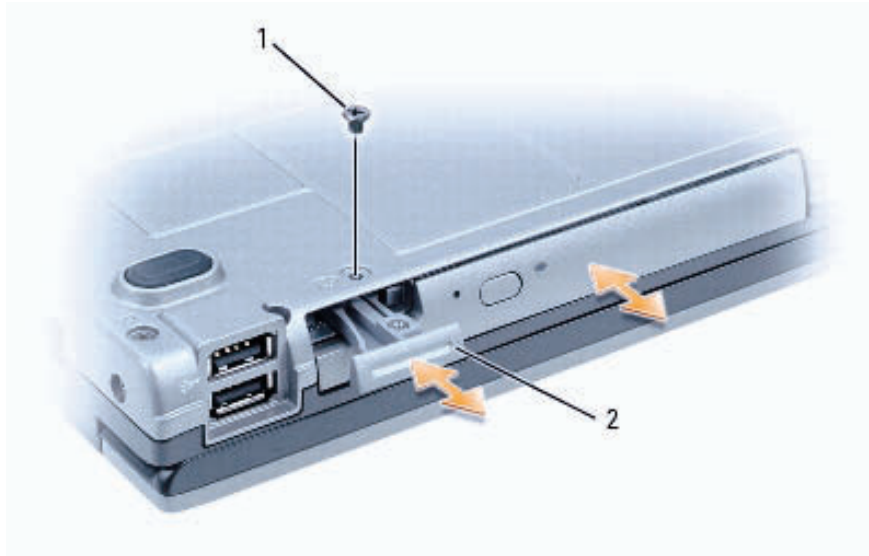


1	device security screw	2	device latch release
---	-----------------------	---	----------------------

## Removing and Installing Media Bay Devices

 **NOTICE:** To prevent damage to devices, store them in a safe, dry place when they are not installed in the computer. Avoid pressing down on them or placing heavy objects on top of them.

 **NOTE:** If the device security screw is not installed, you can remove and install devices while the computer is running and connected to a docking device (docked).

1. If present, remove the device security screw from the bottom of the computer (see [Removing the Device Security Screw](#)).
2. If the computer is running, double-click the **Safely Remove Hardware** icon on the taskbar, click the device you want to eject, and click **Stop**.
3. Press the device latch release.
4. Pull the device out of the media bay.

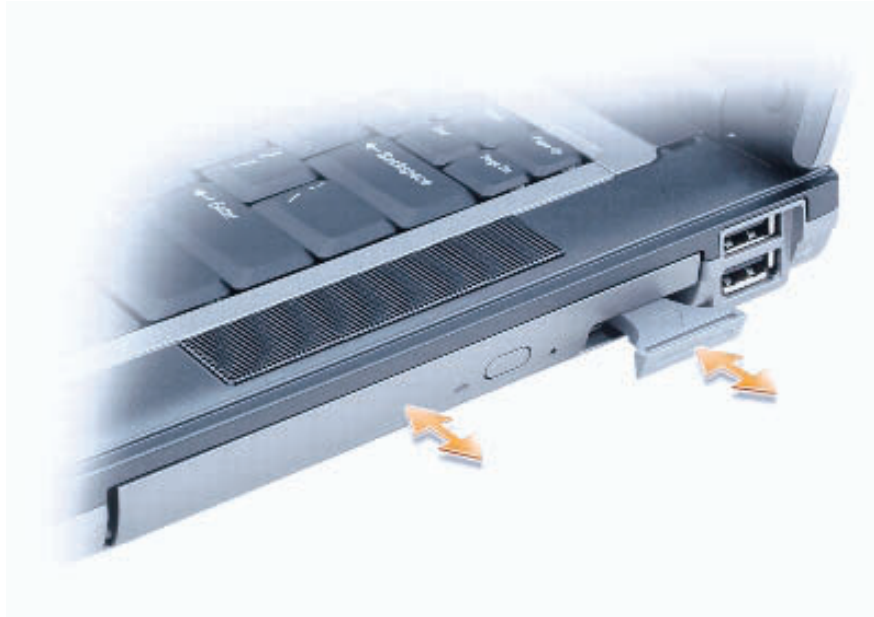



5. Push the new device into the bay until it clicks.

---


## Hinge Cover

 **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

 **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on the back of the computer).

 **NOTICE:** The hinge cover is fragile and can be damaged if extreme force is used. Be careful when removing the hinge cover.

1. Follow the procedures in [Before You Begin](#).
2. Turn the computer top-side up, and then open the display all the way (180 degrees) so that it rests on your work surface.

 **NOTICE:** To avoid damaging the hinge cover, do not lift the cover on both sides simultaneously.

3. Insert a scribe in the indent to carefully pry up the hinge cover on the right side.



1	hinge cover	2	indent
---	-------------	---	--------

4. Ease the hinge cover up, moving from right to left, and remove it.
5. To replace the hinge cover, insert the left edge of the cover into the hinge cover slot, and press from left to right until the cover snaps into place.

## Keyboard

**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

**NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on the back of the computer).


To remove the keyboard:

1. Follow the procedures in [Before You Begin](#).
2. Remove the hinge cover (see [Hinge Cover](#)).
3. Remove the three screws at the top of the keyboard.

**NOTICE:** The keycaps on the keyboard are fragile, easily dislodged, and time-consuming to replace. Be careful when removing and handling the keyboard.

4. Rotate the keyboard forward and lay it on the palm rest to allow access to the keyboard

5. Pull up on the pull-tab to disconnect the keyboard cable connector from the keyboard connector on the system board.

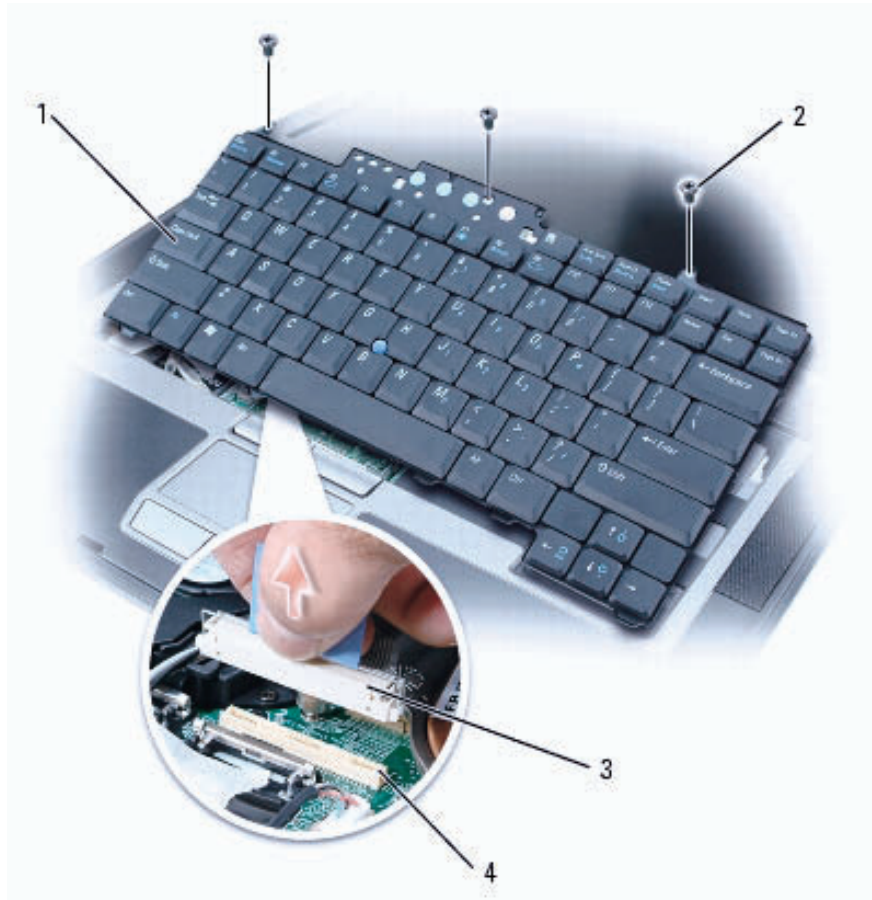

1	keyboard	2	keyboard screws	3	cable connector
4	keyboard connector				

**NOTICE:** To avoid scratching the palm rest when replacing the keyboard, hook the tabs along the front edge of the keyboard into the palm rest, and then secure the keyboard in place.

To replace the keyboard:

1. Connect the keyboard connector to the system board.
2. Place the tabs along the front edge of the keyboard into the palm rest and lay the keyboard down on the palmrest.
3. Replace the three screws at the top of the keyboard.
4. Replace the hinge cover.



## Memory

You can increase your computer memory by installing memory modules on the system board. See [Specifications](#) for information on the memory supported by your computer. Install only memory modules that are intended for your computer.



**NOTE:** Memory modules purchased from Dell are covered under your computer warranty.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the **Product Information Guide**.



**NOTICE:** To avoid damaging the system board, you must remove the main battery before you begin working inside the computer.

The computer has two memory slots, DIMM A and DIMM B. DIMM A is located on top of the computer under the keyboard, and DIMM B is located on the bottom of the computer under the memory module cover. DIMM A holds the basic memory module as configured from the factory. If you did not order additional memory, DIMM B is empty. Generally, if you add memory, you use DIMM B. If you are upgrading memory, you may need to install memory in DIMM A and DIMM B, depending on the extent of the upgrade.

To install a memory module in the DIMM A connector:

1. Follow the procedures in [Before You Begin](#).
2. Remove the hinge cover (see [Hinge Cover](#)).
3. Remove the keyboard (see [Keyboard](#)).
4. Ground yourself by touching one of the metal connectors on the back of the computer.




**NOTICE:** If you leave the area, ground yourself again when you return to the computer.

5. If you are replacing a memory module, remove the existing module:





**NOTICE:** To prevent damage to the memory module connector, do not use tools to spread the memory-module securing clips.

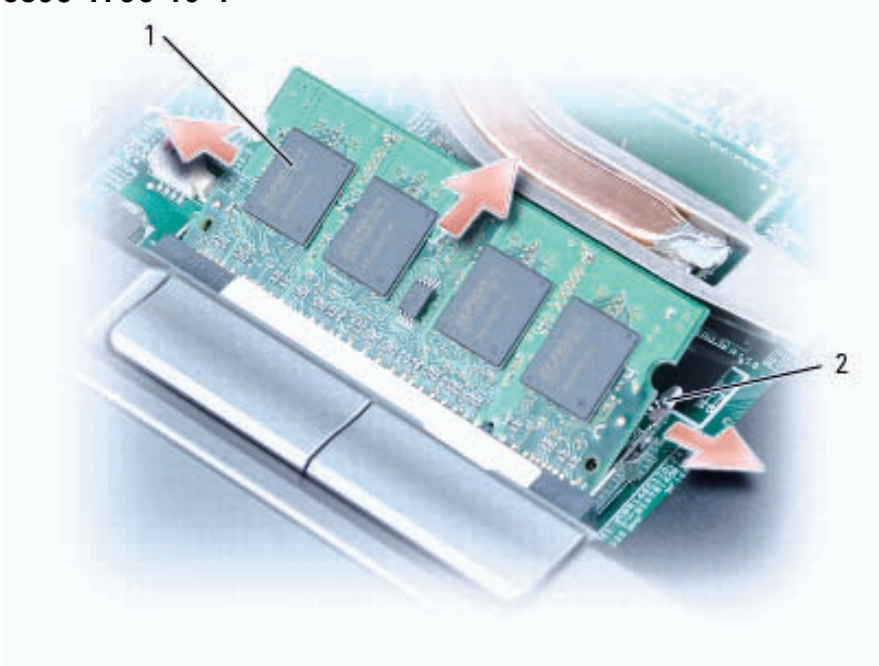- a. Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
- b. Remove the module from the connector.




1	memory module	2	securing clips (2)
---	---------------	---	--------------------

 **NOTICE:** Insert memory modules at a 45-degree angle to avoid damaging the connector.

 **NOTE:** If the memory module is not installed properly, the computer may not boot properly. No error message indicates this failure.


6. Ground yourself and install the new memory module:
  - a. Align the notch in the module edge connector with the tab in the connector slot.
  - b. Slide the module firmly into the slot at a 45-degree angle, and rotate the module down until it clicks into place. If you do not feel the click, remove the module and reinstall it.
7. Replace the keyboard (see [Keyboard](#)).
8. Replace the hinge cover (see [Hinge Cover](#)).
9. Insert the battery into the battery bay, or connect the AC adapter to your computer and an electrical outlet.
10. Turn on the computer.

As the computer boots, it detects the additional memory and automatically updates the system configuration information.

To confirm the amount of memory installed in the computer, click **Start** or  → **Help and Support** → **Computer Information**.

To install a memory module in the DIMM B connector:


1. Follow the procedures in [Before You Begin](#).
2. Turn the computer upside-down, loosen the captive screw on the memory module cover, and then remove the cover.

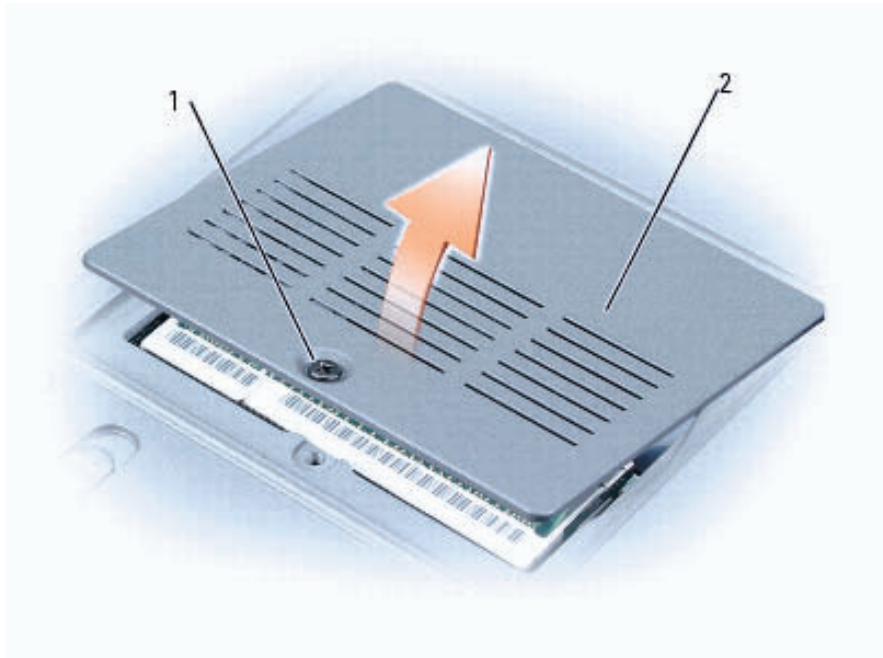


1	captive screw	2	memory module cover
---	---------------	---	---------------------


**NOTICE:** To prevent damage to the memory module connector, do not use tools to spread the memory-module securing clips.

3. If you are replacing a memory module, remove the existing module:
  - a. Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
  - b. Remove the module from the connector.

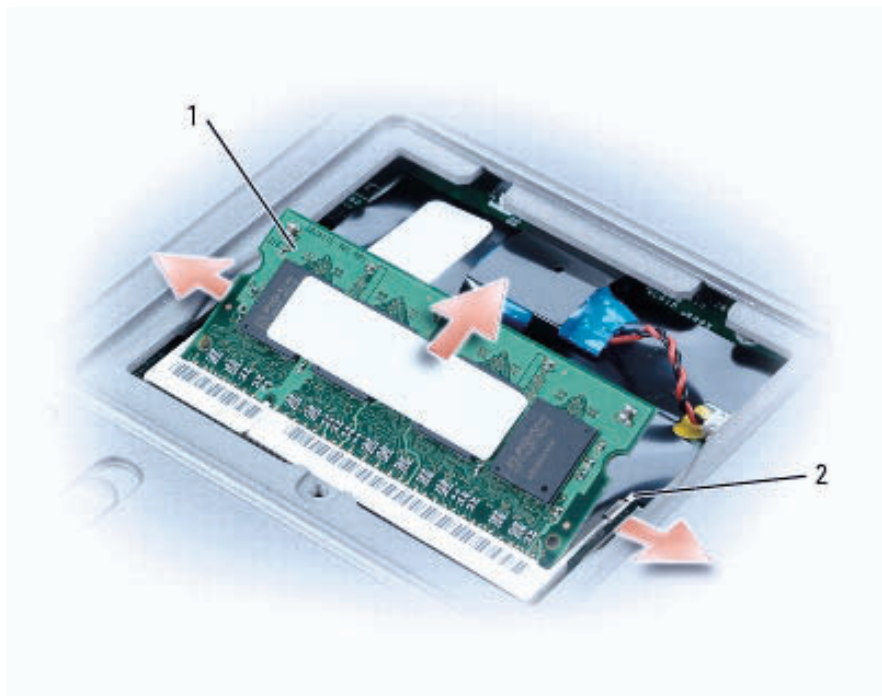


1	memory module	2	securing clips (2)
---	---------------	---	--------------------

 **NOTICE:** If you need to install memory modules in two connectors, install a memory module in the connector labeled "DIMM A" before you install a module in the connector labeled "DIMM B." Insert memory modules at a 45-degree angle to avoid damaging the connector.


 **NOTE:** If the memory module is not installed properly, the computer may not boot properly. No error message indicates this failure.

4. Ground yourself and install the new memory module:
  - a. Align the notch in the module edge connector with the tab in the connector slot.
  - b. Slide the module firmly into the slot at a 45-degree angle, and rotate the module down until it clicks into place. If you do not feel the click, remove the module and reinstall it.
5. Replace the memory module cover and tighten the screw.

 **NOTICE:** If the cover is difficult to close, remove the module and reinstall it. Forcing the cover to close may damage your computer.

6. Insert the battery into the battery bay, or connect the AC adapter to your computer and an electrical outlet.
7. Turn on the computer.

As the computer boots, it detects the additional memory and automatically updates the system configuration information.

To confirm the amount of memory installed in the computer, click **Start** or  → **Help and Support** → **Computer Information**.

---

## Subscriber Identity Module (SIM) Card

 **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.

1. Follow the procedures in [Before You Begin](#).
2. Remove the battery (see [Replacing the Battery](#)).



1	SIM card
---	----------

- Slide the SIM card into the compartment with the cut-off corner of the card facing away from the compartment.

## Wireless Cards

If you ordered a wireless LAN or WAN card with your computer, the card is already installed.



**CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the Product Information Guide.



**NOTICE:** To avoid damaging the system board, you must remove the main battery before you begin working inside the computer.

## Wireless Local Area Network (WLAN) Cards

- Follow the procedures in [Before You Begin](#).
- Remove the hinge cover (see [Hinge Cover](#)).
- Remove the keyboard (see [Keyboard](#)).
- Ground yourself by touching one of the metal connectors on the back of the computer.



**NOTE:** If you leave the area, ground yourself again when you return to the computer.

- If a card is not already installed, go to [step 6](#). If you are replacing a card, remove the existing

## TB 11-5895-1796-10-4

- a. Disconnect the antenna cables from the card.




1	antenna cables
---	----------------

 
- b. Release the card by pushing the metal securing brackets away from the card until the card pops up slightly.




1	WLAN card	2	metal securing brackets (2)
---	-----------	---	-----------------------------


c. Lift the card out of its connector.

 **NOTICE:** The card connector is keyed to ensure correct insertion. If you feel resistance, reinstall the card to realign it in the connector.

 **NOTE:** Do not insert a WWAN network card into the WLAN card slot.


 **NOTE:** The WLAN card may have two or three antenna connectors, depending on the type of card you ordered.


6. Install the card:

 **NOTICE:** To avoid damaging the WLAN card, never place cables on top of or under the card.

a. Move any antenna cables out of the way to make space for the WLAN card.

b. Align the card with the connector at a 45-degree angle, and press the card into the connector until it clicks.

 **NOTE:** Your WLAN card may have two or three antenna connectors, depending on the type of card you ordered. Most antenna connectors have color-coded markings that correspond to the color of the cable.

 **NOTE:** For more specific information about which cable to connect to which connector, see the documentation that came with your WLAN card.

7. Connect the antenna cables to the WLAN card, ensuring that you route the cables correctly.


## Mobile Broadband or Wireless Wide Area Network (WWAN) Cards

1. Follow the procedures in [Before You Begin](#).

2. Remove the hinge cover (see [Hinge Cover](#)).

3. Remove the keyboard (see [Keyboard](#)).

4. Ground yourself by touching one of the metal connectors on the back of the computer.

 **NOTE:** If you leave the area, ground yourself again when you return to the computer.

5. *If a card is not already installed, go to [step 6](#). If you are replacing a card, remove the existing card:*

a. Disconnect the antenna cables from the card.



1	antenna cables
---	----------------


b. Release the card by pushing the metal securing brackets away from the card until the card pops up slightly.




1	WWAN card	2	metal securing brackets (2)
---	-----------	---	-----------------------------

c. Lift the card out of its connector.




 **NOTICE:** The card connectors are keyed to ensure correct insertion. If you feel resistance, reinstall the card to realign it in the connector.

6. Install the card.

 **NOTICE:** To avoid damaging the WWAN card, never place cables on top of or under the card.

a. Align the card with the connector at a 45-degree angle, and press the card into the connector until it clicks.


 **NOTE:** Most antenna connectors have color-coded markings that correspond to the color of the cable. For more specific information about which cable to connect to which connector, see the documentation that came with your WWAN card.


b. Connect the antenna cables to the WWAN card, ensuring that you route the cables correctly.

---


## FCM (Flash Cache Module)

The FCM, or Flash Cache Module, is an internal flash drive that helps improve the performance of your computer.


 **NOTE:** This card is only compatible with the Microsoft Windows Vista™ operating system.

 **NOTE:** If you ordered a FCM card with your computer, the card is already installed.

1. Follow the procedures in [Before You Begin](#).
2. Remove the hinge cover (see [Hinge Cover](#)).
3. Remove the keyboard (see [Keyboard](#)).
4. Ground yourself by touching one of the metal connectors on the back of the computer.

 **NOTE:** If you leave the area, ground yourself again when you return to the computer.

5. Release the card by pushing the metal securing brackets away from the card until the card pops up slightly.

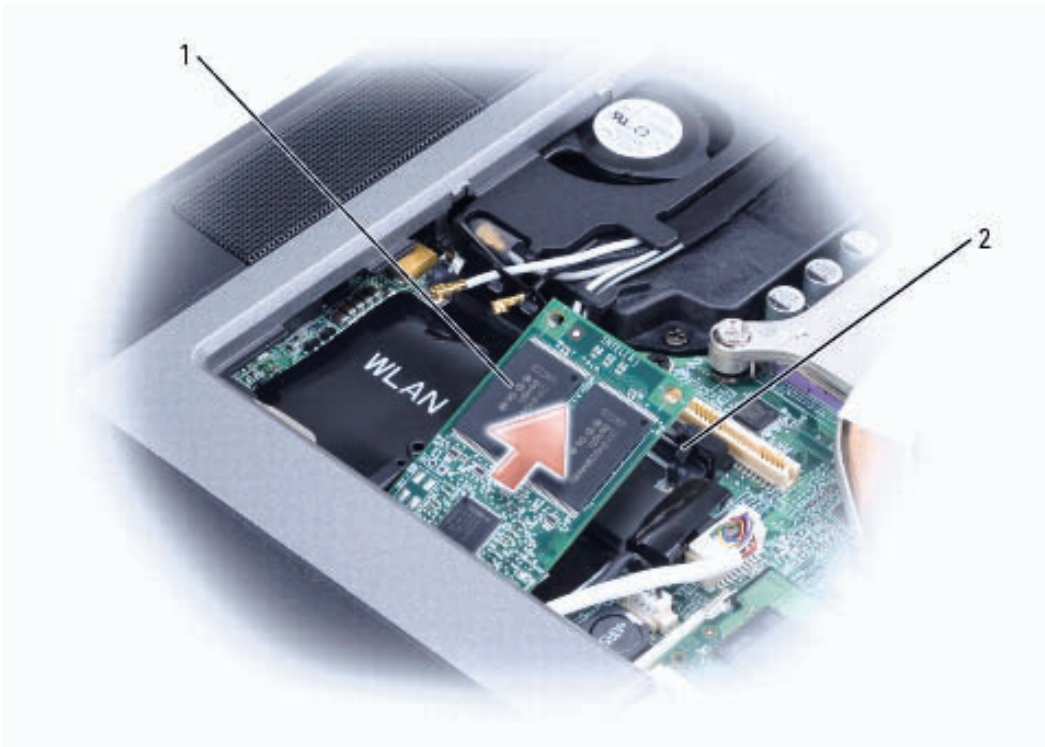

1	FCM card	2	metal securing brackets (2)
---	----------	---	-----------------------------

6. Lift the card out of its connector.

**NOTICE:** This card works only in the WWAN card connector. When installing this card, do not install it in the WLAN card connector. Doing so may cause damage to your computer.

## Internal Card With Bluetooth® Wireless Technology


**CAUTION:** Before performing the following procedures, read the safety instructions in your Product Information Guide.

**NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching a connector on the back panel of the computer.

**NOTICE:** To avoid damaging the system board, you must remove the main battery before you begin working inside the computer.

If you ordered an internal card with Bluetooth wireless technology with your computer, it is already installed.


1. Follow the procedures in [Before You Begin](#).
2. Remove the hinge cover (see [Hinge Cover](#)).

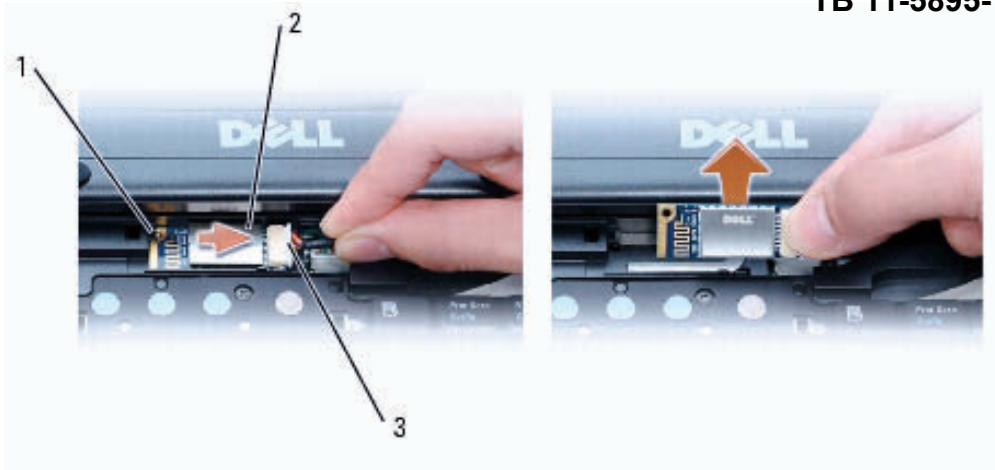

1	metal tab	2	card	3	cable connector
---	-----------	---	------	---	-----------------

**NOTICE:** Be careful when removing the card to avoid damaging the card, card cable, or surrounding components.


3. Remove the card from its compartment in the computer.
  - a. With the front of the computer facing you, slide the card to the right.
  - b. Rotate the card toward the front of the computer.
  - c. Lift the card out of the computer.
4. Disconnect the card from the cable connector.

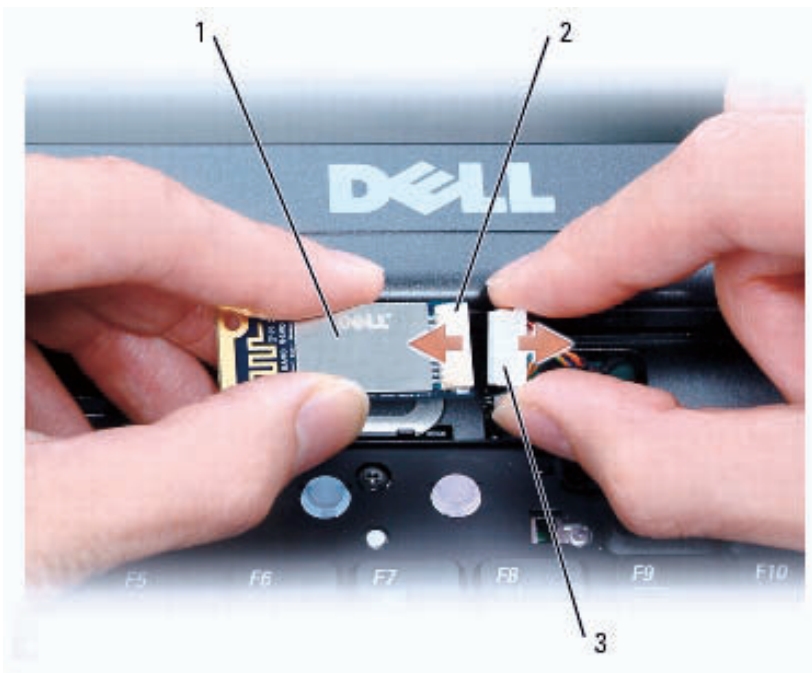


1	card	2	card connector	3	cable connector
---	------	---	----------------	---	-----------------


## Coin-Cell Battery

 **CAUTION:** Before performing the following procedures, follow the safety instructions in your Product Information Guide.

 **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching a connector on the back panel of the computer.

 **NOTICE:** To avoid damaging the system board, you must remove the main battery before you begin working inside the computer.

1. Follow the procedures in [Before You Begin](#).
2. Remove the hinge cover (see [Hinge Cover](#)).
3. Remove the keyboard (see [Keyboard](#)).

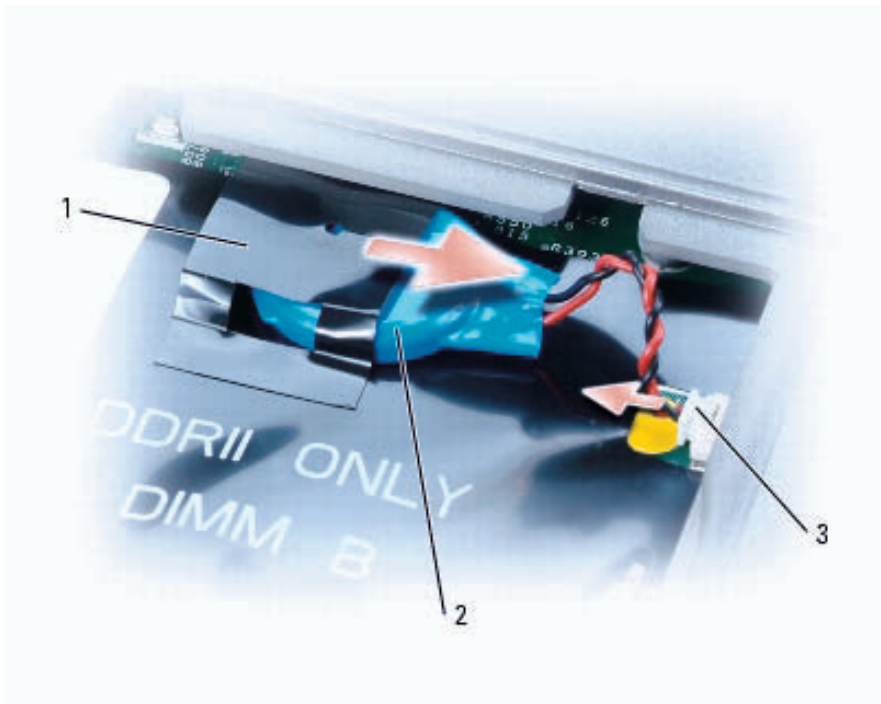

1	mylar	2	coin-cell battery	3	battery cable connector
---	-------	---	-------------------	---	-------------------------

4. Remove the battery cable connector from the connector on the system board.
5. Being careful not to break the plastic, slightly raise the corner of the mylar above the battery.
6. While holding the mylar, grasp the battery and pull it out of the battery compartment.

---

[Back to Contents Page](#)

[Back to Contents Page](#)


# System Setup Program

## Dell™ Latitude™ D830 User's Guide

- [Overview](#)
  - [Viewing the System Setup Screens](#)
  - [System Setup Screens](#)
  - [Commonly Used Settings](#)
- 

## Overview



**NOTE:** Your operating system may automatically configure most of the options available in the system setup program, thus overriding options that you set through the system setup program. (An exception is the External Hot Key option, which you can disable or enable only through the system setup program.) For more information on configuring features for your operating system, access the Help and Support Center. Click Start or  → Help and Support.

You can use the system setup program as follows to:

- Set or change user-selectable features—for example, your computer password
- Verify information about the computer's current configuration, such as the amount of system memory

After you set up the computer, run the system setup program to familiarize yourself with your system configuration information and optional settings. You may want to write down the information for future reference.

The system setup screens display the current setup information and settings for your computer, such as:

- System configuration
- Boot order

- Boot (start-up) configuration and docking-device configuration settings
- Basic device-configuration settings
- System security and hard-drive password settings



**NOTICE:** Unless you are an expert computer user or are directed to do so by Dell technical support, do not change the system setup settings. Certain changes might make your computer work incorrectly.

---

## Viewing the System Setup Screens

1. Turn on (or restart) your computer.
  2. When the DELL™ logo appears, press <F2> immediately. If you wait too long and the Windows logo appears, continue to wait until you see the Windows desktop. Then shut down your computer and try again.
- 

## System Setup Screens



**NOTE:** For information about a specific item on a system setup screen, highlight the item and see the Help area on the screen.

In the system setup program, primary categories of settings are listed on the left. To view the types of settings in a category, highlight the category and press <Enter>. When you highlight a setting type, the right side of the screen displays the value for that setting type. You can change settings that appear as white type on the screen. Values that you cannot change (because they are determined by the computer) appear less bright.

System-setup key functions are listed across the bottom of the screen.

---

## Commonly Used Settings

Certain settings require that you reboot the computer for new settings to take effect.

## Changing the Boot Sequence

The *boot sequence* tells the computer where to look to find the software needed to start the operating system. You can control the boot sequence and enable/disable devices using the **Boot Sequence** page, which is located in the **System** category.



**NOTE:** To change the boot sequence on a one-time-only basis, see [Performing a One-Time Boot](#).

The **Boot Sequence** page displays a general list of the bootable devices that may be installed in your computer, including but not limited to the following:

- **Diskette Drive**
- **Modular bay HDD**
- **Internal HDD**
- **CD/DVD/CD-RW drive**

During the boot routine, the computer starts at the top of the list and scans each enabled device for the operating system start-up files. When the computer finds the files, it stops searching and starts the operating system.

To control the boot devices, select (highlight) a device by pressing the down-arrow or up-arrow key, and then enable or disable the device or change its order in the list.

- To enable or disable a device, highlight the item and press the space bar. Enabled items appear as white and display a small triangle to the left; disabled items appear blue or dimmed without a triangle.
- To reorder a device in the list, highlight the device and then press <u> or <d> (not case-sensitive) to move the highlighted device up or down.

Boot sequence changes take effect as soon as you save the changes and exit the system setup program.

## Performing a One-Time Boot

You can set a one-time-only boot sequence without entering the system setup program. (You can also use this procedure to boot the Dell Diagnostics on the diagnostics utility partition on your hard drive.)

1. Shut down the computer through the **Start** menu.

2. If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.
3. Connect the computer to an electrical outlet.
4. Turn on the computer. When the DELL logo appears, press <F12> immediately. If you wait too long and the Windows logo appears, continue to wait until you see the Windows desktop. Then shut down your computer and try again.
5. When the boot device list appears, highlight the device from which you want to boot and press <Enter>.

The computer boots to the selected device.

The next time you reboot the computer, the previous boot order is restored.

## Changing COM Ports

**Serial Port**, which is located in the **Onboard Devices** category, allows you to map the serial port COM address or disable the serial port and its address, which frees computer resources for another device to use.

---

[Back to Contents Page](#)



[Back to Contents Page](#)

# Glossary

Terms in this Glossary are provided for informational purposes only and may or may not describe features included with your particular computer.

---

## A

**AC** — alternating current — The form of electricity that powers your computer when you plug the AC adapter power cable in to an electrical outlet.

**ACPI** — advanced configuration and power interface — A power management specification that enables Microsoft® Windows® operating systems to put a computer in standby or hibernate mode to conserve the amount of electrical power allocated to each device attached to the computer.

**AGP** — accelerated graphics port — A dedicated graphics port that allows system memory to be used for video-related tasks. AGP delivers a smooth, true-color video image because of the faster interface between the video circuitry and the computer memory.

**AHCI** — Advanced Host Controller Interface — An interface for a SATA hard drive Host Controller which allows the storage driver to enable technologies such as Native Command Queuing (NCQ) and hot plug.

**ALS** — ambient light sensor — A feature that helps to control display brightness.

**antivirus software** — A program designed to identify, quarantine, and/or delete viruses from your computer.

**ASF** — alert standards format — A standard to define a mechanism for reporting hardware and software alerts to a management console. ASF is designed to be platform- and operating system-independent.

---

## B

**battery life span** — The length of time (years) during which a portable computer battery is able to be depleted and recharged.

**battery operating time** — The length of time (minutes or hours) that a portable computer battery powers the computer.

**BIOS** — basic input/output system — A program (or utility) that serves as an interface between the computer hardware and the operating system. Unless you understand what effect these settings have on the computer, do not change them. Also referred to as *system setup*.

**bit** — The smallest unit of data interpreted by your computer.

**Bluetooth® wireless technology** — A wireless technology standard for short-range (9 m [29 feet]) networking devices that allows for enabled devices to automatically recognize each other.

**boot sequence** — Specifies the order of the devices from which the computer attempts to boot.

**bootable CD** — A CD that you can use to start your computer. In case your hard drive is damaged or your computer has a virus, ensure that you always have a bootable CD or floppy disk available. Your *Drivers and Utilities* (or *ResourceCD*) is a bootable CD.

**bootable disk** — A disk that you can use to start your computer. In case your hard drive is damaged or your computer has a virus, ensure that you always have a bootable CD or floppy disk available.

**bps** — bits per second — The standard unit for measuring data transmission speed.

**BTU** — British thermal unit — A measurement of heat output.

**bus** — A communication pathway between the components in your computer.

**bus speed** — The speed, given in MHz, that indicates how fast a bus can transfer information.

**byte** — The basic data unit used by your computer. A byte is usually equal to 8 bits.

---

## C

**C** — Celsius — A temperature measurement scale where 0° is the freezing point.

**cache** — A special high-speed storage mechanism which can be either a reserved section of main memory or an independent high-speed storage device. The cache enhances the efficiency of many processor operations.

**L1 cache** — Primary cache stored inside the processor.

**L2 cache** — Secondary cache which can either be external to the processor or incorporated into the processor architecture.

**carnet** — An international customs document that facilitates temporary imports into foreign countries. Also known as a *merchandise passport*.

**CD-R** — CD recordable — A recordable version of a CD. Data can be recorded only once onto a CD-R. Once recorded, the data cannot be erased or written over.

**CD-RW** — CD rewritable — A rewritable version of a CD. Data can be written to a CD-RW disc, and then erased and written over (rewritten).

**CD-RW drive** — A drive that can read CDs and write to CD-RW (rewritable CDs) and CD-R (recordable CDs) discs. You can write to CD-RW discs multiple times, but you can write to CD-R discs only once.

**CD-RW/DVD drive** — A drive, sometimes referred to as a combo drive, that can read CDs and DVDs and write to CD-RW (rewritable CDs) and CD-R (recordable CDs) discs. You can write to CD-RW discs multiple times, but you can write to CD-R discs only once.

**clock speed** — The speed, given in MHz, that indicates how fast computer components that are connected to the system bus operate.

**CMOS** — A type of electronic circuit. Computers use a small amount of battery-powered CMOS memory to hold date, time, and system setup options.

**COA** — Certificate of Authenticity — The Windows alpha-numeric code located on a sticker on your computer. Also referred to as the *Product Key* or *Product ID*.

**Control Panel** — A Windows utility that allows you to modify operating system and hardware settings, such as display settings.

**controller** — A chip that controls the transfer of data between the processor and memory or between the processor and devices.

**CRIMM** — continuity rambus in-line memory module — A special module that has no memory chips and is used to fill unused RIMM slots.

**cursor** — The marker on a display or screen that shows where the next keyboard, touch pad, or mouse action will occur. It often is a blinking solid line, an underline character, or a small arrow.

---

## D

**DDR SDRAM** — double-data-rate SDRAM — A type of SDRAM that doubles the data burst cycle, improving system performance.

**DDR2 SDRAM** — double-data-rate 2 SDRAM — A type of DDR SDRAM that uses a 4-bit prefetch and other architectural changes to boost memory speed to over 400 MHz.

**device** — Hardware such as a disk drive, printer, or keyboard that is installed in or connected to your computer.

**device driver** — See *driver*.

**DIMM** — dual in-line memory module — A circuit board with memory chips that connects to a memory module on the system board.

**DIN connector** — A round, six-pin connector that conforms to DIN (Deutsche Industrie-Norm) standards; it is typically used to connect PS/2 keyboard or mouse cable connectors.

**disk striping** — A technique for spreading data over multiple disk drives. Disk striping can speed up operations that retrieve data from disk storage. Computers that use disk striping generally allow the user to select the data unit size or stripe width.

**DMA** — direct memory access — A channel that allows certain types of data transfer between RAM and a device to bypass the processor.

**docking device** — See *APR*.

**DMTF** — Distributed Management Task Force — A consortium of hardware and software companies who develop management standards for distributed desktop, network, enterprise, and Internet environments.

**domain** — A group of computers, programs, and devices on a network that are administered as a unit with common rules and procedures for use by a specific group of users. A user logs on to the domain to gain access to the resources.

**DRAM** — dynamic random-access memory — Memory that stores information in integrated circuits containing capacitors.

**driver** — Software that allows the operating system to control a device such as a printer. Many devices do not work properly if the correct driver is not installed in the computer.

**DSL** — Digital Subscriber Line — A technology that provides a constant, high-speed Internet connection through an analog telephone line.

**dual-core** — An Intel® technology in which two physical computational units exist inside a single processor package, thereby increasing computing efficiency and multi-tasking ability.

**dual display mode** — A display setting that allows you to use a second monitor as an extension of your display. Also referred to as *extended display mode*.

**DVD-R** — DVD recordable — A recordable version of a DVD. Data can be recorded only once onto a DVD-R. Once recorded, the data cannot be erased or written over.

**DVD+RW** — DVD rewritable — A rewritable version of a DVD. Data can be written to a DVD+RW disc, and then erased and written over (rewritten). (DVD +RW technology is different from DVD-RW technology.)

**DVD+RW drive** — drive that can read DVDs and most CD media and write to DVD+RW (rewritable DVDs) discs.

**DVI** — digital video interface — A standard for digital transmission between a computer and a digital video display.

---

## E

**ECC** — error checking and correction — A type of memory that includes special circuitry for testing the accuracy of data as it passes in and out of memory.

**ECP** — extended capabilities port — A parallel connector design that provides improved bidirectional data transmission. Similar to EPP, ECP uses direct memory access to transfer data and often improves performance.

**EIDE** — enhanced integrated device electronics — An improved version of the IDE interface for hard drives and CD drives.

**EMI** — electromagnetic interference — Electrical interference caused by electromagnetic radiation.

**ENERGY STAR®** — Environmental Protection Agency requirements that decrease the overall consumption of electricity.

**EPP** — enhanced parallel port — A parallel connector design that provides bidirectional data transmission.

**ESD** — electrostatic discharge — A rapid discharge of static electricity. ESD can damage integrated circuits found in computer and communications equipment.

**expansion card** — A circuit board that installs in an expansion slot on the system board in some computers, expanding the capabilities of the computer. Examples include video, modem, and sound cards.

**expansion slot** — A connector on the system board (in some computers) where you insert an expansion card, connecting it to the system bus.

**ExpressCard** — A removable I/O card adhering to the PCMCIA standard. Modems and network adapters are common types of ExpressCards. ExpressCards support both the PCI Express and USB 2.0 standard.

**Express Service Code** — A numeric code located on a sticker on your Dell™ computer. Use the Express Service Code when contacting Dell for assistance. Express Service Code service may not be available in some countries.

**extended display mode** — A display setting that allows you to use a second monitor as an extension of your display. Also referred to as *dual display mode*.

**extended PC Card** — A PC Card that extends beyond the edge of the PC Card slot when installed.

---

## F

**Fahrenheit** — A temperature measurement scale where 32° is the freezing point and 212° is the boiling point of water.

**FBD** — fully-buffered DIMM — A DIMM with DDR2 DRAM chips and an Advanced Memory Buffer (AMB) that speeds communication between the DDR2 SDRAM chips and the system.

**FCC** — Federal Communications Commission — A U.S. agency responsible for enforcing communications-related regulations that state how much radiation computers and other electronic equipment can emit.

**fingerprint reader** — A strip sensor that uses your unique fingerprint to authenticate your user identity to help secure your computer.

**folder** — A term used to describe space on a disk or drive where files are organized and grouped. Files in a folder can be viewed and ordered in various ways, such as alphabetically, by date, and by size.

**format** — The process that prepares a drive or disk for file storage. When a drive or disk is formatted, the existing information on it is lost.

**FSB** — front side bus — The data path and physical interface between the processor and RAM.

**FTP** — file transfer protocol — A standard Internet protocol used to exchange files between computers connected to the Internet.

---

## G

**G** — gravity — A measurement of weight and force.

**GB** — gigabyte — A measurement of data storage that equals 1024 MB (1,073,741,824 bytes). When used to refer to hard drive storage, the term is often rounded to 1,000,000,000 bytes.

**GHz** — gigahertz — A measurement of frequency that equals one thousand million Hz, or one thousand MHz. The speeds for computer processors, buses, and interfaces are often measured in GHz.

**graphics mode** — A video mode that can be defined as x horizontal pixels by y vertical pixels by z colors. Graphics modes can display an unlimited variety of shapes and fonts.

**GUI** — graphical user interface — Software that interacts with the user by means of menus, windows, and icons. Most programs that operate on the Windows operating systems are GUIs.

---

## H

**hard drive** — A drive that reads and writes data on a hard disk. The terms hard drive and hard disk are often used interchangeably.

**heat sink** — A metal plate on some processors that helps dissipate heat.

**hibernate mode** — A power management mode that saves everything in memory to a reserved space on the hard drive and then turns off the computer. When you restart the computer, the memory information that was saved to the hard drive is automatically restored.

**HTTP** — hypertext transfer protocol — A protocol for exchanging files between computers connected to the Internet.

**Hyper-Threading** — Hyper-Threading is an Intel technology that can enhance overall computer performance by allowing one physical processor to function as two logical processors, capable of performing certain tasks simultaneously.

**Hz** — hertz — A unit of frequency measurement that equals 1 cycle per second. Computers and electronic devices are often measured in kilohertz (kHz), megahertz (MHz), gigahertz (GHz), or terahertz (THz).

---

## I

**IC** — integrated circuit — A semiconductor wafer, or chip, on which thousands or millions of tiny electronic components are fabricated for use in computer, audio, and video equipment.

**IDE** — integrated device electronics — An interface for mass storage devices in which the controller is integrated into the hard drive or CD drive.

**IEEE 1394** — Institute of Electrical and Electronics Engineers, Inc. — A high-performance serial bus used to connect IEEE 1394-compatible devices, such as digital cameras and DVD players, to the computer.

**infrared sensor** — A port that allows you to transfer data between the computer and infrared-compatible devices without using a cable connection.

**integrated** — Usually refers to components that are physically located on the computer's system board. Also referred to as *built-in*.

**I/O** — input/output — An operation or device that enters and extracts data from your computer. Keyboards and printers are I/O devices.

**I/O address** — An address in RAM that is associated with a specific device (such as a serial connector, parallel connector, or expansion slot) and allows the processor to communicate with that device.



**IrDA** — Infrared Data Association — The organization that creates international standards for infrared communications.

**IRQ** — interrupt request — An electronic pathway assigned to a specific device so that the device can communicate with the processor. Each device connection must be assigned an IRQ. Although two devices can share the same IRQ assignment, you cannot operate both devices simultaneously.

**ISP** — Internet service provider — A company that allows you to access its host server to connect directly to the Internet, send and receive e-mail, and access websites. The ISP typically provides you with a software package, user name, and access phone numbers for a fee.

---

## K

**Kb** — kilobit — A unit of data that equals 1024 bits. A measurement of the capacity of memory integrated circuits.

**KB** — kilobyte — A unit of data that equals 1024 bytes but is often referred to as 1000 bytes.

**key combination** — A command requiring you to press multiple keys at the same time.

**kHz** — kilohertz — A measurement of frequency that equals 1000 Hz.

---

## L

**LAN** — local area network — A computer network covering a small area. A LAN usually is confined to a building or a few nearby buildings. A LAN can be connected to another LAN over any distance through telephone lines and radio waves to form a wide area network (WAN).

**LCD** — liquid crystal display — The technology used by portable computer and flat-panel displays.

**LED** — light-emitting diode — An electronic component that emits light to indicate the status of the computer.

**local bus** — A data bus that provides a fast throughput for devices to the processor.

**LPT** — line print terminal — The designation for a parallel connection to a printer or other parallel device.

---

## M

**Mb** — megabit — A measurement of memory chip capacity that equals 1024 Kb.

**Mbps** — megabits per second — One million bits per second. This measurement is typically used for transmission speeds for networks and modems.

**MB** — megabyte — A measurement of data storage that equals 1,048,576 bytes. 1 MB equals 1024 KB. When used to refer to hard drive storage, the term is often rounded to 1,000,000 bytes.

**MB/sec** — megabytes per second — One million bytes per second. This measurement is typically used for data transfer ratings.

**media bay** — A bay that supports devices such as optical drives, a second battery, or a Dell Travellite™ module.

**memory** — A temporary data storage area inside your computer. Because the data in memory is not permanent, it is recommended that you frequently save your files while you are working on them, and always save your files before you shut down the computer. Your computer can contain several different forms of memory, such as RAM, ROM, and video memory. Frequently, the word memory is used as a synonym for RAM.

**memory address** — A specific location where data is temporarily stored in RAM.

**memory mapping** — The process by which the computer assigns memory addresses to physical locations at start-up. Devices and software can then identify information that the processor can access.

**memory module** — A small circuit board containing memory chips, which connects to the system board.

**MHz** — megahertz — A measure of frequency that equals 1 million cycles per second. The speeds for computer processors, buses, and interfaces are often measured in MHz.

**Mini PCI** — A standard for integrated peripheral devices with an emphasis on communications such as modems and NICs. A Mini PCI card is a small external card that is functionally equivalent to a standard PCI expansion card.

**Mini-Card** — A small card designed for integrated peripherals, such as communication NICs. The Mini-Card is functionally equivalent to a standard PCI expansion card.

**modem** — A device that allows your computer to communicate with other computers over analog telephone lines. Three types of modems include: external, PC Card, and internal. You typically use your modem to connect to the Internet and exchange e-mail.

**module bay** — See *media bay*.

**MP** — megapixel — A measure of image resolution used for digital cameras.

**ms** — millisecond — A measure of time that equals one thousandth of a second. Access times of storage devices are often measured in ms.

---

## N

**network adapter** — A chip that provides network capabilities. A computer may include a network adapter on its system board, or it may contain a PC Card with an adapter on it. A network adapter is also referred to as a *NIC* (network interface controller).

**NIC** — See *network adapter*.

**notification area** — The section of the Windows taskbar that contains icons for providing quick access to programs and computer functions, such as the clock, volume control, and print status. Also referred to as *system tray*.

**ns** — nanosecond — A measure of time that equals one billionth of a second.

**NVRAM** — nonvolatile random access memory — A type of memory that stores data when the computer is turned off or loses its external power source. NVRAM is used for maintaining computer configuration information such as date, time, and other system setup options that you can set.

---

## O

**optical drive** — A drive that uses optical technology to read or write data from CDs, DVDs, or DVD+RWs. Example of optical drives include CD drives, DVD drives, CD-RW drives, and CD-RW/DVD combo drives.

## P

**parallel connector** — An I/O port often used to connect a parallel printer to your computer. Also referred to as an *LPT port*.

**partition** — A physical storage area on a hard drive that is assigned to one or more logical storage areas known as logical drives. Each partition can contain multiple logical drives.

**PC Card** — A removable I/O card adhering to the PCMCIA standard. Modems and network adapters are common types of PC Cards.

**PCI** — peripheral component interconnect — PCI is a local bus that supports 32- and 64-bit data paths, providing a high-speed data path between the processor and devices such as video, drives, and networks.

**PCI Express** — A modification to the PCI interface that boosts the data transfer rate between the processor and the devices attached to it. PCI Express can transfer data at speeds from 250 MB/sec to 4 GB/sec. If the PCI Express chip set and the device are capable of different speeds, they will operate at the slower speed.

**PCMCIA** — Personal Computer Memory Card International Association — The organization that establishes standards for PC Cards.

**PIO** — programmed input/output — A method of transferring data between two devices through the processor as part of the data path.

**pixel** — A single point on a display screen. Pixels are arranged in rows and columns to create an image. A video resolution, such as 800 x 600, is expressed as the number of pixels across by the number of pixels up and down.

**Plug-and-Play** — The ability of the computer to automatically configure devices. Plug and Play provides automatic installation, configuration, and compatibility with existing hardware if the BIOS, operating system, and all devices are Plug and Play compliant.

**POST** — power-on self-test — Diagnostics programs, loaded automatically by the BIOS, that perform basic tests on the major computer components, such as memory, hard drives, and video. If no problems are detected during POST, the computer continues the start-up.

**processor** — A computer chip that interprets and executes program instructions. Sometimes the processor is referred to as the CPU (central processing unit).

**PS/2** — personal system/2 — A type of connector for attaching a PS/2-compatible keyboard, mouse, or keypad.

**PXE** — pre-boot execution environment — A WfM (Wired for Management) standard that allows networked computers that do not have an operating system to be configured and started remotely.

---

## R

**RAID** — redundant array of independent disks — A method of providing data redundancy. Some common implementations of RAID include RAID 0, RAID 1, RAID 5, RAID 10, and RAID 50.

**RAM** — random-access memory — The primary temporary storage area for program instructions and data. Any information stored in RAM is lost when you shut down your computer.

**readme file** — A text file included with a software package or hardware product. Typically, readme files provide installation information and describe new product enhancements or corrections that have not yet been documented.

**read-only** — Data and/or files you can view but cannot edit or delete. A file can have read-only status if:

- It resides on a physically write-protected floppy disk, CD, or DVD.
- It is located on a network in a directory and the system administrator has assigned rights only to specific individuals.

**refresh rate** — The frequency, measured in Hz, at which your screen's horizontal lines are recharged (sometimes also referred to as its *vertical frequency*). The higher the refresh rate, the less video flicker can be seen by the human eye.

**resolution** — The sharpness and clarity of an image produced by a printer or displayed on a monitor. The higher the resolution, the sharper the image.

**RFI** — radio frequency interference — Interference that is generated at typical radio frequencies, in the range of 10 kHz to 100,000 MHz. Radio frequencies are at the lower end of the electromagnetic frequency spectrum and are more likely to have interference than the higher frequency radiations, such as infrared and light.

**ROM** — read-only memory — Memory that stores data and programs that cannot be deleted or written to by the computer. ROM, unlike RAM, retains its contents after you shut down your computer. Some programs essential to the operation of your computer reside in ROM.

**RPM** — revolutions per minute — The number of rotations that occur per minute. Hard drive speed is often measured in rpm.

**RTC** — real time clock — Battery-powered clock on the system board that keeps the date and time after you shut down the computer.

**RTCRST** — real-time clock reset — A jumper on the system board of some computers that can often be used for troubleshooting problems.

---

## **S**

**SAS** — serial attached SCSI — A faster, serial version of the SCSI interface (as opposed to the original SCSI parallel architecture).

**SATA** — serial ATA — A faster, serial version of the ATA (IDE) interface.

**ScanDisk** — A Microsoft utility that checks files, folders, and the hard disk's surface for errors. ScanDisk often runs when you restart the computer after it has stopped responding.

**SCSI** — small computer system interface — A high-speed interface used to connect devices to a computer, such as hard drives, CD drives, printers, and scanners. The SCSI can connect many devices using a single controller. Each device is accessed by an individual identification number on the SCSI controller bus.

**SDRAM** — synchronous dynamic random-access memory — A type of DRAM that is synchronized with the optimal clock speed of the processor.

**serial connector** — An I/O port often used to connect devices such as a handheld digital device or digital camera to your computer.

**Service Tag** — A bar code label on your computer that identifies your computer when you access Dell Support at **support.dell.com** or when you call Dell for customer service or technical support.

**setup program** — A program that is used to install and configure hardware and software. The setup.exe or install.exe program comes with most Windows software packages. Setup program differs from system setup.

**shortcut** — An icon that provides quick access to frequently used programs, files, folders, and drives. When you place a shortcut on your Windows desktop and double-click the icon, you can open its corresponding folder or file without having to find it first. Shortcut icons do not change the location of files. If you delete a shortcut, the original file is not affected. Also, you can rename a shortcut icon.

**SIM** — Subscriber Identity Module — A SIM card contains a microchip that encrypts voice and data transmissions. SIM cards can be used in phones or portable computers.

**smart card** — A card that is embedded with a processor and a memory chip. Smart cards can be used to authenticate a user on computers equipped for smart cards.

**S/PDIF** — Sony/Philips Digital Interface — An audio transfer file format that allows the transfer of audio from one file to another without converting it to and from an analog format, which could degrade the quality of the file.

**standby mode** — A power management mode that shuts down all unnecessary computer operations to save energy.

**Strike Zone™** — Reinforced area of the platform base that protects the hard drive by acting as a dampening device when a computer experiences resonating shock or is dropped (whether the computer is on or off).

**surge protectors** — Prevent voltage spikes, such as those that may occur during an electrical storm, from entering the computer through the electrical outlet. Surge protectors do not protect against lightning strikes or against brownouts, which occur when the voltage drops more than 20 percent below the normal AC-line voltage level.

Network connections cannot be protected by surge protectors. Always disconnect the network cable from the network connector during electrical storms.

**SVGA** — super-video graphics array — A video standard for video cards and controllers. Typical SVGA resolutions are 800 x 600 and 1024 x 768.

The number of colors and resolution that a program displays depends on the capabilities of the monitor, the video controller and its drivers, and the amount of video memory installed in the computer.

**S-video TV-out** — A connector used to attach a TV or digital audio device to the computer.

**SXGA** — super-extended graphics array — A video standard for video cards and controllers that supports resolutions up to 1280 x 1024.

**SXGA+** — super-extended graphics array plus — A video standard for video cards and controllers that supports resolutions up to 1400 x 1050.

**system board** — The main circuit board in your computer. Also known as the *motherboard*.

**system setup** — A utility that serves as an interface between the computer hardware and the operating system. System setup allows you to configure user-selectable options in the BIOS, such as date and time or system password. Unless you understand what effect the settings have on the computer, do not change the settings for this program.

---

## T

**TAPI** — telephony application programming interface — Enables Windows programs to operate with a wide variety of telephony devices, including voice, data, fax, and video.

**text editor** — A program used to create and edit files that contain only text; for example, Windows Notepad uses a text editor. Text editors do not usually provide word wrap or formatting functionality (the option to underline, change fonts, and so on).

**TPM** — trusted platform module — A hardware-based security feature that when combined with security software enhances network and computer security by enabling features such as file and e-mail protection.

**travel module** — A plastic device designed to fit inside the module bay of a portable computer to reduce the weight of the computer.

---

## U

**UAC** — user account control— Microsoft Windows® Vista™ security feature that, when enabled, provides an added layer of security between user accounts and access to operating system settings.

**UMA** — unified memory allocation — System memory dynamically allocated to video.



**UPS** — uninterruptible power supply — A backup power source used when the electrical power fails or drops to an unacceptable voltage level. A UPS keeps a computer running for a limited amount of time when there is no electrical power. UPS systems typically provide surge suppression and may also provide voltage regulation. Small UPS systems provide battery power for a few minutes to enable you to shut down your computer.

**USB** — universal serial bus — A hardware interface for a low-speed device such as a USB-compatible keyboard, mouse, joystick, scanner, set of speakers, printer, broadband devices (DSL and cable modems), imaging devices, or storage devices. Devices are plugged directly in to a 4-pin socket on your computer or in to a multi-port hub that plugs in to your computer. USB devices can be connected and disconnected while the computer is turned on, and they can also be daisy-chained together.

**UTP** — unshielded twisted pair — Describes a type of cable used in most telephone networks and some computer networks. Pairs of unshielded wires are twisted to protect against electromagnetic interference, rather than relying on a metal sheath around each pair of wires to protect against interference.

**UXGA** — ultra extended graphics array — A video standard for video cards and controllers that supports resolutions up to 1600 x 1200.

---

## V

**video controller** — The circuitry on a video card or on the system board (in computers with an integrated video controller) that provides the video capabilities—in combination with the monitor—for your computer.

**video memory** — Memory that consists of memory chips dedicated to video functions. Video memory is usually faster than system memory. The amount of video memory installed primarily influences the number of colors that a program can display.

**video mode** — A mode that describes how text and graphics are displayed on a monitor. Graphics-based software, such as Windows operating systems, displays in video modes that can be defined as  $x$  horizontal pixels by  $y$  vertical pixels by  $z$  colors. Character-based software, such as text editors, displays in video modes that can be defined as  $x$  columns by  $y$  rows of characters.

**video resolution** — See *resolution*.

**virus** — A program that is designed to inconvenience you or to destroy data stored on your computer. A virus program moves from one computer to another through an infected disk, software downloaded from the Internet, or e-mail attachments. When an infected program starts, its embedded virus also starts.

A common type of virus is a boot virus, which is stored in the boot sectors of a floppy disk. If the floppy disk is left in the drive when the computer is shut down and then turned on, the computer is infected when it reads the boot sectors of the floppy disk expecting to find the operating system. If the computer is infected, the boot virus may replicate itself onto all the floppy disks that are read or written in that computer until the virus is eradicated.

**V** — volt — The measurement of electric potential or electromotive force. One V appears across a resistance of 1 ohm when a current of 1 ampere flows through that resistance.

---

## W

**W** — watt — The measurement of electrical power. One W is 1 ampere of current flowing at 1 volt.

**WHr** — watt-hour — A unit of measure commonly used to indicate the approximate capacity of a battery. For example, a 66-WHr battery can supply 66 W of power for 1 hour or 33 W for 2 hours.

**wallpaper** — The background pattern or picture on the Windows desktop. Change your wallpaper through the Windows Control Panel. You can also scan in your favorite picture and make it wallpaper.

**WLAN** — wireless local area network. A series of interconnected computers that communicate with each other over the air waves using access points or wireless routers to provide Internet access.

**write-protected** — Files or media that cannot be changed. Use write-protection when you want to protect data from being changed or destroyed. To write-protect a 3.5-inch floppy disk, slide its write-protect tab to the open position.

**WWAN** — wireless wide area network. A wireless high-speed data network using cellular technology and covering a much larger geographic area than WLAN.

**WXGA** — wide-aspect extended graphics array — A video standard for video cards and controllers that supports resolutions up to 1280 x 800."

## X

**XGA** — extended graphics array — A video standard for video cards and controllers that supports resolutions up to 1024 x 768.

---

## Z

**ZIF** — zero insertion force — A type of socket or connector that allows a computer chip to be installed or removed with no stress applied to either the chip or its socket.

**Zip** — A popular data compression format. Files that have been compressed with the Zip format are called Zip files and usually have a filename extension of **.zip**. A special kind of zipped file is a self-extracting file, which has a filename extension of **.exe**. You can unzip a self-extracting file by double-clicking it.

**Zip drive** — A high-capacity floppy drive developed by Iomega Corporation that uses 3.5-inch removable disks called Zip disks. Zip disks are slightly larger than regular floppy disks, about twice as thick, and hold up to 100 MB of data.

[Back to Contents Page](#)



<b>RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS</b>  <small>For use of this form, see AR 25-30; the proponent agency is ODISC4.</small>	Use Part II ( <i>reverse</i> ) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM)	DATE  <h2 style="text-align: center;">8/30/02</h2>
--	---	--

TO: ( <i>Forward to proponent of publication or form</i> )( <i>Include ZIP Code</i> ) Commander, U.S. Army GECOM LCMC ATTN: AMSEL-LC-LEO-E-ED-P FORT MONMOUTH, NJ 07703-5000	FROM: ( <i>Activity and location</i> )( <i>Include ZIP Code</i> ) Jane Q. Doe, SFC 1234 Any Street Nowhere Town, AL 34565
---	--

**PART 1 - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS**

PUBLICATION/FORM NUMBER <h3 style="text-align: center;">TM 11-4940-355-12</h3>	DATE <h3 style="text-align: center;">16 Sep 2002</h3>	TITLE Organizational, Direct Support, And General Support Maintenance Manual for Machine Gun, .50 Caliber M3P and M3P Machine Gun Electrical Test Set Used On Avenger Air Defense Weapon System
---	--	---

ITEM NO.	PAGE NO.	PARA-GRAPH	LINE NO. *	FIGURE NO.	TABLE NO.	RECOMMENDED CHANGES AND REASON
1	WP0005 PG 3		2			Test or Corrective Action column should identify a different WP number. <div style="position: absolute; top: 50%; left: 50%; transform: translate(-50%, -50%) rotate(-45deg); font-size: 100px; opacity: 0.5; pointer-events: none;">             EXAMPLE           </div>

\* Reference to line numbers within the paragraph or subparagraph.

TYPED NAME, GRADE OR TITLE  <h3 style="text-align: center;">Jane Q. Doe, SFC</h3>	TELEPHONE EXCHANGE/ AUTOVON, PLUS EXTENSION  <h3 style="text-align: center;">788-1234</h3>	SIGNATURE
---	---	-----------

<b>TO:</b> (Forward direct to addressee listed in publication) Commander, U.S. Army CECOM LCMC ATTN: AMSEL-LC-LEO-E-ED-P FORT MONMOUTH, NJ 07703-5000	<b>FROM:</b> (Activity and location) (Include ZIP Code) Jane Q. Doe, SFC 1234 Any Street Nowhere Town, AL 34565	<b>DATE</b> 8/30/02
--	--	------------------------

**PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS**

PUBLICATION NUMBER			DATE	TITLE				
PAGE NO.	COLM NO.	LINE NO.	NATIONAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION

**PART III - REMARKS** (Any general remarks, corrections, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)

**EXAMPLE**

TYPED NAME, GRADE OR TITLE  Jane Q. Doe, SFC	TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION  788-1234	SIGNATURE
--	--	-----------

<b>RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS</b>						DATE	
For use of this form, see AR 310-1; the proponent agency is the US Army Adjutant General Center.						Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM).	
TO: (Forward to proponent of publication or form) (Include ZIP Code)						FROM: (Activity and location) (Include ZIP Code)	
<b>PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS</b>							
PUBLICATION/FORM NUMBER						DATE	TITLE
ITEM NO.	PAGE NO.	PARA-GRAPH	LINE NO.*	FIGURE NO.	TABLE NO.	RECOMMENDED CHANGES AND REASON <i>(Exact wording of recommended change must be given)</i>	
<i>* Reference to line numbers within the paragraph or subparagraph.</i>							
TYPED NAME, GRADE OR TITLE				TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION		SIGNATURE	

<b>TO:</b> <i>(Forward to proponent of publication or form) (Include ZIP Code)</i>	<b>FROM:</b> <i>(Activity and location) (Include ZIP Code)</i>	<b>DATE</b>
--	--	-------------

**PART II- REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS**

PUBLICATION/FORM NUMBER			DATE		TITLE			
PAGE NO.	COLM NO.	LINE NO.	FEDERAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPROTED	RECOMMENDED ACTION

**PART III - REMARKS** *(Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)*

TYPED NAME, GRADE OR TITLE	TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION	SIGNATURE
----------------------------	--	-----------



<b>RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS</b>						DATE	
For use of this form, see AR 310-1; the proponent agency is the US Army Adjutant General Center.						Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM).	
TO: (Forward to proponent of publication or form) (Include ZIP Code)						FROM: (Activity and location) (Include ZIP Code)	
<b>PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS</b>							
PUBLICATION/FORM NUMBER						DATE	TITLE
ITEM NO.	PAGE NO.	PARA-GRAPH	LINE NO.*	FIGURE NO.	TABLE NO.	RECOMMENDED CHANGES AND REASON <i>(Exact wording of recommended change must be given)</i>	
<i>* Reference to line numbers within the paragraph or subparagraph.</i>							
TYPED NAME, GRADE OR TITLE				TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION		SIGNATURE	

<b>TO:</b> <i>(Forward to proponent of publication or form) (Include ZIP Code)</i>	<b>FROM:</b> <i>(Activity and location) (Include ZIP Code)</i>	<b>DATE</b>
--	--	-------------

**PART II- REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS**

PUBLICATION/FORM NUMBER			DATE		TITLE			
PAGE NO.	COLM NO.	LINE NO.	FEDERAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPROTED	RECOMMENDED ACTION

**PART III - REMARKS** *(Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)*

TYPED NAME, GRADE OR TITLE	TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION	SIGNATURE
----------------------------	--	-----------

<b>RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS</b>						DATE
For use of this form, see AR 310-1; the proponent agency is the US Army Adjutant General Center.						Use Part II (reverse) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM).
TO: (Forward to proponent of publication or form) (Include ZIP Code)						FROM: (Activity and location) (Include ZIP Code)
<b>PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS</b>						
PUBLICATION/FORM NUMBER					DATE	TITLE
ITEM NO.	PAGE NO.	PARA-GRAPH	LINE NO.*	FIGURE NO.	TABLE NO.	RECOMMENDED CHANGES AND REASON <i>(Exact wording of recommended change must be given)</i>
<i>* Reference to line numbers within the paragraph or subparagraph.</i>						
TYPED NAME, GRADE OR TITLE				TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION		SIGNATURE

<b>TO:</b> <i>(Forward to proponent of publication or form) (Include ZIP Code)</i>	<b>FROM:</b> <i>(Activity and location) (Include ZIP Code)</i>	<b>DATE</b>
--	--	-------------

**PART II- REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS**

PUBLICATION/FORM NUMBER			DATE		TITLE			
PAGE NO.	COLM NO.	LINE NO.	FEDERAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPROTED	RECOMMENDED ACTION

**PART III - REMARKS** *(Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)*

TYPED NAME, GRADE OR TITLE	TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION	SIGNATURE
----------------------------	--	-----------

By Order of the Secretary of the Army:

Official:



JOYCE E. MORROW

*Administrative Assistant to the  
Secretary of the Army*

0814003

GEORGE W. CASEY, JR  
*General, United States Army  
Chief of Staff*

DISTRIBUTION:

To be distributed in accordance with the initial distribution number (IDN) 344616 requirements for TB 11-5895-1796-10-4.





**PIN: 084889-000**