

**TECHNICAL MANUAL
ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS)
FOR
ANTENNA AS - 2731/GRC
(NSN 5985-01 -07 7-0785)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER 1978

CHANGE }
No. 1 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 27 January 1983

**Organizational and Direct Support Maintenance
Repair Parts and Special Tools Lists
(Including Depot Maintenance Repair Parts and Special Tools)
for
ANTENNA AS-2731/GRC
(NSN 5985-01-017-0785)**

TM 11-5985-355-23P, 13 November 1978, is changed as follows:

1. New or changed material is indicated by a vertical bar in the margin.
2. Added or revised illustrations are indicated by a vertical bar in front of the figure caption.
3. Remove and insert pages as indicated below:

Remove	Insert	
i/(ii blank)	i/(ii blank)
1 through 6	1 through 6
27	27/(28 blank)

4. File this change in front of the publication for reference purposes.

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army

Official: Chief of Staff
ROBERT M. JOYCE
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-51, Organizational maintenance requirements for ANIVRC-12, ANfVRC43 thru 49 and AN/VRC-53, AN/VRC-64, AN/GRC-125, AN/GRC-160.

**ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
ANTENNA AS-2731/GRC
(NSN 5985-01-017-0785)
Current as of 15 July 1978**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MP, Fort Monmouth, NJ 07703. In either case, a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION I.	Introduction	1	
	II. Repair parts list	5	
GROUP 00	Antenna AS-2731/GRC.....	5	1
	01 Antenna Element AS-2732/GRC.....	7	2
	02 Matching Unit Base MX-9146/GRC	11	3
	0201 Cable spring assembly.....	13	4
	0202 Selector assembly	19	5
	020201 Switch relay	23	6
	0203 Base assembly.....	25	7
SECTION IV.	Special tools list (Not applicable)		
IV.	National stock number and part number index	26	

Change 1 i/(ii Blank)

**SECTION I
INTRODUCTION**

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational and direct support maintenance of the AS-2731/GRC. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section II. Special Tools List. Not applicable.

c. Section IV National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	--Item procured and stocked for anticipated or known usage.
PD	--Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XA	--Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XD	-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
0	--Support item is removed, replaced, used at the organizational level.
F	--Support item is removed, replaced, used at the direct support level.
D	-Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e.,

all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
F	- The lowest maintenance level capable of complete repair of the support item is the direct support level.
D	-The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	-Nonreparable. No repair is authorized. (3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z	- Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
D	- Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	- Reparable item. Repair, condemnation, and disposal not authorized below depot/ specialized repair activity level.
A	- Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in

SB 708-41/42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. The following publication pertains to the AS-2731/GRC and its components: TM 11-5985-355-13, Antenna AS-2731/GRC.

b. National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MM, Fort Monmouth, NJ 07703 for the part required to support your equipment.

c. Action change codes indicated in the left-hand margin of the listing page denote the following:

- N - Indicates an added item.
- C - Indicates a change in data.
- R - Indicates a change in NSN only.

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) First. Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) Second. Find the illustration covering the functional group to which the item belongs.

(3) Third. Identify the item on the illustration and note the illustration figure and item number of the item.

(4) Fourth. Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

(1) First. Using the index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.


(2) Second. After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4.)

Change 1 3

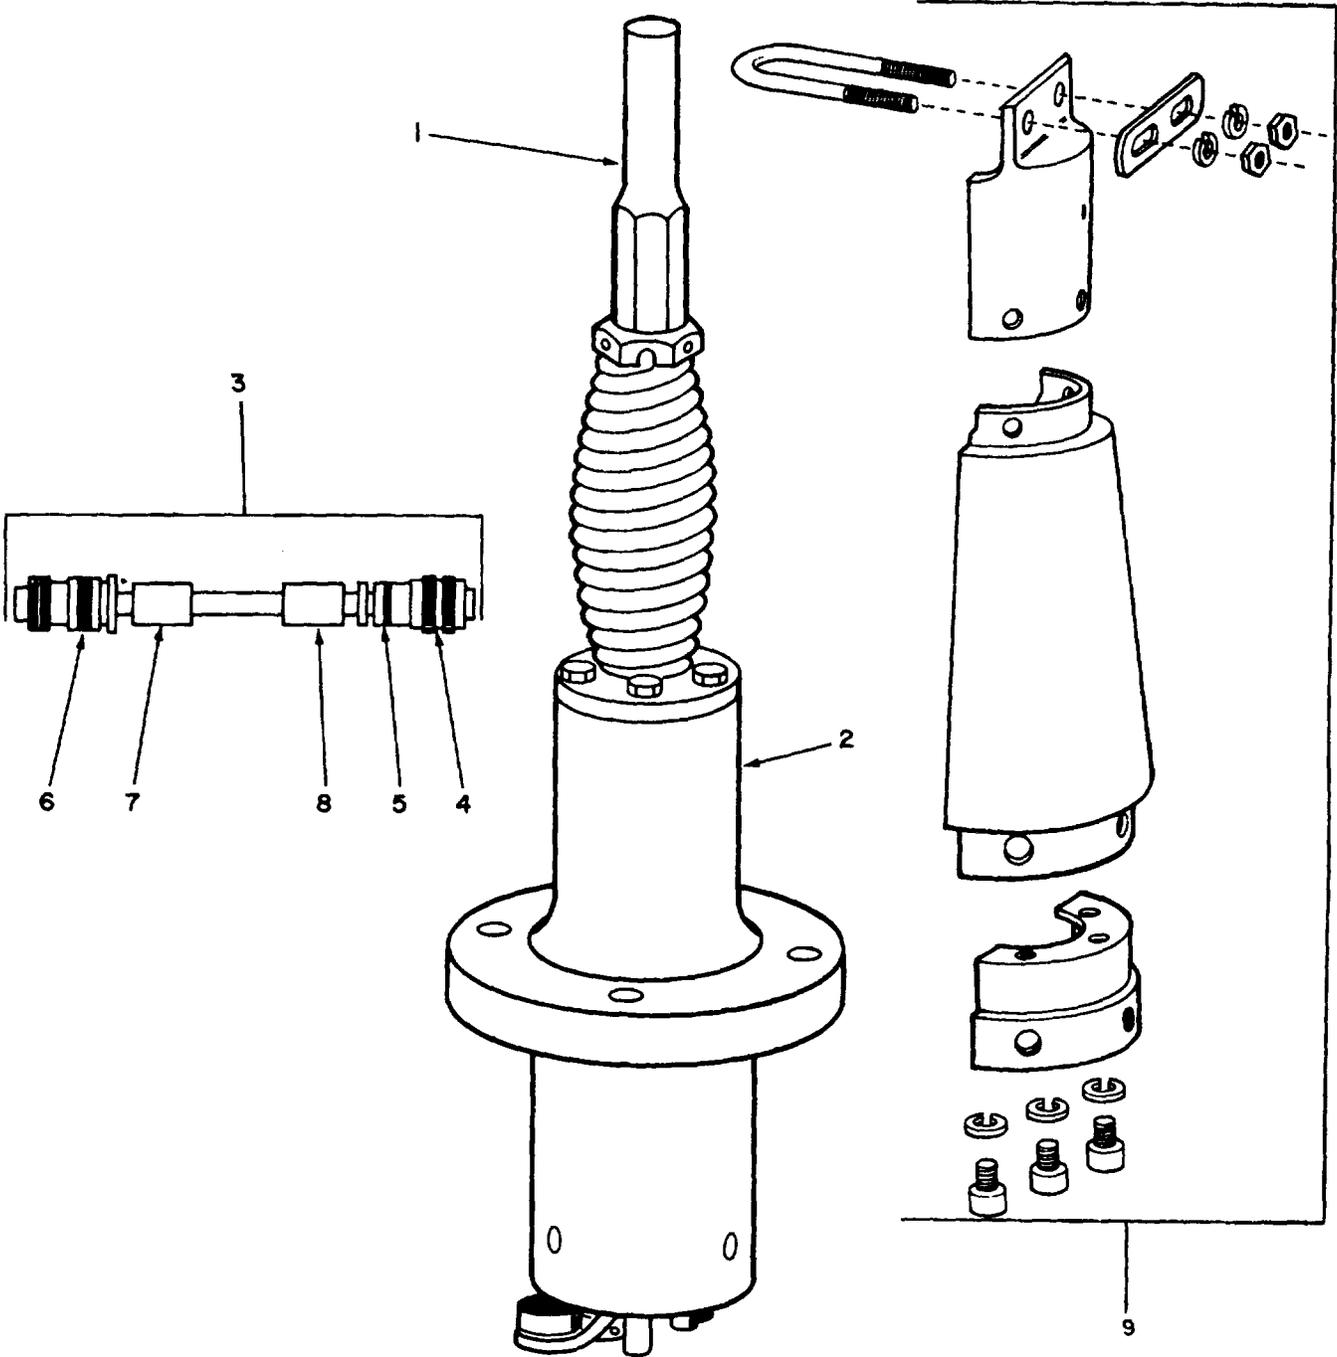

EL3UZ001

EL3UZ001


Figure 1. Antenna AS-2731/GRC.

Change 1 4

SECTION II


TM 11-5895-355-23P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 00 ANTENNA AS-2731/ GRC		
1	1	PAODD		SMD819249	80045	ANTENNA	EA	1
1	2	PAODD		SMD889210	80045	ANTENNA MTCHG UNIT	EA	1
1	3	PAOFD	5995-01-038-2203	SM-D-889260	80045	CABLE ASSEMBLY	EA	1
1	4	PAFZZ		SMC8S9203	77820	CONNECTOR, PLUS ELEC	EA	1
1	5	PAFZZ		SMC889204	77820	ADAPTER, CONNECTOR	EA	1
1	6	PAFZZ		SMC889246	25330	CONNECTOR, PLUG, ELEC	EA	1
1	7	XDFZZ		SMB889264-1	80045	BAND, MARKER	EA	1
1	8	XDFZZ		SMC889264.-	80045	BAND, MAKER	EA	1
N	1	PAOZZ		84011671	56996	RESTRAINT ASSEMBLY	EA	1
					Change 1 5			

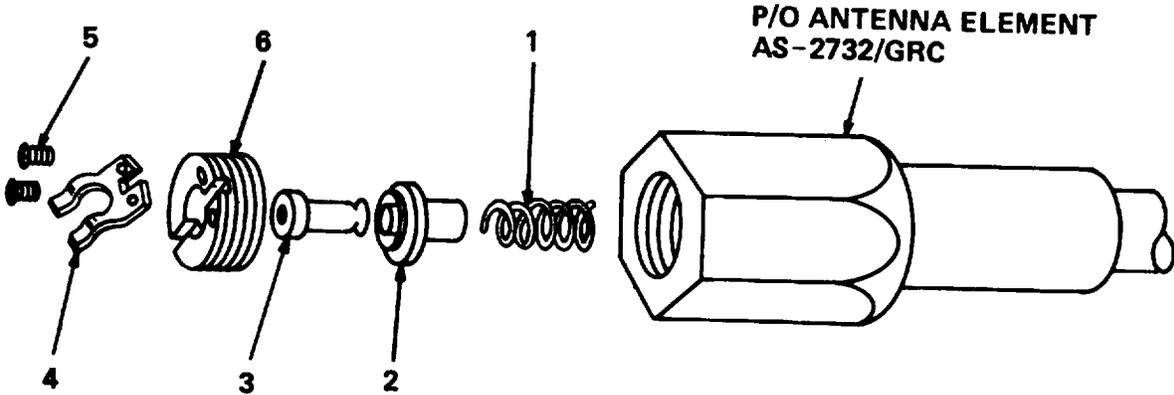


EL3UZ002

Figure 2. Antenna Element AS-2732/GRC.

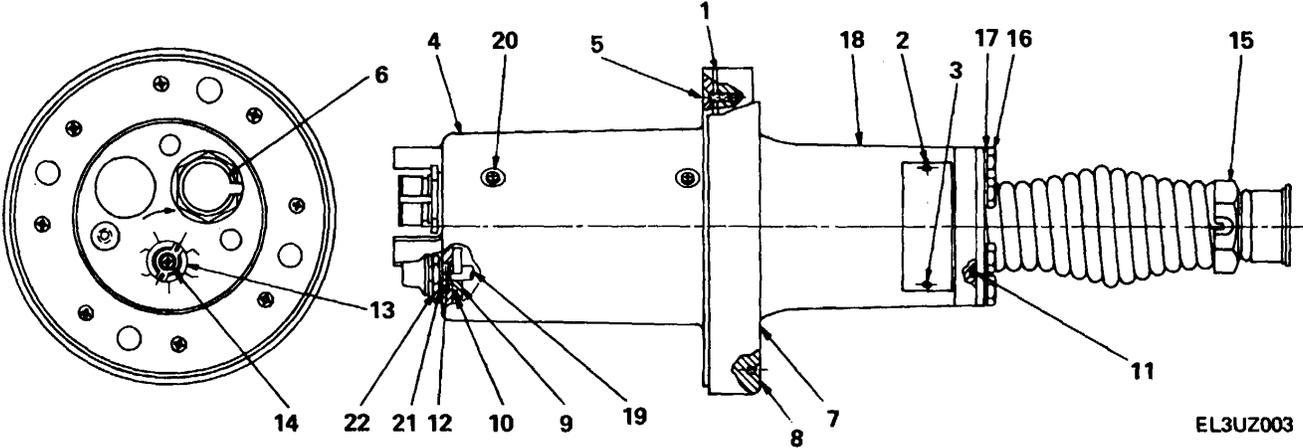

EL3UZ003

Figure 3. Matching Unit Base MX-9146/GRC (Sheet 1 of 2),

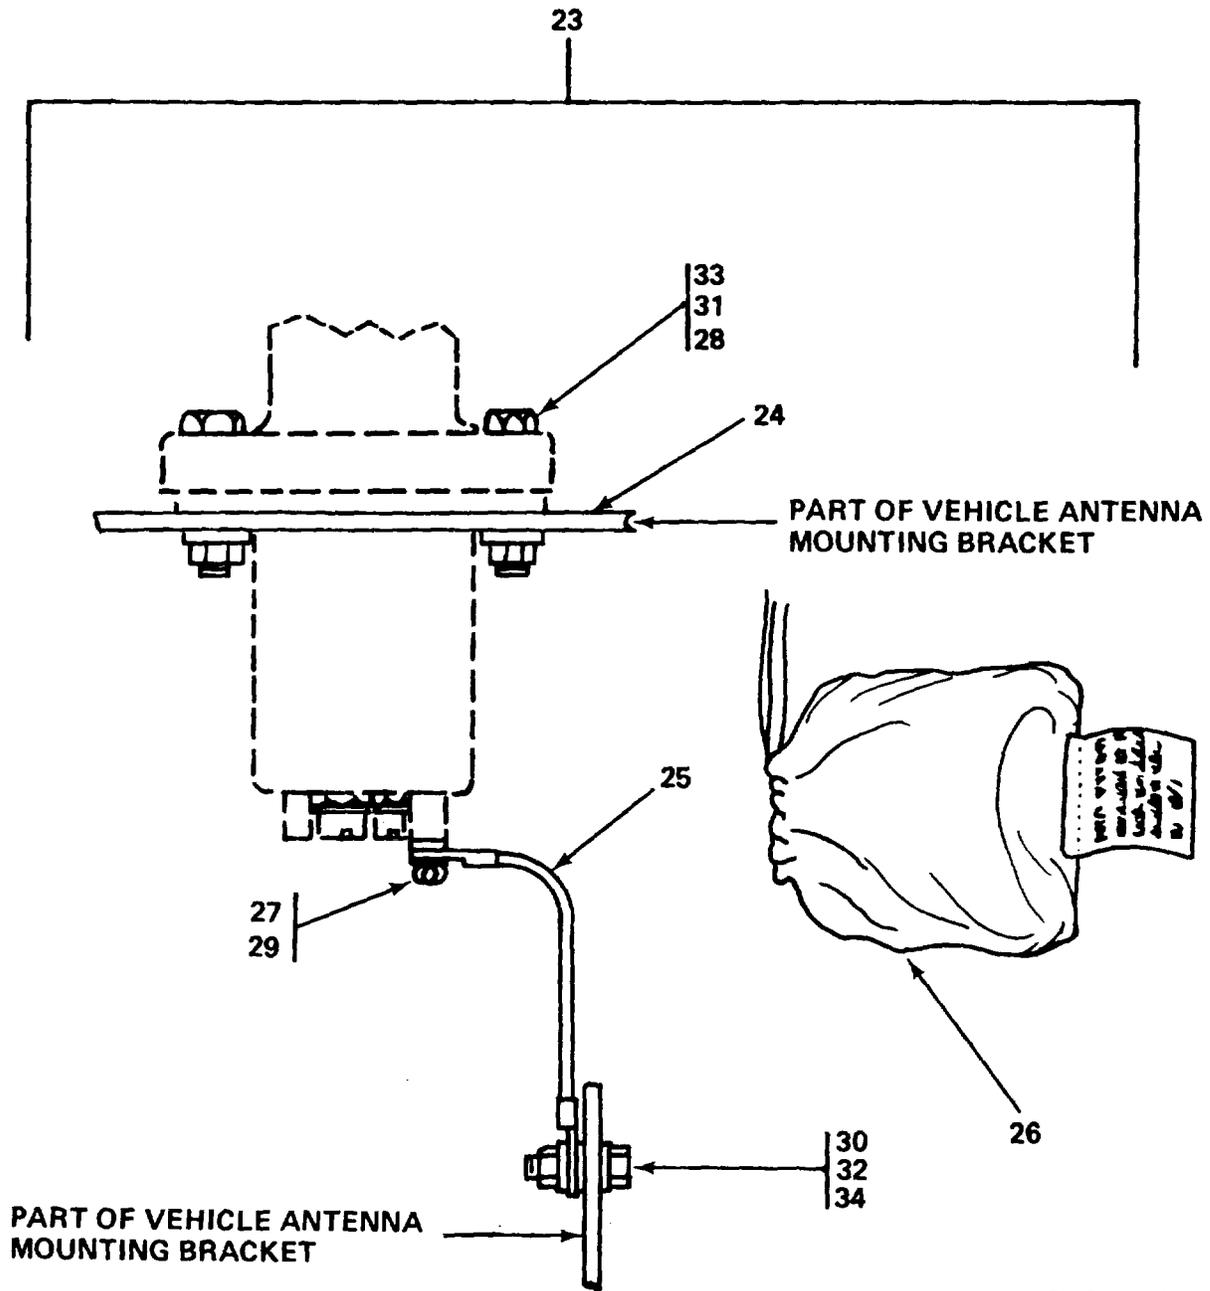


EL3UZ004

Figure 3. Matching Unit Base MX-9146/GRC (Sheet 2 of 2).

SECTION II

TM11-5985-355-23P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 MATCHING UNIT BASE MX-9146/GRC		
3	1	PAFZZ	5330-01-0QL-3676	SC-D-d77432	80063	GASKET	EA	1
3	2	XOFZZ		SMD889208	80045	PLATE.IDENTIFICATOI(.....	EA	1
3	3	XOOZZ		M551861-IC	96906	SCREW, TAPPING, THREAD	EA	2
3	4	XDDZZ		\$sD889211	80045	CASE,NATCHIKG UNIT	EA	1
3	5	XODDZ	5305-00-7165-4352	S5L5159-31	96906	SCREW,MACHINE	EA	8
3	6	XDDZZ		SMC8B9230-1	80045	COVER,ELECT CONN	EA	1
3	7	XDDZZ		SMC889248	80045	RING,REINFORCING	EA	1
3	8	XDDZZ	5305-00-719-5064	hS51959-30	96906	SCREW,MACHINE	EA	4
3	9	XDDZZ		SMC889266	80045	BUSHING,MACH THREAD	EA	1
3	10	PADZZ	5330-00-901-1196	MS9068-015	96906	PACKING,PREFORME	EA	1
3	11	PADZZ	5330-00-068-2500	MS9068-220	96906	PACKING,PREFORME	EA	1
3	12	PADZZ	5330-00-252-6048	MS29513-006	96906	PACKNG,PREFORME	EA	1
3	13	PAFZZ	5355-00-552-0451	9LS24-1	96906	KNOB	EA	1
3	14	XDFZZ		NM21097-6001	96906	SCREW,SELF-LOCKING	EA	1
3	15	PAFZZ		SM0889199	80045	CABLE-SPRING ASSY	EA	1
3	16	XDFZZ		SN889206	80045	SCREW,CAP,LEX HEAD	EA	6
3	17	XDFZZ	5310-00-243-4764	N\$3533-139B	96906	WASHERLOCK	EA	6
3	18	PADDD		SRD88215	80045	BASE ASSEMBLY	EA	1
3	19	PADDD		SMD889221	80045	SELECTOR ASSEMBLY	EA	1
3	20	XDOZZ	5305-00-433-3707	MS3212-21	96906	SCREW,MACHINE	EA	6
3	21	XDDOZ		SMB542068	80063	WASHER	EA	1
3	22	XDOZZ		S?-S-889212	80063	NUT	EA	1
3	23	PDOZZ		SMC88925t	80045	TG HARDWARE KIT	EA	1
3	24	XDOZZ	5330-00-07?4184	SC8160382	80063	GASKET	EA	1
3	25	XDOZZ		SMC283109	80063	GROUND STRAP	EA	1
3	26	XDOZZ		SMB5M 2106	80063	BAG	EA	1
3	27	XDOZZ	5305-0-857-S67	459122-03	96906	SCREW,MACHINE	EA	1
3	28	XDOZZ	5310-OG-637-9541	M535338-46	96906	HASHER,LOCK	EA	4
3	29	XD002	53110-080- -S786	H545904-60	96906	FASHER.LCCK	EA	2
3	30	XDOZZ	5310-00-889-2527	SM45904-12	96906	WASHER,LOCK	EA	3
3	31	XDOZZ	5310-00-732-0558	SS51967-8	96906	NUT.PLAIN,HEXAGO	EA	4
3	32	XDOZZ	5310-00-880-7746	N551968-5	96906	NUT,PLAIN,HEXAGO	EA	1
3	33	XDOOZ	S305-00-269-3215	HS90125-65	96906	SCREW,CAP,HEXAGO	EA	4
3	34	XDOZZ	5306-00-225-90E4	S90726-29	96906	BOLT,MACHINE	EA	1
					11			

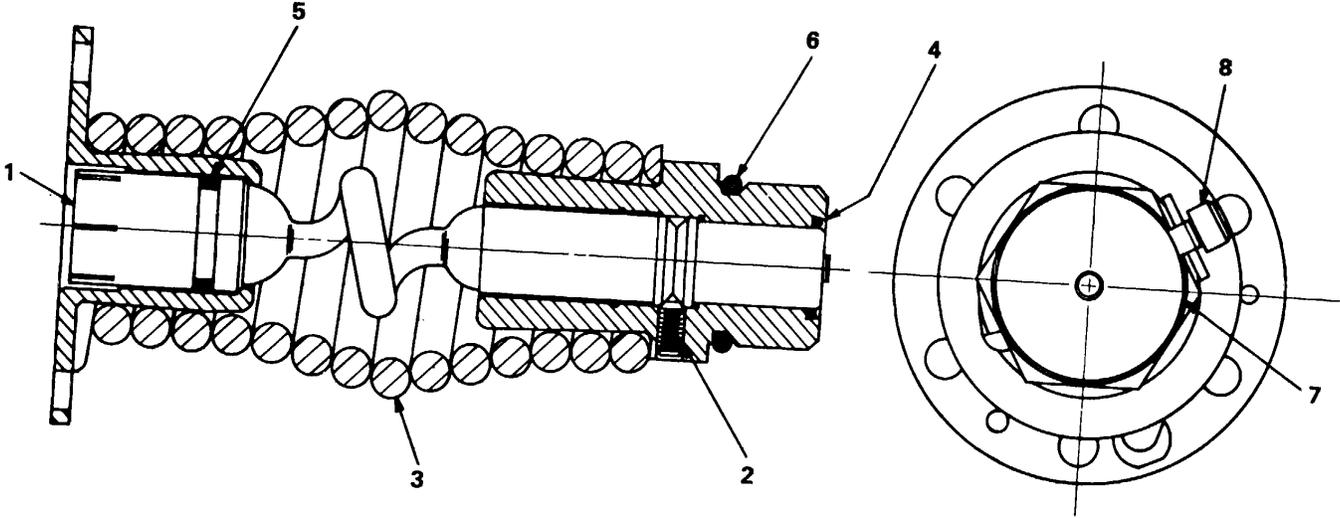

EL3UZ005

Figure 4. Cable-Spring Assembly.

SECTION II

TM11-5985-355-23P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 0201 CABLE SPRING ASSEMBLY		
4	1	PAFZZ		SM0889241	80045	CABLE ASSEMBLY,RF	EA	1
4	2	XDFZZ	530-00-7267S9	SMD0-889199-1	80063	SETSCREW	EA	3
4	3	PAFZZ		S4CB9I98	80045	SPRING ASSEMBLY.....	EA	1
4	4	PAFZZ	5330-00-901-1196	MS906-015	96906	PACKING,PREFORE	EA	1
4	5	PAFZZ	5330-00-965-0749	MS9068-114	96906	PACKING,PREFORME	EA	1
4	6	PAFZZ		M59068-213	96906	PACKIG,PREFORMED	EA	1
4	7	XAFZZ		SMC889230-3	80045	COVER,DUST	EA	1
4	8	XDFZZ		SM-B-889207	80045	SCREW CAP	EA	1
13/(14 blank)								

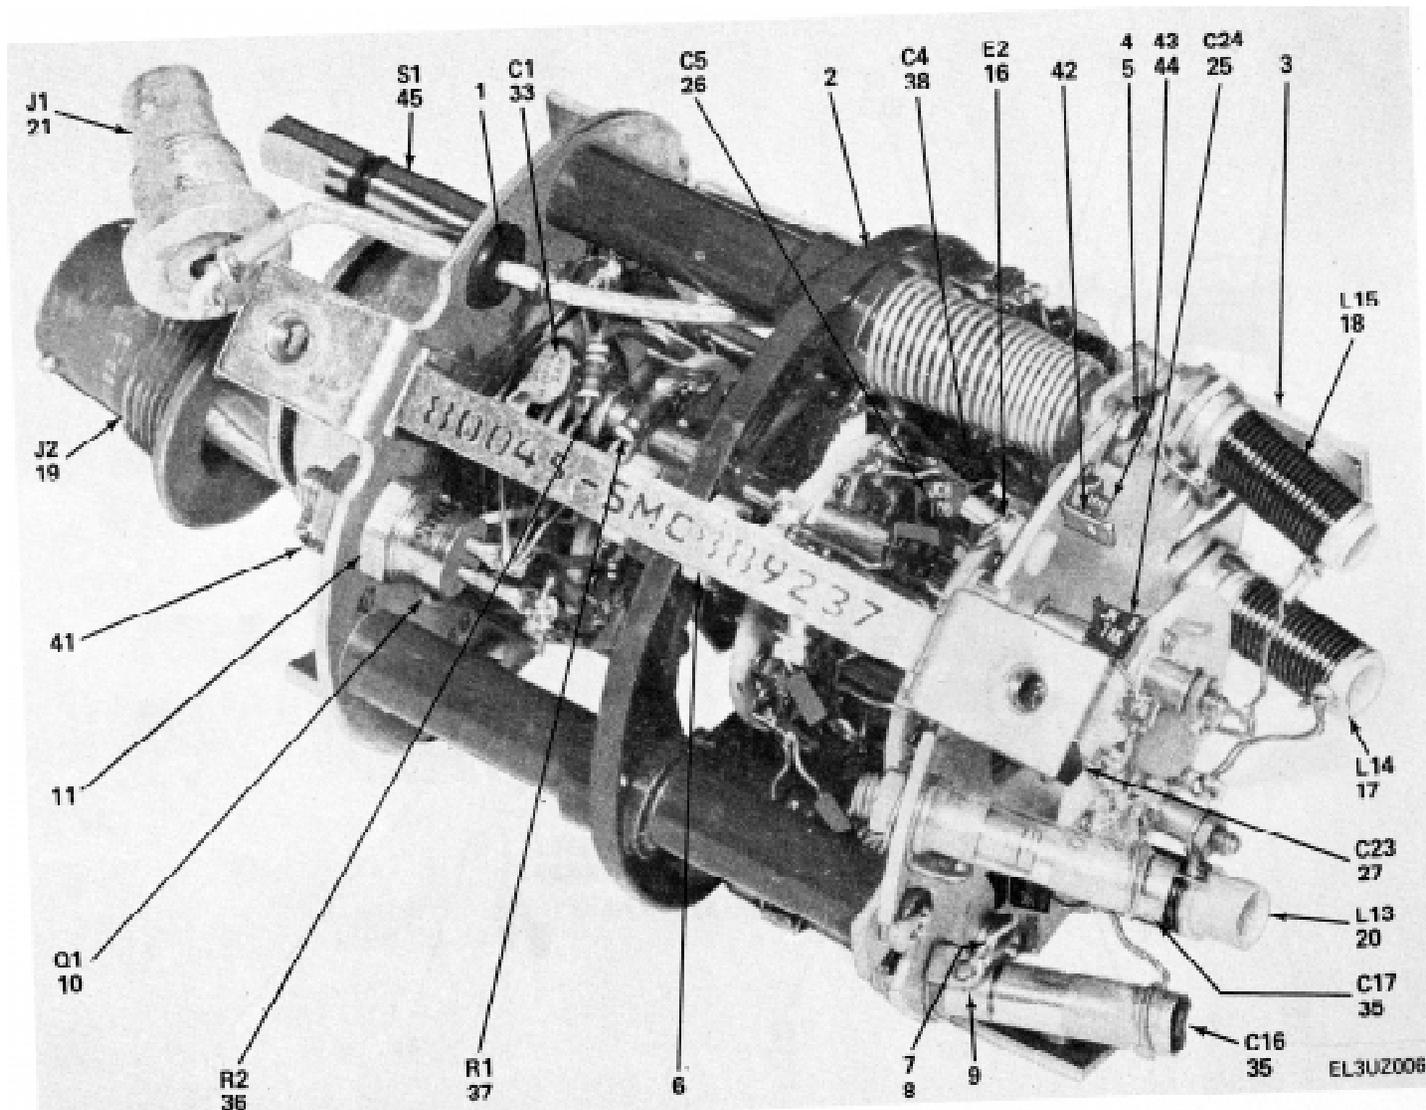


Figure 5. Selector Assembly (Sheet 1 of 4).

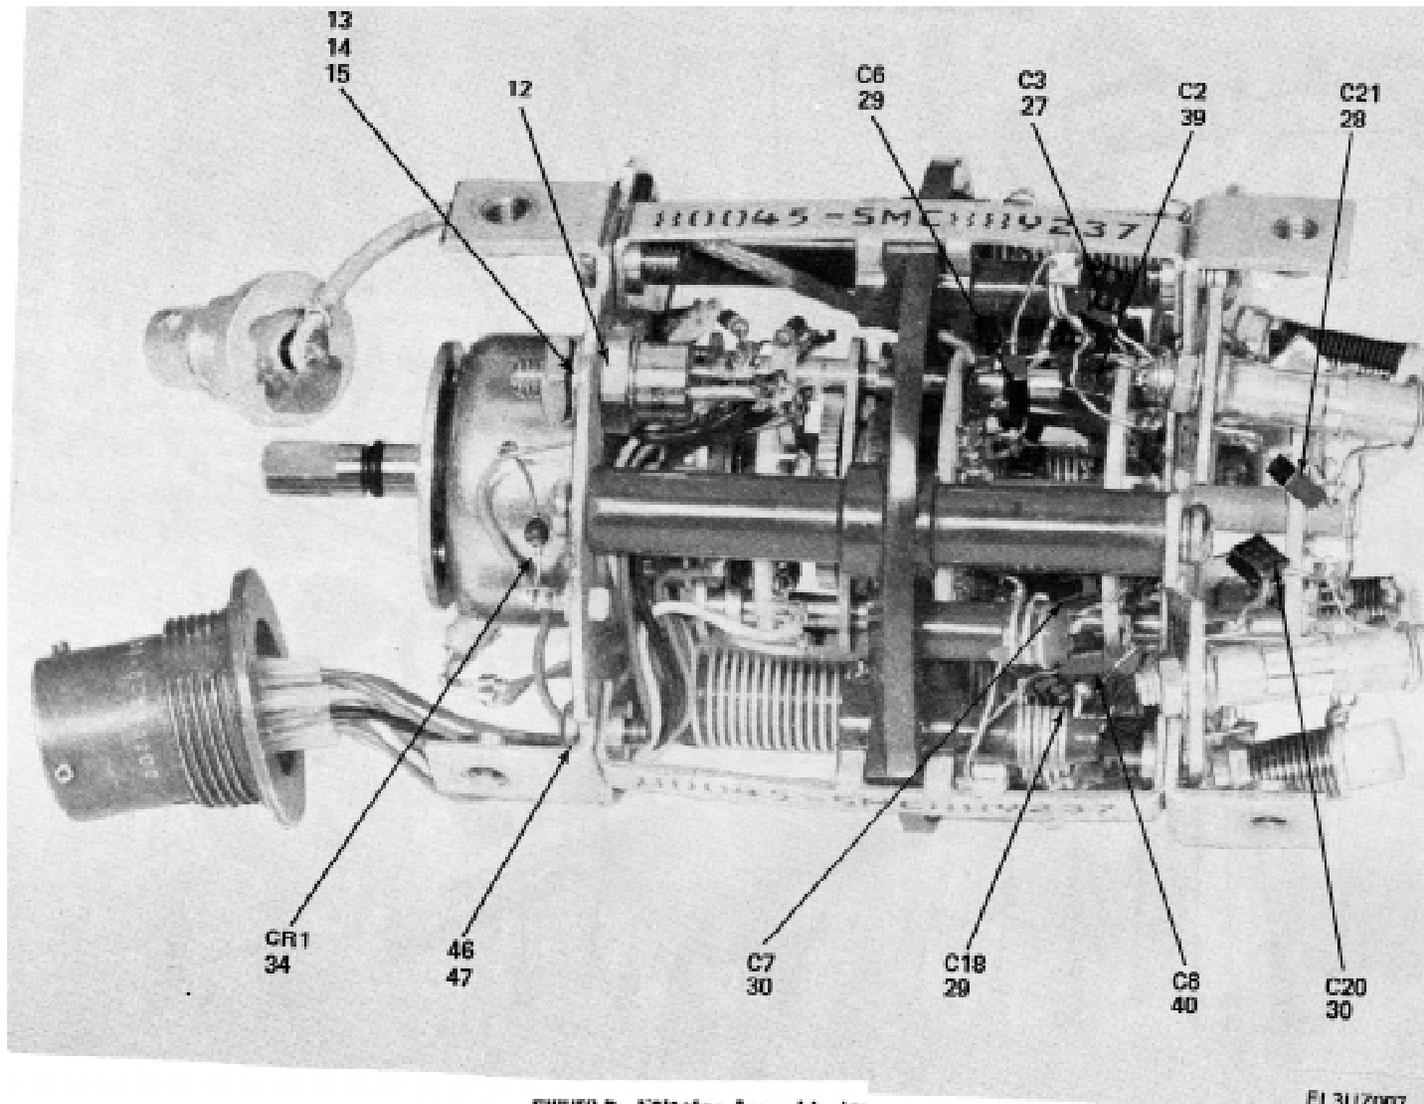


Figure 5. Selector Assembly (Sheet 2 of 4).

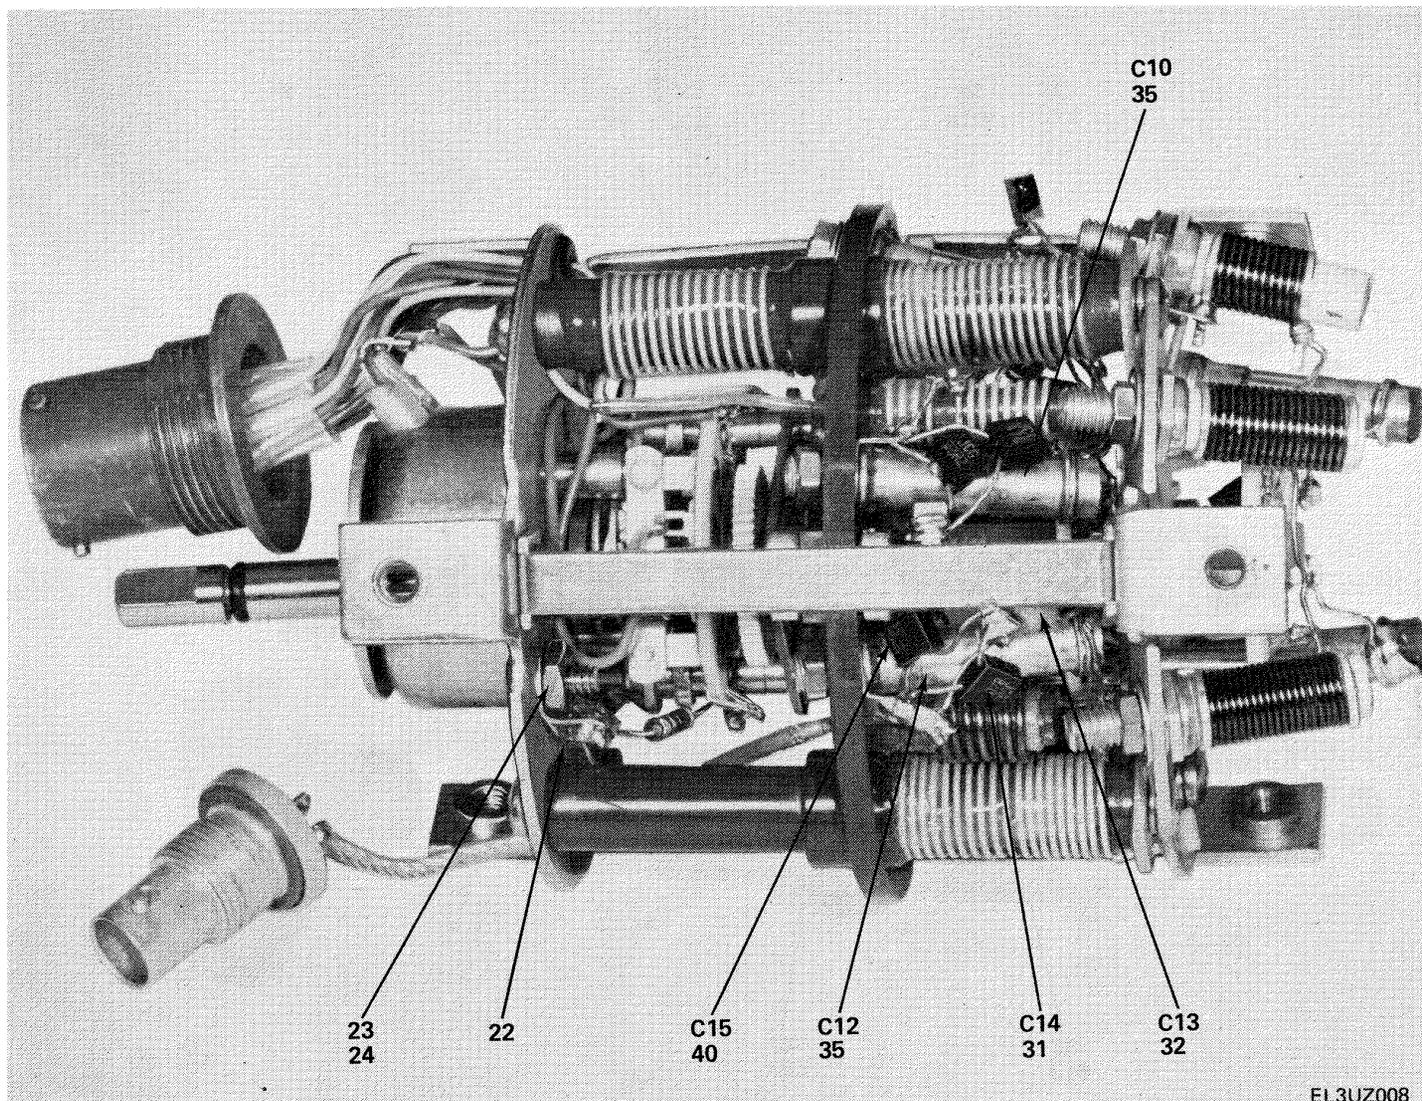


Figure 5. Selector Assembly (Sheet 3 of 4).

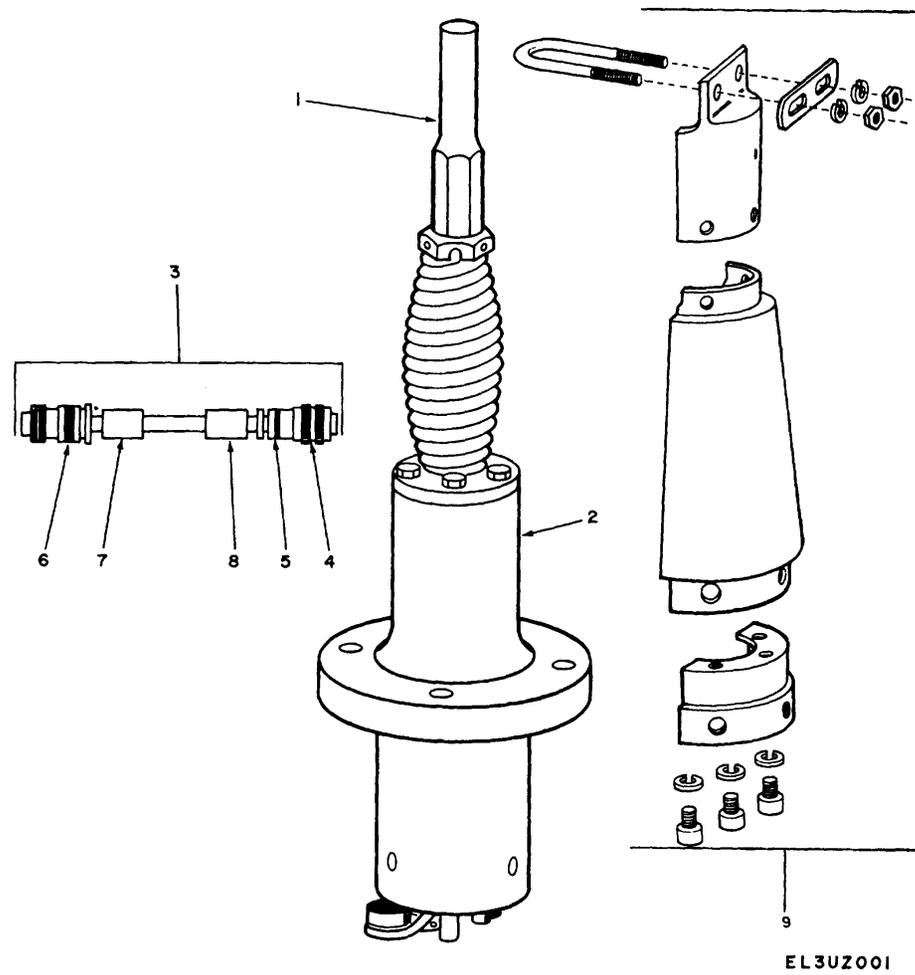


Figure 5. Selector Assembly (Sheet 4 of 4).

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 0202 SELECTOR ASSEMBLY		
5	1	XDDZZ		SM8542038	80063	GROMMET	EA	2
5	2	PADZZ		SMD889225	80045	SUPPORT ASSEMBLY	EA	
5	3	XDDZZ		SMD889231	80045	PLATE,REAR	EA	
5	4	XDDZZ	5305-00-054-6651	NS51957-28	96906	SCREW,MACHINE	EA	3
5	5	XDDZZ	5310-00-929-6395	MS35338-136	96906	WASHER,LOCK	EA	1
5	6	XDDZZ		SMC889237	80045	SUPPORT	EA	3
5	7	X)DZZ	5305-CO-05-6651	MS51957-27	96906	SCREW,M.ACHINE	EA	7
5	8	XDZZ	5310-00-929-6395	M535338-136	96906	WASHER,LOCK	EA	7
5	9	XOOZZ		SM8889273	80045	TERMINAL	EA	8
5	10	PAOZZ	5961-00-828-8705	JAN2NL774A	8005	SEMICONDUCTOR.....	EA	1
5	11	XDDZZ		SM--AB89317	80045	INSULATOR,SHG	EA	1
5	12	XDDZZ		SM-8-889316	80045	INSULATCRWSR.....	EA	2
5	13	XOOZZ	5310-00-167-C8IZ	AN960CIL	81349	WASHER,FLAT	EA	
5	14	XDZZ	53L-00-543-5933	35333-73	96906	WASHER,LOCK	EA	1
5	15	XDOZZ	5310-00-93f9765	MS35650-304	96906	NUT,PLIN,H PXAGO	EA	1
5	16	XODZZ		FT06-802	98291	TERNINAL.FEED THRU	EA	1
5	17	PADZZ		SMC889268	80045	COIL ASSEMBLYRF	EA	1
5	18	PADZZ		SMC8B9Z69	80045	COIL ASSEMBLY,RF	EA	1
5	19	PADZZ		SMC8d9202	77820	CCKNECTCR,RCPT,ELEC	EA	1
5	20	PADZZ		SH4C8B9Z33	80045	COIL ASSELMY,RF.....	EA	1
5	21	PAOZZ		M88d9239	80045	CONNECTOR,RCPT,ELEC.....	EA	1
5	22	XDDZZ	5940-00-827-2653	S577068-2	96906	ERRILAL,LUG	EA	2
5	23	XDOZZ	5305-00-054-665	M551957-27	96906	SCREW,MACHINE	EA	2
5	24	XDDZZ	5310-00-S34-9761	4535649-264	96906	NUT 7PLAIN,HEXAGO.....	EA	
5	25	PADZZ		CCROSCGL5OJM	81349	CAPACITOR.....	EA	1
5	26	PADZZ		CCROSCGIOOJM	81349	CAPACITOR.....	EA	1
5	27	PADZZ		CCROSCG220OJ	81349	CAPACITOR.....	EA	2
5	28	PAOZZ		CCRO5CG330JM	81349	CAPACITOR.....	EA	4
5	29	PADZZ		CCR05CG56OJM	81349	CAPACITOR.....	EA	1
5	30	PADZZ		CCROSCG68JOI	81349	CAPACITOR.....	EA	2
5	31	PADZZ		CCR05CGZ82JM	81349	CAPACITOR.....	EA	1
5	32	PADZZ	5910-0-983-5388	CK60BX100K	81349	CAPACITCR.FIXED	EA	1
5	33	PADZZ	5910-00-838-9421	CK6AWO12H M	1349	CAPACITOR,FIXED	EA	1
5	34	PADZZ	5961-00-087-6C47	JANIN645	81349	SEMICCNOUCTCR DE.....	EA	1
5	35	PADZZ	5910-00924-4205	PC40HLB0	81349	CAPACITCR.ARIA.....	EA	5
5	36	PADZZ	5905-C0-128-6151	RCROTG331JM	81349	RESISTOR,FIX.....	EA	1
5	37	PADZZ	5905-00-106-1356	RCRO7GI52JM	81349	RESISTORFIXED.....	EA	1
5	38	PADZZ		CCR05CG240JM	81349	CAPACITOR.....	EA	1
5	39	PADZZ		CCROSCG470JM	81349	CAPACITOR.....	EA	2
					19			

SECTION II

TM11-5985-355-23P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
5	40	PADZZ	CCR5CGS1JM		81349	CAPACITOR.....	EA	2
5	41	XDDZZ	S88931aLS		80045	TERMINAL,LUG	EA	1
5	42	XDDZZ	594-00-816-6103	NS77066-2	96906	TERMINAL.LUG	EA	1
5	43	XDOZZ	53C--0014-6650	MS51951-26	96906	SCREIW.MACHINE.....	EA	1
5	44	XDDZZ	5310-t-93-9761	MS35649-264	96906	NUT.PLAIN.HEXAGO.....	EA	1
5	45	PADDL		SMD889262	80045	SWTC-RELAY	EA	1
5	46	XDDZZ	B305--O4-6S2	S51957-28	96906	SCREW, MACHINE	EA	3
5	47	XDDZZ	5310-929-6395	n535338-136	96906	WASHEA,LOCK	EA	3
20/(21 blank)								

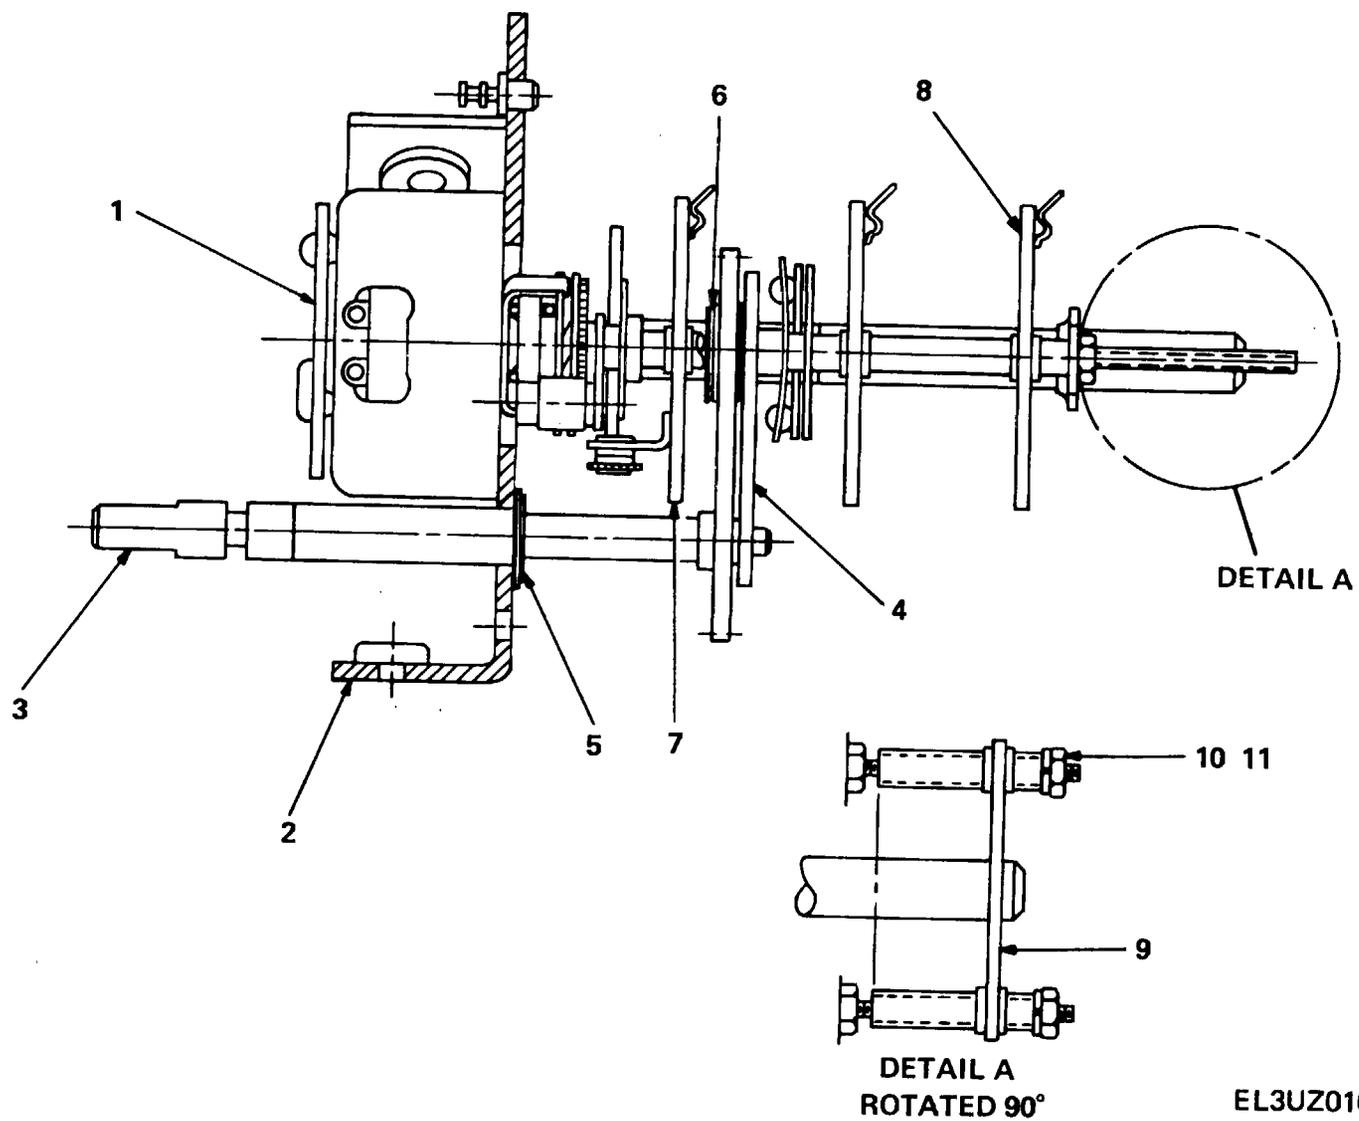


Figure 6. Switch-Relay.

SECTION II

TM11-5985-355-23P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6) DESCRIPTION	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 020201 SWITCH RELAY		
6	1	PADZZ		SMD889262-1	80045	MOTOR ASSEMBLY	EA	
6	2	XDDZZ		SMD889255-1	80045	PLATE,MOTER	EA	1
6	3	PADZZ		SMC889253	80045	GEARSHAFT ASSEMBLY.....	EA	1
6	4	XDDZZ		SMC889261	80045	PLATE,GEAR	EA	1
6	5	PADZZ	5365-00-725-0969	M14SI33-6401	96906	RING,RETAINING	EA	1
6	6	PADZZ		MS16624-5025	96906	RING,RETAINING	EA	2
6	7	XDDZZ		SMD889263-1	80045	WAFER SECT,SWITCH	EA	
6	8	XODZZ		SMD889263-2	80045	WAFER SECT,SWITCH	EA	2
6	9	XDDZZ		SMD889263-3	80045	WAFER SECT,SWITCH	EA	1
6	10	XDDZZ	5310-00-933-8118	NS35338-135	96906	WASHER,LOCK	EA	2
6	11	XDDZZ	5310-00-810-7785	NAS671-4	80205	NUT,PLAIN,HEXAGO.....	EA	
					23			

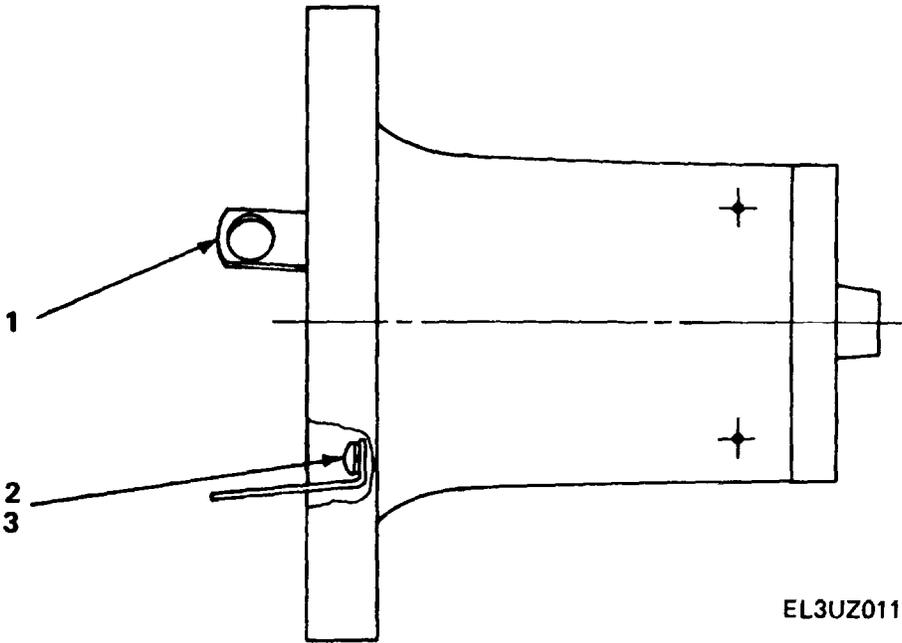


Figure 7. Base Assembly.

SECTION II

TM11-5985-355-23P

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
7	2	XDOZZ		SMB889223	80045	GROUP 0203 BASE ASSEMBLY		
7	2	XDOZZ	5305-00-054-6651	MS51957-27	96906	CLIP,ELECTRICAL	EA	3
7	3	XDDZZ	3103-00-929-6395	MS35338-136	96906	SCREW,MACHINE.....	EA	3
					25	WASHER,LOCK	EA	3

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

NOTE: LATEST PART NUMBER ASSIGNMENTS ARE INCLUDED AT END OF INDEX.

STOCK NUMBER	FIG. NO.	ITEM NO.	STOCK NUMBER	FIG. NO.	ITEM NO.
5305-00-054-5635		2	5	5310-00-810-7785	6
5305-00-054-6650		5	43	5940-00-816-6103	5
5305-00-054-6651		5	7	5940-00-827-2653	5
5305-00-054-6651		23	23	5961-00-828-8705	5
5305-00-054-6651		7	2	5910-00-838-9421	5
5305-00-054-6652		5	4	5305-00-857-5867	3
5305-00-054-6552		5	46	5310-00-880-7746	3
5330-00-068-2500		3	11	5310-00-889-2527	3
5330-00-078-4184		3	24	5330-00-901-7196	3
5310-00-078-9786		3	29	5330-00-901-7196	4
5961-00-087-6047		5	34	5999-00-921-0630	Z
5905-00-106-1356		5	37	5999-00-921-0631	Z
5310-00-167-0812		5	13	5910-00-924-4205	5
5306-00-225-9084		3	34	5310-00-929-6395	5
5310-00-243-4764		3	17	5310-00-929-6395	5
5330-00-252-6048		3	12	5310-00-929-6395	5
5305-00-269-3215		3	33	5310-00-929-6395	7
5305-00-433-3707		3	20	5310-00-933-8118	6
5310-00-543-5933		5	14	5310-00-934-9761	5
5355-00-552-0451		3	13	5310-00-934-9761	5
5310-00-637-9541		3	28	5310-00-934-9765	5
5305-00-719-5064		3	8	5840-00-939-5729	2
5305-00-724-6799		4	2	5330-00-965-0749	4
5365-00-725-0969		6	5	5910-00-983-5388	5
5905-00-728-6151		5	36	5330-01-017-3676	3
5310-00-732-0558		3	31	5995-01-038-2203	1
5305-00-765-4352		3	5		

PART NUMBER	FSCM	FIG. NO.	ITEM NO.	PART NUMBER	FSCM	FIG. NO.	ITEM NO.
AN960C10L	81349	5	13	M S9068-015	96906	3	10
CCR05CG100JM	81349	5	26	Ms9068-015	96906	4	4
CCR05CG150JM	81349	5	25	M59068-114	96906	4	5
CCR05CG220JM	81349	5	27	NS9685-213	96906	4	6
CCR05CG240JM	81349	5	38	MS9068-220	96906	3	11
CCR05CG330JM	81349	5	28	M5s90725-65	96906	3	33
CCR05CG470JM	81349	5	39	M59026-29	96906	3	34
CCR05CG510JM	81349	5	40	M59122-03	96906	3	27
CCR05CG560JM	81349	5	29	M59152-1	96906	3	13
CCR05CG680JM	81349	5	30	NA5671-4	80205	6	11
CCR05CG820JM	81139	5	31	PC40H180	81349	s	35
CK60AW102M	81349	5	33	RCRO7GI52J	81349	5	3
CK60BX100K	81349	5	32	RC RO33a JH	81349	5	36
FT06-802	98291	5	16	SC-D-877432	80063	3	a
JAN1N645	81349	5	34	SC8160382	80063	3	24
JAN2N1774A	80045	5	10	SN-8-889212	80063	3	22
MS16624-5025	96906	6	6	5H-8-889316	80045	5	12
MS16633-4018	96906	6	5	5S-8-88931 7	80045	5	11
MS21097-06001	96906	3	14	5t-8-889318	80045	5	41
MS29513-006	96906	3	12	S-D-89g 99-	80063	4	2
53212-21	96906	3	20	SM-0-889260	80045	1	3
MS35333-73	96906	5	14	SMB542004	80063	2	2
MS35338-135	96906	6	10	SMB542006	80063	2	1
MS35338-136	96906	5	5	5MB542007	80063	2	3
M353538-136	96906	5	8	SH852008	80063	2	4
MS35338-136	96906	5	47	SMB542038	80063	5	1
M353538-136	96906	7	3	SMB542068	80063	3	21
MS35338-139B	96906	3	17	SMH542L06	80063	3	26
MS35338-46	96906	3	28	SMB89520L	80045	2	6
MS35649-264	96906	5	24	Ss8892 06	80045	3	16
MS35649-264	96906	5	44	s- 88923	80045	7	1
MS35650-304	96906	5	15	SM58E9239	80045	5	21
MS45904-60	96906	3	22	sMwsas264-1	80045	1	7
MS45904-72	96906	3	30	SM889273	80045	5	9
MS51861-1C	96906	3	3	sC2830sg	80063	3	25
MS51957-1	96906	2	5	sHC8e9198	80045	4	3
MS51957-26	96906	5	43	SC8920o	77820	5	19
MS51957-27	96906	5	7	SMC889203	77820	1	4
MS51957-27	96906	5	23	SMC889204	77820	1	5
MS51957-27	96906	7	2	SC88923 -1	80045	3	6
MS51957-28	96906	5	4	5nC88933	80045	5	20
MS51957-28	96906	5	46	SM4889237	80045	5	6
MS51959-30	96906	3	8	SMC889246	25330	1	6
MS5159-31	96906	3	5	SMC889248	80045	3	7
MS51967-8	96906	3	31	SMC889251	80045	3	23
MS51S66-5	96906	3	32	SMC889Z53	80045	6	3
MS77066-2	96906	5	42	SMC889261	80045	6	4
MS77068-2	96906	5	22	SMC889264-2	80045	1	8

CONTINUED ON NEXT PAGE

SECTION IV

TM11-5985-355-23P

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

PART NUMBER	NATIONAL STOCK NUMBER AND PART NUMBER INDEX			PART NUMBER	NATIONAL STOCK NUMBER AND PART NUMBER INDEX		
	FSCM	FIG. NO.	ITEM NO.		FSCM	FIG. NO.	ITEM NO.
5NCa89266	80045	3	9	SMD889231	80045	5	3
SKC8eg268	80045	5	17	SMD889241	80045	4	
SneS89269	80045	5	18	SMD889249	80045	a	1
SD88S9199	80045	3	15	SMD889255-1	80045	6	2
sM08892C8	80045	3	2	SM889262	80045	5	45
SND889210	80045	1	2	SMD889262-1	80045	6	1
sMDs9211	80045	3	4	SMD889263-1	80045	6	7
D8892 15	80045	3	18	SMD889263-2	80045	6	8
s0m889221	80045	3	19	SMD889263-3	80045	6	9
S-0889225	80045	5	2				

LATEST PART NUMBER ASSIGNMENTS

PART NL4BE	FSCM	FIG. NO.	ITEM NO.
B4011671	56996	1	9
SM-B-889207	80045	4	8
SMC889230-3	80045	4	7

*U.S. GOVERNMENT PRINTING OFFICE: 1983-664-015/1127

Change 1 27/(28 blank)

By Order of the Secretary of the Army:

BERNARD W. ROGERS
General, United States Army
Chief of Staff

Official:

J. C. PENNINGTON
Brigadier General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-51, Organizational Maintenance requirements for AN/VRC-12, AN-VRC-43 thru 49, AN/VRC-53, AN/VRC-64, AN/GRC-125, and AN/GRC-160.

