DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) MULTIMETER AN/URM-105 (INCLUDING MULTIMETER ME-771U) FSN 6625-561-2036

Headquarters, Department of the Army, Washington, D.C. 15 August 1973

Current as of January 1973

		Paragraph	Page
SECTION I.	INTRODUCTION		
	Scope	1-1	2
	General	1-2	2
	Explenation of columns	1-3	2
	Special Information	1-4	4
	Location of repair parts	1-5	4
	Abbreviations (Not applicable)	1-6	5
	Reporting of equipment publication improvements	1-7	5
II.	PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III.	REPAIR PARTS LIST		6
IV.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
V.	REPAIR PARTS LIST.		7
VI.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
VII.	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER		
	CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		9

THIS PUBLICATION IS A COURTESY QUICK COPY FROM THE UNITED STATES ARMY PUBLICATIONS DISTRIBUTION CENTER, ST. LOUIS , MISSOURI, TO MEET YOUR NEEDS WHILE WE REPLENISH OUR REGULAR STOCK.

^{*}This manual supersedes TM 11-6625-203-20P, 29 October 1962 and TM 11-6625-203-45P, 26 October 1962.

Code

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational, direct support, general support, and depot maintenance of the AN/URM-105. The PCCN for the AN/URM-105 is GTEAAI for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. Prescribed Load Allowance (PLA)-Section II. Not applicable.

b. Repair Parts List-Section III. A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

c. Special Tools, Test and Support Equipment--section IV. Not applicable.

d. Repair Parts List-Section V. A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

e. Special Tools Test and Support Equip ment--section VI. Not applicable.

f. Index--Federal Stock Number and Reference Number Cross- Reference to Figure and Item Number--Section VII. A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provide. an explanation of columns found in the tabular list.

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source code. Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are—

Code Explanation

- PA— Item procured and stocked for anticipated or known usage.
- PB— Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
- PC- Item procured and stocked and which other-

Explanation

wise would be coded PA except that it is deteriorative in nature.

- PD— Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
- PE— Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
- PF— Support equipment which will not. be stocked but which will be centrally procured on demand.
- PG— Item procured and stocked to provide for sustained support for the life of the equip ment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
- KD— An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhual or repair.
- KF— An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general levels of maintenance.
- KB— Item included in both a depot overhaul/repair kit and a maintenance kit.
- MO- Item to be manufactured or fabricated at organizational level.
- MF— Item to be manufactured or fabricated at direct support maintenance level.
- MH— Item to be manufactured or fabricated at general support maintenance level.
- MD— Item to be manufactured or fabricated at depot maintenance level.
- AO— Item to be assembled at organizational level.
- AF— Item to be assembled at direct support maintenance level.
- AH— Item to be assembled at general support maintenance level.
- AD- Item to be assembled at depot maintenance level.
- XA— Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
- XB— Item is not procured or stocked. If not available through salvage, requisition.

Explanation

- XC— Installation drawing, diagram instruction sheet, field service drawing, that is iden. tified by manufacturers' part number.
- XD— Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support item as restricted by AR 700-42.

(2) Maintenance code. Maintanance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows-

(a) Use (third position). The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

Code Application/Explanation

O— Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

Code

- de Application/Explanation
- F— Support item is remowed, replaced, used at the direct support maintenance level.
- H— Support item is removed, replaced, used at the general support maintenance.
- D—Support items that are removed, replaced, used at depot only.

(b) Repair (fourth position). The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintanance code is not used a dash (-) sign is entered. For multi-service equip ment /systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code-

Code Application/Explination

- O— The lowest maintenance level capable of complete repair of the support item is the organizational level.
- F— The lowest maintenance level capable of complete repair of the support item is direct support.
- H— The lowest maintenance level capable of complete repair of the support item is general support.
- D The lowest maintenance level capable of complete repair of the support item is depot level.
- L Repair restricted to designated Specialized Repair Activity.
- Z Non-repairable. No repair is authorized.
- B No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code*. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows-

Code

Z— Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.

Explanation

- O-Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
- F—Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
- H—Repairable item. When uneconomically repairable, condemn and dispose at the. general support level.
- D—Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
- L—Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
- A— Item requires special handling or con demnation procedures because of specific reasons (i.e., precious metal contents high dollar value, critical material or hazardous material).
 - b. Federal Stock Number Indicates the Federel

stock number assigned to the item and will be used for requisitioning purposes.

c. Description Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., ea. in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. *Quantity Incorporated in Unit.* This column indicates the quantity of the item used in the equipment.

f. 15-Day Organizational Maintenance Allowances.

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL MA-CRA, Fort Monmouth NJ 07703.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other support equipment.

g. 30-Day DS/GS Maintenance Allowances.

NOTE

Allowances in GS column are for GS main. tenance only.

(1) The repair parts indicated by asterisk entries in separate allowance columns for DS and GS represent those authorized for use at that category of maintenance to be requisitioned on an "as required" basis, until stockage is basal on demand in accordance with AR 710-2.

(2) Allowance quantities are indicated in the special tool hats section for special tools TMDE, and other support equipment.

h. 1 Year Allowances Per 100 Equipments/Contingency Planning Purposes. Column intentionally left blank.

i. Depot Maintenance Allowance Per 100 Equip ments This column indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments.

j. Illustration

(1) Figure number. Indicates the figure number of the illustration on which the item is shown in TM 11-6625-203-12 and TM 11-6625-203-35.

(2) *Item number*. Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are—

Code	Used on
AE9	AN/URM-105

b The following publication pertain to the AN/URM-105 and its components:

TM 11.6625-203-12	Operator and
	Organizational Main.
	tenance: Multi meter
	AN/URM-105 Including
	Multimeter ME-77/U.
TM 11-6625-203-35	Field and Depot Main-
	tenance Manual:
	Multimeter AN/URM-105
	Including Multimeter ME-
	77/U

1-5. Location of Repair Parts

a This manual contains one cross-reference index (see VII) and to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal *stock* numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec VII), and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec III and V)

4

and locate the figure number (col 7a-20P, 10a-34P) and item number or reference designation (col 7b-20P, 10b-34P) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b—20P and 10a and 10b—34P, of the repair parts list (see III and V) until the item is located.

d. When the FSN, reference number, figure number, and item number are not known, scrutinize column 3 of the repair parts list (see III and V), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements.

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CRA, Fort Monmouth, NJ, 07703.

TM11-662 SECTION	25-203-24P III										
(1)	(2)	(3)		(4)	(5) QTY.	(6) 15-D	DAY ORG	ANIZATIO	NAL	(7) ILLUSTRA	TION
SMR	FEDERAL STOCK	DESCRIPTION		UNIT OF	INC IN	MAIN (A)	ITENANC (B)	E ALW (C)	(D)	(A) FIGURE	(B) ITEM
CODE	NUMBER	REFERENCE NUMBER & MFR CODE	USABLE ON CODE	MEAS	UNIT	1-5	6-20	21-50	51-100	NO.	NO.
PAOZZ	5940-702-5256	CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP) SMC145744-1 (800631		EA	1	*	*	*	*	1	
PAOZZ	5940-702-5240	CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP) SMC145746-2 (80063)		EA	1	*	*	*	*	1	
PAOZZ	6625-887-9910	CLIP ASSEMBLY NO-REF-DESIG (INSTALLED IN EQUIP) SCOL20735 (80063)		EA	2	*	*	*	*	1	
PAOZZ	6625-887-9140	COVER, TEST SET NO-REF-DESIG SM0145727 (80063)		EA	1	*	*	*	*	1	
PAOZZ	5330-847-9928	GASKET NO-REF-DESIG SM0145725 (80063)		EA	1	*	*	*	*		
PAOZZ	5970-892-3583	INSULATOR NO-REF-DESIG SC882764-1 (80063)		EA	1	*	*	*	*		
PAOZZ	5970-892-3584	INSULATOR NO-REF-DESIG SC682764-3 (80063)		EA	1	*	*	*	*		
PAOZZ	5355-855-5184	KNOB NO-REF-DESIG A20109 (91802)		EA	1	*	*	*	*		
PAOZZ	5355-823-9886	KNOB NO-REF-DESIG SCC22125 (80063)		EA	1	*	*	*	*		
PAOZZ	6625-655-8045	HOLDER, SPRING NO-REF-DESIG AUTOMATIC 39-301972 (70779)		EA	1	*	*	*	*		
PAOZZ	5305-655-6645	SCREW,MACHINE NO-REF-DESIG NYLON 20-301967 (842471)		EA	1	*	*	*	*		
PAOZZ	6625-395-9313	TIP, TEST PROD NO-REF-DESIG SNC 82761 (80063)		EA	2	*	*	*	*		

SECTION V						IMII-0	625-203	-24P							
(1)	(2)	(3)		(4)	(5)	(6) 30-DAY	DS MAI	NT	(7) 30-DAY	GS MAI	INT	(8) 1-YR	(9) DEPOT	(10) ILLUST	RATION
	FEDERAL	DESCRIPTION		UNIT	~	ALLOWA	NCE	(C)	ALLOWA			ALW PER 100	MAINT ALW PER	(A)	(B)
SMR CODE	STOCK NUMBER	REFERENCE NUMBER & MFR. CODE	USABLE ON CODE	OF MEAS	IN UNIT	1-20	21-50	51-100	1-20	21-50	51-100	EQUIP	100 EQUIP	FIGURE NO.	ITEM NO.
						2 20	<u></u>	51 100					20011		
PAHZZ	6625-887-9151	BRACKET NO-REF-DESIG D67-2013-1020 (34855)		EA	1				*	*	*	2			
PAHZZ	6625-887-9152	CASE, MULTIMETER NO-REF-DESIG SMD145727 (80063)		EA	1	*	*	*	*	*	*	2		1	
PAOZZ	5940-702-5256	CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP)		EA	1	*	*	*	*	*	*	3		1	
PAOZZ	5940-702-5260	SMC145746-1 (80063) CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP) SMC145746-2 (80063)		EA	1	*	*	*	*	*	*	3		1	
PAOZZ	6625-887-9910	CLIP ASSEMBLY NO-REF-DESIG (INSTALLED IN EQUIP)		EA	2	*	*	*	*	*	*	3		1	
PAOZZ	6625-887-9148	SCDL20735 (80063) COVER, TEST SET NO-REF-DESIG SMD145727 (80063)		EA	1	*	*	*	*	*	*	2		1	
PAOZZ	5330-887-9928	GASKET NO-REF-DESIG SMB145725 (80063)		EA	1	*	*	*	*	*	*	5			
PAOZZ	5970-892-3583	INSULATOR NO-REF-DESIG SCV82764-1 (80063)		EA	1	*	*	*	*	*	*	1			
PAOZZ	5970-892-3584	INSULATOR NO-REF-DESIG SCB82764-3 (80063)		EA	1	*	*	*	*	*	*	1			
PAOZZ	5355-855-5184	KNOB NO-REF-DESIG A2105 (91802)		EA	1	*	*	*	*	*	*	3			
PAOZZ	5355-823-9886	KNOB NO-REF-DESIG SCC22125 (80063)		EA	1	*	*	*	*	*	*	3			
PAHZZ	6625-656-2321	MULTIMETER REPLACEMENT NO-REF-DESIG SMD145751 (80063)		EA	1	*	*	*	*	*	*	3			
PAHZZ	6130-264-6050	RECTIFIER, METALLIC CR1 CX2E20-139 SMB145759 (83264)		EA	1				*	*	*	3		6	CR1
PAHZZ	5905-702-1152	RESISTOR, FIXED, FILM R16 RN65849R9F (81349)		EA	1				*	*	*	3		6	R16
PAHZZ	5905-577-1780	RESISTOR,FIXED,FILM R15 RN60B2260F (81349)		EA	1				*	*	*	3		6	R15
PAHZZ	5905-577-1787	RESISTOR, FIXED, FILM R10 RN60B8660F (81349)		EA	1				*	*	*	3		6	R10
PAHZZ	5905-824-3083	RESISTOR, FIXED, FILM R19 RN60B8870F (81349)		EA	1				*	*	*	3		6	R19
PAHZZ	5905-833-3872	RESISTOR, FIXED, FILM R17 RN60B1151F (81349)		EA	1				*	*	*	3		6	R17
PAOZZ	6625-655-8045	HOLDER, SPRING NO-RER-DESIG AUTOMATIC 39-301972 (70779)		EA	1	*	*	*	*	*	*	3		6	
PAHZZ	5905-581-6914	RESISTOR, FIXED, FILM R18 RN6081211F (81349)		EA	1				*	*	*	3		6	R18
PAHZZ	5905-581-6913	RESISTOR, FIXED,FILM R12 RN60B1501F (81349)		EA	1				*	*	*	3		6	R12
PAHZZ	5905-824-8534			EA	1				*	*	*	3		6	R9
PAHZZ	5905-983-5946	RESISTOR, FIXED, FILM R8 RN6089091F (81349)		EA	1				*	*	*	3		6	R8
PAHZZ	5905-577-6736	RESISTOR, FIXED, FILM R20 RN60B1002F (81349)		EA	1				*	*	*	3		6	R20
PAHZZ	5905-581-7626	RESISTOR, FIXED, FILM R1 RN60B1502F (81349)		EA	1				*	*	*	3		6	Rl

TM11-6625-203-24P

TM11-6625-203-24P

						TM11-6	625-203	3-24P							
SECTION V	(0)	(2)			(=)	(5)			(=)			(0)	()	(10)	
(1)	(2)	(3)		(4)	(5)				(7)			(8)	(9)	(10)	
		DEGODEDETAN			0.0001		DS MAI	LN'I'		GS MAI	.N.T.	1-YR	DEPOT	ILLUST	RATION
		DESCRIPTION			~	ALLOWA		(0)	ALLOWA		(0)		MAINT	(7)	
SMR	FEDERAL STOCK			UNIT OF	INC IN	(A)	(B)	(C)	(A)	(B)	(C)	100 EQUIP	ALW PER 100	(A) FIGURE	(B)
CODE	NUMBER	REFERENCE NUMBER & MFR. CODE	USABLE ON CODE	MEAS		1-20	21-50	51-100	1-20	21-50	51-100	CNTGCY	EOUIP	NO.	NO.
CODE	NUMBER	REFERENCE NUMBER & MFR. CODE	USABLE ON CODE	MEAS	UNII	1-20	21-30	51-100	1-20	21-30	51-100	CNIGCI	EQUIP	110.	10.
PAHZZ	5905-691-0572	RESISTOR, FIXED, FILM R21		EA	1				*	*	*	3		6	R21
	5505 051 0572	RN60B2872F (81349)		2	-							5		0	
PAHZZ	5905-725-2120	RESISTOR, FIXED, FILM R6		EA	1				*	*	*	3		6	R6
		RN60B9092F (81349)													
PAHZZ	5905-723-4380	RESISTOR, FIXED, FILM R2		EA	1				*	*	*	3		6	R2
		RN60B1783F (81349)													
PAHZZ	5905-655-1991	RESISTOR, FIXED, FILM R22		EA	1				*	*	*	3		6	R22
		RN60B3013F (81349)													
PAHZZ	5905-655-3687	RESISTOR, FIXED, FILM R5 900,000 OHMS		EA	1				*	*	*	3		6	R5
		PORM1PCT 2W													
		SMC145753-18 (81349)										-			- •
PAHZZ	5905-655-3716	RESISTOR, FIXED, FILM R3 1-8 MEG		EA	1				*	*	*	3		6	R3
		PORM1PCT 1-2W 33-301907-17 (84247)													
PAHZZ	5905-813-5382			EA	1				*	*	*	3		6	R4
PARZZ	5905-015-5502	RESISTOR, FIXED, FILM R4 18 MEG PORM1PCT 2W		ĽА	T							2		0	K4
		SMC145753-19 (80063)													
PAHZZ	5905-815-3798	RESISTOR, FIXED, FILM R13		EA	1				*	*	*	3		6	R13
		RN65B24R9F (81349)													
PAHZZ	5905-577-9710	RESISTOR, FIXED, WIREWOUND R14 4 OHMS		EA	1				*	*	*	3		6	R14
		PORM1PCT 1-4W													
		SMB145761 (80063)													
PAHZZ	5905-866-0263	RESISTOR, VARIABLE R11 20,000 OHMS,		EA	1				*	*	*	3		6	R11
		PORM20PCT 1-2W													
		SMB145757 (80063)													
PAOZZ	5305-655-6645	SCREW, MACHINE NO-REF-DESIG NYLON		EA	1	*	*	*	*	*	*	5			
53477	5020 000 000	20-301967 (84247)			1				ж.	ж	т	5			C1
PAHZZ	5930-887-7796	SWITCH ASSEMBLY S1		EA	1				^	^	^	5			S1
PAOZZ	6625-395-9313	SMD145771 (80063) TIP, TEST PROD NO-REF-DESIG		EA	2	*	*	*	*	*	*	3			
PAOZZ	0023-395-9313	SCC82761 (80063)		БA	2							3			
PAHZZ	6145-160-5027	WIRE, ELECTRICAL NO-REF-DESIG		FT	4				*	*	*	8			
		WS16U (81349)			-							-			
PAHZZ	6145-164-6952	WIRE, ELECTRICAL NO-REF-DESIG		FT	4				*	*	*	8			
		WS17U (81349)													

TM11-6625-203-24P SECTION VII INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

	FIGURE	ITEM		FIGURE	ITEM		
STOCK NUMBER	NO.	NO.	STOCK NUMBER	NO.	NO.		
				_			
5305-655-6645			5905-824-3083	6	R19		
5330-887-9928			5905-824-8534	б	R9		
5365-823-9886			5905-833-3872	6	R17		
5355-855-5184			5905-866-0263	6	R11		
5905-577-1780	б	R15	5905-983-5946	6	R8		
5905-577-1787	б	R10	5930-887-7796		S1		
5905-577-6736	6	R20	5940-702-5256	1			
5905-577-9710	б	R14	5940-702-5260	1			
5905-581-6913	б	R12	5970-892-3583				
5905-581-6914	6	R18	5970-892-3584				
5905-581-7626	6	R1	6130-264-6050	6	CR1		
5905-655-1981	6	R22	6145-160-5027				
5905-655-3687	6	R5	6145-164-6952				
5905-655-3716	6	R3	6625-395-9313				
5905-691-0572	6	R21	6625-655-8045				
5905-702-1152		R16					
	6		6625-656-2321	1			
5905-723-4380	6	R2	6625-887-9148	1			
5905-725-2120	6	R6	6625-887-9151	_			
5905-813-5382	6	R4	6625-887-9152	1			
5905-815-3798	6	R13	6625-887-9910	1			
REFERENCE	MFR	FIG.	ITEM	REFERENCE	MFR	FIG.	ITEM
NO.	CODE	NO.	NO.	NO.	CODE	NO.	NO.
A2105	91802			SCC22125	80063		
D67-2013-1020	34855			SCC82761	80063		
RN60B1002F	81349	б	R20	SCDL20735	80063	1	
RN60B1151F	81349	6	R17	SMB145725	80063	_	
RN60B1211F	81349	6	R18	SMB145757	80063	б	R11
RN60B1501F	81349	6	R10 R12	SMB145759	83264	6	CR1
RN60B1502F	81349	6	81	SMB145761	80063	6	R14
		6				8 1	R14
RN60B1691F	81349		R9	SMC145746-1	80063		
RN60B1783F	81349	6	R2	SMC145746-2	80063	1	
RN60B2260F	81349	6	R15	SMC145753-18	81349	6	R5
RN60B2872F	81349	6	R21	SMC145753-19	80063	6	R4
RN60B3013F	81349	6	R22	SMD145727	80063	1	
RN60B8660F	81349	б	R10	SMD145751	80063		
RN60B8870F	81349	6	R19	SMD145771	80063		S1
RN60B9091F	81349	6	R8	WS16U	81349		
RN60B9092F	81349	6	R6	WS17U	81349		
RN65B24R9F	81349	6	R13	20-301967	84247		
RN65B49R9F	81349	6	R16	33-301907-17	84247	6	R3
SCB82764-1	80063	-	-	39-301972	70779	-	-
SCB82764-3	80063						

By Order of the Secretary of the Army:

Official:

CREIGHTON W. ABRAMS

General United States Army chief of staff

VERNE L. BOWERS

Major General United States Army The Adjutant General

Distribution:

Active Army: USASA (2) CNGB (1) ACSC-E (2) USAARENBD (2) USAMB (10) AMC (1) MICOM (2) TECOM (2) USASTRATCOM (4) HISA (ECOM) (18) CONARC (5) ARADCOM (2) ARADCOM Rgn (2) OS Maj Cored (4) LOGCOMD (5) USACDCEC (5) MDW (1) Armies (2) Corps [2) Div (1) Regt (1) Bde (1) Bn (1) Instl (2) except Ft Gordon (10) Ft Huechuca (10) Ft Carson (10)

Svc Colleges (2) USASESS (5) USAINTS (2) USAADS (2) USAFAS (2) UBAARMS (2) USAIS (2) USAES (2) AD (2) 1 XWPI SAAD (30) LBAD (14) TOAD (14) ATAD (10) LEAD (7) Gen Dep (2) Sig Sec. Gen Dep (2) Sig Dep (5) MAAG (1) WRAMC (1) USARMIS (1) USERDAA (1) USAERDAW (1) Sig FLDMS (1) Ft Richardson (ECOM Oft) (2) Units org under fo1 TOE: -1 ea. 11-158 29.136 29-134

NG: State AG (3): Units-Same as Active Army. USAR: None. For explanation of abbreviations used, see AR 310-50.

☆ U.S. GOVERNMENT PRINTING OFFICE : 1965 0 - 491-202 (20511)

.

019411-000