

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
OSCILLOSCOPES OS-46/U AND OS-46A/U
(NSN 6625-00-710-9624)**

Headquarters, Department of the Army, Washington, D.C.
14 March 1975

Current as of December 1974

	Paragraph	P a g e
SECTION I. INTRODUCTION		
Scope.....	1-1	2
General.....	1-2	2
Explanation of columns	1-3	2
Special information	1-4	4
Location of repair parts	1 - 5	4
Abbreviations (Not applicable)	1-6	4
Reporting of equipment publication improvements	1-7	4
II. PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III. REPAIR PARTS LIST	6	
IV.. SPECIAL TOOLS TEST AND SUPPORT EQUIPMENT (Not applicable)		
V. INDEX - NATIONAL STOCK NUMBER AND REFERENCE NUMBER CROSS- REFERENCES TO FIGURE AND ITEM NUMBER	,.....	99

*This manual supersedes TM 11-6625-285-20P, 13 August 1962.

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the OS-46 U and OS-46A U. The FCCN for the equipment is GTEAFW for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. Prescribed Load Allowance (PLA) - Section II. Not applicable.

b. Repair Parts List - Section III. A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

c. Special Tools, Test and Support Equipment - Section IV. Not applicable.

d. Index - National Stock Number and Reference Number Cross-Reference to Figure and Item Number - Section V. A list, in ascending numerical sequence, of all National stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. National stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists —

a. Source, Maintenance, and Reusability Codes (SMR).

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are —

Code	Explanation
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deterministic in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for replacement or additional

Code	Explanation
PE	initial issues or outfittings. Not subject to automatic replenishment.
PF	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PG	Support equipment which will not be stocked but which will be centrally procured on demand.
KD	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KF	An item of depot overhaul repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KB	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at direct support maintenance level.
MH	Item to be manufactured or fabricated at general support maintenance level.
MD	Item to be manufactured or fabricated at depot maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.
AG	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
NA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
NR	Item is not generated or stocked. If not available through salvaging, requisition.
ND	Installation drawing, diagram and/or

<i>Code</i>	<i>Explanation</i>	<i>Code</i>	<i>Application/Explanation</i>
	sheet, field service drawing, that is identified by manufacturers' part number.		complete repair of the support item is direct support.
X D -	Support items can be requisitioned with justification.	H -	The lowest maintenance level capable of complete repair of the support item is general support.
	NOTE Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.	D -	The lowest maintenance level capable of complete repair of the support item is the depot level.
	(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows -	L -	Repair restricted to designated Specialized Repair Activity.
	(a) Use (third position). The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.	Z -	Non-repairable. No repair is authorized.
	o - Support item is removed, replaced, used at the organizational level of maintenance.	K -	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.
	NOTE A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.		(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows -
F -	Support item is removed, replaced, used at the direct support maintenance level.	Z -	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
H -	Support item is removed, replaced, used at the general support maintenance.	O -	Repairable item. When uneconomically repairable, condemn and dispose as organizational level.
D -	Support items that are removed, replaced, used at depot only.	F -	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
	(b) Repair (fourth position). The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used as lash (-) sign is entered. For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code -	H -	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
	Code Application/Explanation	D -	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
0 -	The lowest maintenance level capable of complete repair of the support item is the organizational level.	L -	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
F -	The lowest maintenance level capable of	A -	Item requires special handling or condemnation procedures because of specific reasons (i.e.. precious metal content, high dollar value, critical material or hazardous material).
		b. National Stock Number. (NSN) Indicates the National stock number assigned to the listed item and will be used for requisitioning purposes.	
		c. Description. Indicates the Federal item name	

and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation: e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. Quantity *Incorporated in Unit*. This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. *15-Day Organizational Maintenance Allowance*.

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL-MA-D, Fort Monmouth, NJ, 07703. Any changes approved will be reflected in a revision to the RPSTL.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other equipment.

g. *Illustration*. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown in TM 11-5131.

(2) Item number. Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. **Uncoded** items are applicable to all models. Identification of the usable on codes used in this publication

are -	Code	Used on
	BAA	OS-46/U
	BUF	OS-46A/U

(Next printed page is 6)

b. The following publication pertains to the equipment and its components:

TM 11-5131

Oscilloscopes OS-46/U,
OS-46A/U, OS-500/U,
OS-5001A/U and
OS-5001B/U.

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (sec V) to be used to locate a repair part when either the National stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed National stock number in the index of National stock numbers.

b. When the National stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of National stock numbers (sec V) and locate the National stock number or reference number. The NSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec III) and locate the figure number (col 7a) and item number or reference designation (col 7b) as noted in the NSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (sec III) until the item is located.

d. When the NSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec III), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-D, Fort Monmouth, NJ 07703.

SECTION III

SMR CODE	NATIONAL STOCK NUMBER	REFERENCE NUMBER & MFR CODE	DESCRIPTION	UNIT OF MEAS	QTY. IN IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALW					ILLUSTRATION	
						(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIGURE NO.	(b) ITEM NO.	
		GROUP 0001 OSCILLOSCOPES OS-46/U, OS-46A/U , OS-5001/U, OS-5001A,B/U										
PAOZZ		CLIP, ELECTRICAL M103 GRID PLATE TYPE: FA 118596 (78947)		FA	2	*	*	*	*	*		M103
PAOZZ	5935-00-8385183	ADAPTER CONNEC NO-REF-DESIG 210 (82879)			1	*	*	*	*	*		
PAOZZ	5960-00-6244718	ELECTRON TUBE V601 IOB2UA (01349)			1	*	*	*	*	*	37	V601
PAOZZ	5960-00-5431921	ELECTRON TUBE V603 1X28 (81349)			2	*	*	*	*	*	38	V603
PAOZZ	5960-00-5431921	ELECTRON TUBE V604 1X28 (81349)			REF	*	*	*	*	*	38	V604
PAOZZ	5960-00-2960517	ELECTRON TUBE V401 5AOP1 (81349)			1	*	*	*	*	*	43	V401
PAOZZ	5960-00-2620218	ELECTRON TUBE V605 5Y3WGTA (81349)			1	*	*	*	*	*	43	V605
PAOZZ	5960-00-2620100	ELECTRON TUBE V502 6J6WA (81349)			2	*	*	*	*	*	32	V502
PAOZZ	5960-00-2620160	ELECTRON TUBE V503 6J6WA (81349)			REF	*	*	*	*	*	37	V503
PAOZZ	5960-00-1080257	ELECTRON TUBE V303 6Q5G (81349)			1	*	*	*	*	*	32	V303
PAOZZ	5960-00-1667663	ELECTRON TUBE V101 12AU7 (81349)			8	*	*	*	*	*	32	V101
PAOZZ	5960-00-1667663	ELECTRON TUBE V102 12AU7 (81349)			REF	*	*	*	*	*	32	V102
PAOZZ	5960-00-1667663	ELECTRON TUBE V103 j12AU7 (81349)			REF	*	*	*	*	*	32	V103
PAOZZ	5960-00-1667663	ELECTRON TUBE V104 12AU7 (81349)			REF	*	*	*	*	*	32	V104
PAOZZ	5960-00-1667663	ELECTRON TUBE V301 12AU7 (81349)			REF	*	*	*	*	*	32	V301
PAOZZ	5960-00-1667663	ELECTRON TUBE V304 12AU7 (81349)			REF	*	*	*	*	*	32	V304
PAOZZ	5960-00-1667663	ELECTRON TUBE V305 12AU7 (81349)			REF	*	*	*	*	*	32	V305
PAOZZ	5960-00-1667663	ELECTRON TUBE V501 12AU7 (81349)			REF	*	*	*	*	*	32	V501
PAOZZ		ELECTRON TUBE V302 5726-6AL5W (81349)			2	*	*	*	*	*	32	V302
PAOZZ		ELECTRON TUBE V602 5726-6AL5W (81349)			REF	*	*	*	*	*	33	V602
PAOZZ	5960-00-6696861	ELECTRON TUBE V105 6005-6AQ5W (81349)			2	*	*	*	*	*	38	V105
PAOZZ	5960-00-6696861	ELECTRON TUBE V106 6005-6AQ5W (81349)			REF	*	*	*	*	*	38	V106
PAOZZ	5920-00-0504953	FUSE, CARTRIDGE F601 F02G1R50A (81349)			1	*	*	*	*	*	30	F601
XDCZZ		KNOB 0102 RD. ARROW HARKING, 5/8 IN OD X 7/16. EA IN THK O/A; 6126 (80375)			1	*	*	*	*	*		0102
PAOZZ	5355-00-5115728	KNOB 0103 45003371 (00530)		BAA	8	*	*	*	*	*		0103

SECTION III

(1)	(2)	(3)	(4)	(5)	15-DAY ORGANIZATIONAL MAINTENANCE ALW					(7)	
					UNIT OF INC IN UNIT	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	FIGURE NO	
PACZZ	5355-00-5115728	KNOB 0104..... 45003371 (00530)	EA REF BAA		*	*	*	*	*	0104	
PACZZ	355-00-5115728	KNOB 0105..... 45003371 (00530)				*	*	*	*	*	0105
PACZZ	5355-00-5115728	KNOB 0106..... 45003371 (00530)	BAA		*	*	*	*	*	0106	
PACZZ	5355-00-5115728	KNOB 0107..... 45003371 (00530)	BAA	EA REF	*	*	*	*	*	0107	
PACZZ	5355-00-5115728	KNOB 0108..... 45003371 (00530)	BAA	EA REF	*	*	*	*	*	0108	
PACZZ	5355-00-5115728	KNOB 0109..... 45003371 (00530)	BAA	EA REF	*	*	*	*	*	0109	
PACZZ	5355-00-5115728	KNOB 0110..... 45003371 (00530)	BAA		*	*	*	*	*	0110	
PACZZ	5355-00-5115728	KNOB 0103..... 45003371 (00530)	EA BUF		*	*	*	*	*	0103	
PACZZ	5355-00-5115728	KNOB 0104..... 45003371 (00530)	BUF		*	*	*	*	*	0104	
PACZZ	5355-00-5115728	KNOB 0105..... 45003371 (00530)	BUF		*	*	*	*	*	0105	
PACZZ	5355-00-5115728	KNOB 0106..... 45003371 (00530)	BUF		*	*	*	*	*	0106	
PACZZ	5355-00-5115728	KNOB 0107..... 45003371 (00530)	BUF	EA REF	*	*	*	*	*	0107	
PACZZ	5355-00-5115728	KNOB 0108..... 45003371 (00530)	BUF	EA REF	*	*	*	*	*	0108	
PACZZ	5355-00-5115728	KNOB 0109..... 45003371 (00530)	BUF		*	*	*	*	*	0109	
PACZZ	5355-00-5115728	KNOB 0110..... 45003371 (00530)	BUF	EA REF	*	*	*	*	*	0110	
PACZZ	5355-00-5115728	KNOB 0111..... 45003371 (00530)	BUF	EA REF	*	*	*	*	*	0111	
PACZZ	5355-00-5115728	KNOB 0112..... 45003371 (00530)	BUF		*	*	*	*	*	0112	
PACZZ	5355-00-5115728	KNOB 0113..... 45003371 (00530)	BUF	EA REF	*	*	*	*	*	0113	
PACZZ	5355-00-5115728	KNOB 0114..... 45003371 (00530)	BUF	EA REF	*	*	*	*	*	0114	
PACZZ		KNQB 0111 RD, 1 IN DIA X 1/2 IN THK O/A:..... EA 4500345 (00530)	BAA		*	*	*	*	*	0111	
PACZZ		K N O B 0 1 1 2 R D, 1 I N D I A X 1 / 2 I N T H K o / A : EA R E F 45003451 (00530)	BAA		*	*	*	*	*	0112	
PACZZ		0 1 1 3 R D, 1 I N D I A X 1 / 2 I N T H K O / A : EA R E F B A A ,			*	*	*	*	*	0113	
PACZZ		KNOB 0 1 1 4 R D, 1 I N D I A x 1 / 2 I N T H K O / A ; EA R E F 45003451 (00530)	BAA		*	*	*	*	*	0114	
PACZZ	5355-00-1607108	KNOB 0101 RD, W/POINTER, 27/32 IN LG X 11/16 IN EA WD X 13/32 IN THK:O/A: 1400 (72512)	I I		*	*	*	*	*	0101	
PACZZ	6240-00-5778456	AMP. GLOW E401..... WE2 (08805)			*	*	*	*	*	E401	
PACZZ	6240-00-1558706	AMP. INCANDESCENT I401..... I7 (96906)	EA BAA		*	*	*	*	*	I401	

SECTION III

(1)	(2)	(3)	(4)	(5)	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW					(7) ILLUSTRATION		
					QTY. IN UNIT	INC. IN UNIT	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIGURE NO.	(b) ITEM NO.
S M R C O D E	NATIONAL STOCK NUMBER	I REFERENCE NUMBER & MFR CODE	DESCRIPTION	UNIT OF AREAS	USABLE ON CODE							
PACZZ	6240-00-1558706	LAMP, INCANDESCENT 47 (96906)	I402	EA	REF	*	*	*	*	*	38	I402
PAOZZ	6240-00-1558706	LAMP, INCANDESCENT 47 (96906)	I403	EA	REF	*	*	*	*	*	38	I403
PAOZZ	6240-00-1558706	LAMP, INCANDESCENT 47 (96906)	I404	EA	REF	*	*	*	*	*	38	I404
PAOZZ	6240-00-1558706	LAMP, INCANDESCENT 47 (96906)	I405	EA	REF	*	*	*	*	*	32	I405
PAOZZ	5340-00-6649230	MOUNT, VIBRATION H105 SPHERICAL MTG, 5/B IN LG X 19/32 IN DIA O/A: 275-1 (81860)	E A	4	*	*	*	*	*	*		H105
PAOZZ	5340-00-6649238	MOUNT, VIBRATION H106 SPHERICAL MTG, 5/B IN LG X 19/32 IN DIA O/A: 275-1 (81860)	E A	REF	*	*	*	*	*	*		H106
PAOZZ	5340-00-6649238	MOUNT, VIBRATION H107 SPHERICAL MTG, 570 IN LG X 19/32 IN DIA O/A: 275-1 (81860)	E A	REF	*	*	*	*	*	*		H107
PAOZZ	5340-00-6649238	MOUNT, VIBRATION H108 SPHERICAL MTG, 5/8 IN LG X 19/32 IN DIA O/A: 275-1 (81860)	E A	REF	*	*	*	*	*	*		H108
5905-00-2799812		RESISTOR, THERMAL RT601..... 3-14 (70563)	E A	1	*	*	*	*	*	*		
		SCALE, CATHODE RAY TUBE G101..... C2449 (24018)	E A	1	*	*	*	*	*	*		G101
		SCALE, CATHODE RAY TUBE G101..... I45003801 (18778)	E A	1	*	*	*	*	*	*		G101
5935-00-6367145	CONNECTOR, UP121M (81349)	PLUG, ELECTRICAL NO-REF-DESIG.....	E A	1	*	*	*	*	*	*		

SECTION V

INDEX-NATIONAL STOCK NUMBER AND REFERENCE NUMBER

CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE N O .	ITEM N O .	STOCK NUMBER	FIGURE N O .	ITEM N O .
5340-00-6649238		H105	5960-00-1667663	32	V102
5340-00-6649238		H106	5960-00-1667663	32	V103
5341-00-6649238		H107	5960-00-1667663	32	V104
5340-00-6649238		H108	5960-00-1667663	32	V301
5355-00-1607108		0101	5960-00-1667663		V304
			5960-00-1667663	32	V305
5355-00-65115728		0103	5960-00-1667663	32	V501
5355-00-5115728		0104	5960-00-2620160	32	V502
5355-00-5115728		0105	5960-00-2620160	37	V503
5355-00-5115728		0106	5960-00-2620218	43	V6D5
5355-00-5115728		0107	5960-00-2960517	43	V401
5355-00-5115728		0108	5960-00-5431921	38	V603
5355-00-5115728		0109	5960-00-5431921	38	V604
5355-00-5115728		0110	5960-00-6244718	37	V601
5355-00-5115728		0111	5960-00-6696861	38	V105
5355-00-5115728		0112	5960-00-6696861	38	V106
5355-00-5115728		0113	6240-00-1558706		I401
5355-00-5115728		0114	6240-00-1558706	32	I405
5905-00-2799812			6240-00-1558706	38	I402
5920-00-0504953	30	F601	6240-00-1558706	38	I403
5935-00-6367145			6240-00-1558706	38	I404
5935-00-8385183			6240-00-5778456		E401
5960-00-1080257	3 2	V303			
5960-00-1667663	3 2	V101			

REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.	REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.
C2449	26018	G101	45003371		00530	0108	
F02G1R50A	81349	3 0	F6D1	45003371	00530	0109	
NE2	08805	E401	45003371		00530	0110	
UP121M	81349		45003371		00530	0111	
OB2WA	81349	3 7	V601	45003371	00530	0112	
1X2B	81349	3 8	V603	45003371	00530	0113	
1X2B	81349	3 8	V604	45003371	00530	0114	
118596	78947	M103	45003451		00530	0111	
12AUT	81349	3 2	V101	45003451	00530	0112	
12AUT	81349	3 2	V102	45003451	00530	0113	
12AUT	81349	3 2	V103	45003451	00530	0114	
12AUT	81349	3 2	V104	45003801	18778	G101	
12AUT	81349	3 2	V301	4 7	96906		I401
12AUT	81349	3 2	V304	4 7	96906	32	1405
12AUT	81349	3 2	V305	4 7	96906	38	1402
12AUT	81349	3 2	V501	4 7	96906	38	1403
1400	72512	O101	4 7		96906	38	1404
210	82879		5ADP1		81349	43	V401
275-1	81860	H105	5Y3WGTA		81349	43	V605
275-1	81860	H106	5726-6AL5W		81349	32	V302
275-1	81860	H1D7	5726-6AL5W		81349	33	V602
275-1	81860	H108	6J6WA		81349	32	V502
3-14	70563		6J6WA		81349	37	V503
45003371	00530	0103	6Q5G		81349	32	V303
45003371	00530	0104	6005-6AQ5W		81349	38	V105
45003371	00530	0105	6005-6AQ5W		81349	38	V106
45003371	00530	0106	6126		80375		0102
45003371	00530	0107					

By Order of the Secretary of the Army:

Official:

VERNE L. BOWERS

*Major General, United States Army
The Adjutant General*

Distribution:

Active Army:

USASA (2)
Dir of Trans (1)
COE (1)
TSG (1)
USAARENBD (1)
AMC (1)
TRADOC (2)
ARADCOM (1)
ARADCOM Rgn (2)
OS Maj Comd (4)
LOGCOMDS (3)
MICOM (2)
TECOM (1)
CSACC (4)
MDW (1)
Armies (2)
Corps (2)
HISA (Ft Monmouth) (43)
Svc Colleges (1)
USASESS (5)
USAADS (2)
CSAFAS (2)
USAARMS (2)
USAIS (2)
USAES (2)
USAINTCS (3)
WRAMC (1)
ATS (1)
Fort Gordon (10)

Fort Huachuca (10)
WSMR (1)
Fort Carson (5)
Ft Richardson (ECOM Ofc) (2)
Army Dep (1) except
 LBAID (14)
 SAAD (30)
 TOAD (14)
 ATAD (10)
USA Dep (2)
Sig Sec USA Dep (2)
Sig Dep (2)
Sig FLDNS (1)
USAERDAA (1)
USAERDAW (1)
MAAG (1)
USARMIS (1)
Units org under fol TOE:
 (1 copy each unit)
 11-16
 11-85
 11-97
 11-98
 11-117
 11-500(AA-AC)
 32-52
 32-56
 32-57
 32-67
 32-78

NG: None

USAR: None

For explanation of abbreviations used, see AR 310-50.

FRED C. WEYAND
*General, United States Army
Chief of Staff*

*U. S. GOVERNMENT PRINTING OFFICE: 1975-666139/706

DEPARTMENT OF THE ARMY
US ARMY AG PUBLICATIONS CENTER
1655 WOODSON ROAD
ST. LOUIS, MISSOURI 63114
OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



END

01-21-83

DATE





DEPARTMENT OF THE ARMY

MICROFORM
TEST TARGET

