# **DEPARTMENT OF THE ARMY TECHNICAL MANUAL**

# ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS MULTIMETERS AN/USM-33 AND AN/USM-33A FSN 6625-648-9172

# Headquarters, Department of the Army, Washington, D.C. 15 August 1973

# Current as of January 1973

			Paragraph	Page
SECTION	I.	INTRODUCTION	0 1	ŭ
		Scope	. 1-1	2
		General	. 1-2	2
		Explanation of columns	. 1-3	2
		Special information	. 1-4	4
		Location of repair parts	. 1-5	4
		Abbreviations (Not applicable)	. 1-6	4
		Reporting of equipment publication improvements	. 1-7	4
	II.	PRESCRIBED LOAD ALLOWANCE (Not applicable)		
	III.	REPAIR PARTS LIST		6
	IV.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (not applicable)		
	V.	INDEXFEDERAL STOCK NUMBER AND REFERENCE NUMBER		
		CROSS-REFERENCE TO FIGUR E AND ITEM NUMBER		7

<sup>\*</sup>This manual supersedes TM 11-6625-314-12P, 27 November 1961.

# SECTION I

### 1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the AN/USM-33 and AN/USM-33A. The PCCN for the equipment is GTEABN for all models.

#### 1-2. General

This repair parts and special tools list is divided into the following sections:

- a. Prescribed Load Allowance (PLA)--Section II. Not applicable.
- b. Repair Parts List-Section III. A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.
- c. Special Tools, Test and Support Equipment-Section IV Not applicable.
- d. Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number Section V. A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a lit, in alphanumeric sequence of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

#### 1-3. Explanation of Columns

The following provides an explanation of columns in the tabular list--

- a. Source, Maintenance, and Recoerabilit Codes (SMR).
- (1) Source code. Indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are-

### Code Explanation

- PA- Item procured and stocked r anticipated or known usage.
- PB- Item procured and stocked fr insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
- PC- Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
- PD- Support item, excluding support equipment, procured for initial issue or outfitting and stocked only f00r subsequent or additional initial issue or outfittings. Not subject to automatic replenishment.
- PE-- Support equipment procured and stocked for

# Code Explanation

- initial issue or outfitting to specified maintenance repair activities.
- PF-- Support equipment which will not be stocked but which will be centrally procured on demand.
- PG-- Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
- KD- An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
- KF-- An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
- KB- Item included in both a depot overhaul repair kit and a maintenance kit.
- MO-- Item to be manufactured or fabricated at organizational level.
- MF-- Item to be manufa*ct*ured or fabricated at direct support maintenance level.
- MH-- Item to be manufactured or fabricated at general support maintenance level.
- MD-- Item to be manufactured or fabricated at depot maintenance level.
- AO-- Item to be assembled at organizational level.
- AF-- Item to be assembled at direct support maintenance level.
- AH-- Item to be assembled at general support maintenance level.
- AD-- Item to be assembled at depot maintenance level.
- XA-- Item is not procured or stocked because the requirements of the item will result in the replacement of the next higher assembly.
- XB-- Item is not procured or stocked. If not available through salvage, requisition.
- XC-- Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
- XD-- Support items can be requisitioned with justification.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source

coded above except those coded XA and aircraft support items as restricted by AR 700-42.

- (2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows--
- (a) Use (third position). The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

#### Code

# Application/Explanation

O-- Support item is removed, replaced, used at the organizational level of maintenance.

#### **NOTE**

A code "C" may be used in this position to denote crew or operator maintenance per- formed within organizational maintenance.

- F-- Support item is removed, replaced, used at the direct support maintenance level.
- H-- Support item is removed, replaced, used at the general support maintenance.
- D-- Support items that are removed, replaced, used at depot only.
- (b) Repair (fourth position). The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment/ system s or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code--

# Code

#### Application/Explanation

- O-- The lowest maintenance level capable of complete repair of the support item is the organizational level.
- F-- The lowest maintenance level capable of complete repair of the support item is direct support.
- H-- The lowest maintenance level capable of complete repair of the support item is general support.
- D-- The lowest maintenance level capable of complete repair of the support item is the depot level.

- L- Repair restricted to designated Specialized Repair Activity.
- Z-- Non-repairable. No repair is authorized.
- B-- No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.
- (3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable item. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows--

### Code Explanation

- Z-- Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
- O-- Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
- F-- Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
- H-- Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
- D-- Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
- L-- Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
- A-- Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, hi dollar value, critical material or hazardous material).
- b. Federal Stock Number Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.
- c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.
- d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character

alphabetical abbreviation; e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

- e. Quantity Incorporated in Unit This column indicates the quantity of the item used in the equipment.
  - f. 15-Day Organizational Maintenance Allowance.
- (1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.
- (2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations r increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATN: AMSEL-MA-CRA, Fort Monmouth, NJ, 07703. Any changes approved will be reflected in a revision to the RP-STL.
- (3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other equipment.
  - g. Illustration This column is divided as follows:
- (1) *Figure number*. Indicates the figure number of the illustration on which the item is shown in TM 11-6625-314-15.
- (2) *Item number*. Indicates the item number or reference designation used to reference the item in the illustration.

#### 1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are-

Code Used on AMD ANIJUSM-33 AME AN/SM-33A

b. The following publication pertain to the equipment and its components:

TM 11-6625-314-15 Operator, Organizational, Field and Depot Maintenance Manual: Multimeter ANUSM-33.

# 1-5. Location of Repair Parts

- a. This manual contains one cross-referenced index (sec V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's pa number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the la listed Federal stock number in the index of Federal stock numbers.
- **b.** When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.
- (1) Refer to the index of Federal stock numbers (sec V) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.
- (2) Refer to the repair parts list (sec III) and to locate the figure number (col. 7a) and item number or reference designation (col. 7b) as noted in the FSN index
- c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (sec III) until the item is located.
- d. hen the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec III), which is arranged in alphabetical order.

### 1-6. Abbreviations

Not applicable.

# 1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronic Command, ATTN: AMSEL-MACRA, Fort Monmouth, NJ, 07703.

SECTION III TM 11-6625-314-20P

(1)	(2)	(3)	(4)	(5)		(6			(7)	
FEDE	FEDERAL	DESCRIPTION	LINIT	QTY INC	15-DAY ORGANIZATIONAL MAINTENANCE ALW			ILLUSTRATION		
SMR CODE	MR STOCK		UNIT OF MEAS	IN	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIGURE NO.	(B) ITEM NO.
PAOZZ	6145-542-6092	GROUP 0001 LEAD,TEST CX-2281/USM-33 CABLE, RADIO FREQUENCY NO-REF-DESIG 10 FT LG RG58CU (80044)	EA	10	*	*	*	*	6	
PAOZZ	5975-281-0046	CABLE NIPPLE, ELECTRICAL NO-REF-DESIG	EA	2	*	*	*	*	6	3
PAOZZ	5999-230-1212	49 (02871) CLIP,ELECTRICAL NO-REF-DESIG	EA	2	*	*	*	*	6	1
PAOZZ	5935-654-9705	48b (76545) TIP, CABLE NO-REF-DESIG124-1013 (95325)	EA	2	*	*	*	*	6	7
PAOZZ	6625-646-8770	GROUP 0002 MULTIMETER ME-79/USM-33 COVER, TONG, INSULATING NO-REF-DESIG	EA	2	*	*	*	*	3	11
PAOZZ	6625-646-8765	GASKET NO-REF-DESIG COVER TO CASE	EA	1	*	*	*	*	1	9
PAOZZ	5355-619-9004	KNOB NO-REF-DESIG	EA	1	*	*	*	*	1	11
PAOZZ	5305-619-2436	SCREW,MACHINE NO-REF-DESIG (PECULIAR)	EA	1	*	*	*	*	3	6
PAOZZ	5935-654-9722	124-1066 (95325) CONNECTOR, NO-REF-DESIG	EA	1	*	*	*	*	6	6

# SECTION V TM 11-6625-314-20P

# CROSS- REFERENCE-INDEXES NATIONAL STOCK NUMBER INDEX

STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
5305-619-2436	3	6	5999-230-1212	6	1
5355-619-9004	1	11	6145-542-6092	6	
5935-654-9705	6	7	6625-646-8765	1	9
5975-281-0046	6	3	6625-646-8770	3	11

REFERENCE	MFR	FIG.	ITEM	REFERENCE	MRF	FIG.	ITEM
RGSBCU 124-1000	80044 95325	6	11	124-1053 124-1066	95325 95325	1	9 6
124-1000 124-1013 124-1048	95325 95325 95325	6	7 11	488 49	76545 02871	6 6	1 3

By Order of the Secretary of the Army:

Official:

CREIGHTON W. ABRAMS General, United States Army Chief of Staff

VERNE L. BOWERS Major General United States Army The Adjutant General

Distribution: Active Army: USASA (2) CNGB (1) ACSC-E (2) **USAARENBD (2) USAMB** (10) AMC (1) CONARC (5) ARADCOM (2) ARADCOM Rgn (2) OS Maj Comd (4) LOGCOMDS (5) MICOM (2) TECOM (2) USASTRATCOM (4) HISA (ECOM) (18) MDW (1) Armies (2) Corps (2) Svc Colleges (2) USASESS (5) USAADS (2) USAFAS (2) USAARMS (2) USAIS (2) USAES (2) USAINTS (3) **USACDCEC (5)** 

Instl (2) except Ft Cordon (10) Ft Huachuca (10) WSMR (2) Ft Carson (10) Army Dep (2) except LBAD (14) **SAAD** (30) TOAD (14) LEAD (7) ATAD (10) Gen Dep (2) Sig Sec Gen Dep (2) Sig Dep (5) Sig FLDMS (1) **USAERDAA (1) USAERDAW (1)** MAAG (1) USARMIS (1) Ft Richardson (ECOM of) (2) WRAMC (1) Units org under fol TOE: (1 cy each) 11-158 29-134 29-136

NG: Rate AG (3) USAR: None

For explanation of abbreviations used, see AR 310-50.

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS							
752	Something	WRONG WITH THIS PUBLICATION?					
DOPE AB FORM, C. OUT. FOL	JOT DOWN THE BOUT IT ON THIS AREFULLY TEAR IT LD IT AND DROP IT	(PRINT YOUR UNIT'S COMPLETE ADDRESS)					
IN THE MAIL! DATE SENT							
PUBLICATION NUMBER	PUBLICATION DATE	Publication title					
BE EXACTPIN-POINT WHERE IT IS	IN THIS SPACE TELL WHAT IS	WRONG					
PAGE GRAPH FIGURE NO.	AND WHAT SHOULD BE DON!						
PRINTED NAME, GRADE OR TITLE, AND TELEP	HONE NUMBER . SIGN HE	FRE:					

DA 15017 2028-2

PREVIOUS EDITIONS
• ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

# THE METRIC SYSTEM AND EQUIVALENTS

#### **'NEAR MEASURE**

Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches

1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 Inches

1 Kilometer = 1000 Meters = 0.621 Miles

#### **YEIGHTS**

Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces

1 Kilogram = 1000 Grams = 2.2 lb.

1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons

#### LIQUID MEASURE

1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces

1 Liter = 1000 Milliliters = 33.82 Fluid Ounces

#### **SQUARE MEASURE**

1 Sq. Centimeter = 100 Sq. Millimeters = 0.155 Sq. Inches

1 Sq. Meter = 10,000 Sq. Centimeters = 10.76 Sq. Feet

1 Sq. Kilometer = 1,000,000 Sq. Meters = 0.386 Sq. Miles

#### **CUBIC MEASURE**

1 Cu. Centimeter = 1000 Cu. Millimeters = 0.06 Cu. Inches 1 Cu. Meter = 1,000,000 Cu. Centimeters = 35.31 Cu. Feet

#### **TEMPERATURE**

 $5/9(^{\circ}F - 32) = ^{\circ}C$ 

212° Fahrenheit is evuivalent to 100° Celsius

90° Fahrenheit is equivalent to 32.2° Celsius

32° Fahrenheit is equivalent to 0° Celsius

 $9/5C^{\circ} + 32 = {\circ}F$ 

#### APPROXIMATE CONVERSION FACTORS

TO CHANGE	TO	MULTIPLY BY
Inches	Centimeters	2.540
Feet	Meters	0.305
Yards	Meters	
Miles	Kilometers	1.609
Square Inches	Square Centimeters	6.451
Square Feet	Square Meters	
Square Yards	Square Meters	0.836
Square Miles	Square Kilometers	2.590
Acres	Square Hectometers	
Cubic Feet	Cubic Meters	
Cubic Yards	Cubic Meters	
Fluid Ounces	Milliliters	
nts	Liters	
arts	Liters	0.946
allons	Liters	3.785
Ounces	Grams	28.349
Pounds	Kilograms	0.454
Short Tons	Metric Tons	
Pound-Feet	Newton-Meters	
Pounds per Square Inch	Kilopascals	
Miles per Gallon	Kilometers per Liter	
Miles per Hour	Kilometers per Hour	
•		

TO CHANGE	то	MULTIPLY BY
Centimeters	Inches	0.394
Meters	Feet	3.280
Meters	Yards	
Kilometers	Miles	
Square Centimeters	Square Inches	
Square Meters	Square Feet	
Square Meters	Square Yards	1 196
Square Kilometers	Square Miles	0.386
Square Hectometers	Acres	
Cubic Meters	Cubic Feet	
Cubic Meters	Cubic Yards	
Milliliters	Fluid Ounces	
Liters	Pints	
Liters	Quarts	
'ers	Gallons	
.ms	Ounces	
.ograms	Pounds	
Metric Tons.	Short Tons	
Newton-Meters	Pounds-Feet	
Kilopascals	Pounds per Square Inch .	
ometers per Liter	Miles per Square Inch .	9 254
meters per Hour	Miles per Gallon	
miecers per mour	Miles per Hour	U.OZI



PIN: 017094-000