DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

TEST SETS, RADIO

TS-1588/AIC (NSN 6625-00-895-6646)

AND

TS-1588A/AIC (NSN 6625-00-239-6016)

Headquarters, Department of the Army, Washington, D.C. 11 March 1977

Current as of 12 December 1976

REPORTING OF ERRORS

You can help improve this manual by calling attention to errors and by recommending improvements and stating your reasons for the recommendations. Your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) should be mailed direct to Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703. A reply will be furnished direct to you.

Table of Contents

		Page	Figure
Section	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Test Set, Radio TS-1588/AIC and TS-1588A/AIC	5	1
	01 Cable, power, electrical (No parts authorized)		
	02 Cable assembly, power, electrical (No parts authorized)		
Section	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	6	

i

^{*}This manual superseded TM 11-6625-441-20P, 1 June 1972.

SECTION I

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the TS-1588/AIC and TS-1588 A/AIC. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

- a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.
 - b. Section III. Special Tools List. Not applicable.
- c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

- a. Illustration. This column is divided as follows:
- (1) *Figure number*. Indicates the figure number of the illustration on which the item is shown.
- (2) *Item number*. The number used to identify item called out in the illustration.
- b. Source, Maintenance, and Recoverability (SMR)
 Codes.
- (1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

PA – Item procured and stocked for anticipated or known usage.

X D – A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

- (2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:
- (a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

O – Application/Explanation
Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Z – Application/Explanation

Nonreparable. No repair is authorized.

(3) *Recoverability code*. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability
codes

Definition

Z - Nonreparable item. When unserviceable,
condemn and dispose at the level
indicated in position 3.

- c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.
- d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

- e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.
- f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.
- g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc.). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.
- h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

 Code
 Used on

 4AK
 TS-1588/AIC

 AU9
 TS-1588A/AIC

b. The following publication pertains to the TS-1588/AIC and TS-1588A/AIC and its components: TM 11-6625-441-12, Test Sets, Radio TS-1588/AIC and TS-1588A/AIC

c. The illustrations in this manual are identical to those published in TM 11-6625-441-34P. Only those

parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing; therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual.

5. How to Locate Repair Parts

- a. When National stock number or part number is unknown.
- (1) First. Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.
- (2) *Second*. Find the illustration covering the functional group to which the item belongs.
- (3) *Third*. Identify the item on the illustration and note the illustration figure and item number of the item.
- (4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.
- b. When National stock number or part number is known.
- (1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.
- (2) *Second*. After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)

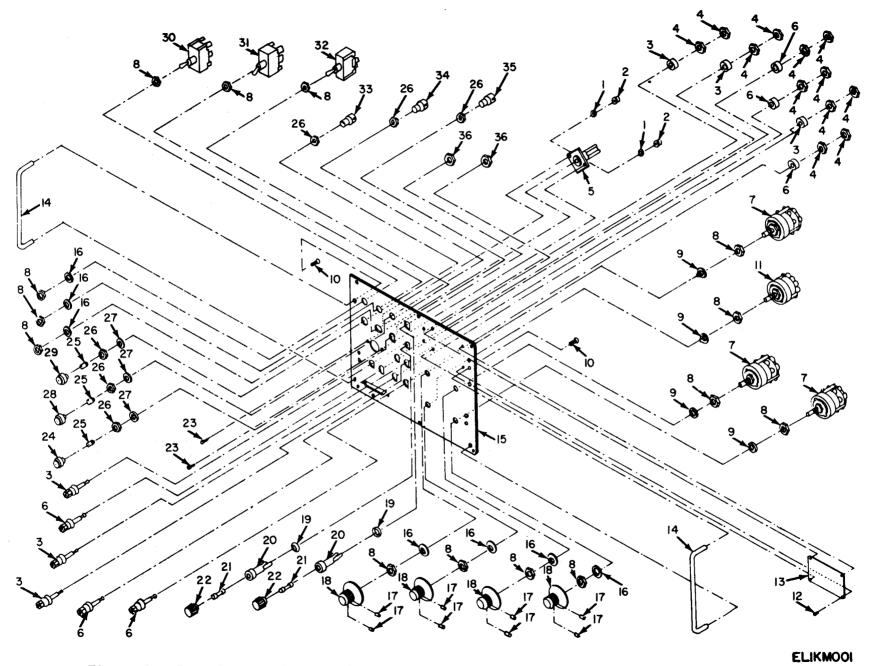


Figure 1. Test Set, Radio TS-1588/AIC and TS-1588A/AIC, Front Panel Exploded view.

SECTIC (1) ILLUST (A)	N II RATION (B)	(2)	(3) NATIONAL	(4)	(5)	TM11-6625-441-20P (6) DESCRIPTION		(7)	(8) QTY INC
FIG NO	ITEM NO	SMR CODE	STOCK NUMBER	PART NUMBER	FSCM		USABLE ON CODE	U/M	IN UNIT
						GROUP 00 TEST SET, RADIO TS-1588/AIC AND			
						TS-1588A/AIC			
1	17	PAOZZ	5305-00-719-5342	MS51017-34	96906	SETSCREW, HEXAGON		EA	8
1	18	PAOZZ	5355-00-579-6390	MS91528-2F2B	96906	KNOB, CONTROL	AU9	EA	4
1	18	PAOZZ	5355-00-579-6390	9032	99687	KNOB, CONTROL	4AK	EA	4
1	21	PAOZZ	5920-00-284-9220	DF02G1R00B	80064	FUSE, CARTRIDGE	4AK	EA	2
1	21	PAOZZ	5920-00-284-9220	F02B250V1A	81349	FUSE, CARTRIDGE	AU9	EA	2
1	22	XDOZZ		342024-020	75915	CAP, FUSEHOLDER		EA	2
1	24	PAOZZ	6210-00-809-6601	134-0351-200	72619	LENS,LIGHT INDICATOR,RED	AU9	EA	1
1	24	PAOZZ	6210-00-583-9349	MS25041-5	96906	LENS,LIGHT INDICATOR,RED	4AK	EA	1
1	25	PAOZZ	6240-00-155-7836	327	24446	LAMP, INCANDESCENT	4AK	EA	3
1	25	PAOZZ	6240-00-155-7836	MS25237-327	96906	LAMP, INCANDESCENT	AU9	EA	3
1	28	XDOZZ		134-0375-200	72619	LENS,LIGHT INDICATOR,CLEAR	AU9	EA	1
1	28	PAOZZ	6210-00-553-1076	MS25041-7	96906	LENS,LIGHT INDICATOR,CLEAR	4AK	EA	1
1	29	PAOZZ	6210-00-578-7182	134-0352-200	72619	LENS,LIGHT INDICATOR,GREEN	AU9	EA	1
1	29	PAOZZ	6210-00-519-0448	MS25041-6	96906	LENS, LIGHT INDICATOR, GREEN	4AK	EA	1

SECTION IV		NATIONAL S	STOCK NUMBER AND PART	NUMBER INDEX		TM11-662	5-441-20P
STOCK NUMBER	FIG NO	ITEM NO	STOCK NUMBER	FIG NO	ITEM NO		
6240-00-155-7836 6240-00-155-7836 5920-00-284-9220 5920-00-284-9220 6210-00-553-1076 6210-00-578-7182	1 1 1 1 1	25 25 21 21 28 29	5355-00-579-6390 5355-00-579-6390 6210-00-583-9349 5305-00-719-5342 6210-00-809-6601 6210-00-519-0448	1 1 1 1 1	18 18 24 17 24 29		
PART NUMBER	FSCM	FIG NO	ITEM NO	PART NUMBER	FSCM	FIG NO	ITEM NO
DF02G1R00B F02B250V1A MS25041-5 MS25041-6 MS25041-7 MS25237-327 MS51017-34	80064 81349 96906 96906 96906 96906 96906	1 1 1 1 1 1	21 21 24 29 28 25 17	MS91528-2F2B 134-0351-200 134-0352-200 134-0375-200 327 342024-020 9032	96906 72619 72619 72619 24446 75915 99687	1 1 1 1 1 1	18 24 29 28 25 22

By Order of the Secretary of the Army:

BERNARD W. ROGERS General, United States Army Chief of Staff

Official:

PAUL T. SMITH
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-36A, Organizational maintenance requirements for TS-1588 ()/AIC.

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

	SOMETHING WRONG WITH PUBLICATION THENJOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL. DATE SENT							
	UBLICAT	TON NUMBE	ER			PUBLICATION D	ATE	PUBLICATION TITLE
╏┠╌	E EXAC PAGE NO.	T PIN-PC PARA- GRAPH	FIGURE NO.	TABLE NO.				AT IS WRONG DONE ABOUT IT.
PF	RINTED I	NAME, GRA	DE OR TITL	E AND TELE	EPHONE NU	JMBER	SIGN HE	ERE

DA 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE. P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

PIN : 023294 - 000